


Lock Functions	Inside of door			Outside of door		
	"A" Knob/lever = 3/4" Ø	"B" thumbturn = 5/8" Ø	"C" cylinder = 1 1/4" Ø	"D" knob/lever = 3/4" Ø	"E" ER or indicator = 5/8" Ø	"F" cylinder = 1 1/4" Ø
8500ADLUSD	●			●		
8501USD	●			●		
8502USD	●	●		●		
8503USD	●	●		●		
8522USD	●	●	●	●		
8524USD	●	●	●	●		
8525USD	●	●	●	●		
8539USD	●	●		●	○	
8548USD	●	●		●		
8556USD	●	●		●		
8559USD	●	●		●		

● Required Holes
○ Optional Holes

INSIDE OF DOOR

OUTSIDE OF DOOR

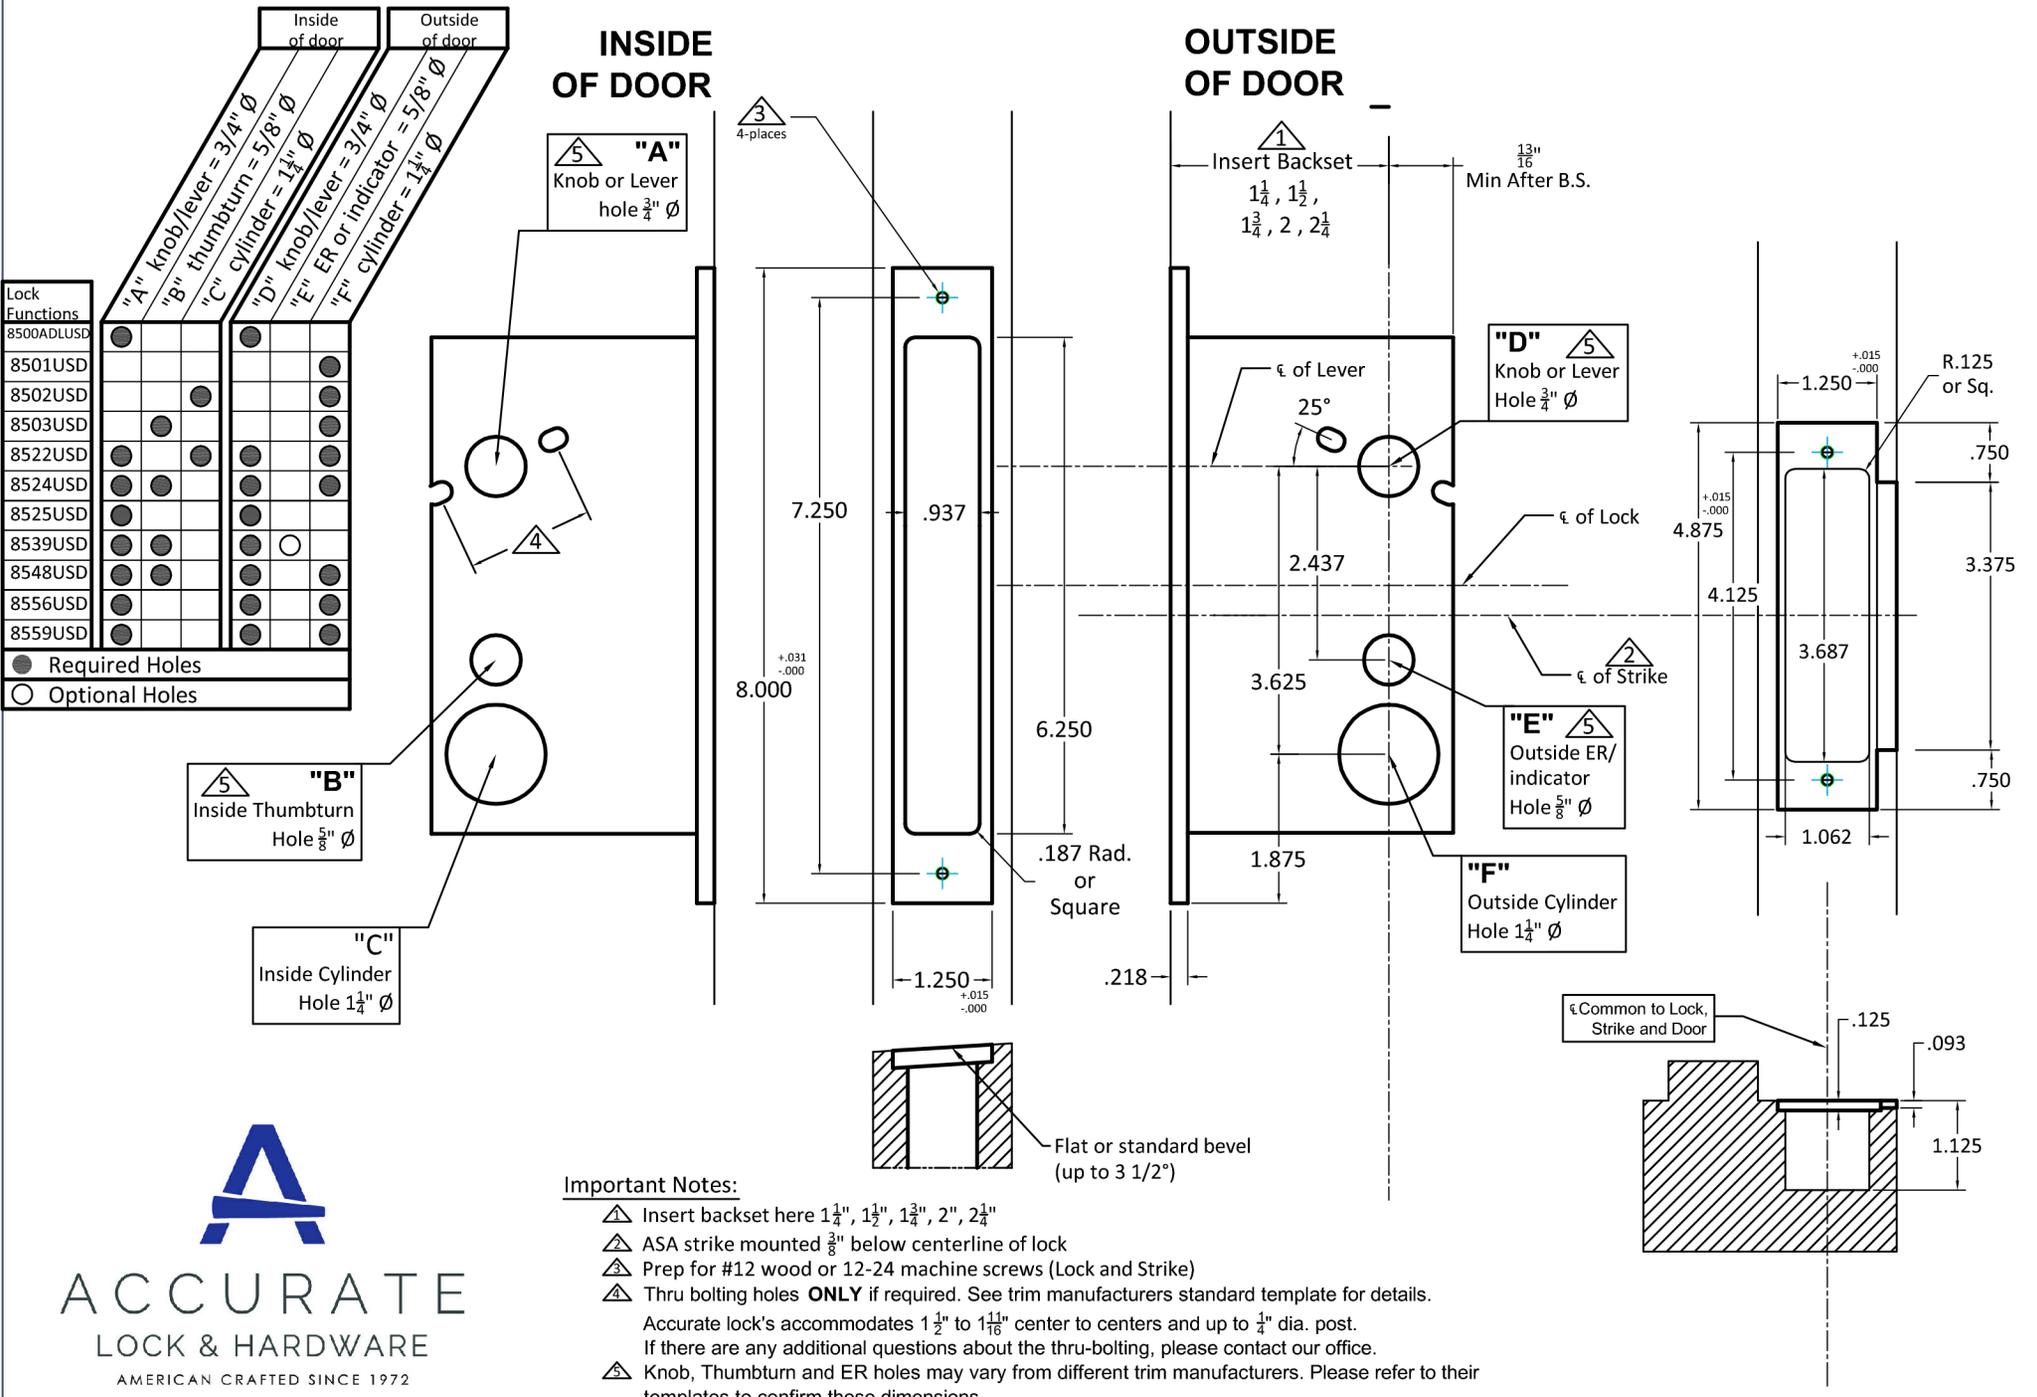

Important Notes:

- ▲ Insert backset here 1 1/4", 1 1/2", 1 3/4", 2", 2 1/4"
- ▲ ASA strike mounted 3/8" below centerline of lock
- ▲ Prep for #12 wood or 12-24 machine screws (Lock and Strike)
- ▲ Thru bolting holes **ONLY** if required. See trim manufacturers standard template for details.
Accurate lock's accommodates 1 1/2" to 1 11/16" center to centers and up to 1/4" dia. post.
If there are any additional questions about the thru-bolting, please contact our office.
- ▲ Knob, Thumbturn and ER holes may vary from different trim manufacturers. Please refer to their templates to confirm these dimensions.

Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) Please contact us if a double lip strike is needed - for a proper template
- c) See catalog / spec sheets for additional lock details



Standard 8500UL-USD
(UPSIDE DOWN) Lever x Lever
All Backsets

T-ALH.8500UL-USD.LL