



Lock Functions	Inside of door	Outside of door
8600ADLUSD	●	●
8601USD	●	●
8602USD	●	●
8603USD	●	●
8622USD	●	●
8624USD	●	●
8625USD	●	●
8639USD	●	○
8648USD	●	●
8656USD	●	●
8659USD	●	●




● Required Holes  
○ Optional Holes

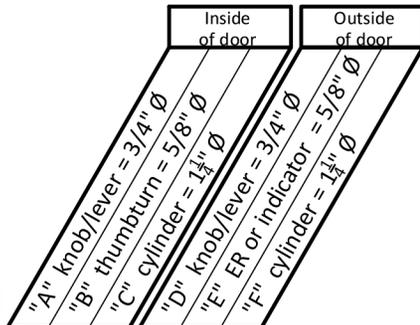

### INSIDE OF DOOR

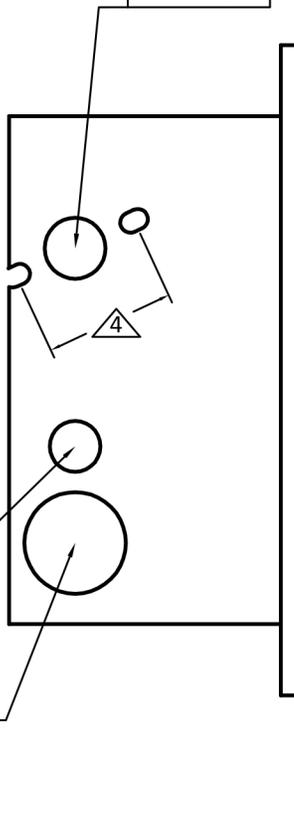

### OUTSIDE OF DOOR

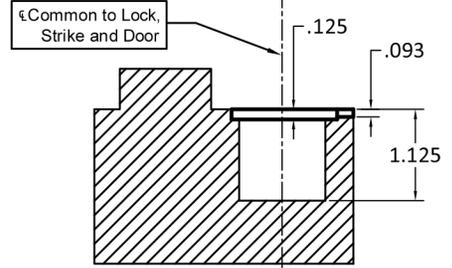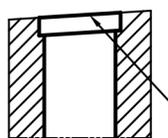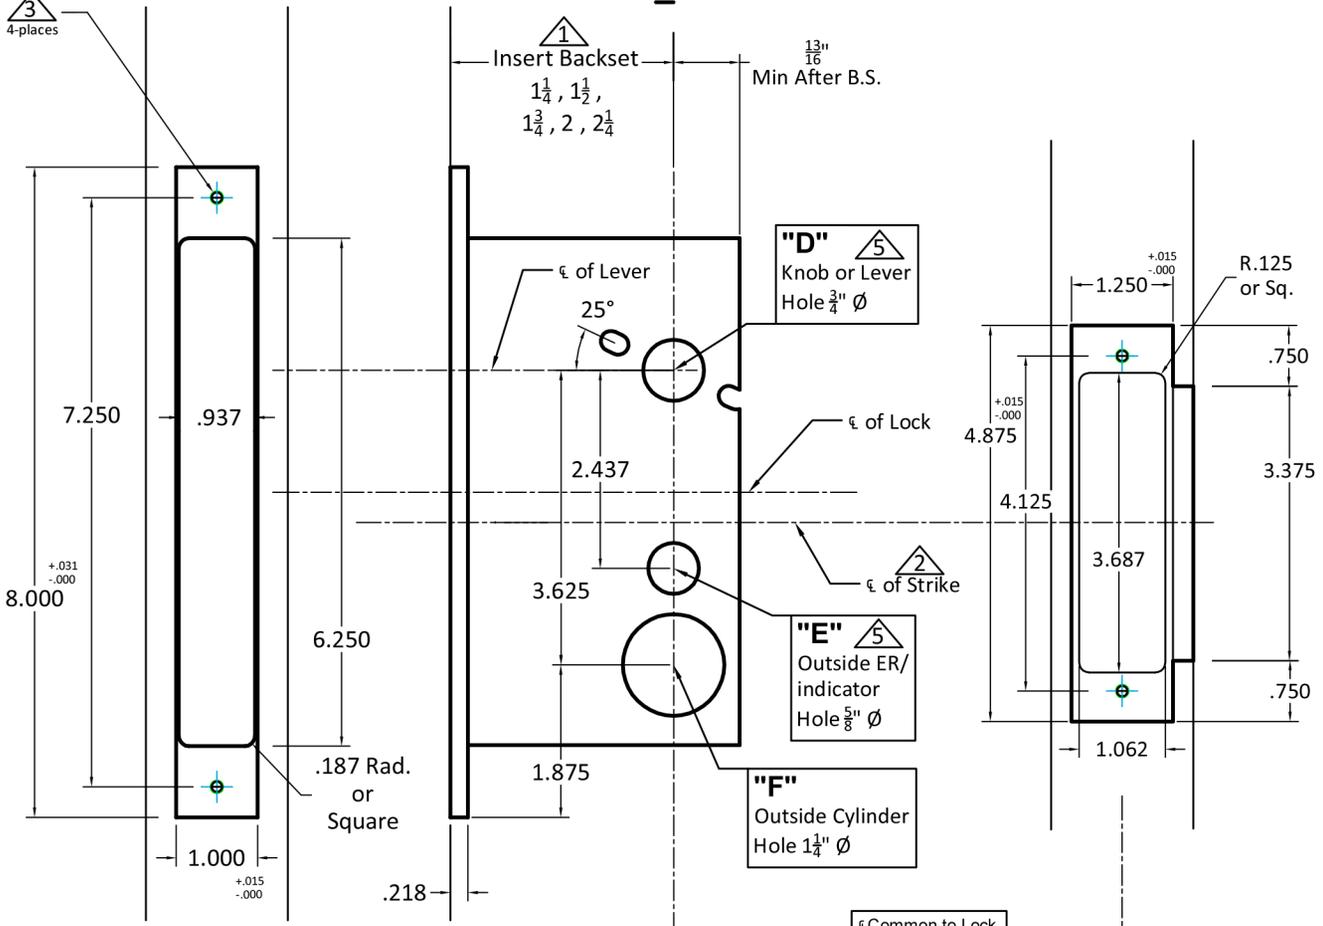

#### Important Notes:

- ⚠ Insert backset here 1 1/4", 1 1/2", 1 3/4", 2", 2 1/4"
- ⚠ ASA strike mounted 3/8" below centerline of lock
- ⚠ Prep for #12 wood or 12-24 machine screws (Lock and Strike)
- ⚠ Thru bolting holes **ONLY** if required. See trim manufacturers standard template for details. Accurate lock's accommodates 1 1/2" to 1 11/16" center to centers and up to 1/4" dia. post. If there are any additional questions about the thru-bolting, please contact our office.
- ⚠ Knob, Thumbturn and ER holes may vary from different trim manufacturers. Please refer to their templates to confirm these dimensions.

#### Additional Notes:

- a) **Responsibility:** Door and frame manufacturers are responsible for providing adequate construction or re-inforcement for proper installation of hardware shown.
- b) Please contact us if a double lip strike is needed - for a proper template
- c) See catalog / spec sheets for additional lock details



Standard 8500UL-USD  
(UPSIDE DOWN)  
All Backsets

T-ALH.8500UL-USD