


Equerres

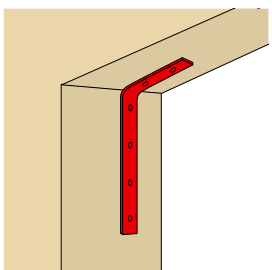

J505.. Equerre de renfort - Bouts carrés

Code		L1 x L2	l x e	Nb & ø vis
J505270	Z.BLANC	50 x 50	18 x 4	4 x 4,2 F/90°
J505280	Z.BLANC	70 x 70	18 x 4	4 x 4,2 F/90°
J505330	Z.BLANC	190 x 190	20 x 4	6 x 4,2 F/90°

Code		L1 x L2	l x e	Nb & ø vis
J505290	Z.BLANC	100 x 100	18 x 4	4 x 4,2 F/90°

Soumis à éco-participation Mobilier.