


- INSTALLATION INSTRUCTIONS -


PORCELAIN FINISHED STEEL BATHTUBS

CAUTION: This new fixture has a durable finish; however, exercise care during installation by placing a blanket and carton cutout in the sump floor to help prevent damage. Avoid rough handling, dropped tools, and ladders that may cause damage. Always remove shoes before entering the fixture, and do not use as trash receptacle or toilet.

1. Before installation, inspect product and report damage to the supplier, requesting their advice before proceeding.
2. Protect the fixture during installation and construction with a blanket and carton cutouts.
3. Measure product dimensions, then frame construction area to suit, using 2x4 stringer attached to the stud wall for support of the fixture along the backwall.

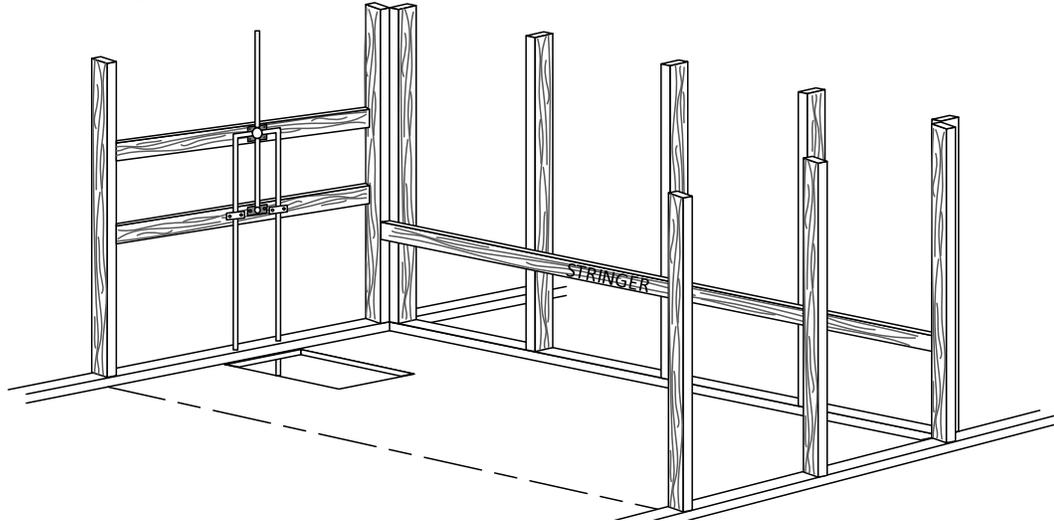

4. Test-fit the fixture, checking level front-to-back and left-to-right, ensuring the support pad (if equipped) is completely supported and plumbing attachments are aligned. If necessary (where existing floor is not flat or level), use leveling compound (mortar base) for level installation and complete solid pad support.
5. Once level, support (both pad and stringer) and alignment with plumbing is achieved, use flat-head screws with washers overlapping the tile flange to secure fixture to stud wall – do not overtighten as it may crack the porcelain.

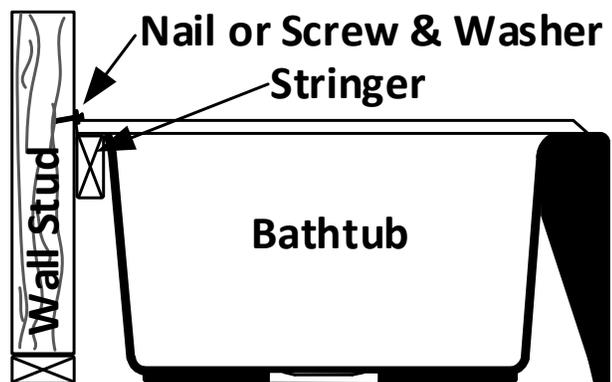

6. Install drain assembly, faucet and shower head to manufacturer's specifications. Do not overtighten as it may damage the porcelain. Use caulking to seal seams and the gap between apron panel and floor.

~ CARE AND CLEANING ~

NEVER use abrasive scouring powders, cleaners or pads that may cause damage.

Clean with warm water, soft cloth or nylon brush and a mild detergent like "ZUD" or "Barkeepers Friend" according to cleanser directions.

Find additional information online here <https://bootz.com/en/services/faq>