




Collapsible Threshold - Installation Instructions

1. Read through entire directions before beginning installation.
2. Be sure surface is clean and dry. Prepare surface with supplied Large alcohol wipe and let dry completely. This will ensure a proper bond
3. Using a tape measure and pencil, place a mark at the center of the threshold (*Fig 3a*). Place another line $\frac{1}{2}$ " in front of the center line to determine the placement of the outside edge of the collapsible threshold (*Fig 3b*).
4. Repeat this offset mark a few times along the front of the threshold. Align the straight edge with these points and lightly strike a light line across the length of the threshold (*Fig 4a & b*).
5. Collapsible Threshold may retract during shipping. Perform a dry-fit for length with end caps on each side of the collapsible threshold tubing, noting proper end cap placement as shown in *Fig. 1*. Align with pencil line and place a pencil mark for the position of the endcap at both ends (*Fig. 5*). **Note:** If the collapsible threshold is short grab both ends of the tubing and perform a stretch. Repeat until appropriate length is obtained. If threshold tubing is too long trim excess length with scissors.
6. Apply Clear/white silicone caulking into one end of the threshold tubing (*Fig 6a & b*). Press end cap firmly onto threshold tubing (*Fig 6c*).
7. Peel away adhesive backing from the end cap & approximately 4"-6" on the tubing. Align tubing and end cap with pencil lines as shown in *Fig. 4*. Lightly press into position. Do not allow it to come into full contact in case it needs repositioned later.
8. Work along front edge (pencil line) peeling and pressing a little bit at a time (*Fig 8*). Keep alignment with the pencil line while working to within about 12" from the opposite corner, leaving remaining tape backing on tubing. Place 2nd end cap into position with tape backing still on and lay into position. End cap should align with the pencil line. Note: if alignment is incorrect, gently pull a portion of the tubing off and adjust position. The tubing can compress or stretch a small amount for adjustment as needed. If assembly is too long, trimming can be done with scissors as needed.
9. If alignment is correct repeat steps 6 & 7 and press the entire assembly firmly into place.
10. Wipe away any visible pencil marks with supplied small alcohol wipe.

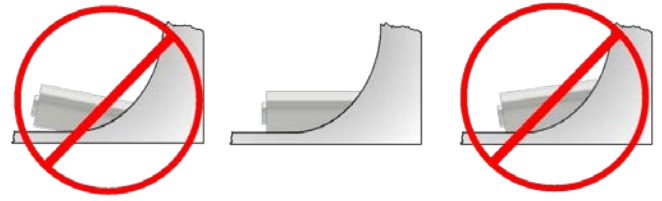


Endcap Placement (**Fig. 1**)



(**Fig. 3a**)




(**Fig. 3b**)

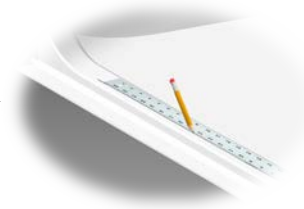

(**Fig. 4a**)



(**Fig. 4b**)

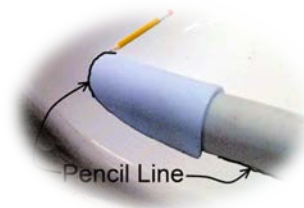


(**Fig. 5**)



(**Fig. 6a**)



(**Fig. 6b**)

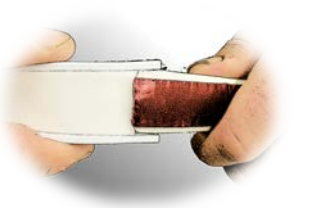

(**Fig. 6c**)



(**Fig. 8**)

Collapsible threshold Kit Contents

Kit For Model:

Place Tag Here

End caps (Qty 2)

.5"Radius



2.5"Radius



- Collapsible Foam Tubing (Qty 1)
- Large Alcohol Wipe (Qty 1)
- Small Alcohol Wipe (Qty 1)

IF THERE ARE ANY QUESTIONS CONCERNING INSTALLATION OF THIS PRODUCT, WE URGE THAT THE INSTALLER CONTACT CLARION BATHWARE'S CUSTOMER SERVICE DEPARTMENT AT (800) 576-9228

Clarion
EVERYDAY LUXURY

44 Amsler Avenue
Shipperville, PA 16254
(814) 226-5374 or (800) 576-9228
Fax: (814) 226-0730 www.clarionbathware.com