


INSTALLATION INSTRUCTIONS:

1. REMOVE THE STRAINER COVER.
2. REMOVE INSIDE COMPRESSION NUT AND COMPRESSION GASKET.
3. APPLY 100% SILICONE OR PLUMBERS PUTTY AROUND THE SHOWER DRAIN HOLE (INSIDE OF THE SHOWER ONLY).
4. INSTALL THE DRAIN BODY IN THE SHOWER DRAIN HOLE.
5. INSTALL THE RUBBER GASKET, FIBER GASKET AND THE LOCKING NUT - TIGHTEN.
6. INSTALL THE SHOWER OVER THE DRAIN PIPE, OR INSTALL THE PIPE LATER.
7. SLIDE THE INSIDE COMPRESSION GASKET INTO DRAIN BODY AND SLIP OVER PIPE. MAKE SURE THAT THE BEVELED END OF INSIDE COMPRESSION GASKET IS FACING UP AND IS FLUSH WITH PIPE SURFACE.
8. TIGHTEN INSIDE COMPRESSION NUT INTO DRAIN BODY USING THE PROVIDED TOOL AND FLAT HEAD SCREWDRIVER.

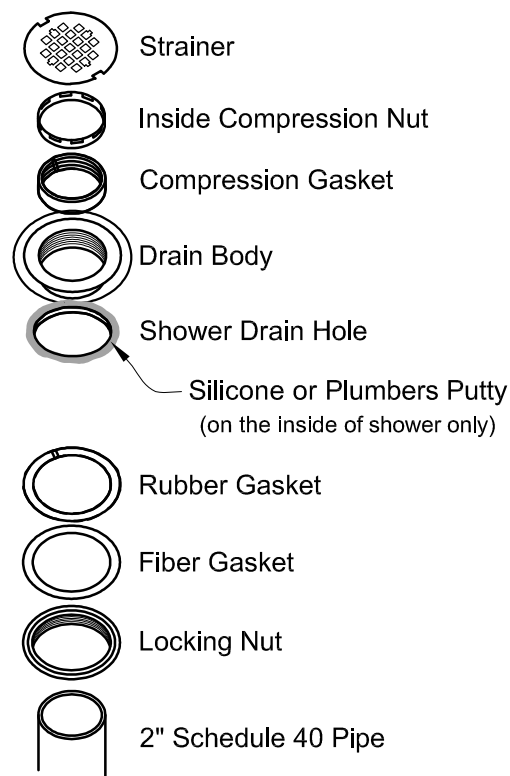

2" BRASS NO-CAULK DRAIN

Drain for Showers and Shower Bases

Clarion
BATHWARE
44 Amsler Ave.
Shippensburg, PA 16254

Phone: (814) 226-5374
Toll Free: (800) 576-9228
Fax: (814) 226-0730
www.clarionbathware.com

Signatures For Approval:

Date:

Customer: _____

Clarion Engineer: _____

Clarion SVP of Sales: _____

Dwg. #
BRASS DRAIN
-CUT SHEET

Dwg. By: NMH
DATE: 12/18/2018

*** IMPORTANT NOTICE ***

Clarion Bathware reserves the right to change the design and/or dimensions of its products at any time. This drawing may have been updated since this publication was issued. Before placing an order for any product, refer to our website at www.clarionbathware.com to obtain the most current drawings for any products that you wish to purchase. Compare the date of revision of the drawing that you have with the one on the drawing on our website. If you do not have internet access, please call your sales representative or Clarion Bathware's sales department at 1-800-576-9228.