

20. Once the grout lines are aligned and the meeting seams are tight begin to fasten the walls to the framing pocket using 6D galvanized screws. See Figure 16

Start at the top vertical seam at the center of the back wall. Install the first screw through the top horizontal flange at the top of the wall. Alternate from one wall panel to the other and work toward each corner, fastening both walls at the same time. (Do not fully fasten one wall first).

During the fastening process, be careful to keep both the vertical and horizontal grout lines in alignment with each other.

21. Continue fastening alternating between each wall from the corners out to the front of the unit.


Assure that the vertical and horizontal grout lines remain in alignment. Fasten the vertical flanges at the front on both walls.

Install finish trim around the water control valve, per the manufacturers provided instructions.


22. Apply acrylic latex caulk to finish seams. Refer to page 5 of this manual for caulking recommendations for visible surfaces. Smooth caulk and clean away excess before it cures.



**Figure 14**

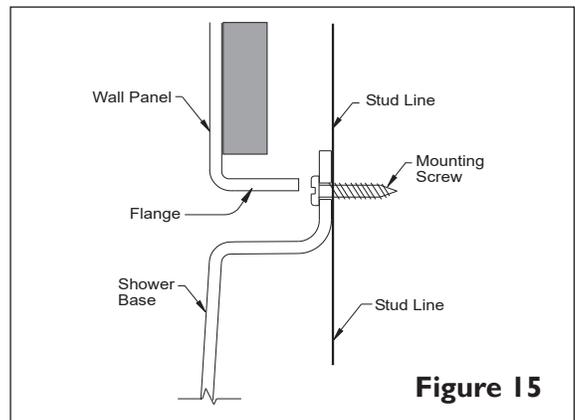

**Figure 15**

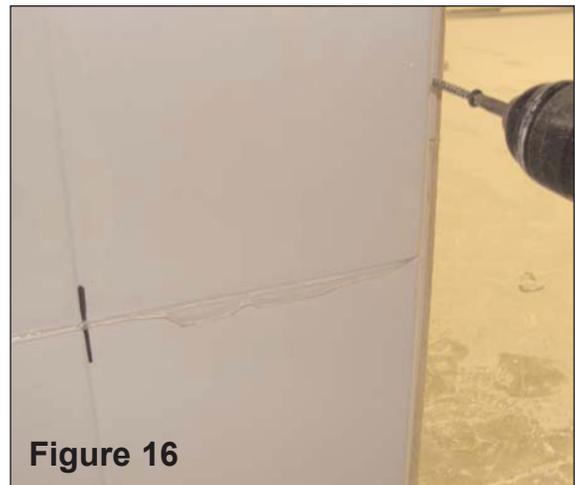

**Figure 16**

Customer Service | Technical Services | Warranty Services

American Bath Group  
Address: 435 Industrial Road  
Savannah, TN 38372  
Phone: (800) 443-7269



AMERICAN ★ BATH GROUP

Hamilton is a Praxis brand  
and a proud member of the  
American Bath Group

Rev. 07.12.23