




## BF-CT INSTALLATION INSTRUCTIONS

### BF-CT COLLAPSIBLE WATER BARRIER

SKU: BF60000CT

#### FEATURES:

- No special tools required, install is quick and easy
- Forms an effective water dam for the threshold of easy access shower floors
- Constructed of mold and mildew resistant materials
- Engineered to stay pliable, resilient, and retain its shape for years
- Colorfast finish that can be easily cleaned

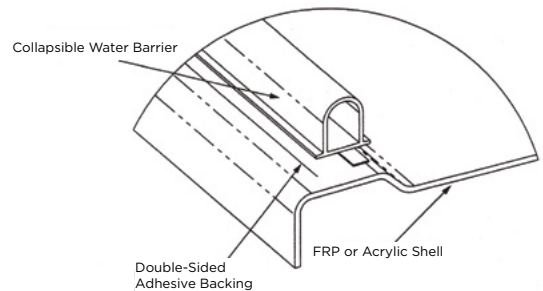

#### MATERIALS & TOOLS REQUIRED:

- Utility Knife
- Tape Measure
- 100% Silicone Sealer (White or Clear)
- Masking Tape
- Rubbing Alcohol
- Clean Rags

#### INSTALLATION INSTRUCTIONS:

1. Clean threshold and wipe with rubbing alcohol.
2. Start at one end when preparing the cut to length.
3. Be sure to account for the angled side walls of the shower floor.
4. Use masking tape to hold down the strip while measuring and making the cut. \*Do not remove film from adhesive tape at this time.\*
5. Use a pencil to mark the location of the strip on the threshold.
6. Remove 6" of the protective film from the sealing tape to start the installation.
7. Apply sealer/adhesive to the cut end of the strip.
8. Use the pencil mark, align the strip on the threshold. Press firmly to adhere the strip. Stretch opposite end to wall and re-check alignment.
9. Peel all but the last 12" off of the protective tape, then stretch and place the strip using the alignment marks.
10. Double check the overall length and re-cut if necessary. Remove remainder of the film and apply sealer to the end and press into place.
11. Allow sealer to dry thoroughly before applying any additional caulk. Use masking tape to temporarily hold ends of strip in place until sealant/adhesive cures.

*Optional: The outer edges may be caulked if desired. Wipe off excess caulk and let cure following manufacturer's specifications.*

Register your warranty at [www.swanstone.com](http://www.swanstone.com)  
For Assistance Call: 800-325-7008

Read and Understand  
Before Installing