

HOW TO INSTALL SWAN WALLS TO FIT THE WATER MITIGATION DAM ON VERITEK™ PRO TUBS OR SHOWER PANS

STEP 1:

Install Veritek™ Pro tub or base according to instructions provided by manufacturer.

STEP 2:

Install any backer needed.

STEP 3:

Install Swan back wall per instructions.


STEP 4:

Align side wall to fit back wall per sidewall installation instructions and cut to finished depth.



STEP 5:

Measure side wall from back wall to center of water mitigation dam on front of tub or pan. Mark side wall 1/2" high from center radius of the water mitigation dam.

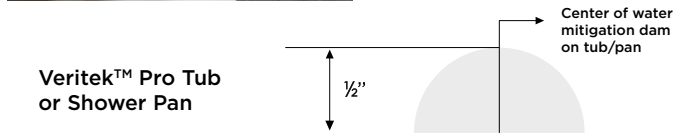


STEP 6:

Measure the bottom of the side wall at the water mitigation dam to 1".



STEP 7:

Use a 1" hole saw to cut out a rounded area.

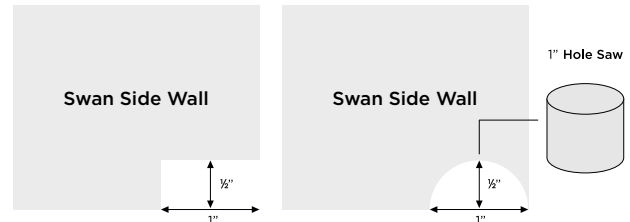

STEP 8:

Install side wall.



Please note these instructions can be applied to any trimmable wall from Swan, including Swanstone®, Novaline, and Veritek™ wall kits and single panels.

DISCLAIMER: All product and company names, logos or images are trademarks of their respective holders. Use of them does not imply any endorsement or affiliation with them.

DISCLAIMER: American Bath Group, LLC and its affiliates and subsidiaries (including Swan) are not responsible for damage caused by misuse, abuse or incorrect cleaning or repairing of your solid surface product. Proper training and use of professionals is recommended for desired results.