

INSTALLATION INSTRUCTIONS:


- 1- Cut cleat 1/2" smaller than the longest duct side length with snips.
- 2- Push/Hammer cleat onto duct end on both sides. Open profile facing outwards.
- 3- Push/Hammer other duct length into the other open side of the cleat profile.

NOTE:


Used for residential applications. Industrial tape, foil, or sealer can be used

WARNING!!

Improper installation may result in damage to product or inefficiencies in the system. Use proper PPE and equipment during cutting, bending, and installation processes. If local codes differ from these instructions follow local building codes.

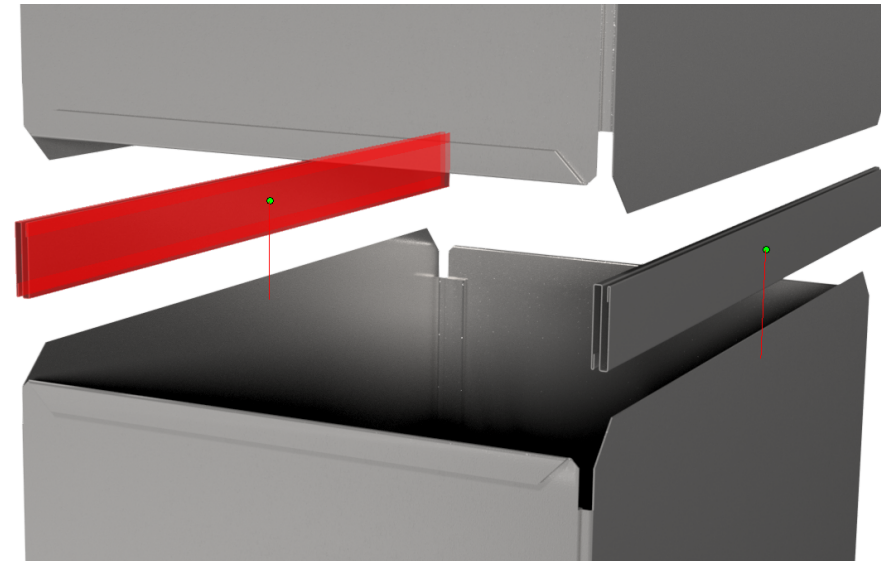

INSTALLATION VIEW

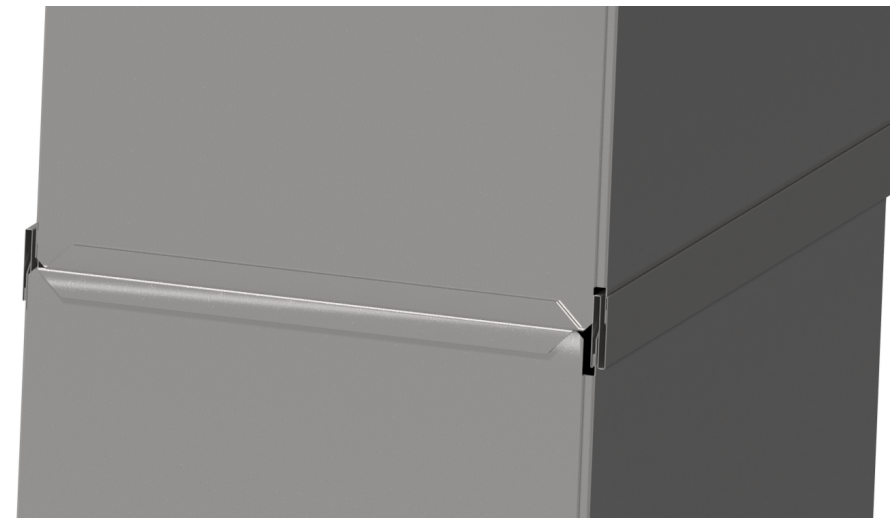

INSTALLED VIEW

[\(403\) 327-9871](tel:4033279871)

sales@tradesmanmfg.ca

www.tradesmanmfg.ca