


## Installing The Fast-Fold® Hinged Screen Joining Clamps

1. Unfold the two screen frames to be joined together. Lock all hinges and corner braces.
2. Place frames flat on floor with top and bottom of frames even.
3. Attach hinged joining clamp from the front side of frame. One clamp is placed near bottom, the other near the top. Tighten knurled knob screws securely.

**NOTE:** If screen size is 9' or over, a third clamp should be used in the middle. Remove loose pin so that frames may be separated.

4. Attach legs to frames, then snap surfaces to studs.
5. Erect one screen. Second screen needs only one leg on side opposite where screens are joined.
6. Position second screen so hinge leaves mate. Insert loose pin in hinge.
7. If more than two screens are used, repeat above procedure.

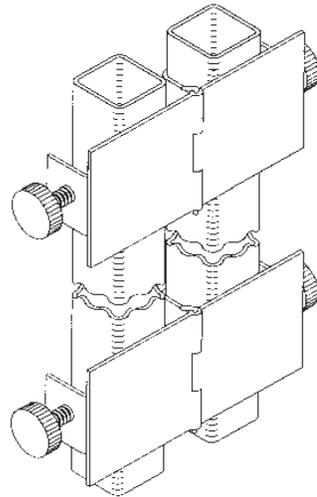

A Milestone AV Technologies Brand

3100 North Detroit Street  
Warsaw, Indiana 46582  
P: 574.267.8101 or 800.622.3737  
F: 574.267.7804 or 877.325.4832  
E: info@da-lite.com  
www.da-lite.com

DL-0364 5.14

© 2014 Milestone AV Technologies LLC. Printed in U.S.A.

---

INSTALLATION INSTRUCTIONS FOR  
Fast-Fold® Hinged Screen  
Joining Clamps

---

