



baresque.com.au e info@baresque.com.au
p 1300 306 399

baresque

SERAPHIC DIGITAL PRINT


Glass Film installation guide

PLEASE CAREFULLY INSPECT YOUR CUSTOM DIGITAL PRINT PRODUCT PRIOR TO INSTALLING, CUTTING, OR FABRICATING AND INFORM BARESQUE (1300 306 399) IMMEDIATELY OF ANY DAMAGE OR DEFECTS. FAILURE TO DO SO MAY JEOPARDIZE YOUR RIGHTS TO WARRANTY REPLACEMENT AND / OR REIMBURSEMENT FOR SHIPPING DAMAGE.

The following information is provided to assist you in the installation of our main seraphic digital print offerings. This information should be used as a guide only and Baresque recommend using accredited installers where possible. Baresque's recommended installers can be found [here](#) or at baresque.com.au/faq/.

Handling

Baresque Seraphic Digital Print wallcovering will arrive as a roll. When handling roll material, make sure hands are clean and oil free: cotton gloves are recommended especially for custom finishes.

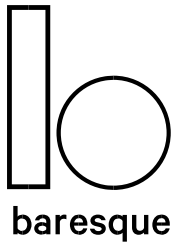

baresque.com.au e info@baresque.com.au

SERAPHIC DIGITAL PRINT

Glass Film installation guide (cont.)

Overview

Follow these instructions if the label states "GLASS FILM" otherwise please see wallcoverings instructions. If you are unsure, please call customer service 1300 306 399.

Glass film drops may require to be cut to size. An unprinted border is supplied around drops ensure no damage during transport or while being unrolled. Before hanging, check that rolls are not damaged, and that print and order number matches. Please check the design direction with the signed shop drawing or the specifier and if in doubt, speak with our customer service team. It is the responsibility of the installer to ensure the wallpaper is correct and, during hanging, to check there are no visible faults.

Surface:

To ensure a perfect finish, surface/glass should be prepared correctly. Make sure surface is impeccably clean and dry. To get the best clean use an ammonia-based window cleaner, such as Windex. Make sure you clean the window right to the edges of the glass. Do not hang over previous glass film/paint.


Panel designs:

Glass film will not be supplied with bleed and will need to be cut to size prior to installation to ensure no damage to glass. It is installers responsibility to check drops and design prior to install and should be checked against shop drawings provided at order stage.

Install:

Window film is a very thin material that requires handling with care. Creases and folding must be avoided, and application must be carried out in a draught and dust free area.

We would recommend a solution of dishwashing detergent and water to aid in installing the glass film. The mixture should be sprayed to both the glass liberally and to the adhesive side of the glass film. This mixture does not affect the adhesive backing but allows for some tolerance in layout and movement once laid onto glass. Lightly spray your hands to stop the film sticking to them.

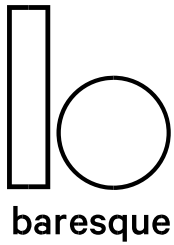

baresque.com.au e info@baresque.com.au

Carefully remove the film backing and position appropriately. Use a smooth cloth or sponge tool over the surface from the centre outwards. Make sure all the bubbles are out of the film.

Drying:

Wipe away any excess water. While there is water under the film, it will move. Once the film is in the correct position, leave it to dry overnight or a minimum of 5 hours. There may be some water marks left on the film, however this will dry/evaporate over time.

Clean:

To clean the film after installation, use mild soapy water and paper towel. Avoid using an abrasive material, as it will scratch the film.