

baresque.com.au e info@baresque.com.au
p 1300 306 399

baresque

SERAPHIC DIGITAL PRINT

installation guide

PLEASE CAREFULLY INSPECT YOUR CUSTOM DIGITAL PRINT PRODUCT PRIOR TO INSTALLING, CUTTING, OR FABRICATING AND INFORM BARESQUE (1300 306 399) IMMEDIATELY OF ANY DAMAGE OR DEFECTS. FAILURE TO DO SO MAY JEOPARDIZE YOUR RIGHTS TO WARRANTY REPLACEMENT AND / OR REIMBURSEMENT FOR SHIPPING DAMAGE.

The following information is provided to assist you in the installation of our main seraphic digital print offerings. This information should be used as a guide only and Baresque recommend using accredited installers where possible. Baresque's recommended installers can be found [here](#) or at baresque.com.au/faq/.

Handling

Baresque Seraphic Digital Print wallcovering will arrive as a roll. When handling rolls or sheet material, make sure hands are clean and oil free: cotton gloves are recommended especially for custom finishes.



baresque.com.au e **info@baresque.com.au**

SERAPHIC DIGITAL PRINT

installation guide (cont.)

Overview

Follow these instructions if your order was for "WALLCOVERING" OR "REATEC", otherwise please see glass-film instructions. If you are unsure, please call customer service 1300 306 399.

Wallcovering drops may require to be cut to size. An unprinted border is supplied around drops ensure no damage during transport or while being unrolled.

Before hanging, check that rolls are not damaged, and that print and order number matches. Please check the design direction with the signed shop drawing or the specifier and if in doubt, speak with our customer service team. It is the responsibility of the installer to ensure the wallpaper is correct and, during hanging, to check there are no visible faults.

Paste:

For wallcoverings, we recommend using Roman Ultra Clear Strippable Adhesive (PRO880) for hanging our wallpapers. PRO-880 is a premium clear adhesive with excellent wet-tack, extended open-time and unsurpassed ease of clean-up. Adhesive is available from Baresque ex Sydney or can be bought via one of our [local stockists](#). Reatec will come


Walls:

To ensure a perfect finish, walls should be prepared correctly; all holes should be filled, walls should be smooth, dry and cleared of any debris. Walls must be primed and if necessary cross line with lining paper. Turn off the power and remove all faceplates and socket covers.

Do not hang over glossy or non-porous areas. Painted walls should be rubbed down to remove grease or soiling and glossy paint should be rubbed down with sandpaper. Pre paste porous wall surfaces such as plasterboard or chipboard. Never hang over new plaster or un-primed walls.

Panel designs:

Where wallpaper rolls or drops are numbered the hanging should be done in sequence to create the panel design. Please use shop drawings provided at order stage to correspond with drop numbers and install process.

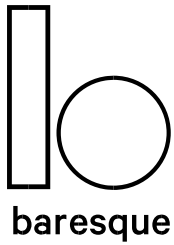

baresque.com.au e info@baresque.com.au

Install:

All seraphic digital print wallcoverings and Reatec will be supplied with the intention of being installed using the 'double cut' install technique. Standard bleed of 30mm for 1300mm wide wallcoverings and 20mm for 1200 wide, will be provided on consecutive hung drops unless otherwise requested. This will be noted by a black line next to the drop number at the top of each drop.


The white, non-printed sides of the wallcovering or Reatec will need to be trimmed off prior to install. This is left on to protect rolls during transport and onsite.

A very sharp blade should be used to cut through both pieces of the overlapped wallcovering. After cutting a straight line down the wall, peel back the top layer and remove the trimmed portion, which results in a clean match on the wall. When done correctly, Baresque Wallcovering seams on the wall should be nearly invisible from a normal viewing distance. We highly recommend protecting the drywall surface underneath your wallcovering by using a seam cutting tool.



Drying:

Allow the wallpaper time to dry slowly at room temperature; do not attempt to dry it quickly as shrinkage may occur. Do not rub. Do not allow vinyl adhesive to dry on surface as it may leave a white residue. Wash off excess paste from face of wallcovering as you hang it with a cellulose sponge. The cellulose sponge must be rinsed in clean water after every use. Blot dry with a clean cloth.

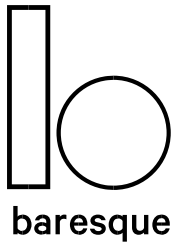

baresque.com.au e info@baresque.com.au

Maintenance:

Stains should be removed as soon as possible to eliminate any possible reaction between the staining agent and the wallcovering. If soil remains on the wallcovering too long, permanent discoloration may develop. Ordinary dirt and smudges can be removed with a mild soap and warm water.

Clean from the bottom of the wall upward to protect the baseboard and to prevent streaking. Rinse thoroughly with clean water from the top down using a sponge. Dry with a clean cloth. Do not use active solvent-type cleaning preparations, such as nail polish remover, tar and bug removers, abrasive cleaners, steel wool, etc., as they can remove the finish from the wallcovering.