



x1 Fixed Wall


CONTENTS FOR Fixed Wall



x1
Fixed Wall

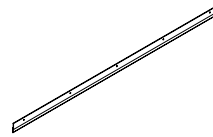

x8
Split Batten
(z clips)




x20
Flat Head Screw
(3/4in Long)

Tools you will need:




Laser Level




Tape Measure



Electric Drill

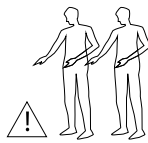

Two Person
Install



Phillips Head
Screw Driver




Spirit Level


CAUTION

- Clear open space for install
- Installer is responsible for installing Z clips to the wall.
- + 25lbs lift required


1

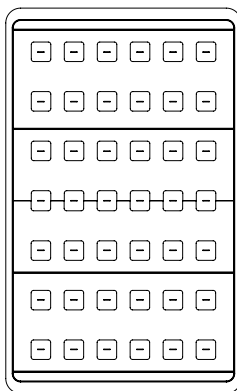


a.
Turn over Fixed Wall.

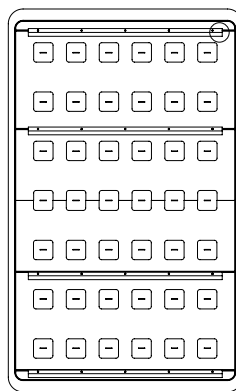


b.
Lay Split Battens (Z clips) on the back.
Ensure the Z clips are the correct way
around.

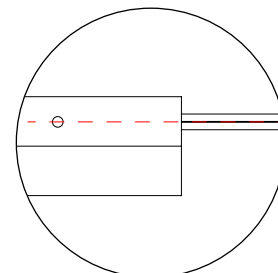

Holes to be in center of Etch.

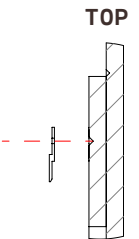


TOP

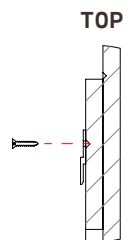


TOP

2

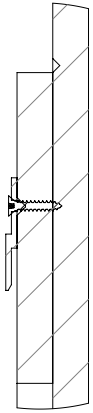


a.
Make sure screws are tight, flush and not protruding to the surface.

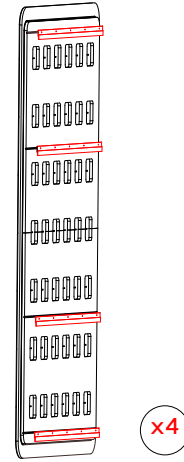

b.
Repeat for all Z clips.

3

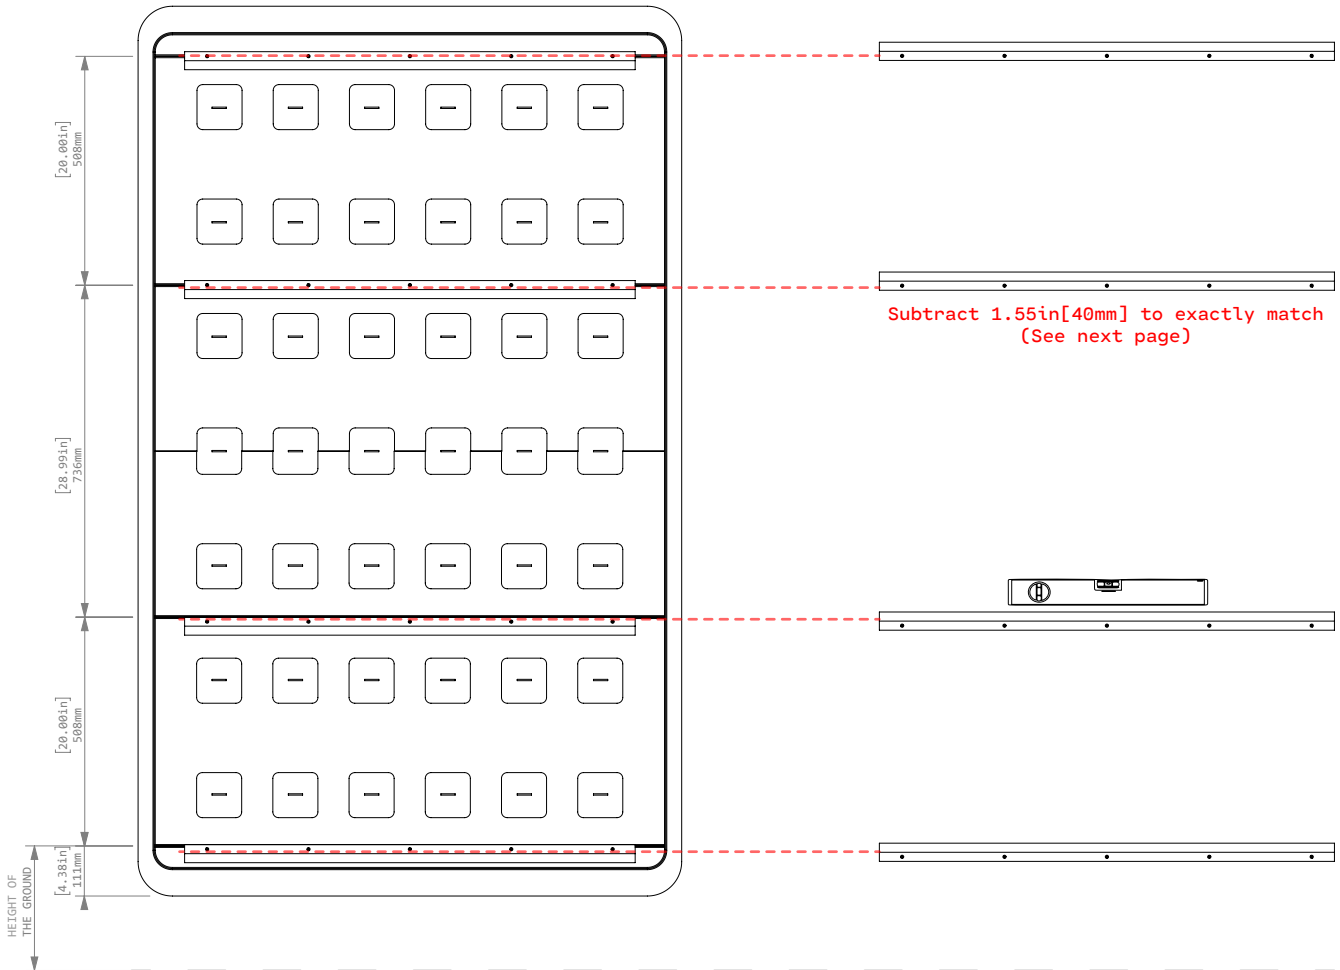


a.
Measure from the floor to the desired height of the bottom fixed wall center etch. See drawing above.

b.
Match Fixed Wall spacing onto your solid wall. Ensure Z clips are the correct direction and level. Check with a laser or spirit level. Installer to use fixings appropriate to Solid wall construction.

4

Fixed Wall Z Clip

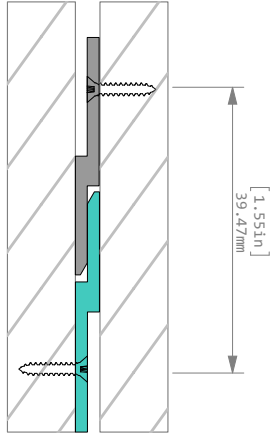

Wall Mount Z Clip


Gravity



CAUTION

Installer is responsible for installing Z clips to the wall. Ensuring they are structurally sound to hang a Fixed wall and desired accessories.

Fixed Wall Z Clip

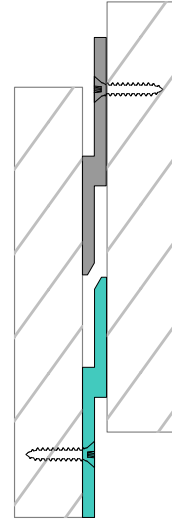

Wall Mount Z Clip


a.

Keep in mind the hole center's do not match when installed, so to get an exact height would be to subtract 1.55in[40mm] from the fixed wall Z clips and transfer that to your installation wall.

b.

Ensure Z clip are correct direction for installation. Also make sure the screws are flush as they will interfere with acoustic PET panel.


5

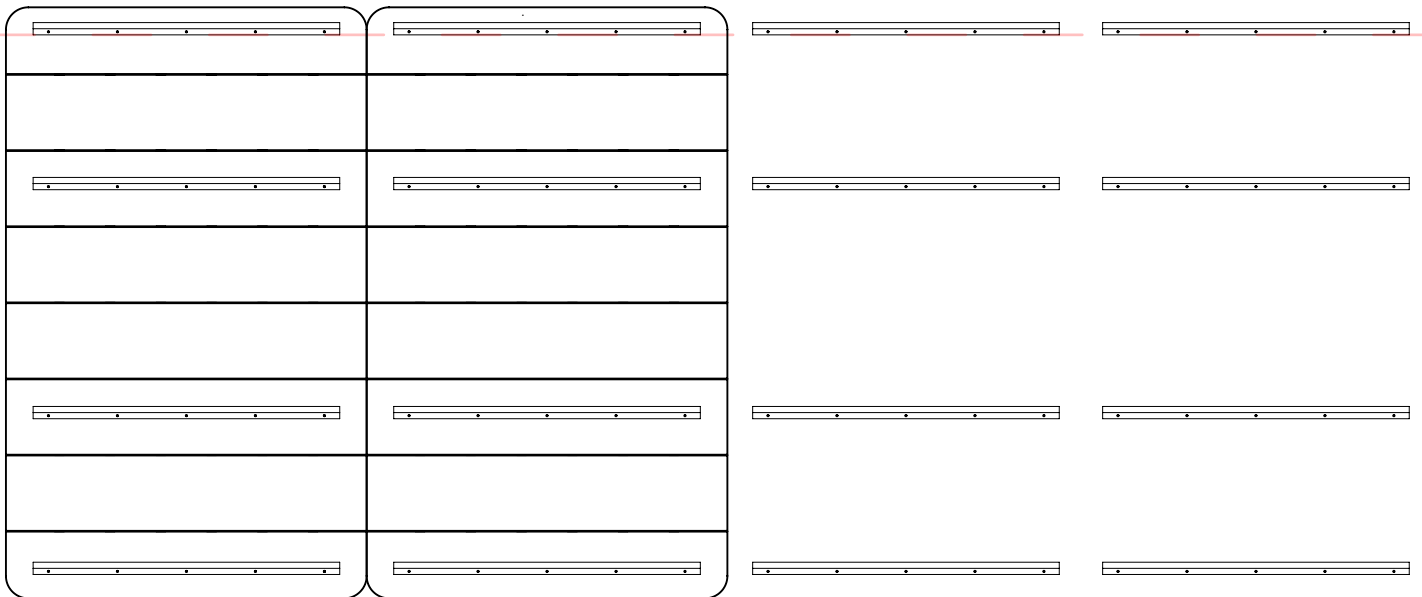

a.

When installing multiple Cooee Fixed Wall's, laser level is recommend as the floor or ceiling may not be level. This will warrant any mis-alignment and help in a fast and accurate install.

6

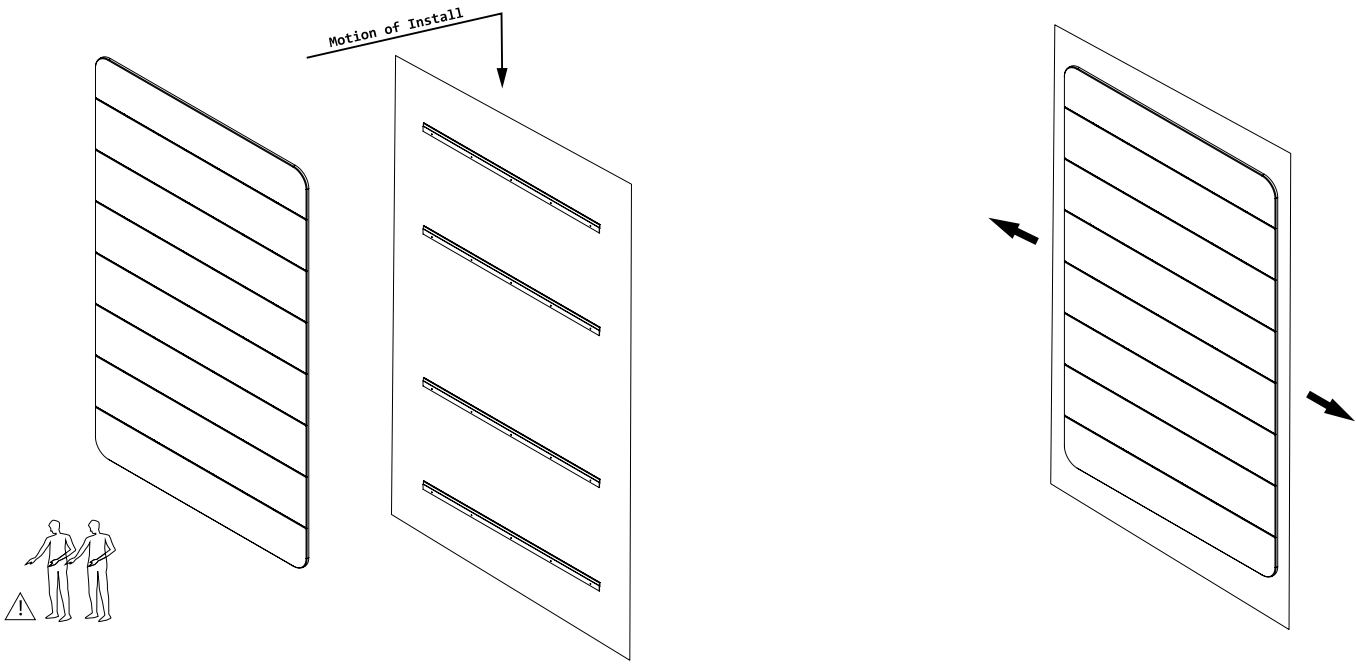


a.

Once Z clips are secure on the solid wall, the Cooee Fixed Wall can be lifted in place. This requires 1-2 people. Make sure pressure is applied at the front of the acoustic PET to ensure the z clips lock into each other.

b.

Once Cooee Fixed Wall is lifted in place. Make sure it is centered over the Z clips and not visible from the side.

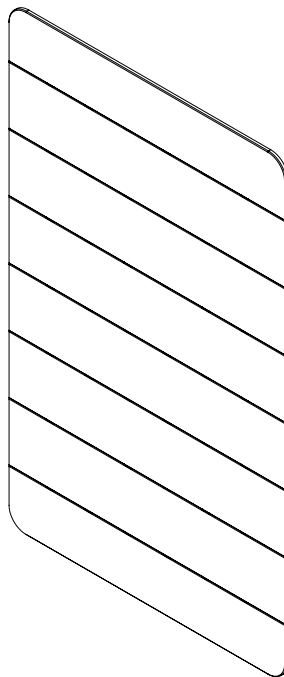

x1 Assembled
Fixed Wall