



ASSEMBLY GUIDE

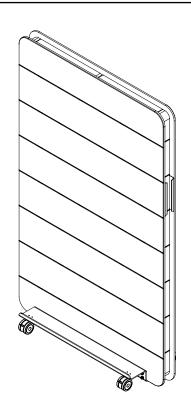





x1 Cooee Tool Wall

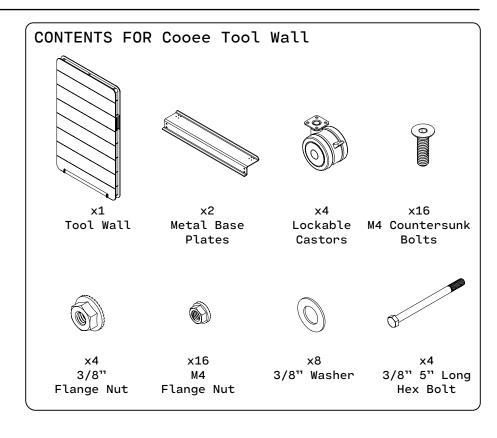

CAUTION

- Clear open space for install
- May need need a sturdy table.
- + 65lbs lift required

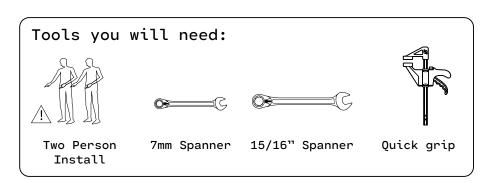

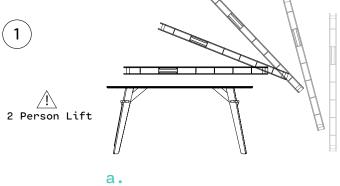

Lay Tool wall on table.




b.
Hang bottom end off the table
to allow for base assembly.




ASSEMBLY GUIDE





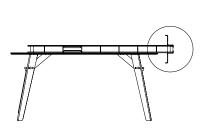

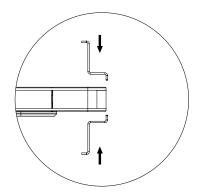


Lay metal bases on tool wall.

Clamp with quick grip. Ensure Holes are aligned.

Torque= 45Ft-Lb



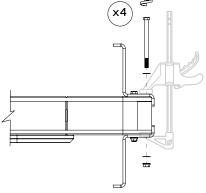

Insert 3/8 bolt, Washer and Flange Nut.


Ensure all bolts are in the same direction

b.


Clamp with quick grip. Tighten bolts in order and repeat to prevent one bolt tighter than the other.

Ensure Hole's are aligned.



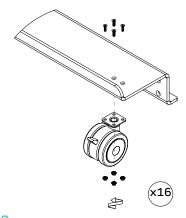

Insert countersunk bolts, castors and M4 Flange nuts then tighten with 7mm Spanner. Repeat for all bolts

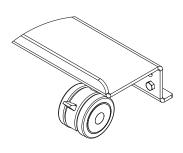

Ensure all bolts and castor's are secure




COOEE TOOL WALL

ASSEMBLY GUIDE

CREATE YOUR SPACE


(5)

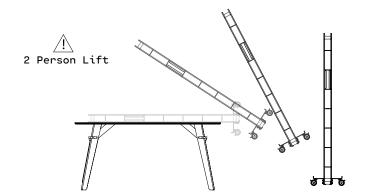



a. Lift Tool Wall onto the ground.

b. Stand up and ensure Tool is able to move and castors can be locked.

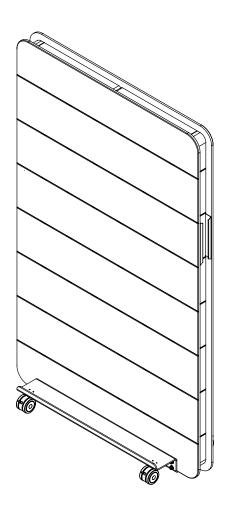

x1 Assembled Cooee Tool Wall