



x1 Rectangular
Wall Tile

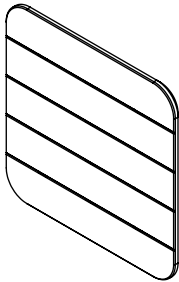


x1 Square
Wall Tile

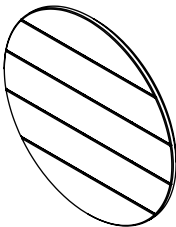

x1 Circular
Wall Tile


SIZE GUIDE & CONTENTS FOR Wall Tiles

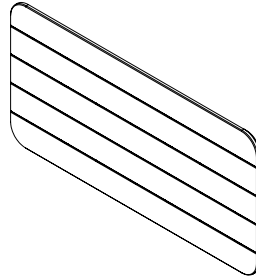

1207mm x 603mm
[47.5in x 23.75in]




x2 MDF Batten
800mm [31.50in]

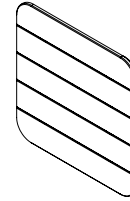

603mm x 603mm
[23.75in x 23.75in]



x2 MDF Batten
400mm [15.75in]

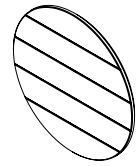

603mm x 603mm
[23.75in x 23.75in]



x2 MDF Batten
400mm [15.75in]

Tools you will need:



Laser Level



Tape Measure




Electric Drill



Spirit Level



One Person
Install



Phillips Head
Screw Driver



Suitable Screws For Different
Surfaces
Screws Are Not Included




CAUTION




- Clear open space for install
- Installer is responsible for installing MDF Battens clips to the wall.
- + 6.5lbs lift required

1

Prepare your MDF Battens before measurement.
Drill holes on MDF Battens suitable for you selected screws (Screws For Different Surfaces).
Two holes per MDF Batten required.
Before drillinling check the surface for obstacles.

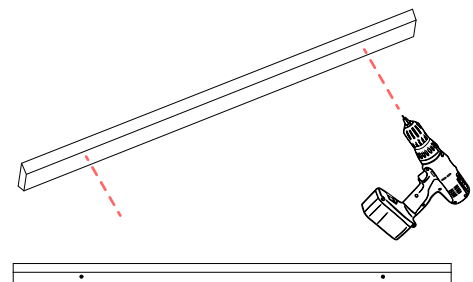


2

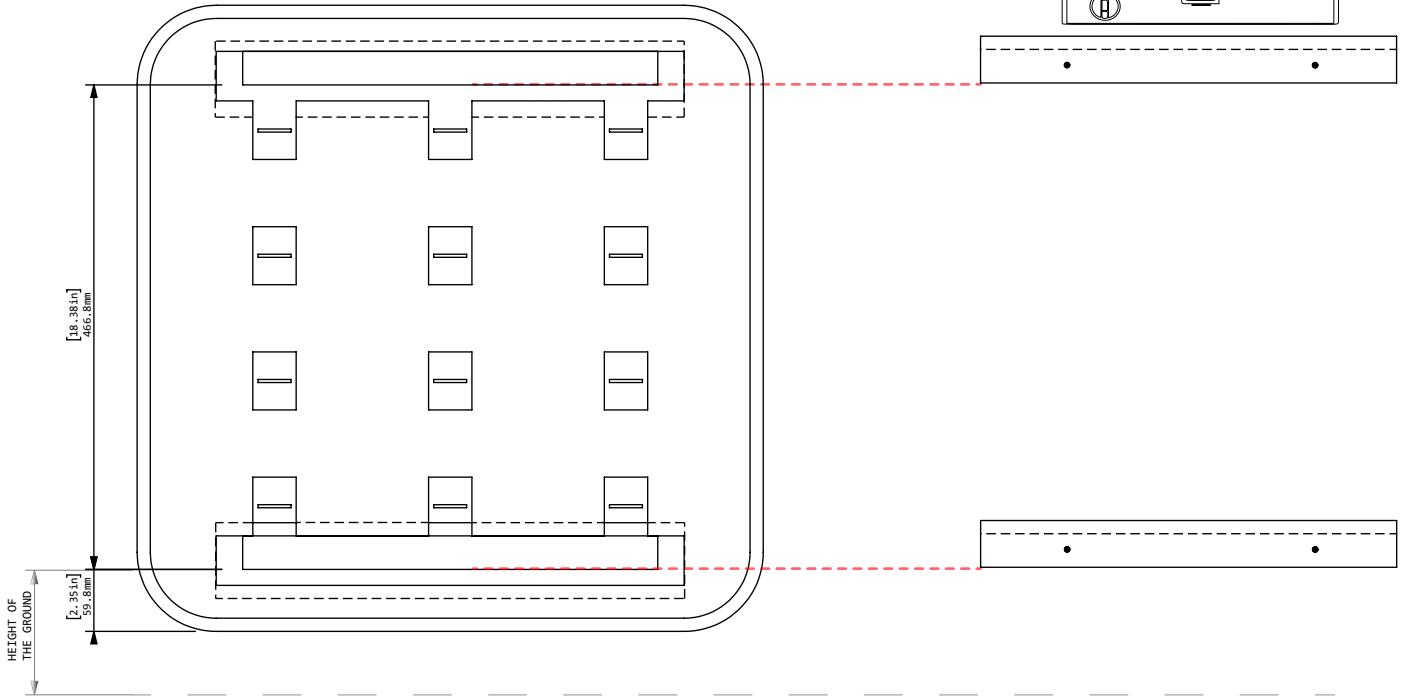

a.
Insert MDF Battens into Wall Tile. Measure from the floor to the desired height of the bottom MDF Batten. See drawing above.

b.
Match Wall Tile spacing onto your solid wall (Surface). Ensure MDF Battens are the correct direction and level. Check with a laser or spirit level. Installer to use fixings appropriate to Solid wall construction.

3

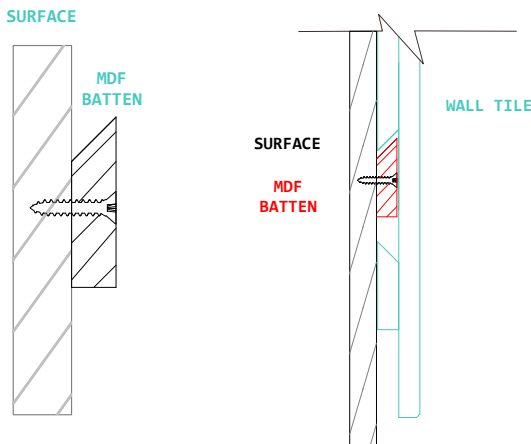


a.
Ensure MDF Battens are correct direction for installation. Also make sure the screws are flush as they will interfere with acoustic PET panel.

Gravity



CAUTION


Installer is responsible for installing MDF BATTENS to the wall. Ensuring they are structurally sound to hang a Collaboration Wallboard / Whiteboard and desired accessories.

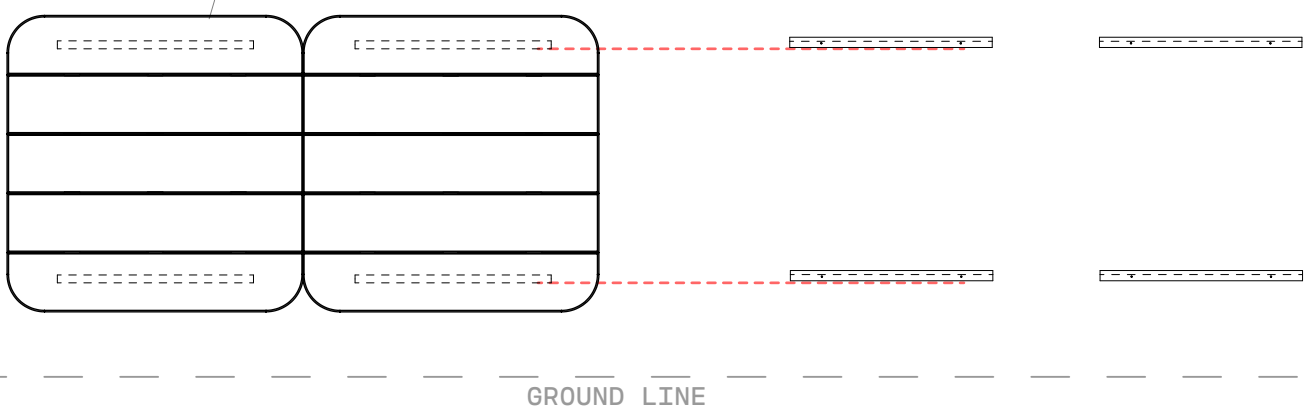

4

a.

When installing multiple Cooee Wall Tiles, laser level is recommend as the floor or ceiling may not be level. This will warrant any mis-alignment and help in a fast and accurate install.

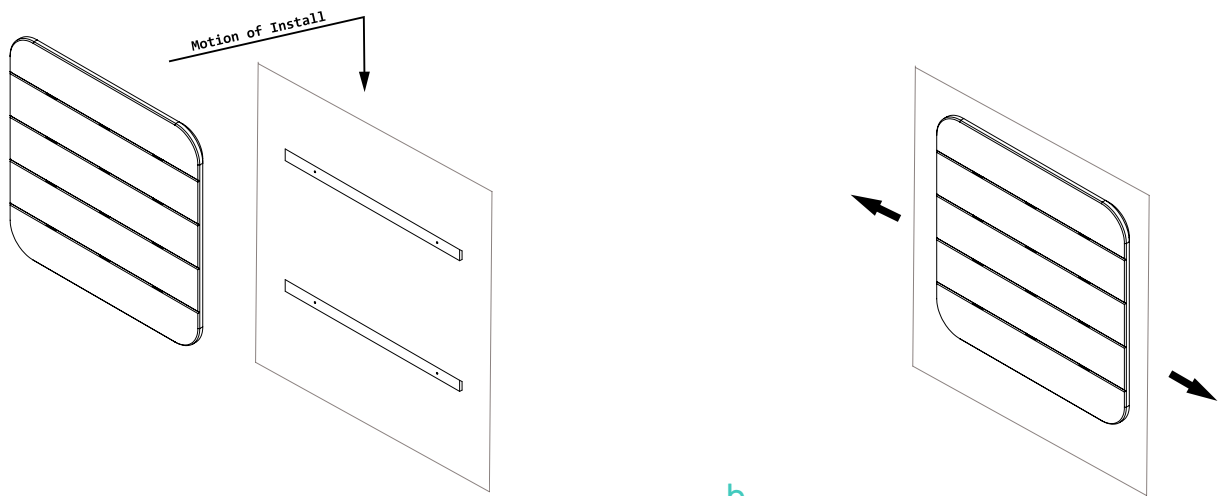


5

a.

Once MDF Battens are secure on the solid wall, the Cooee Wall Tile can be lifted in place. Make sure pressure is applied at the front of the acoustic PET to ensure MDF Battens and Wall Tile lock into each other.

b.

Once Cooee Wall Tile is lifted in place. Make sure it is centered over the MDF Battens. Slight adjustments on both sides is possible.

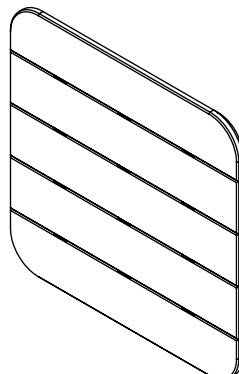

x1 Assembled
Wall Tile