


PARTS AND HARDWARE

FOR A TYPICAL ASSEMBLY


COFFER - x8

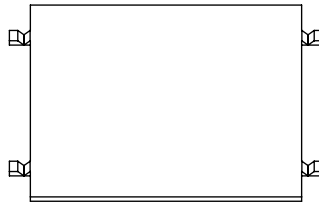

STEP 1

COFFER INSTALL

FOLD INSIDE x4 COFFER'S FIXING POINTS AS SHOWN.

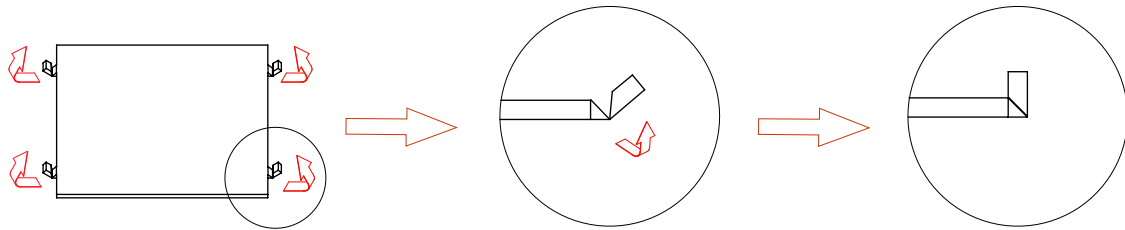

STEP 2

COFFER INSTALL

INSERT COFFER'S FIXING POINTS INTO THE CORRESPONDING PRE-CUT RECTANGULAR HOLES. AS SHOWN.

REPEAT STEP 1 AND STEP 2 FOR EACH REQUIRED COFFER'S INSTALL.

