




CLOCHETTE CLOUD INSTALL GUIDE

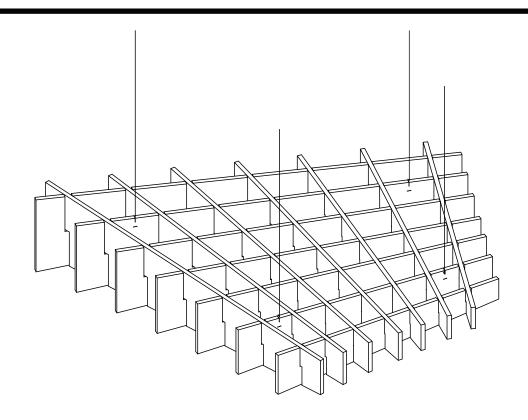

CLOCHETTE CLOUD

ASSEMBLY

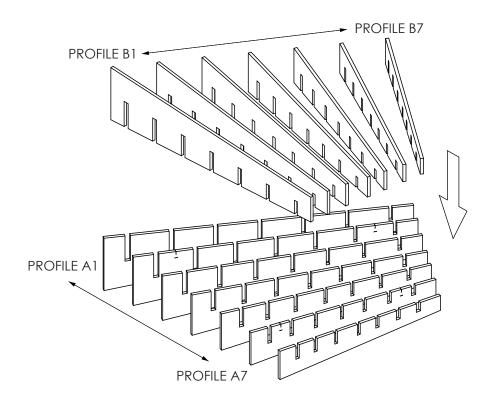

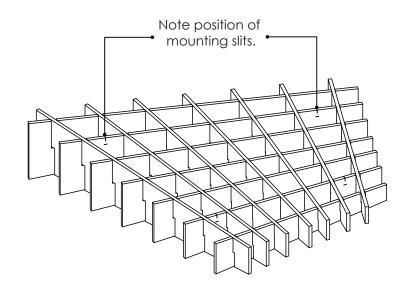

1) Assemble cloud profiles via slots. Note position of mounting slits.

2) Assembled "Clochette Cloud".

STEP 1 STEP 2

CLOCHETTE CLOUD

INSTALL GUIDE


CLOCHETTE CLOUD

SUSPENSION METHOD

3) Place cloud assembly up to ceiling in desired location. Mark position of through holes which correspond to the centre of each "set" of mounting slits on the mounting profile. Test that hole position is correct by temporarily suspending cloud on wires as shown in STEP 7 & 8.



3) Install the 1/4"-20 hanger bolts to the substrate. The supplied hanger bolts are intended for use in wood only. For other substrates the installer will need to source the vappropriate hardware.

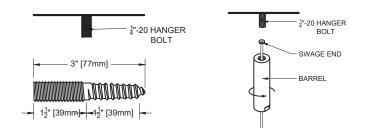

STEP 3 & 4

5) Feed swaged wire through tip of 'wire adjuster' (as shown). Push button (shown in grey) to adjust wire length. Release the button to lock in place.




6) Insert the plain end of the cable through one side of the adjustable fastener. Loop the wire through the hole in the mounting profile and around the edge of the mounting profile at the predetermained locations. Re-insert the plain end of the cable through the remaining side of the adjustable fastener.



STEP 5 & 6

CLOCHETTE CLOUD SUSPENSION METHOD


7) Re-adjust wire length as explained in STEP 5 until cloud hangs level. Note, there are 2 orientation options as shown below.

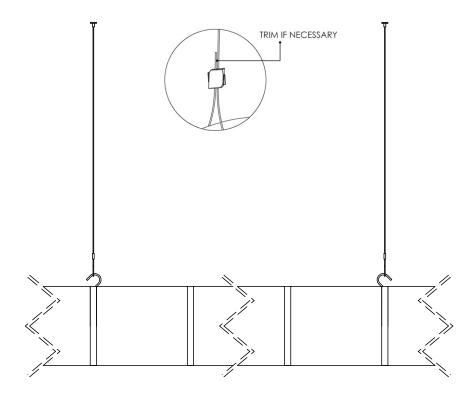


STEP 7 & 8


CLOCHETTE CLOUD


PARTS



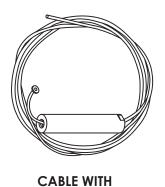

BARREL FIXING

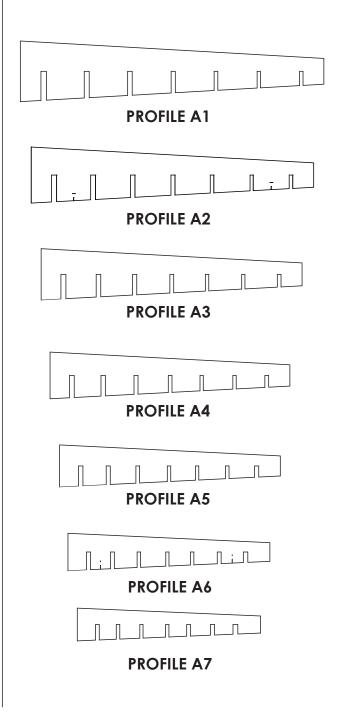

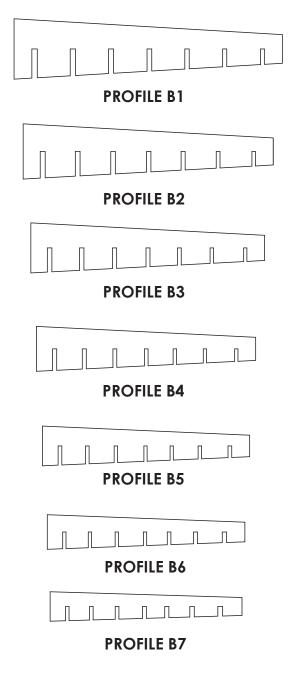

CLOCHETTE CLOUD INSTALL GUIDE