



CONTENTS FOR INALA FLOOR SCREEN



x1
Screen

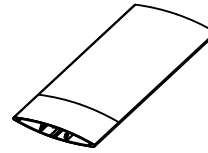

x1
Louvre insert
& Double side tape



x4
Base Plate



x4
Plastic Adhesive Bumper



x4
M4 Countersunk
Bolts


x1 INALA FREESTANDING SCREEN



CAUTION

- Clear open space for install
- May need a sturdy table.


Tools you will need:

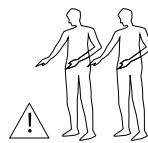

One/Two Person
Install




Screw driver

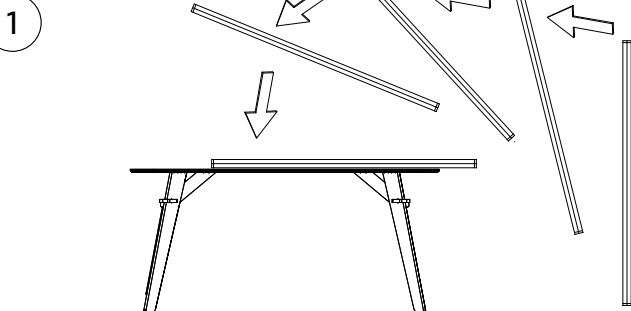

a.


Lay the louver insert on table.

2

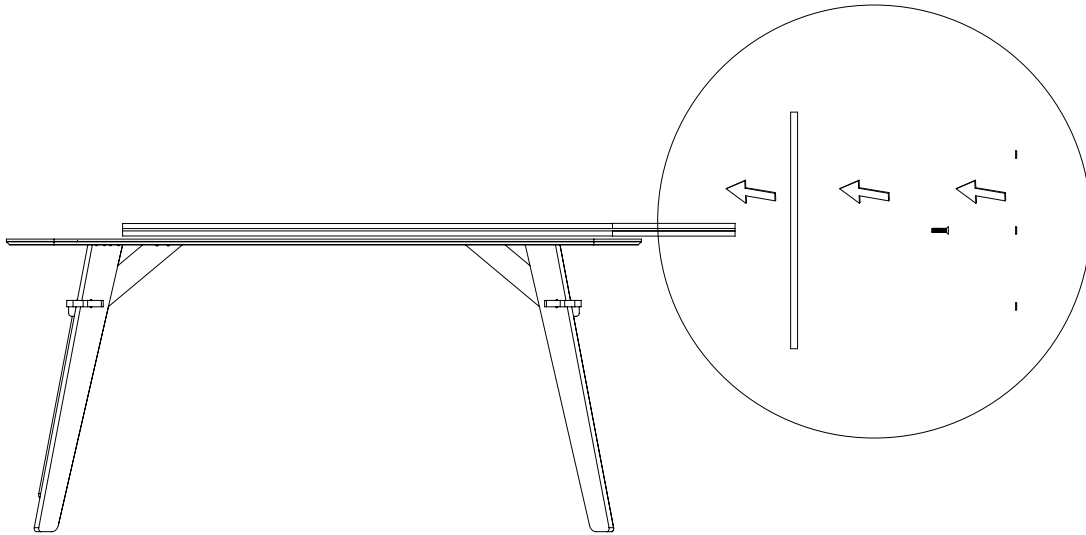

a.

Line up the base plate holes to the louver

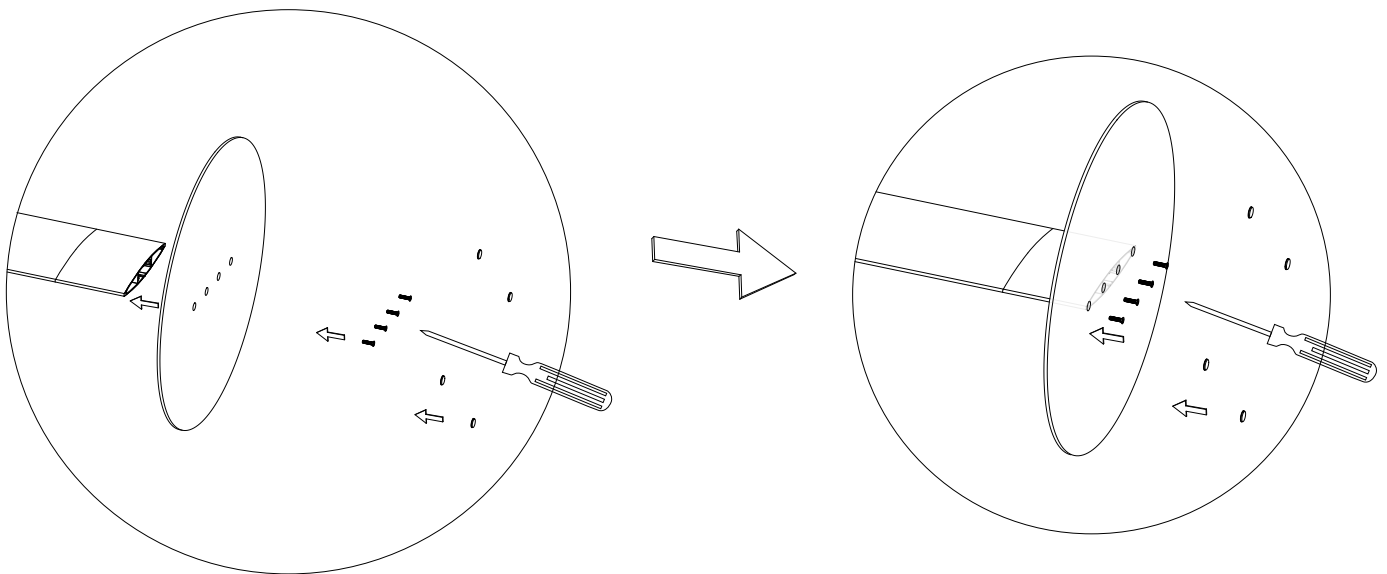


b.


Screw in the base plate to the louver and stick on the bumpers to the bottom of the base plate

3

! 1-2 Person Lift


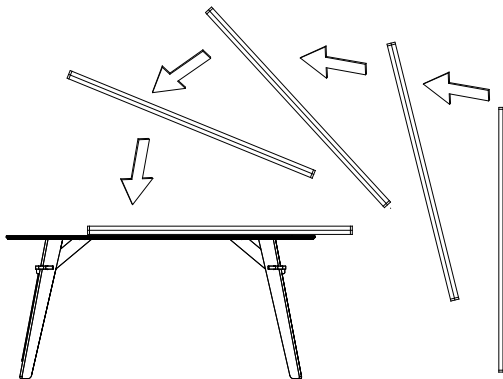


Min 10"[254mm]
Overhang

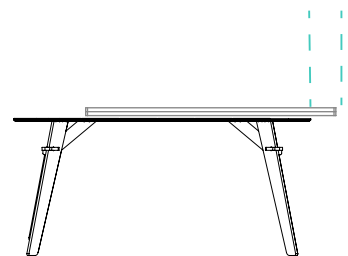


a.
Lay the Screen on table.

4

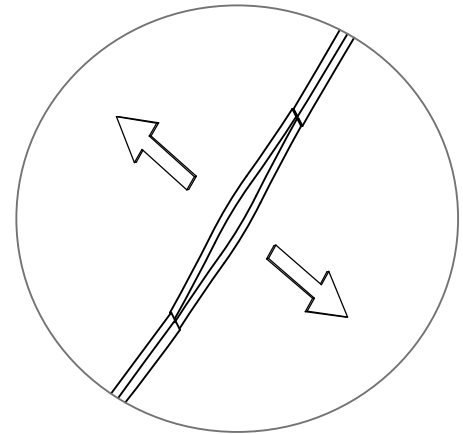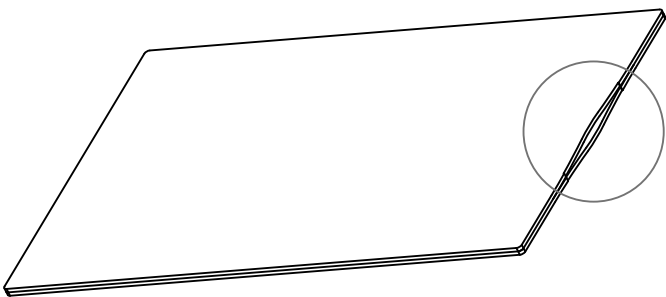


b.
Peel open the two panel in between the notch, only open enough for 1 flat hand to fit

5

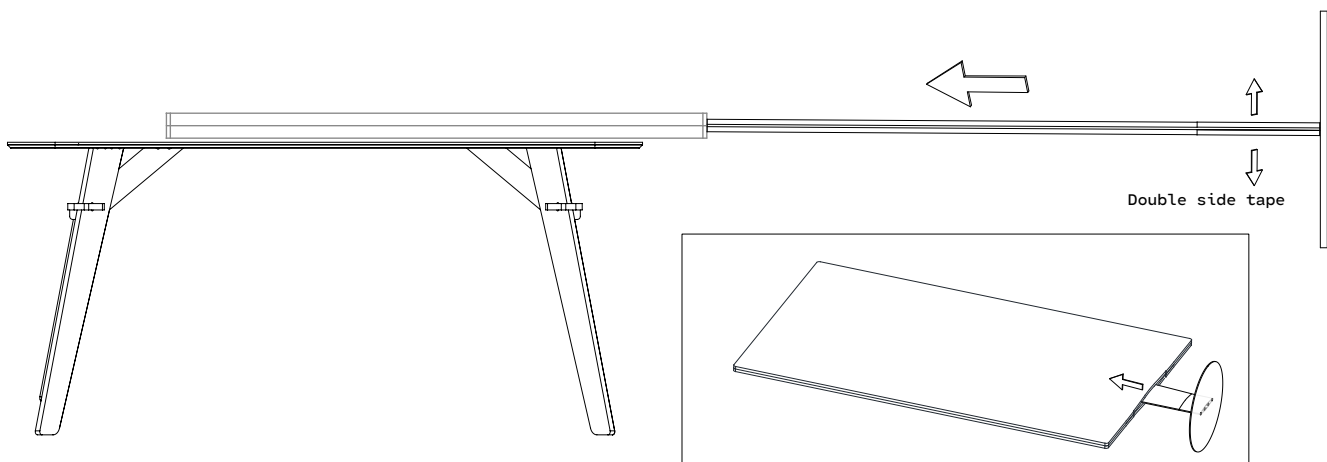


c.
Peel the protective double sided tape coat of the louver to expose the sticky side
Then slide in the louver inside in between the two panels.

6

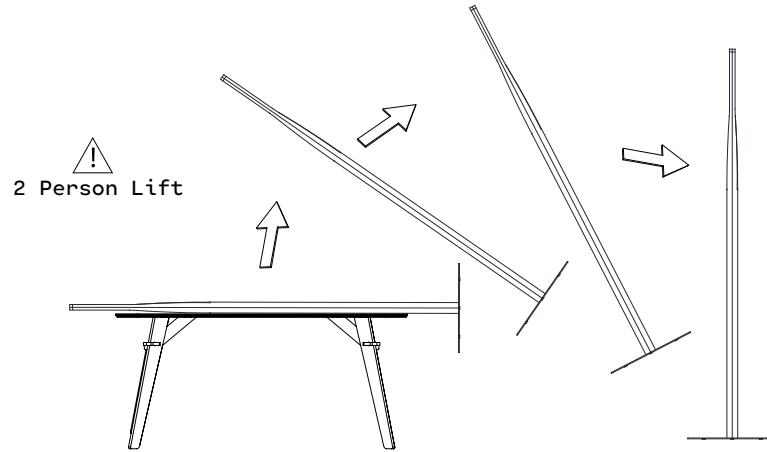

a.

Pat the double side tape section down
then lift Screen onto the ground.

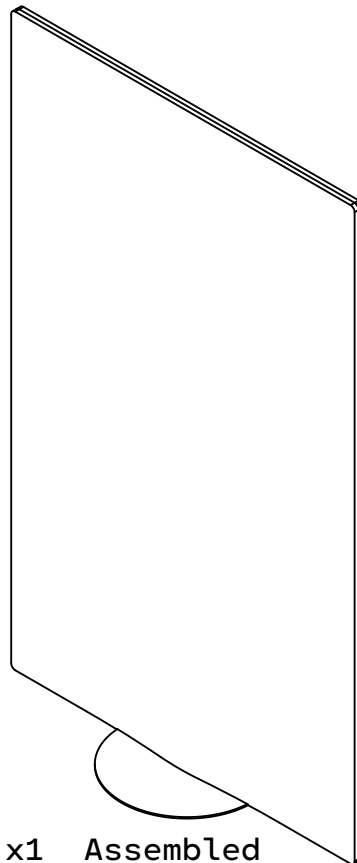

x1 Assembled
Inala Freestanding Screen