



x1 INALA FLOOR SCREEN


CONTENTS FOR INALA FLOOR SCREEN

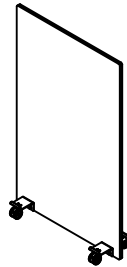

x1
Screen

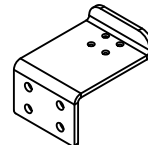

x4
Metal Base
Plates



x4
Lockable
Castors



x16
M4 Countersunk
Bolts




x8
5/16"-18
Low Nut



x16
M4
Flange Nut



x8
3/8"
Split Lock Washer




x4
5/16"-18, 2"
Hex Bolt



CAUTION

- Clear open space for install
- May need a sturdy table.


Tools you will need:

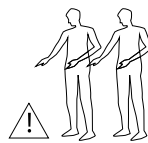

One/Two Person
Install



Spanner




Quick grip

1




1-2 Person Lift

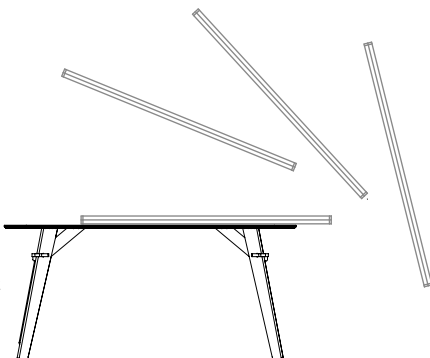

a.
Lay Floor Screen on table.


Min 10"[254mm]
Overhang

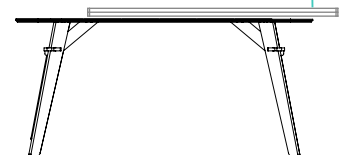

b.
Hang bottom end off the table
to allow for base assembly. Holes
should be on the overhang side.


2

Clamp with quick grip.
Ensure Holes are aligned.

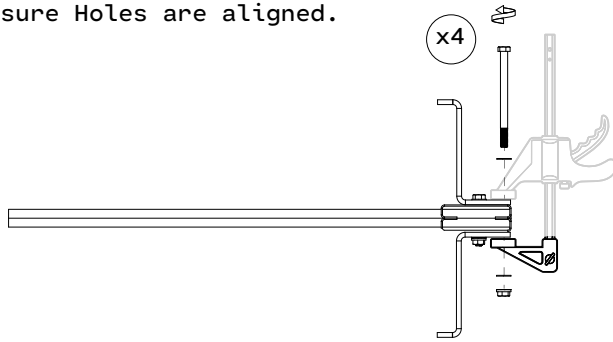

b.


Clamp with quick grip. Tighten bolts in order and repeat to prevent one bolt tighter than the other.
Ensure Hole's are aligned.

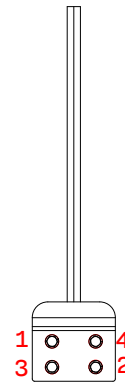

⬡ Torque= 45Ft-Lb

3

Insert bolt, Washer and Nut.
Ensure all bolts are in the same direction

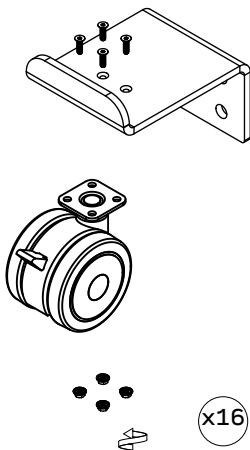


a.


Insert countersunk bolts, castors and M4 Flange nuts then tighten with Spanner.
Repeat for all bolts

b.

Ensure all bolts and castor's are secure

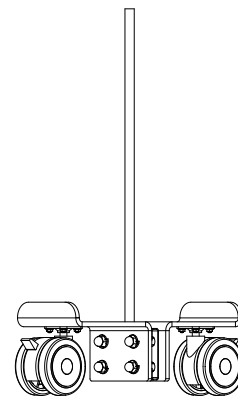


4

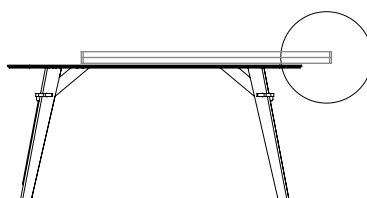




a.

Insert assembly into the holes/cutout on the panel.

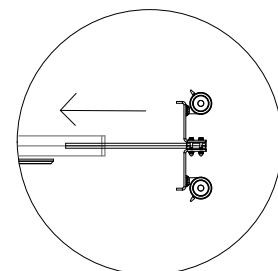

5

⚠
2 Person Lift

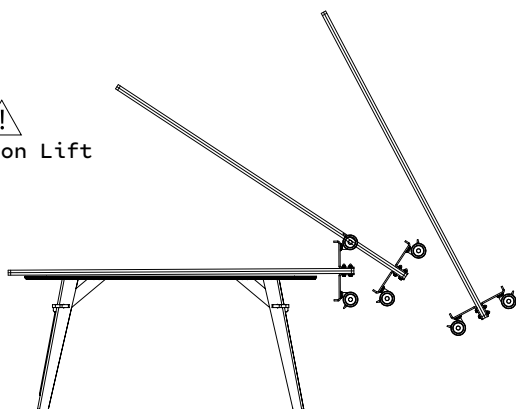


a.

Lift Screen onto the ground.

b.

Stand up and ensure Tool is able to move and castors can be locked.

6

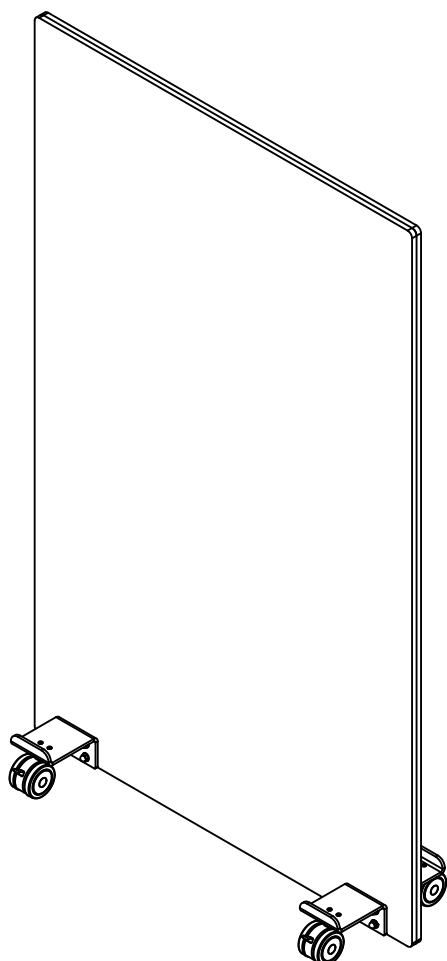

x1 Assembled
Inala Floor Screen