




baresque
baresque.com.au

ZINTRA EMBOSSED WALL PANELS


ADHESIVE FIX

INSTALLATION INSTRUCTIONS


GROUP A

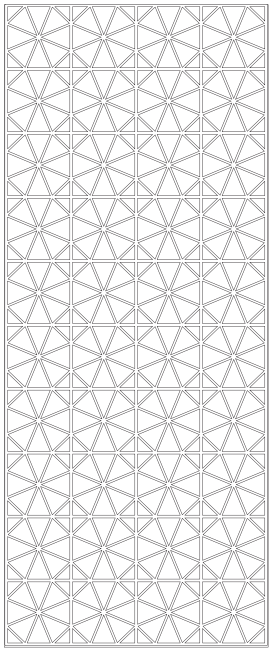


CONSTELLATION

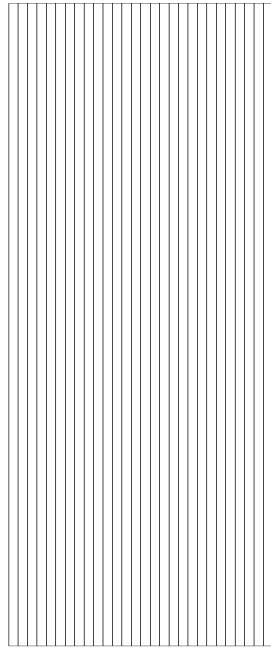


CORDUROY

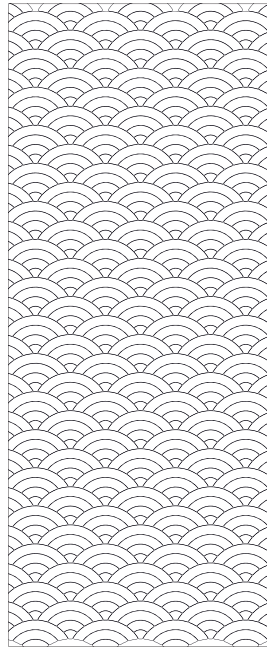


CUMULUS

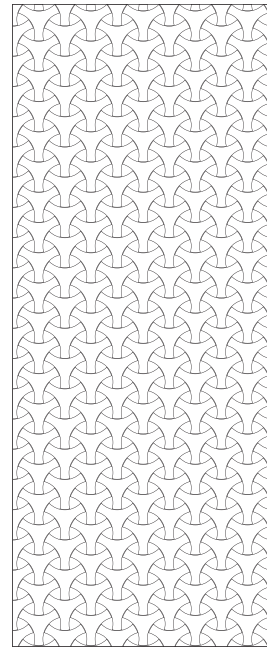

LINKED

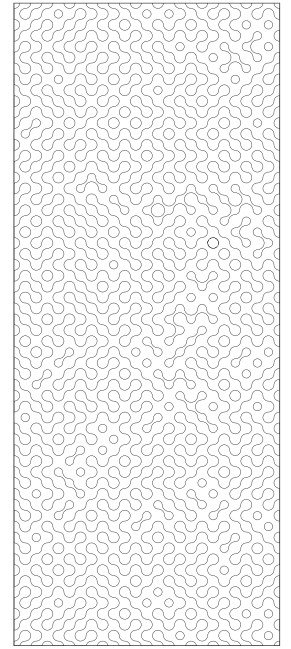


MOLECULAR

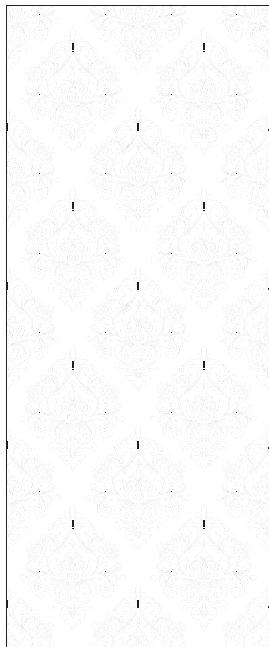

DAMASK




JUNGLE

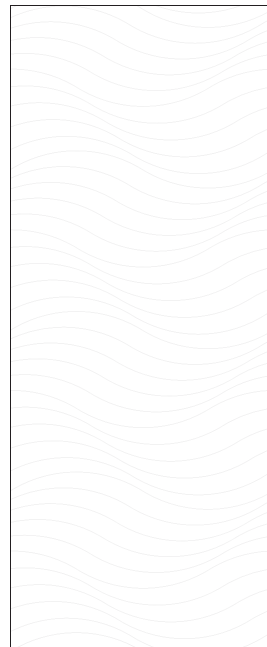

TIDAL



SANDGLASS

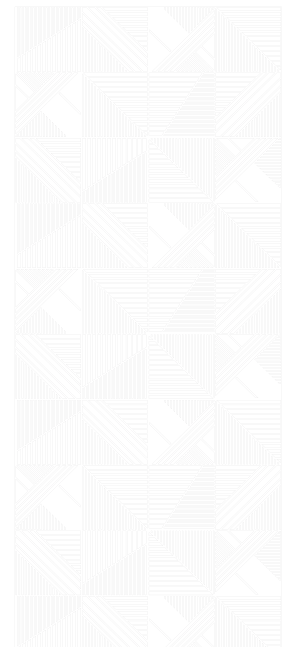

TAPESTRY




baresque
baresque.com.au

ZINTRA EMBOSSED WALL PANELS


ADHESIVE FIX

INSTALLATION INSTRUCTIONS

GROUP B

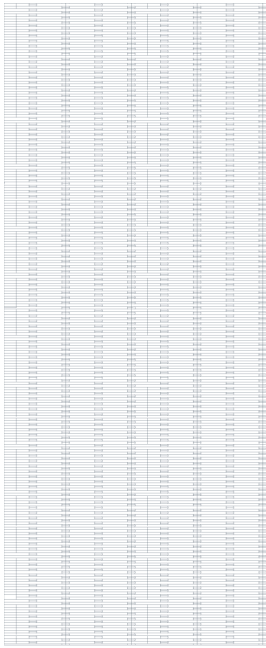


ASCEND

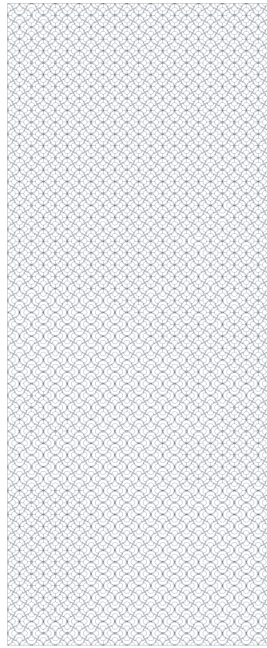


CUMULUS




CORDUROY FINE

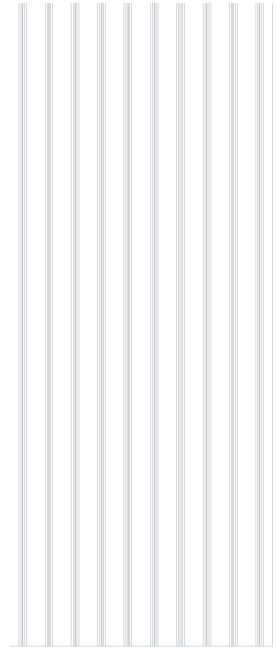


SCALLOP

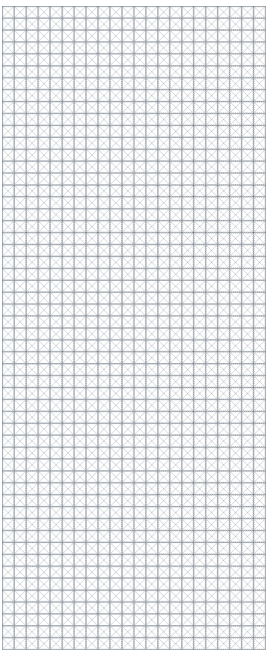


STITCHED

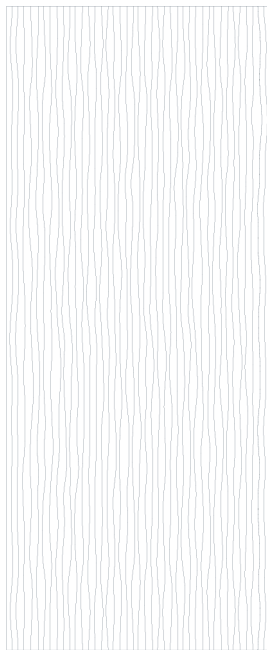

RIVULET

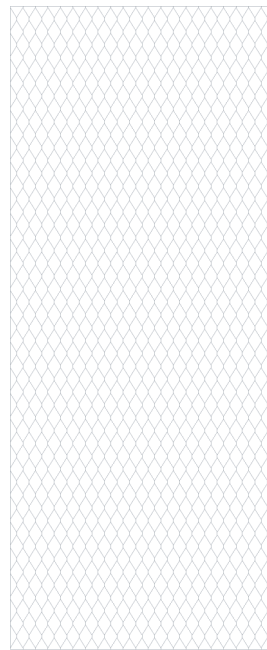

TUFTED

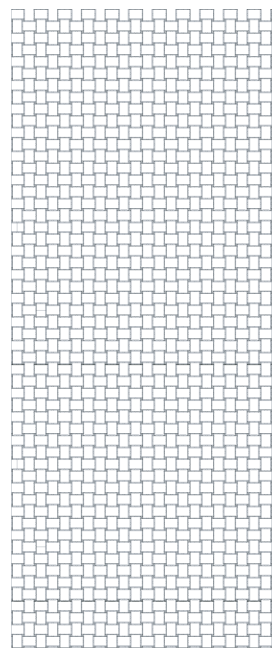

WOVEN




baresque
baresque.com.au

ZINTRA EMBOSSED WALL PANELS

ADHESIVE FIX

INSTALLATION INSTRUCTIONS

MEASUREMENTS

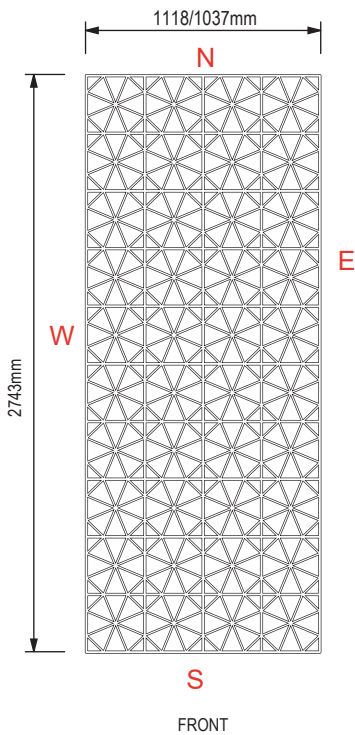

Wall Panels GROUP A	Trimmed Size	Trimmed Pattern match size
Constellation	2743mm H x 1118mm W	Same as Full Sheet Trim
Corduroy	2743mm H x 1118mm W	Same as Full Sheet Trim
Cumulus	2743mm H x 1118mm W	2595mm H x 1118mm W
Damask	2743mm H x 1118mm W	Same as Full Sheet Trim
Jungle	2743mm H x 1118mm W	Same as Full Sheet Trim
Linked	2743mm H x 1118mm W	2692mm H x 1118mm W
Molecular	2743mm H x 1118mm W	2607mm H x 1118mm W
Sandglass	2743mm H x 1118mm W	Same as Full Sheet Trim
Tapestry	2743mm H x 1118mm W	Same as Full Sheet Trim
Tidal	2743mm H x 1118mm W	Same as Full Sheet Trim

Wall Panels GROUP B	Trimmed Size	Trimmed Pattern match size
Ascend	2743mm H x 1118mm W	Same as Full Sheet Trim
Celium	2743mm H x 1118mm W	Same as Full Sheet Trim
Corduroy Fine	2743mm H x 1118mm W	Same as Full Sheet Trim
Rivulet	2743mm H x 1118mm W	Same as Full Sheet Trim
Scallop	2743mm H x 1118mm W	Same as Full Sheet Trim
Stitched	2743mm H x 1118mm W	Same as Full Sheet Trim
Tufted	2743mm H x 1118mm W	Same as Full Sheet Trim
Woven	2743mm H x 1118mm W	Same as Full Sheet Trim


NOTE:

All Trimmed sizes will match **East** and **West**.

Due to the organic design, some panels from group A will need to be trimmed **North** & **South** to match on the top and bottom (see table above).

Cumulus Top & Bottom Cut Dimensions

Ensure Panel is facing the right way, prior to trimming

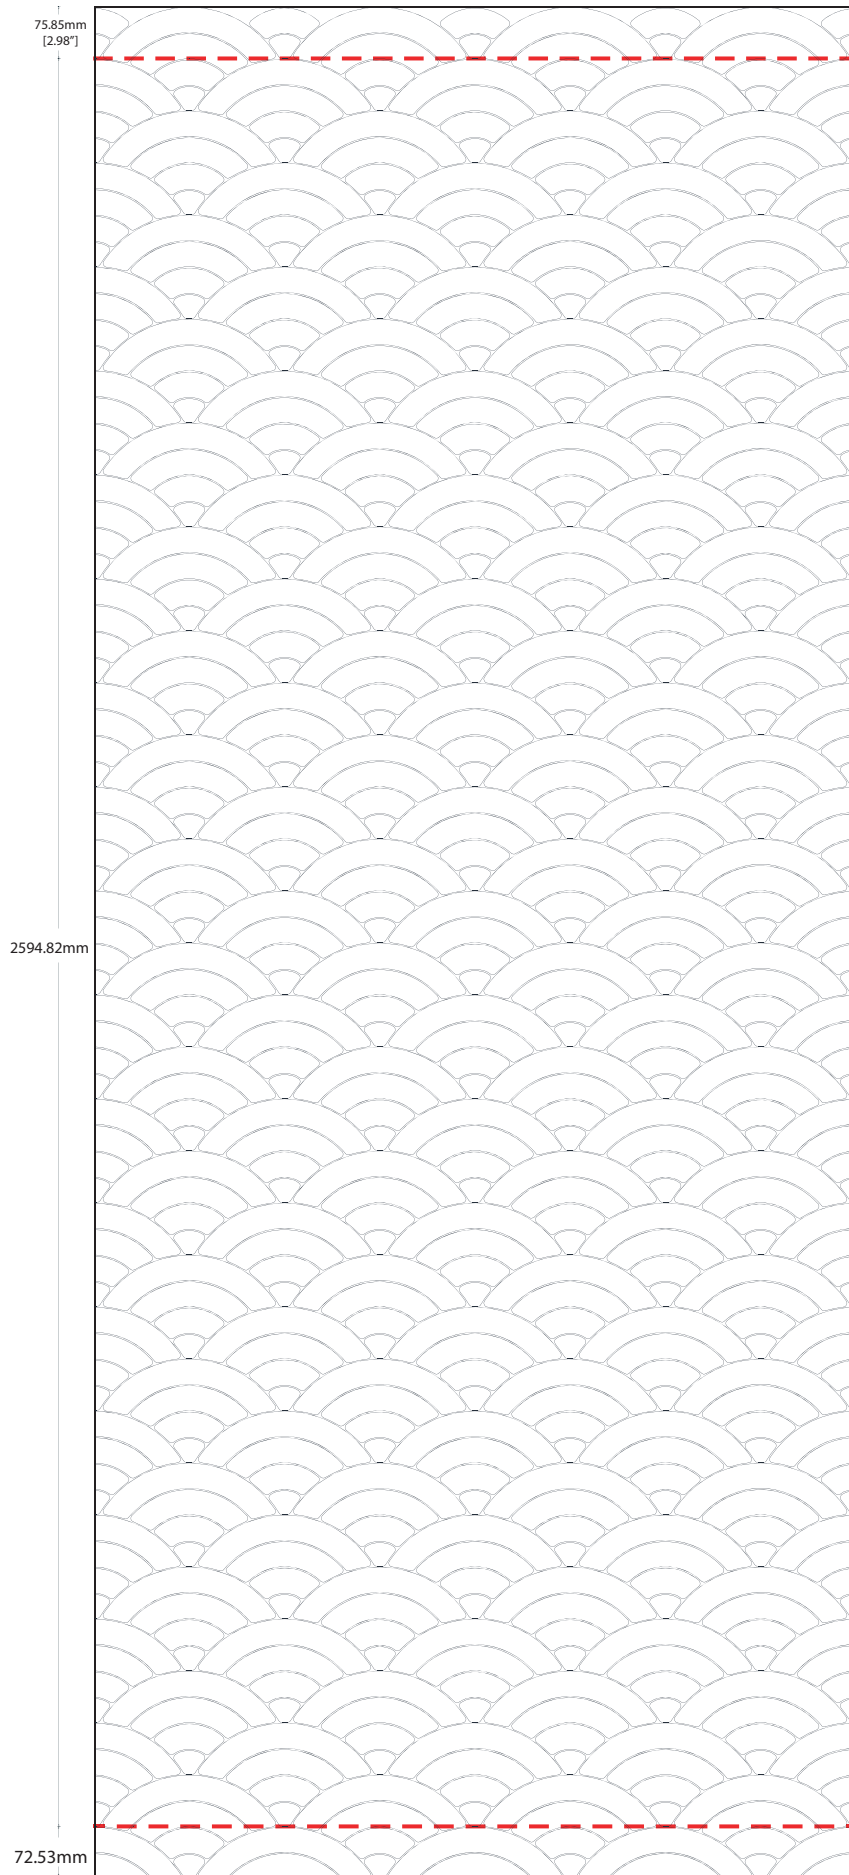


Linked Top & Bottom Cut Dimensions

24.52mm
[1"]

Ensure Panel is facing the
right way, prior to trimming

2691.87mm

26.81mm

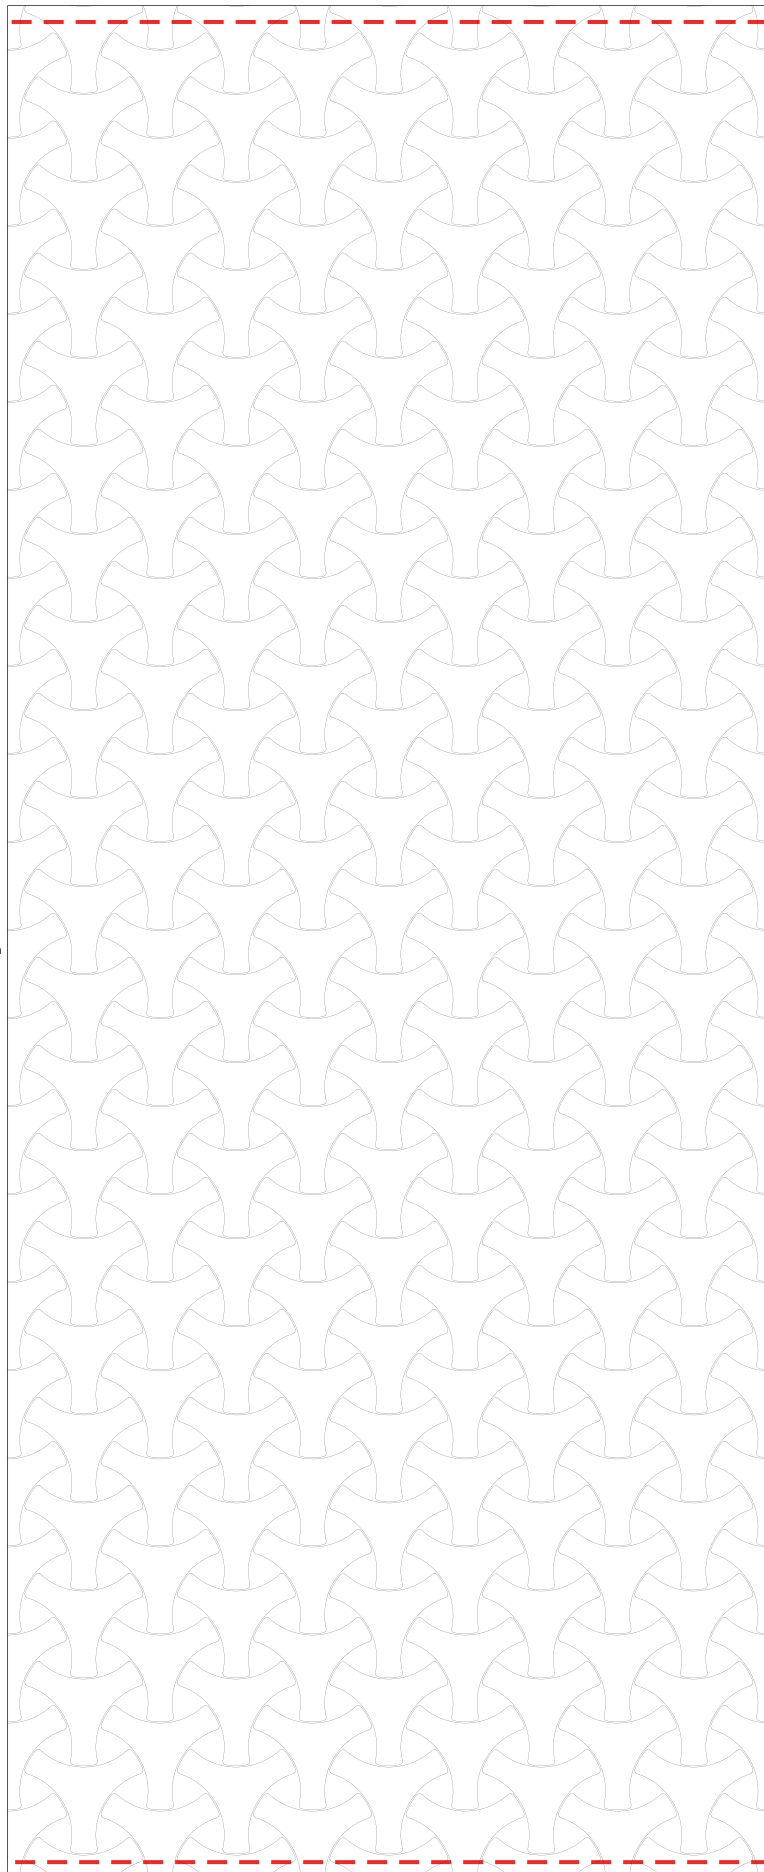


Molecular Top & Bottom Cut Dimensions

Ensure Panel is facing the right way, prior to trimming

2608.14mm

135.06mm

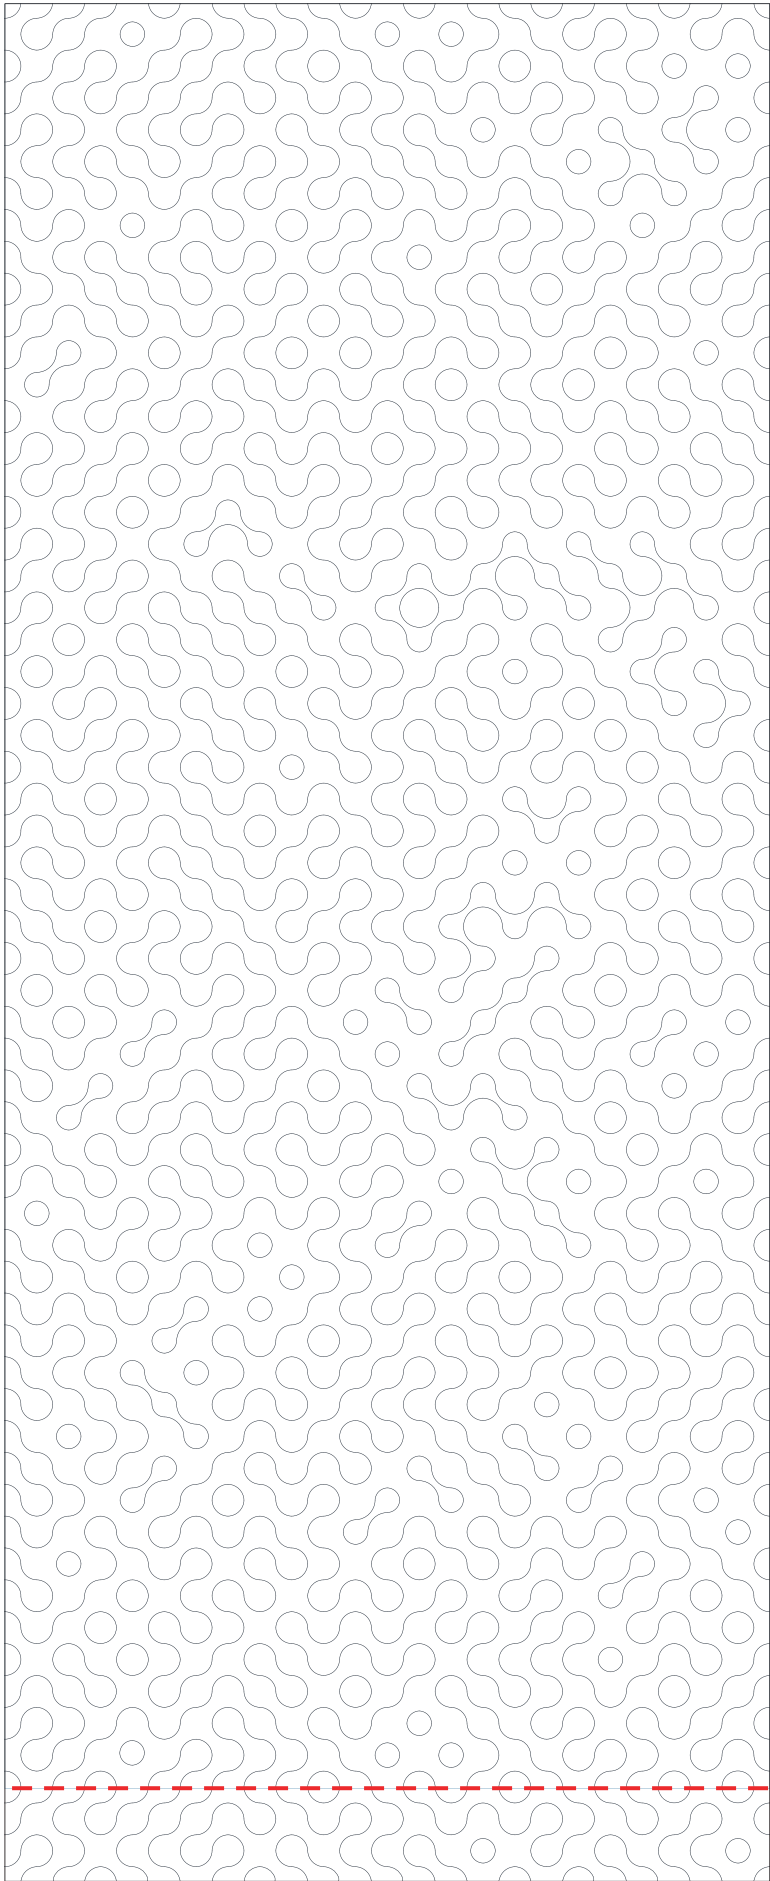



baresque
baresque.com.au


ZINTRA EMBOSSED WALL PANELS

ADHESIVE FIX


INSTALLATION INSTRUCTIONS

YOU WILL NEED


SPIRIT LEVEL




TAPE MEASURE

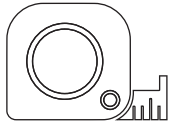

HEAVY DUTY CONSTRUCTION ADHESIVE
OR NEUTRAL CURE SILICONE*

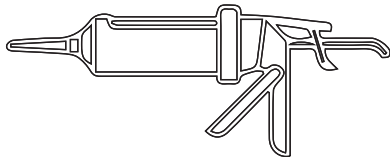

STANLEY KNIFE OR JIGSAW WITH NEW CLEAN KNIFE BLADE

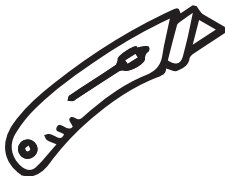

* INSTALLERS RESPONSIBILITY TO CHECK ADHESIVE
SUITABILITY TO SITE/INSTALL CONDITIONS
TEST PRIOR TO STARTING ANY INSTALL

FOR ADDITIONAL INFORMATION REFER TO OUR ZINTRA
HANDING GUIDE



baresque
baresque.com.au

ZINTRA EMBOSSED WALL PANELS


ADHESIVE FIX

INSTALLATION INSTRUCTIONS

STEP 1

Be certain that your substrate will hold an adequate bond to the recommended adhesive(s). If in doubt about a coating or a finish already in place, an adhesion mock up test is recommended before you begin.

Cut, scribe and dry pre-fit all Zintra panels as necessary.





STEP 2

Once all of the panels have been properly sized and trimmed, begin applying the adhesive to the **BACK SIDE (ONLY)** of each panel. Follow suppliers instructions carefully to ensure a consistent and secure fix.

First apply a bead around the entire perimeter of the **BACK** of the panel. Place the bead to be no more than 20 mm in from the perimeter at any point.

Next, apply a zig zag or diagonal pattern of additional adhesive across the central sections of the panel, within the perimeter bead. See images on the right for guidance.

Further information regarding direct adhesion can be found in our Zintra Panel Handling Guide along with other installation techniques.

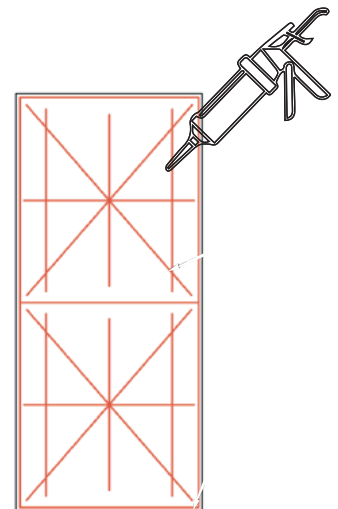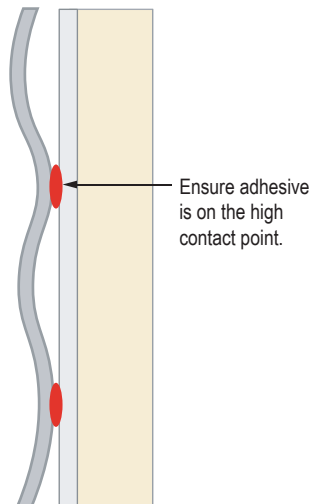

BACK SIDE ONLY



baresque
baresque.com.au

ZINTRA EMBOSSED WALL PANELS

ADHESIVE FIX

INSTALLATION INSTRUCTIONS


STEP 3

Apply the panel to the substrate within 20 minutes and monitor your adhesive to prevent it from skinning over. Set the panels into place and smooth with open palms.


Now, remove the panel from the substrate and hold it off the surface for one minute. Then reset the panel into place and smooth with firm pressure to set it. Use mechanical fasteners if you see the need to help this stay positioned while the adhesive remains wet.

Never use solvent based contact adhesives. Baresque highly recommend testing any glue prior to a full wall install.

Do not reverse or flip panels.

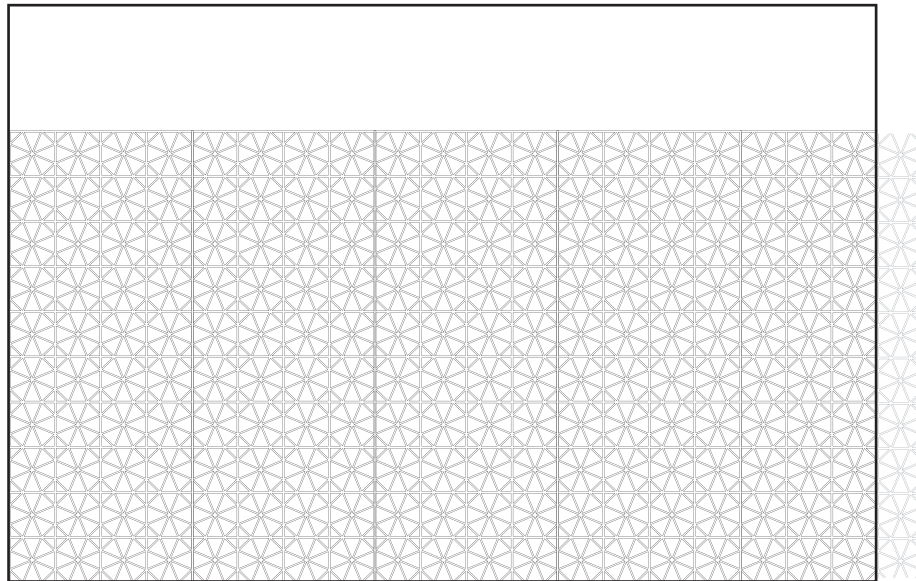

1

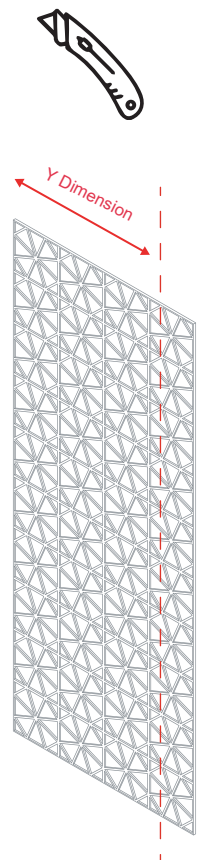

2



baresque
baresque.com.au



ZINTRA EMBOSSED WALL PANELS

ADHESIVE FIX

INSTALLATION INSTRUCTIONS


STEP 4

If you have wall GPO's, windows and doors in the way of your panels - ensure you do not install the panels until you have measured the protruding objects.

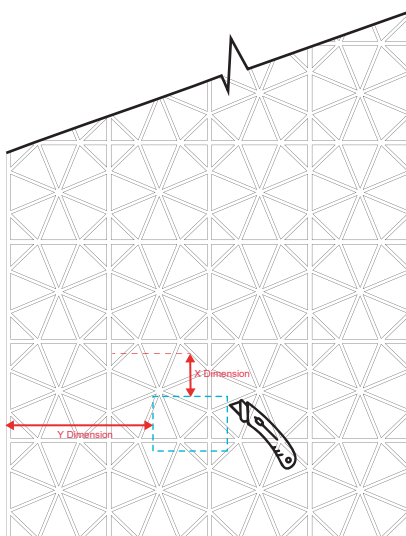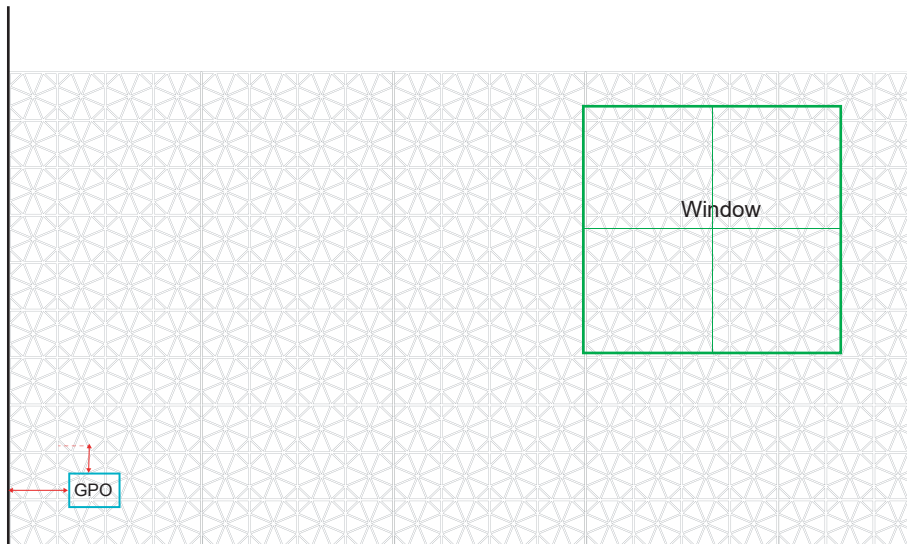

Cut with Knife OR jigsaw

1

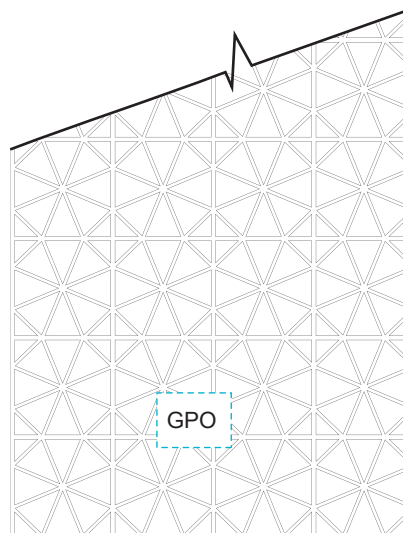

2

Notes:

Dry fit panels after cutting, to ensure correct fit prior to glueing to substrate.

Continuously go over cutline to create clean and tidy cut.



baresque
baresque.com.au


ZINTRA EMBOSSED WALL PANELS

ADHESIVE FIX

INSTALLATION INSTRUCTIONS

OPTION 1

Install the first panel within the centre of the wall and then install one panel on each side. This means you will have to trim both panel 4 & 5. This ensures the line of sight is directly in the middle of the wall.

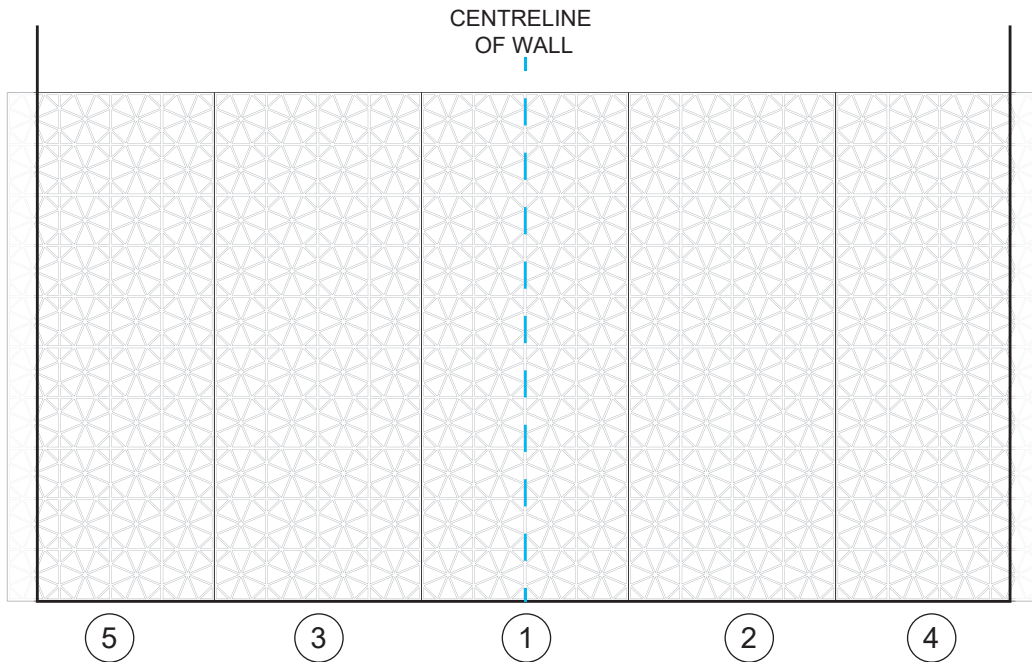

OPTION 2

Install the first panel on either the left or right side and work your way across. This means you only have to trim one panel.

