


CANYONS 235mm BAFFLES

INSTALL GUIDE

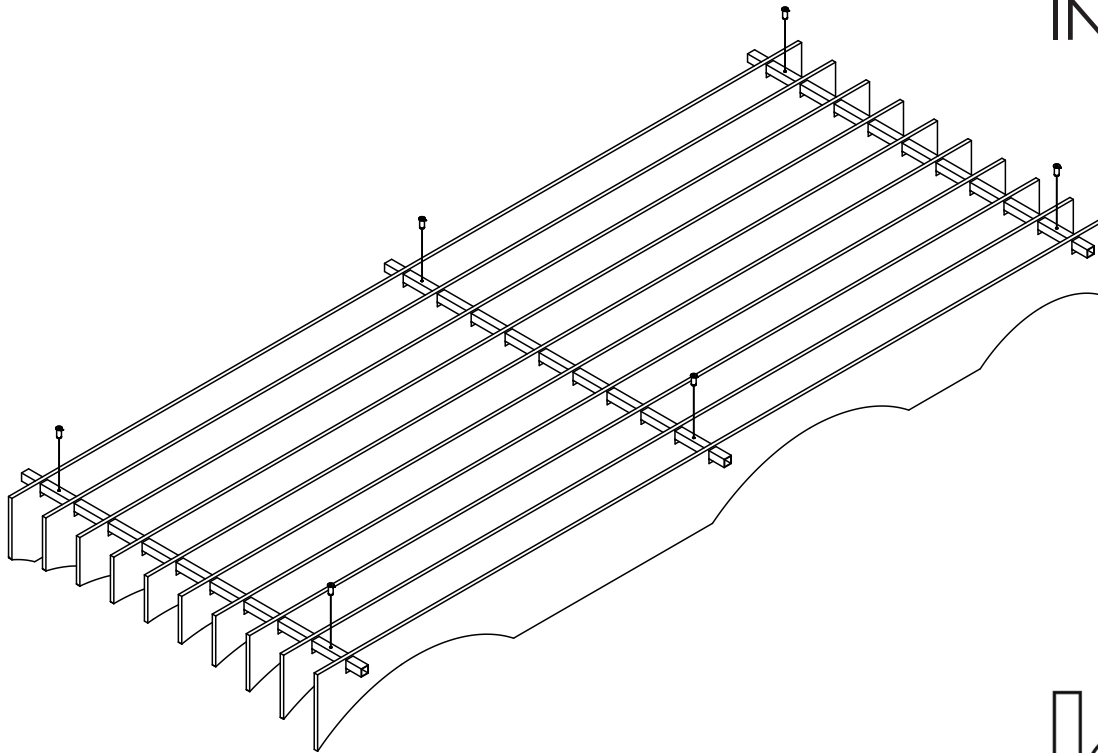


baresque.com.au
e info@baresque.com.au
p 1300 306 399

CANYONS 235mm BAFFLES



ASSEMBLY

1) Thread baffles onto the square mounting beams provided.

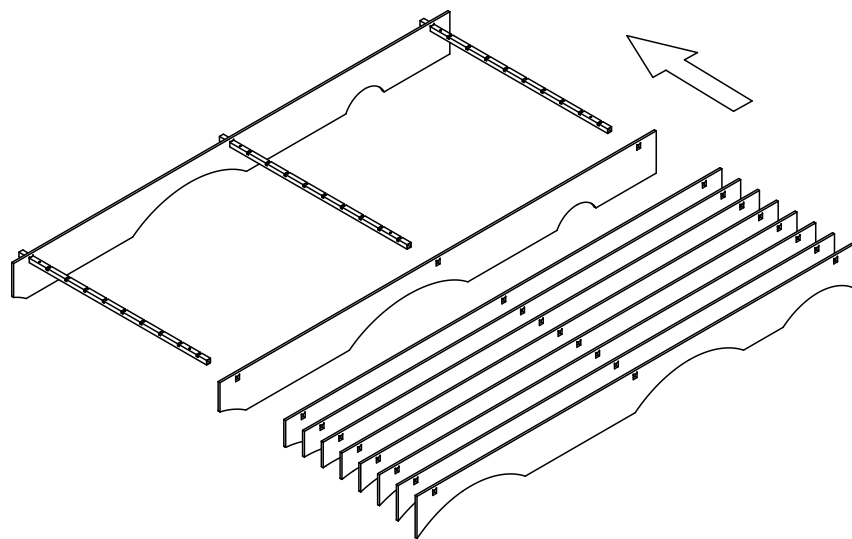

STEP 1

2) Lock each baffle into position by pushing downwards as shown.

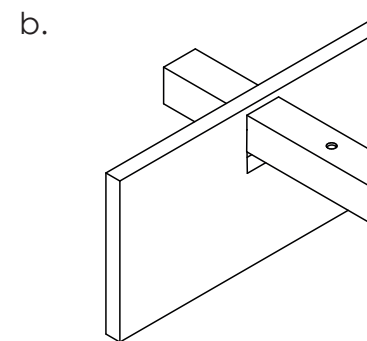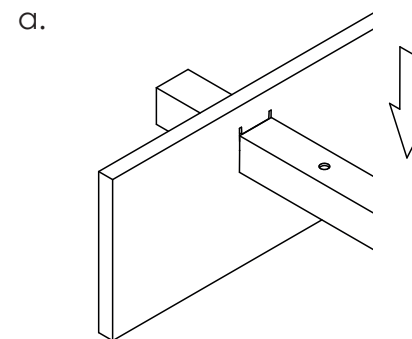

STEP 2


CANYONS 235mm BAFFLES

ASSEMBLY


You may receive either Canyon Profiles A **OR** Canyon Profiles B.
This should be indicated on the packaging.

3)

COMPLETED CANYONS ASSEMBLY A

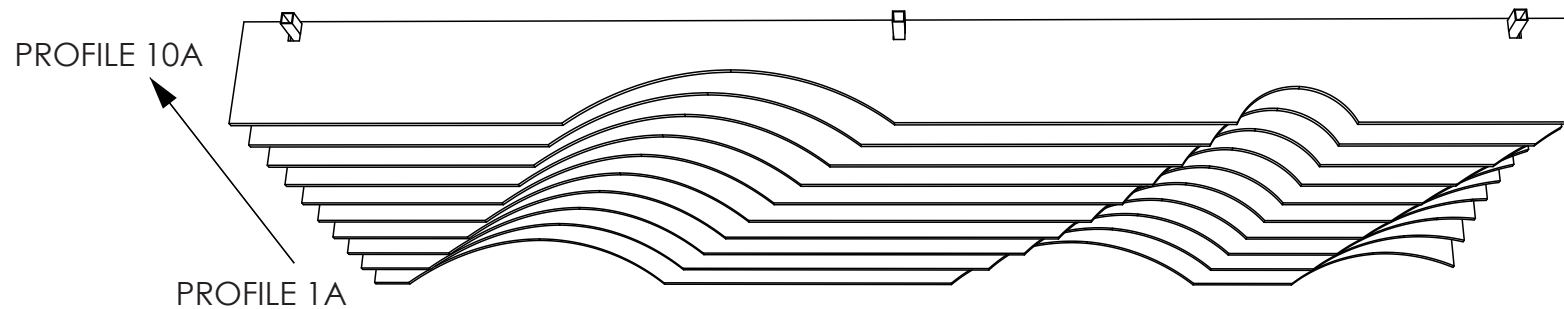

COMPLETED CANYONS ASSEMBLY B

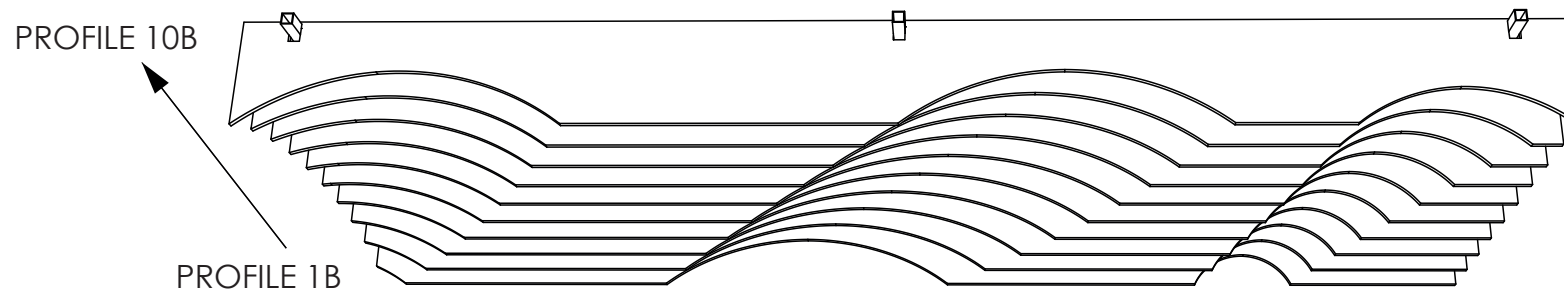

STEP 3




CANYONS 235mm BAFFLES
INSTALL GUIDE


CANYONS 235mm BAFFLES

SUSPENSION METHOD

4) Place baffle assembly up to ceiling in desired location. Mark position of **6 off** through holes which correspond to the mounting holes.

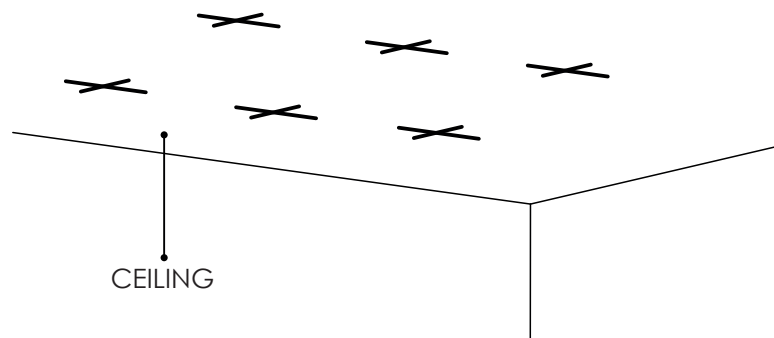


5) Consulting the “**Baresque Systems Fixing Directory**”, select the appropriate fixing method for your substrate & install **6 off ‘hanger heads’**. **Please note, screws are not supplied.**

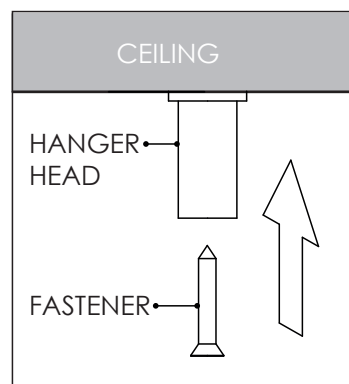

STEP 4 & 5

6) Thread wires through mounting holes in square mounting beams.

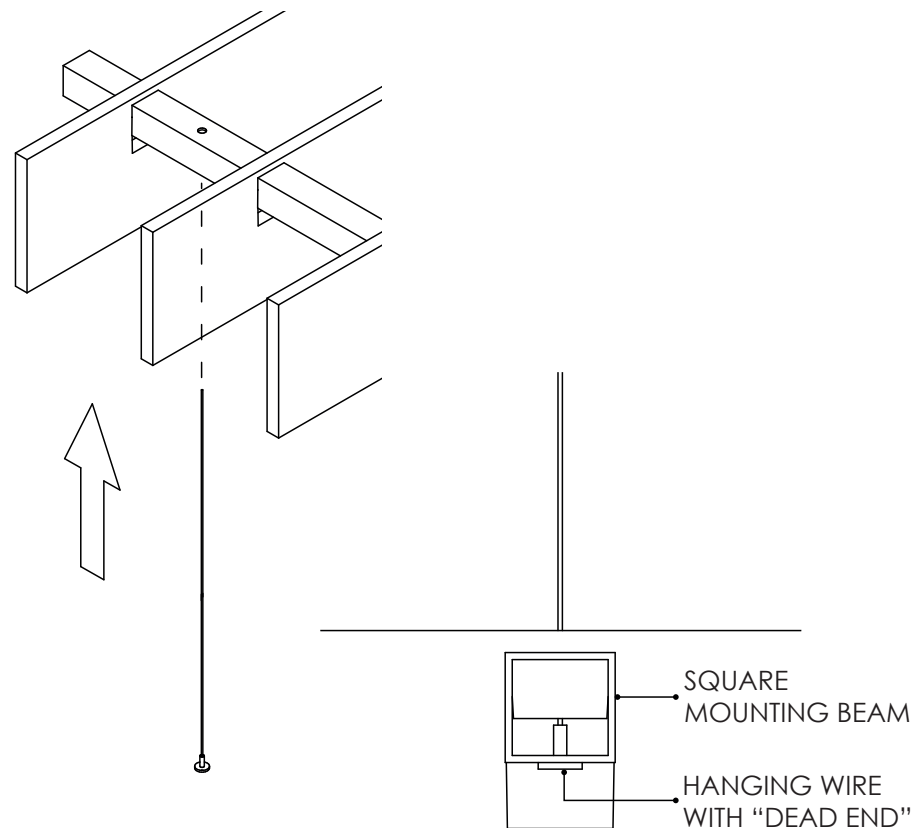


STEP 6

CANYONS 235mm BAFFLES


SUSPENSION METHOD

7) Feed top of wire through tip of 'wire adjuster' (as shown). Push button (shown in grey) to adjust wire length. Release the button to lock in place.

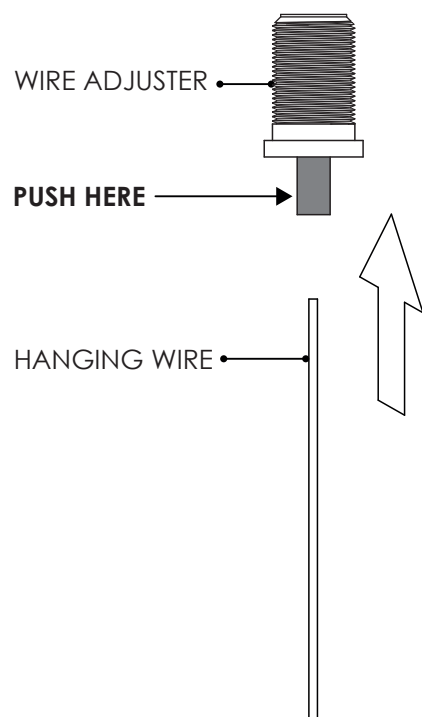

STEP 7

8) Feed wire through hole in the side of 'hanger head'. Screw 'wire adjuster' into 'hanger head'. When all wires are in place, adjust lengths so baffle assembly hangs level.

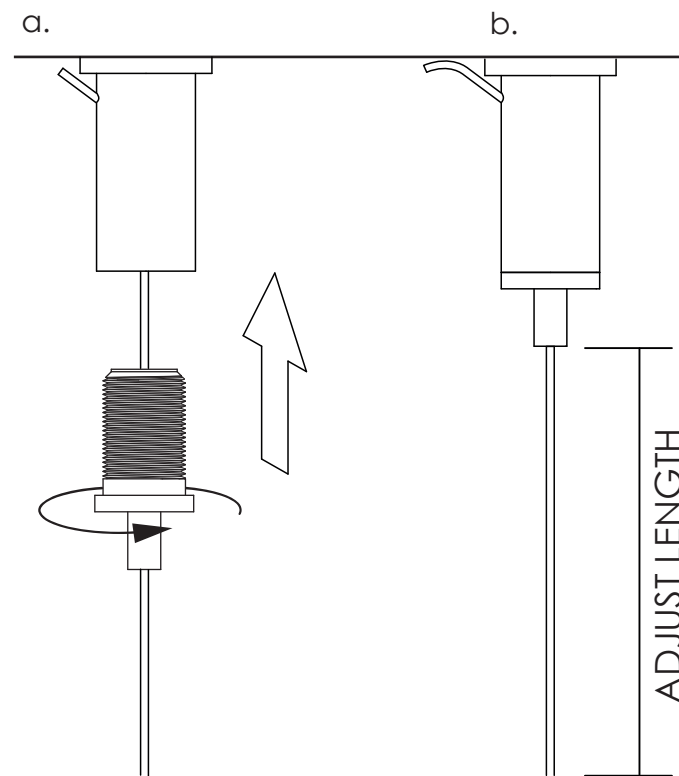



STEP 8




CANYONS 235mm BAFFLES
INSTALL GUIDE

**PLEASE NOTE: BAFFLE INSTALLATION
WILL REQUIRE 2 PEOPLE.**

CANYONS 235mm BAFFLES
SUSPENSION METHOD

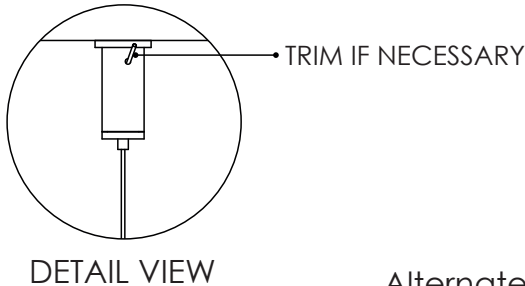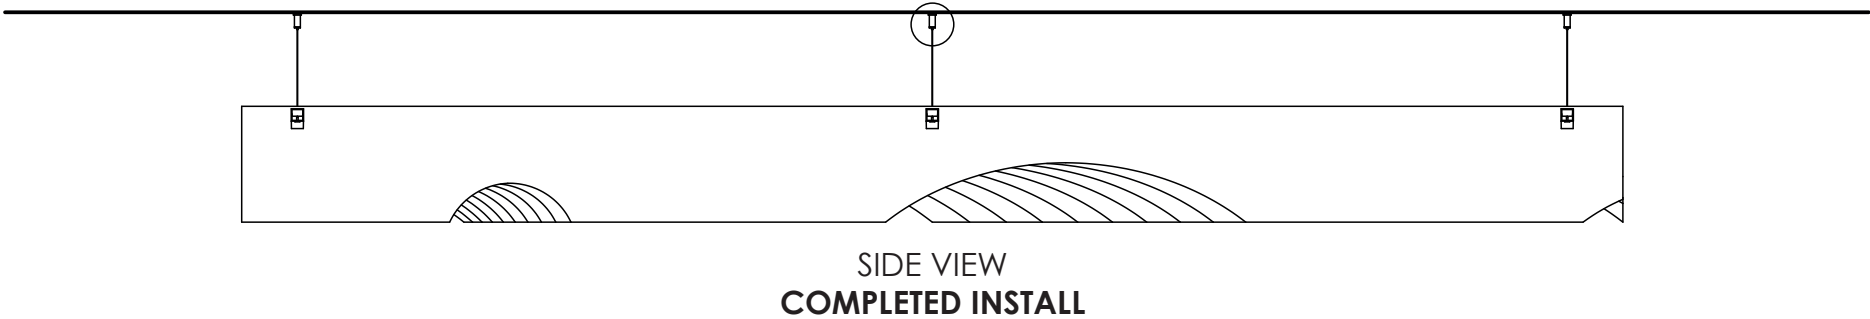

Alternate baffle assemblies A & B to achieve the optical effect depicted. See over the page for connector & capping details.

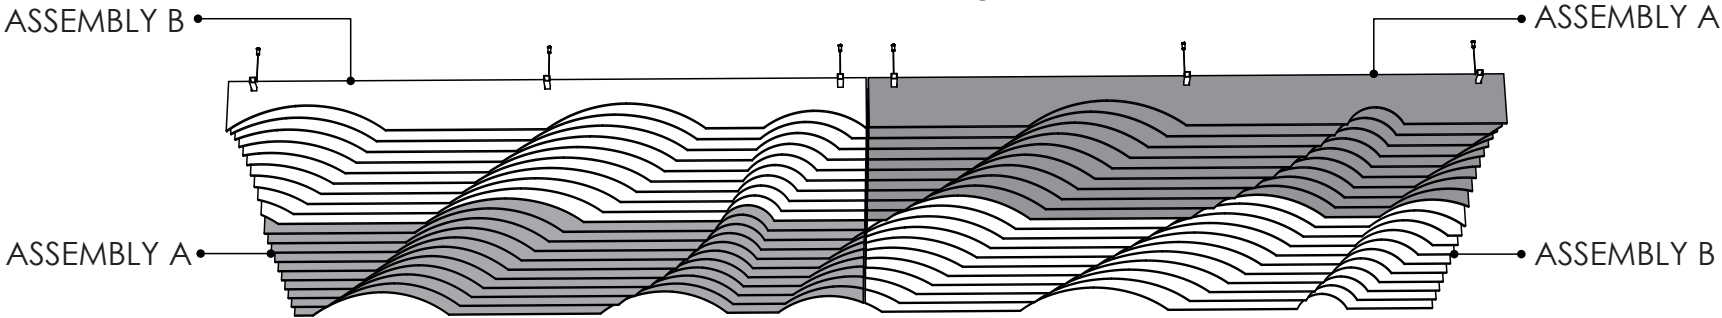


CANYONS 235mm BAFFLES

PARTS


CONNECTOR DETAIL

To connect multiple baffle assemblies together, insert connectors into open ends of square mounting beams and push assemblies together as shown.

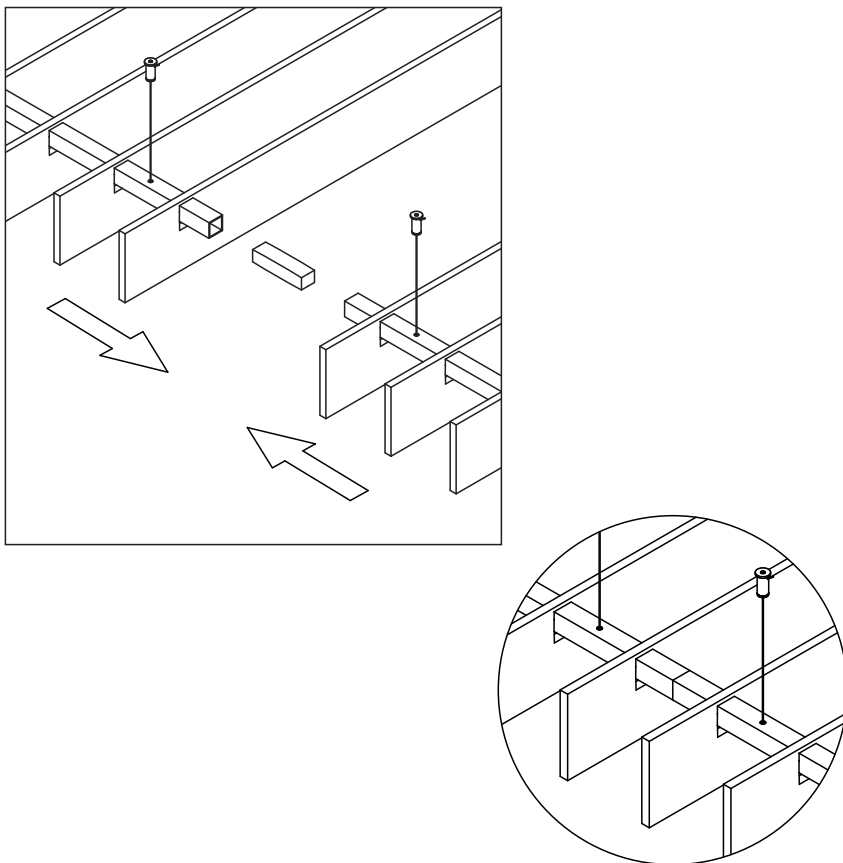


CAPPING DETAIL

To cap ends of baffle assembly- insert end caps provided as shown.

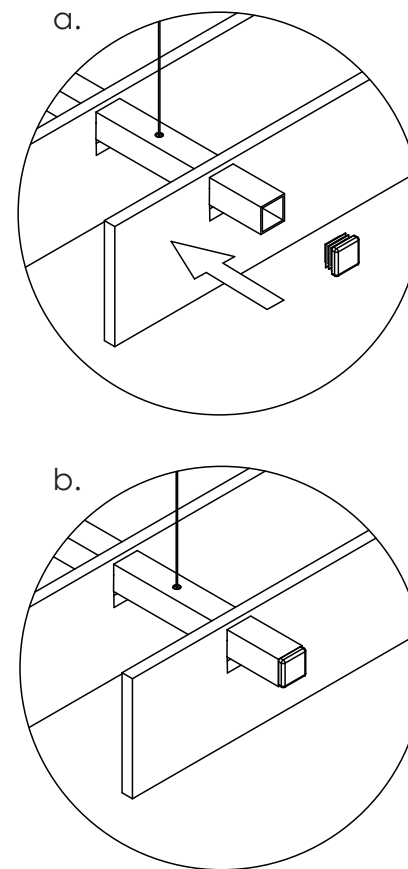


CANYONS 235mm BAFFLES


PARTS




3x SQUARE MOUNTING BEAM

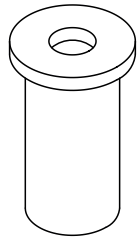


**6x
HANGER HEAD**




**6x
WIRE ADJUSTER**



**6x
HANGING WIRE**

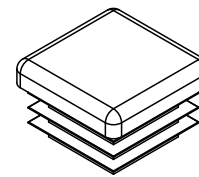

**6x
END CAPS**

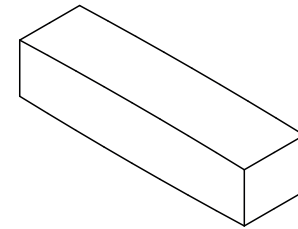


**3x
CONNECTORS**


CANYONS 235mm BAFFLES

PROFILES

You may receive either Canyon Profiles A **OR** Canyon Profiles B.
This should be indicated on the packaging.




PROFILE 1A




PROFILE 2A



PROFILE 3A



PROFILE 4A




PROFILE 5A



PROFILE 6A



PROFILE 7A




PROFILE 8A




PROFILE 9A




PROFILE 10A




PROFILE 1B




PROFILE 2B




PROFILE 3B




PROFILE 4B




PROFILE 5B



PROFILE 6B




PROFILE 7B



PROFILE 8B



PROFILE 9B



PROFILE 10B

