
CANYONS 115mm BAFFLES INSTALL GUIDE

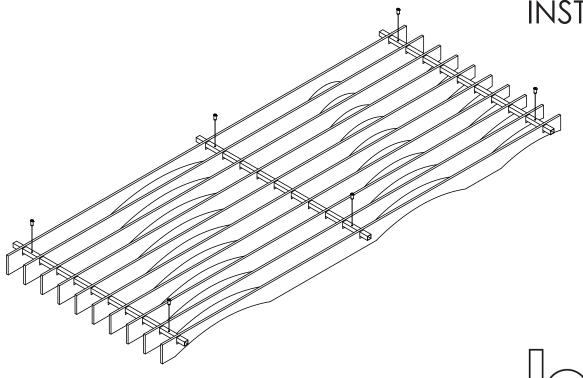


baresque

baresque.com.au


e info@baresque.com.au p 1300 306 399

ASSEMBLY


1) Thread baffles onto the square mounting beams provided.






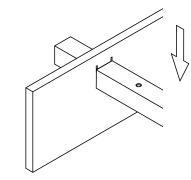



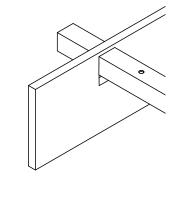

STEP 2

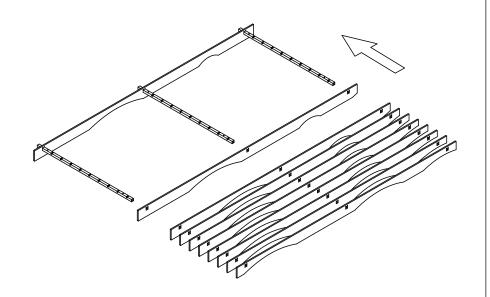


STEP 1

ASSEMBLY


You may receive either Canyon Profiles A **OR** Canyon Profiles B. This should be indicated on the packaging.

3)

COMPLETED CANYONS ASSEMBLY A

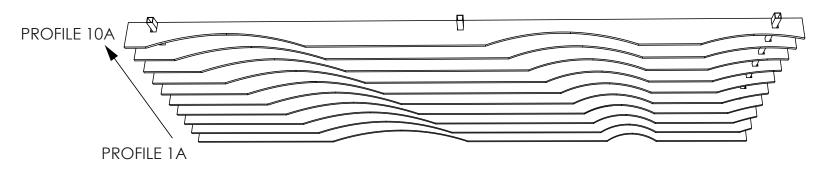

COMPLETED CANYONS ASSEMBLY B

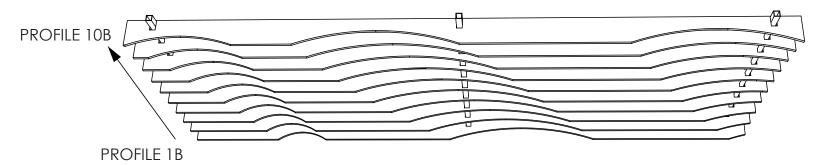


STEP 3



SUSPENSION METHOD

4) Place baffle assembly up to ceiling in desired location. Mark position of **6 off** through holes which correspond to the mounting holes.

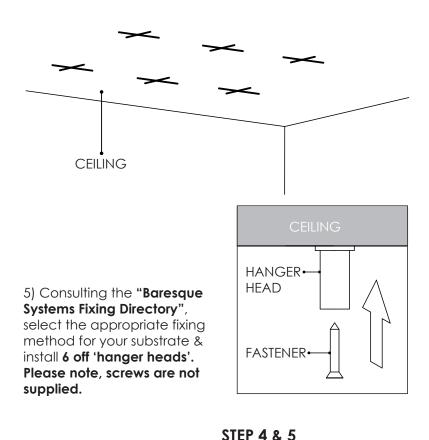


6) Thread wires through mounting holes in square mounting beams. **SQUARE** MOUNTING BEAM HANGING WIRE WITH "DEAD END"


STEP 6

SUSPENSION METHOD


7) Feed top of wire through tip of 'wire adjuster' (as shown). Push button (shown in grey) to adjust wire length. Release the button to lock in place.

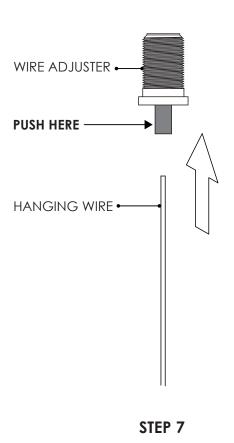


8) Feed wire through hole in the side of 'hanger head'. Screw 'wire adjuster' into 'hanger head'. When all wires are in place, adjust lengths so baffle assembly hangs level.

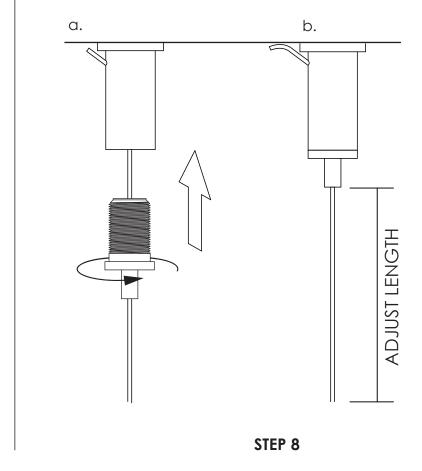

SUSPENSION METHOD

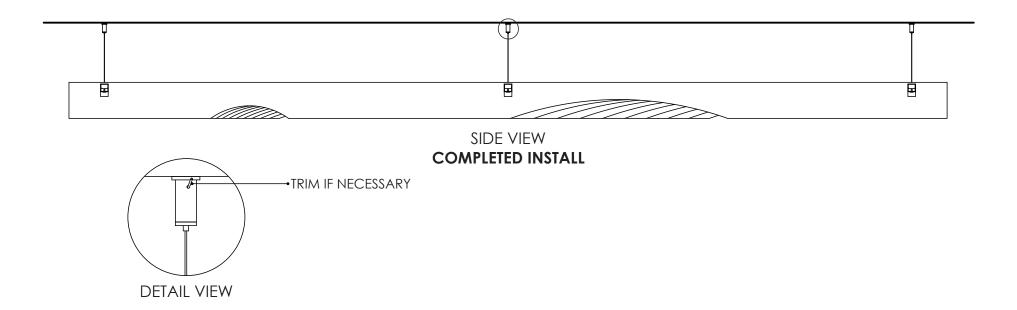

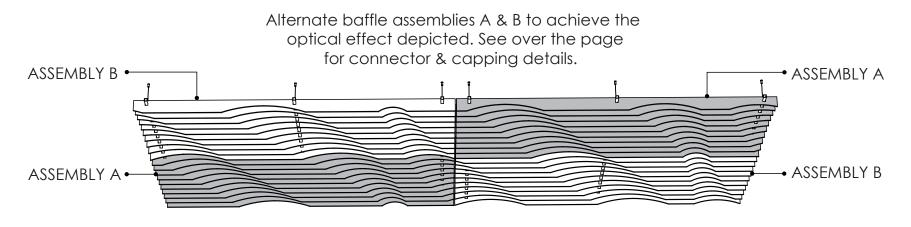




PLEASE NOTE: BAFFLE INSTALLATION WILL REQUIRE 2 PEOPLE.

CONNECTOR & CAPPING DETAIL


CONNECTOR DETAIL


To connect multiple baffle assemblies together, insert connectors into open ends of square mounting beams and push assemblies together as shown.

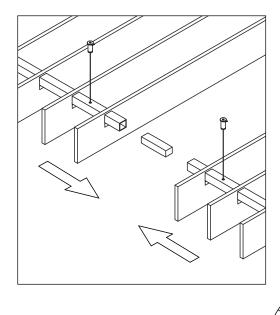


CAPPING DETAIL

To cap ends of baffle assembly-insert end caps provided as shown.

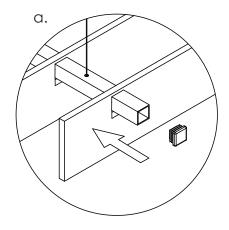

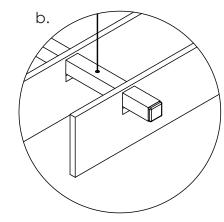

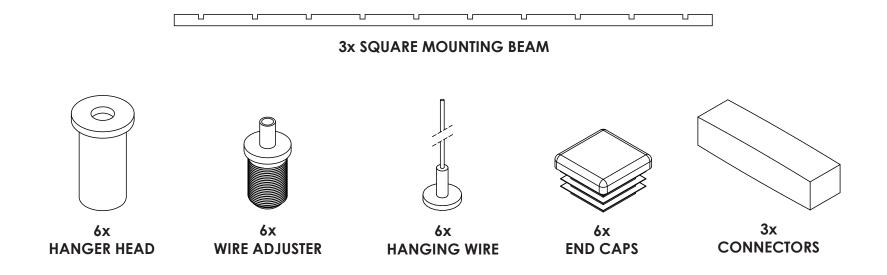

PROFILES

You may receive either Canyon Profiles A **OR** Canyon Profiles B. This should be indicated on the packaging.

