




# Assembly Instructions

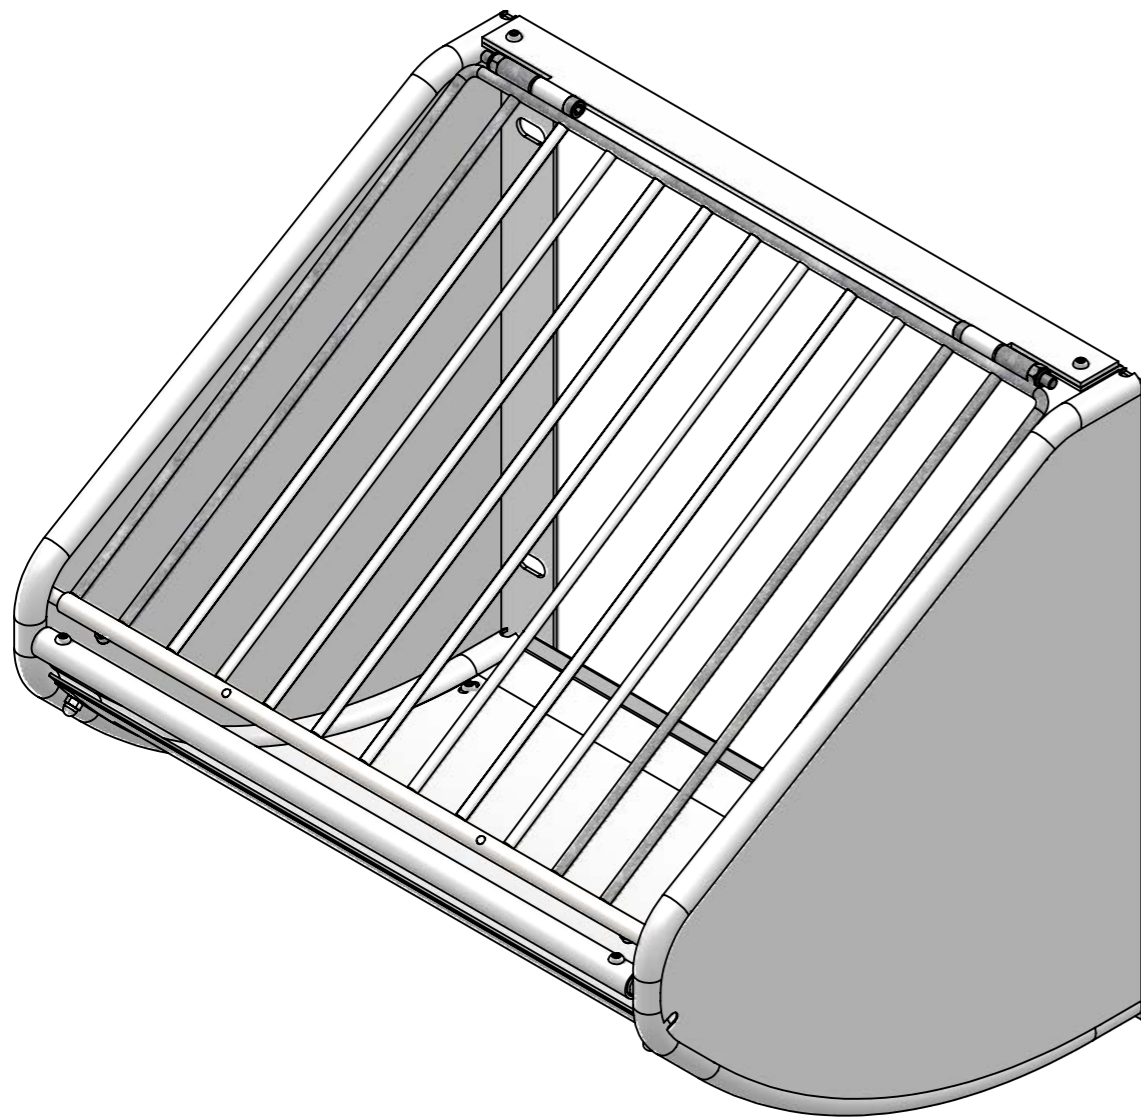


32706 - Futtersparraufe Metall  
 32706 - Râtelier en métal  
 32706 - Feed Storage Rack Metal

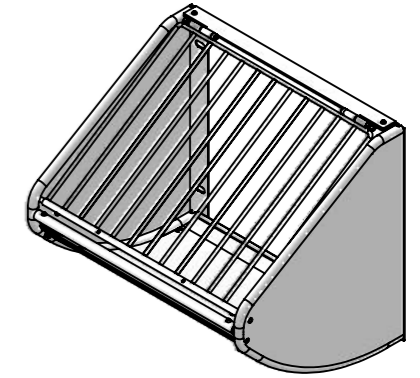


Pos. 1 - 32706-1  
1x

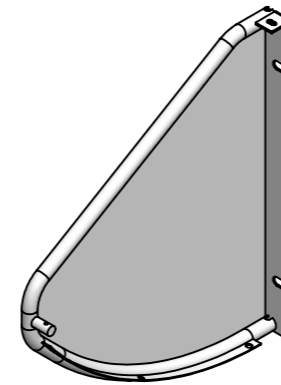


Pos. 2 - 32706-2  
1x

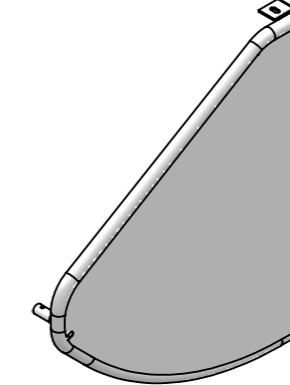


Pos. 3 - 32706-3  
1x

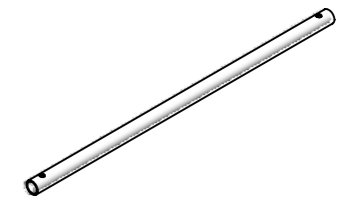


Pos. 4 - 32706-4  
1x

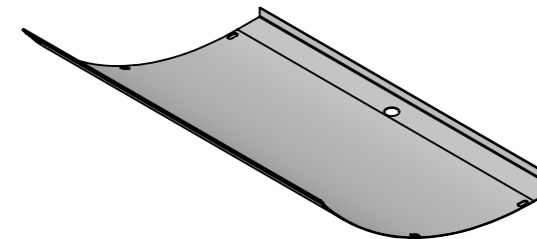

Pos. 5 - 32706-5  
1x

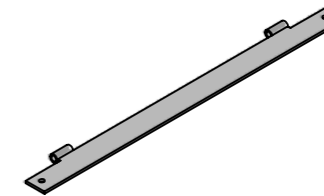


Pos. 6 - 32706-6  
1x

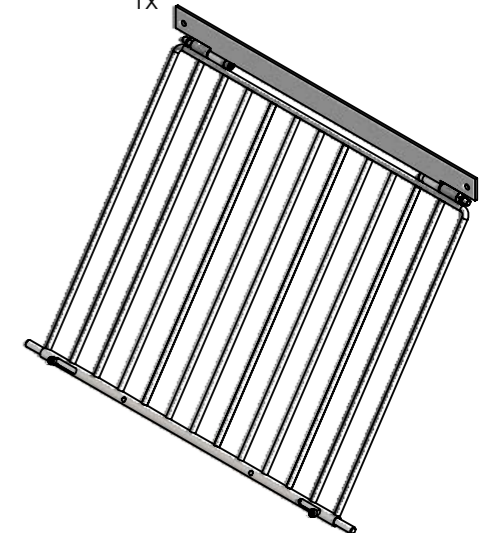

32706-7

Pos. A1  
M8x80  
2x

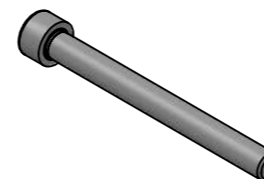

Pos. A2  
M8 - Self Locking  
2x



Pos. A3  
M6x18  
4x



Pos. A4  
M6x10  
6x



Pos. A5  
F6  
8x



Pos. A6  
M6  
6x



Pos. A7  
M6 - Self Locking  
2x



Pos. A8  
A6  
2x



