

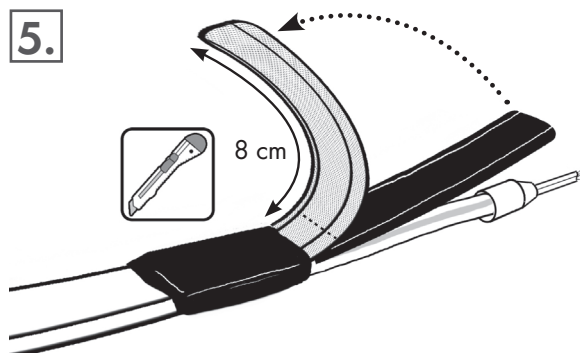
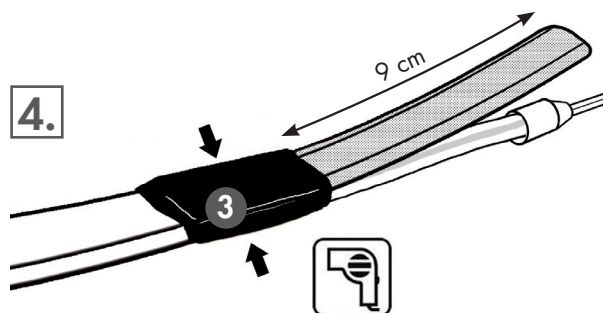
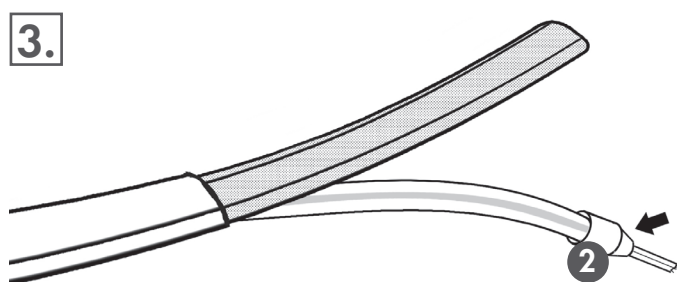
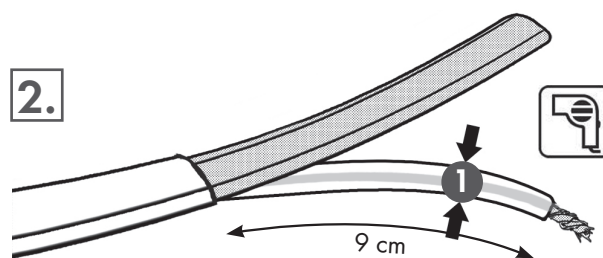
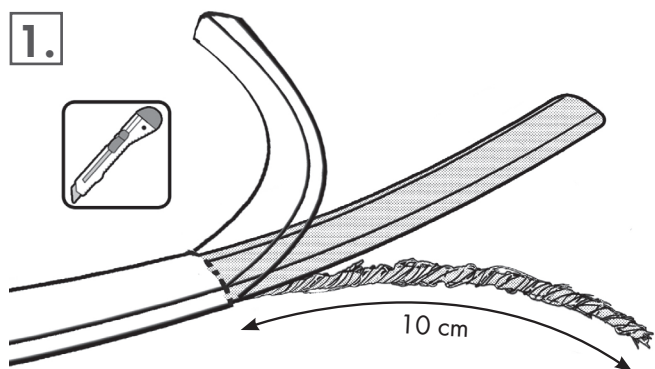
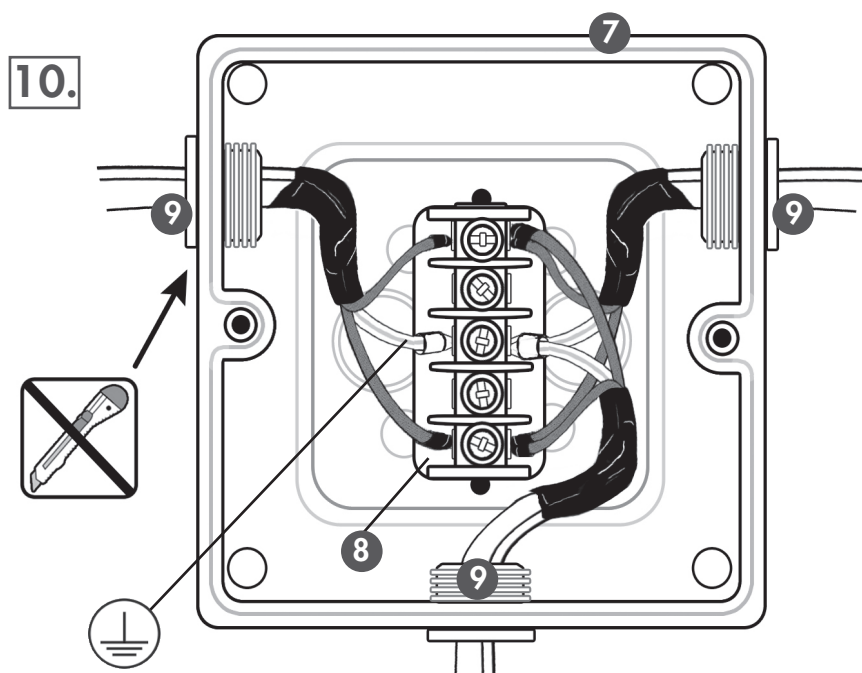
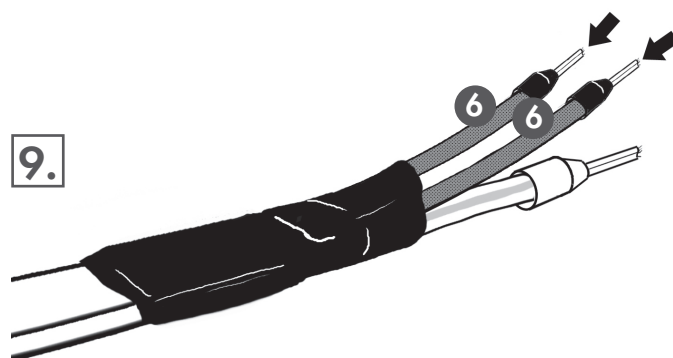
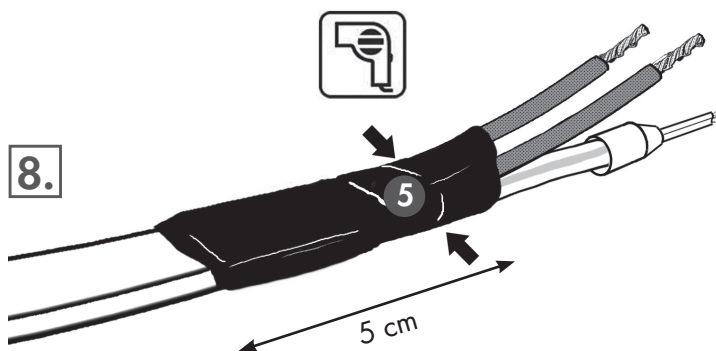


Ref. 380613

T-Abzweig-Set / Kit de dérivation en T / T-Diverter Kit / T-vertakkingset / Kit de derivación en T

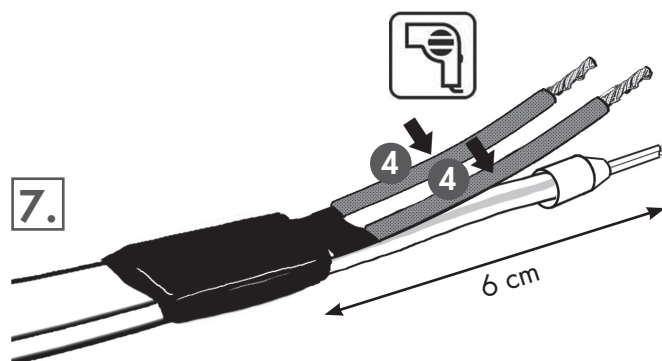

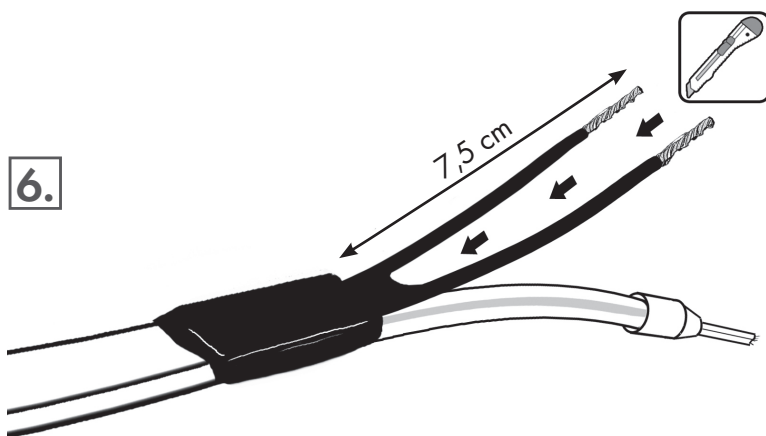

Installation nur von einem Fachmann vornehmen lassen!

The installation should be effected only by qualified appointed personnel.

L'installation doit être faite uniquement par un professionnel!

De installatie moet uitsluitend door een erkent installateur uitgevoerd worden !

¡Instalación por persona cualificada!