



WIRING INSTRUCTIONS





VEHICLE WIRES

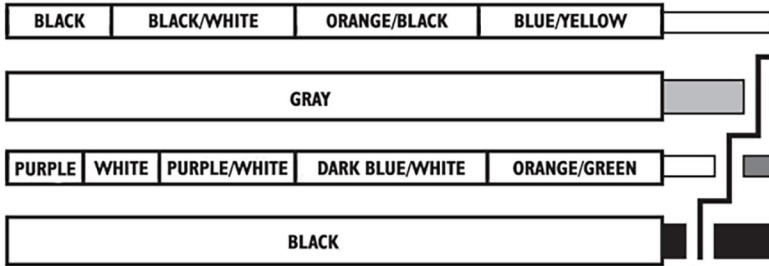

UPGRADED HARNESS



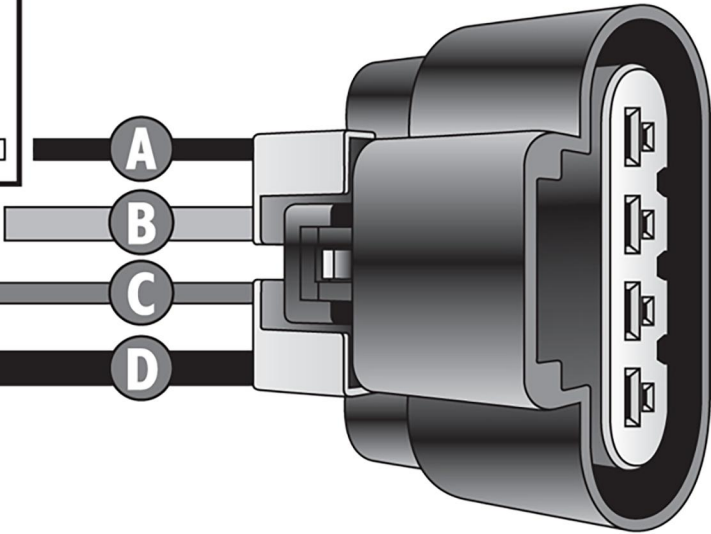


CRIMPED CONNECTORS MUST BE STAGGERED TO ENABLE THE HARNESS TO FIT INSIDE THE VEHICLE WIRING LOOM.



WIRE HARNESS INSTALLATION

BUTT CONNECTOR

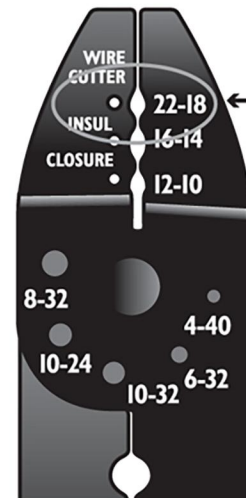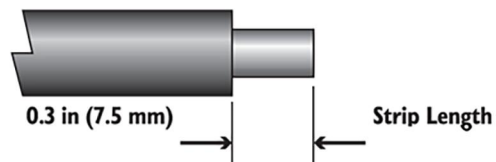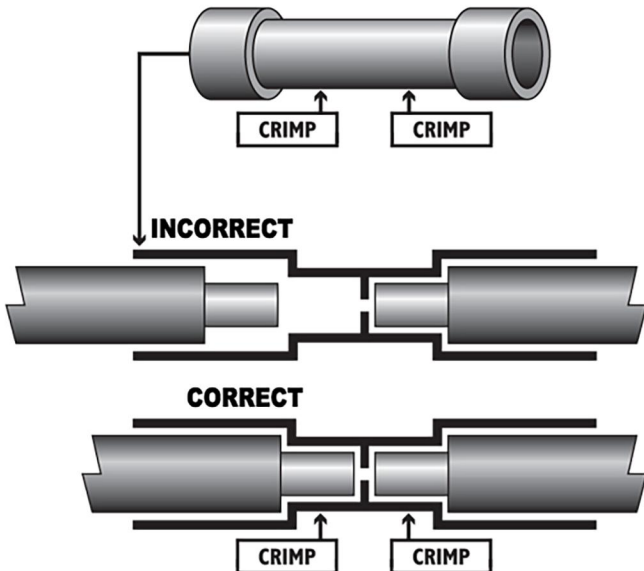

CRIMP FERRULES IN LOCATIONS SHOWN USING THIS END OF TOOL.



BrockSupply.com