

Grandview Screen

---

# DYNAMIQUE R3 MANUAL




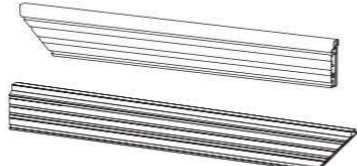

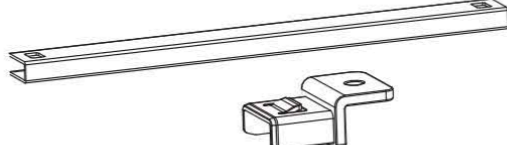
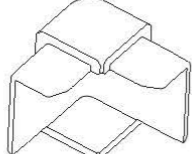

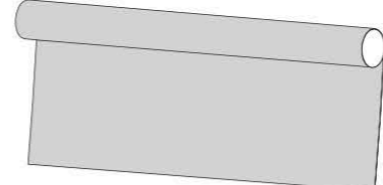
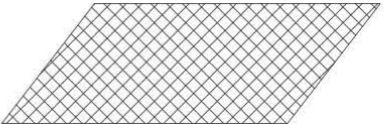




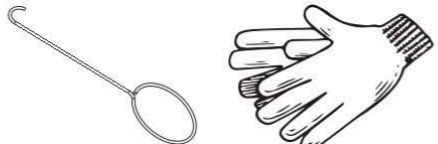



# Item Checklist

**Step 1: check for boxes and spare parts; total of five boxes including hardware kit.**

**Step 2: Check for Decorative Frame parts as listed.**

**Step 3: Check for Fabric and hardware (springs, screws, fastening pieces, round-nut, hook, gloves and hanging plates/magnets)**



 <p>Vertical decorative frame(2pcs)</p>	 <p>Horizontal frame A/B(2pcs each)</p>	 <p>Corner Bracket Horizontal frame connection part (Pre-installed) Connecting Strengthen Plate</p>	 <p>Support bar and connecting piece</p>
 <p>Plastic corner(4pcs)</p>	 <p>Tension Rod(long :2pcs, short :4pcs)</p>	 <p>Fabric(1pc)</p>	 <p>Black audio mesh (only equipped with woven acoustic fabric)</p>
 <p>Round nut (18pcs Pre-installed)</p>	 <p>Spring (Pre-installed,10set backup)</p>	 <p>Tapping screw(6pcs) Plastic expansion anchor(6pcs)</p>	 <p>Fasten piece (12 pcs)</p>
 <p>Hook(2pcs) glove(2 pairs)</p>	 <p>Hanging plate, magnets, attaching chip 2pcs each</p>	 <p>Installed M5X8 screw (20pcs) M6X4 screw (14pcs)</p>	 <p>M5X8 Countersunk head screw (4pcs) M5X10 screw(10pcs)</p>

Step 4




---

## Frame Installation

**Step 4.** Combine the two pieces of short silver frame parts with connecting black bonding pieces. See image for reference.

Step 5

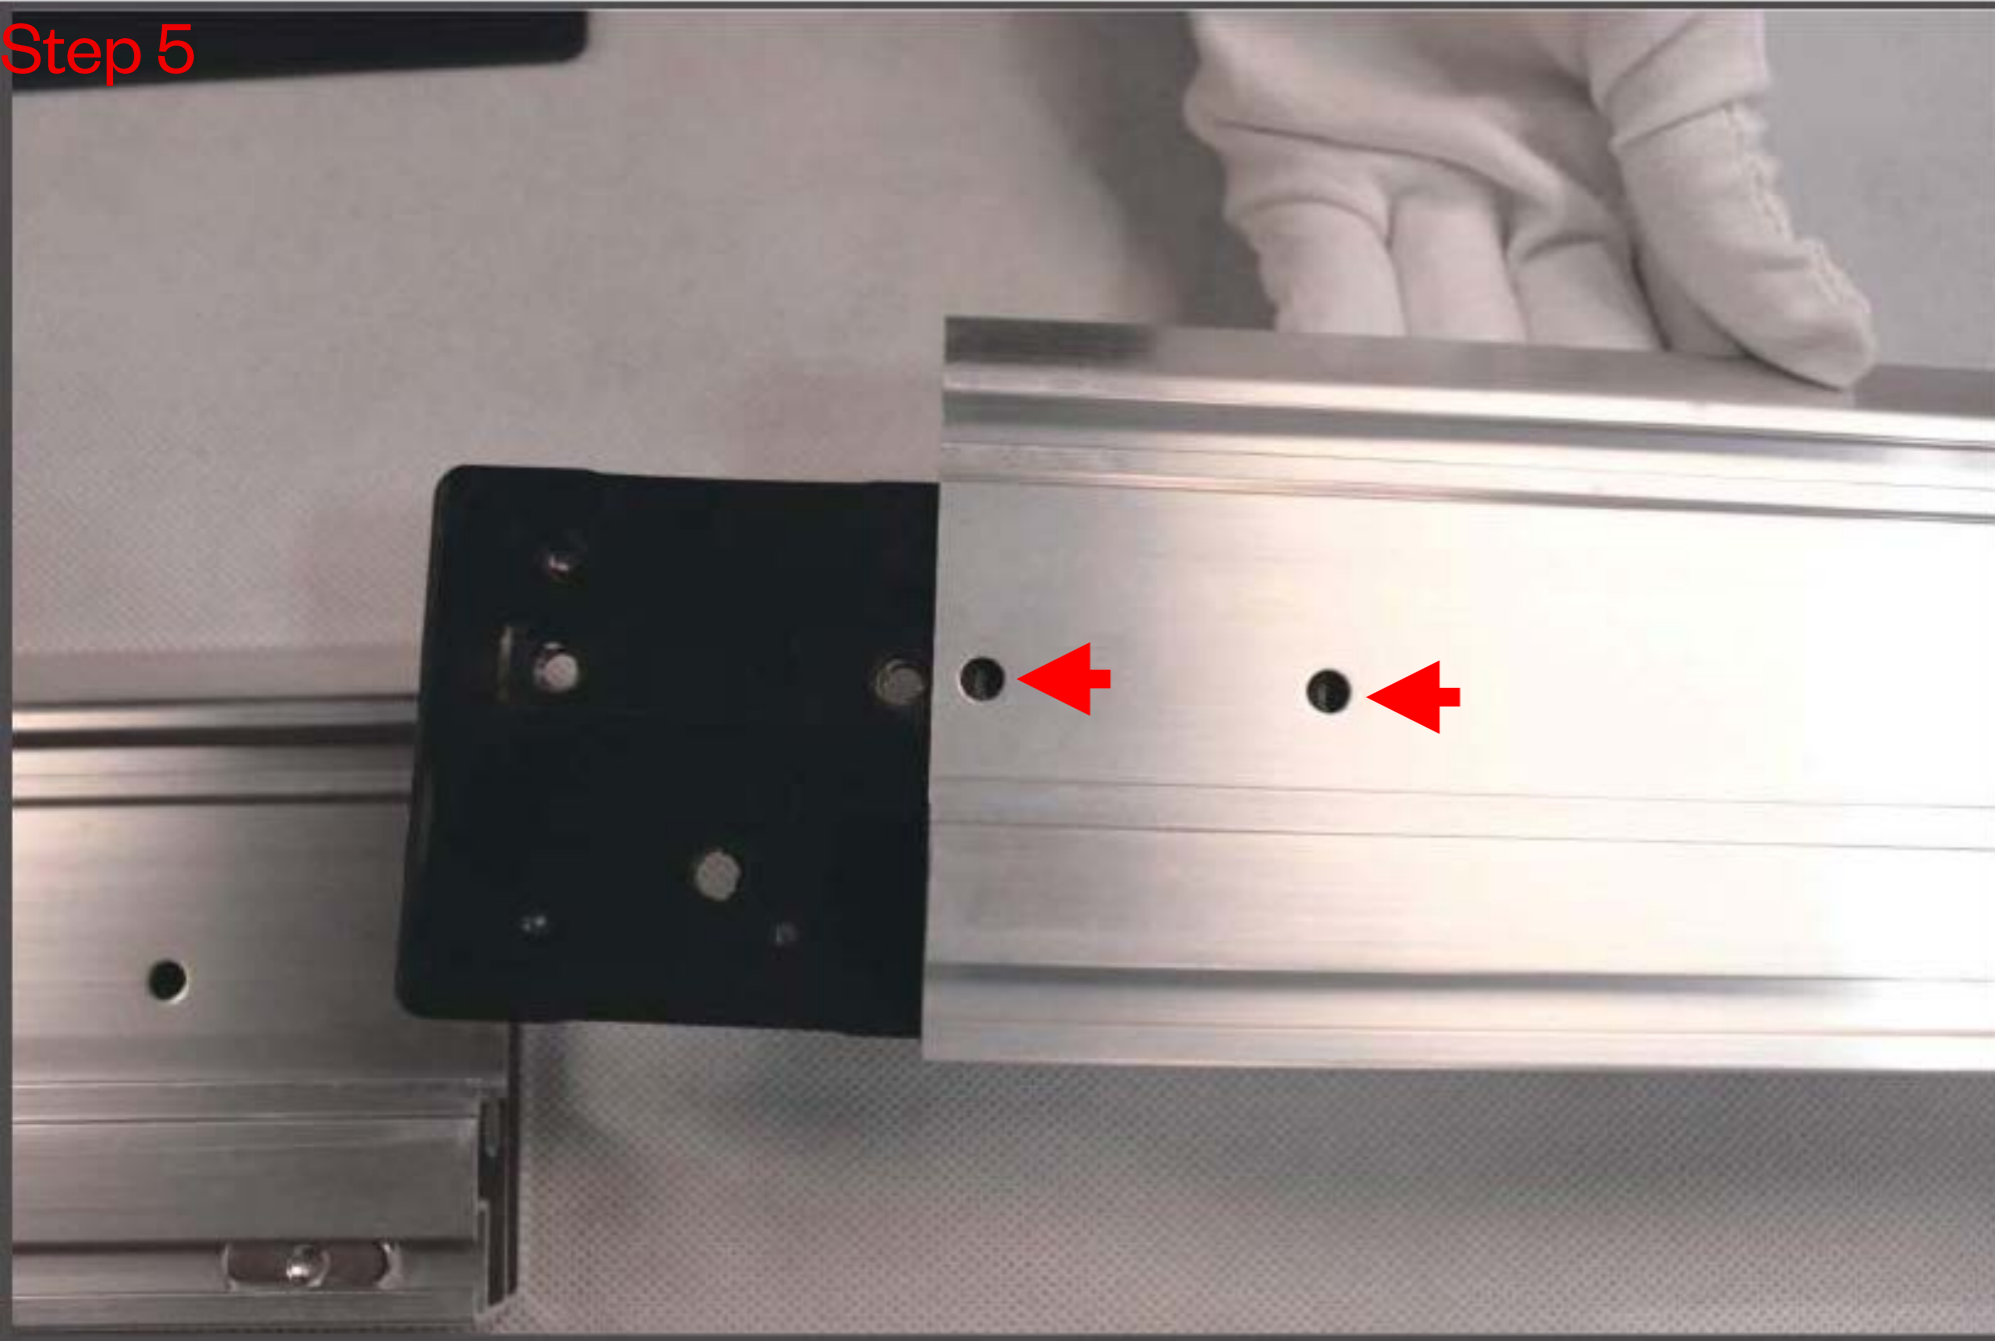


---

## Frame Installation

**Steps 5-8.** Align with the holes on both sides and securely fasten with screw. See images for reference

Step 6

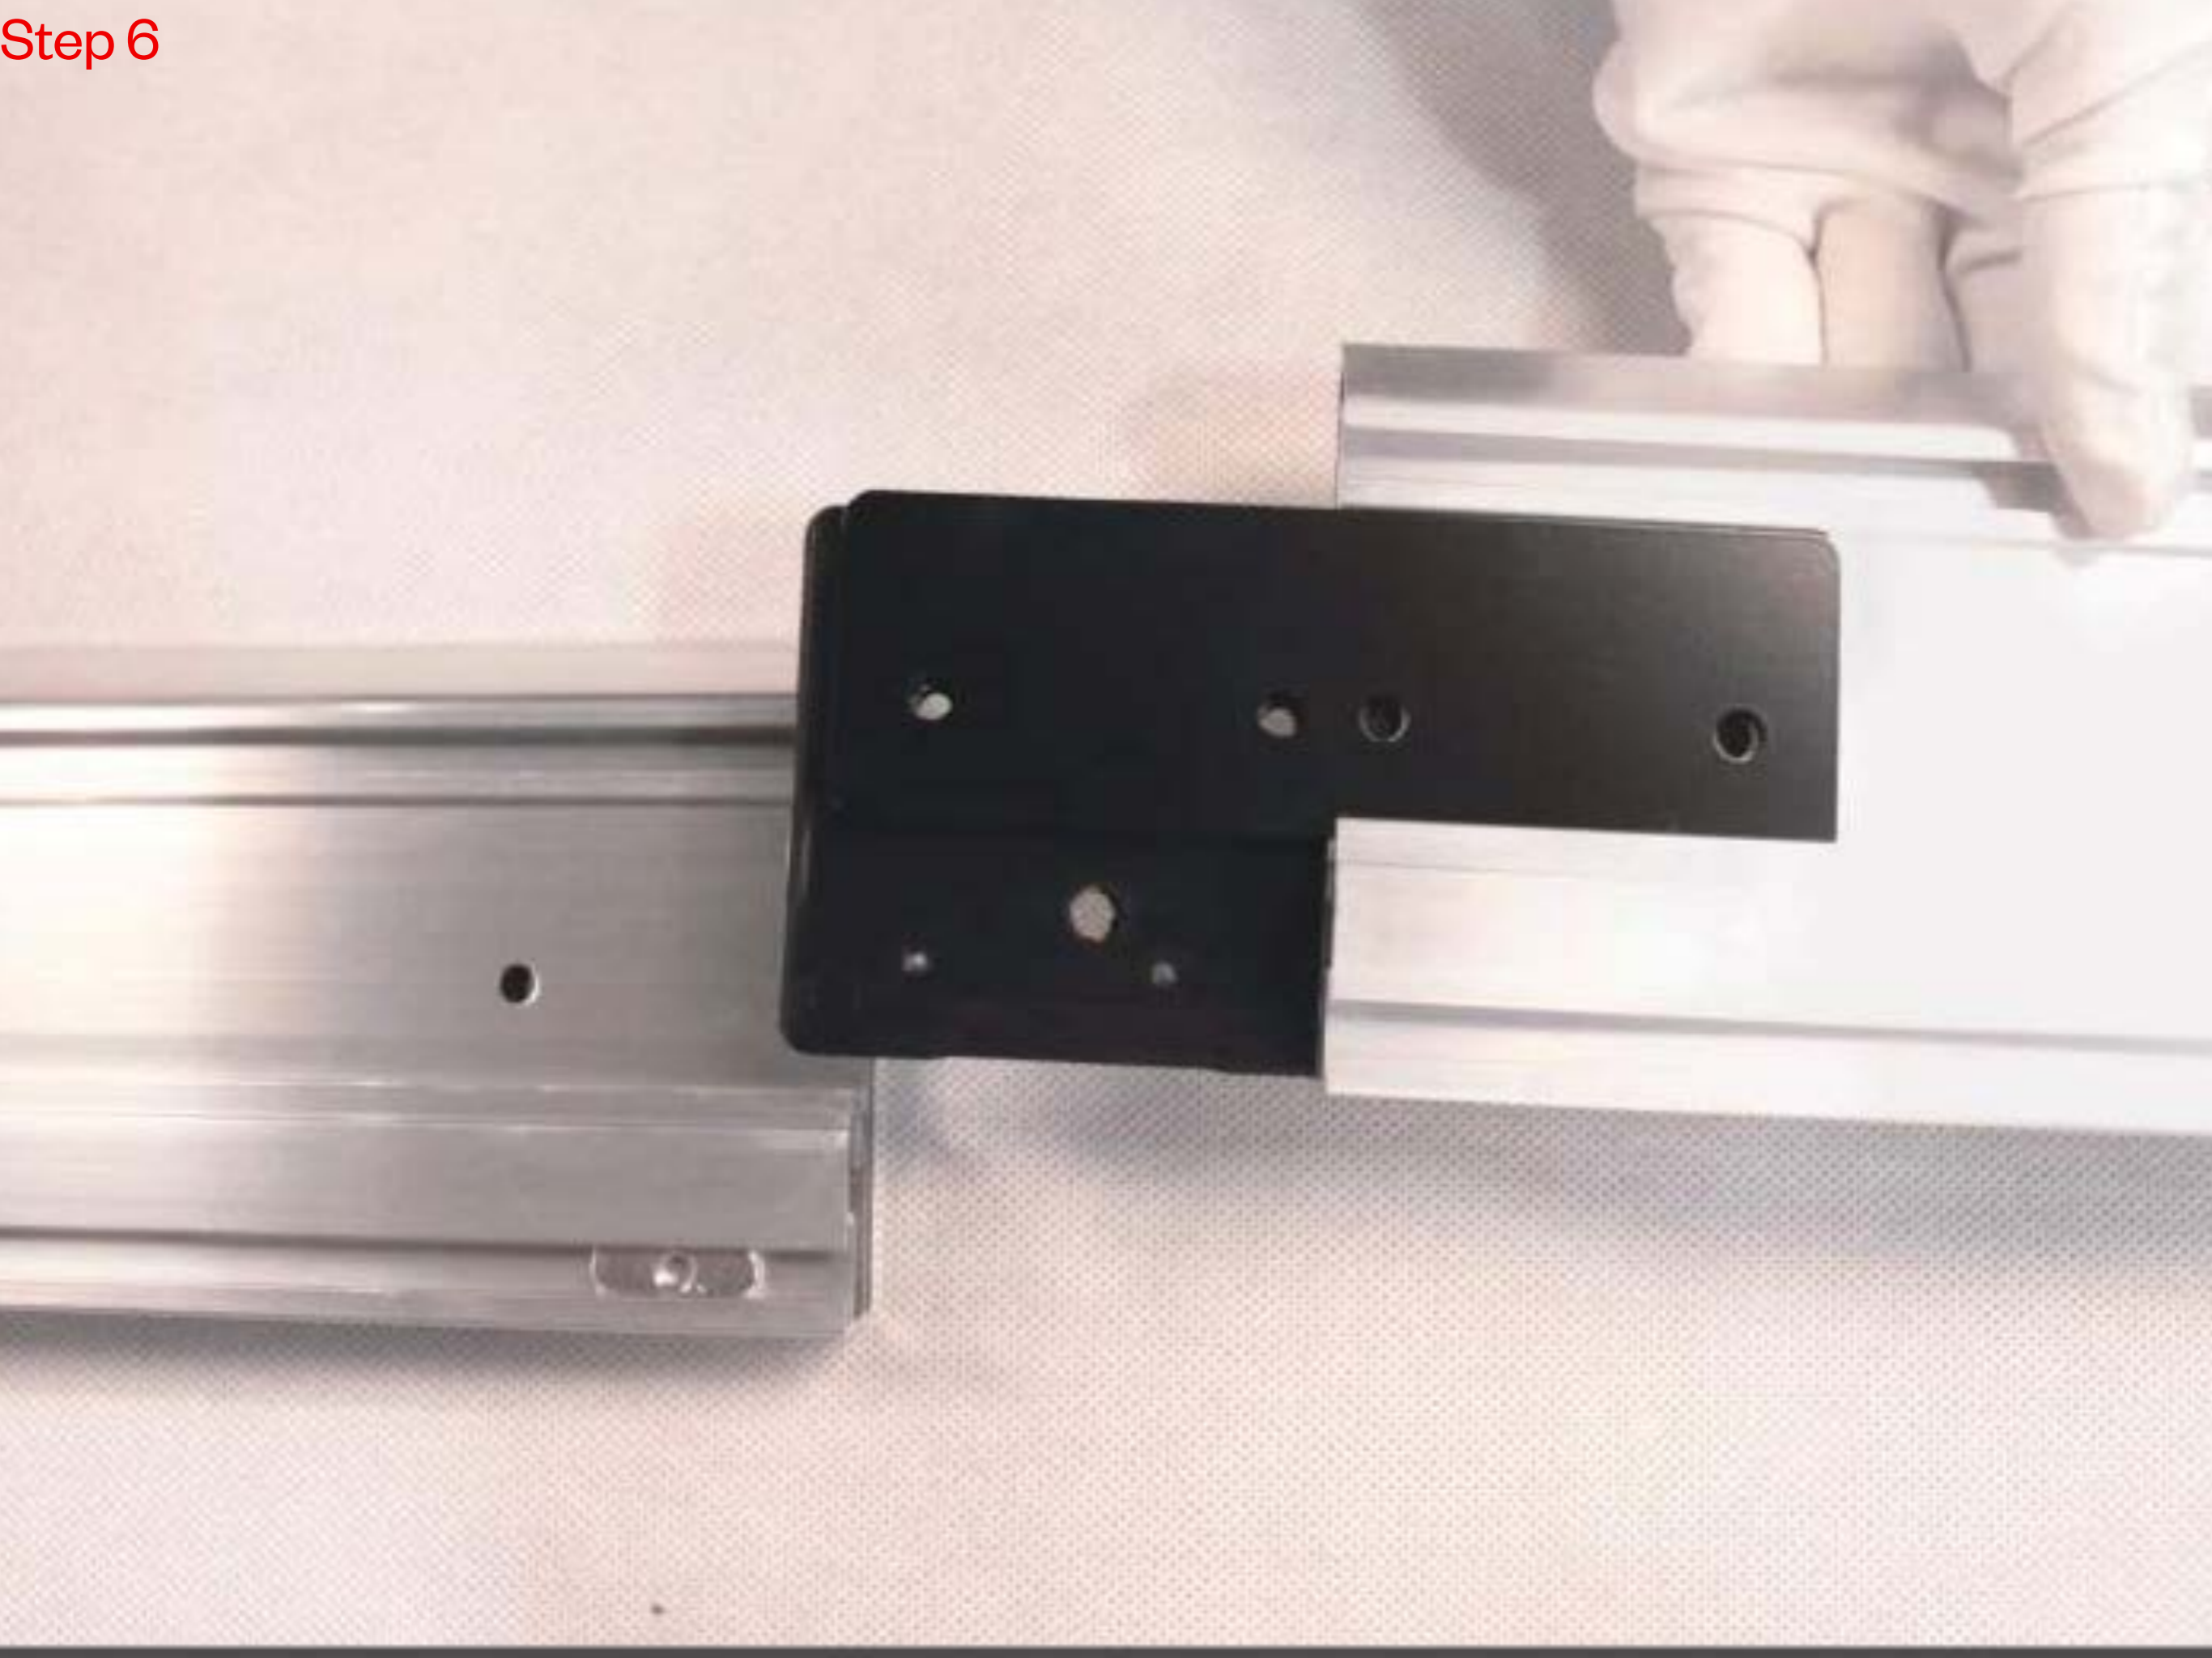


Step 7



Step 8



Step 9

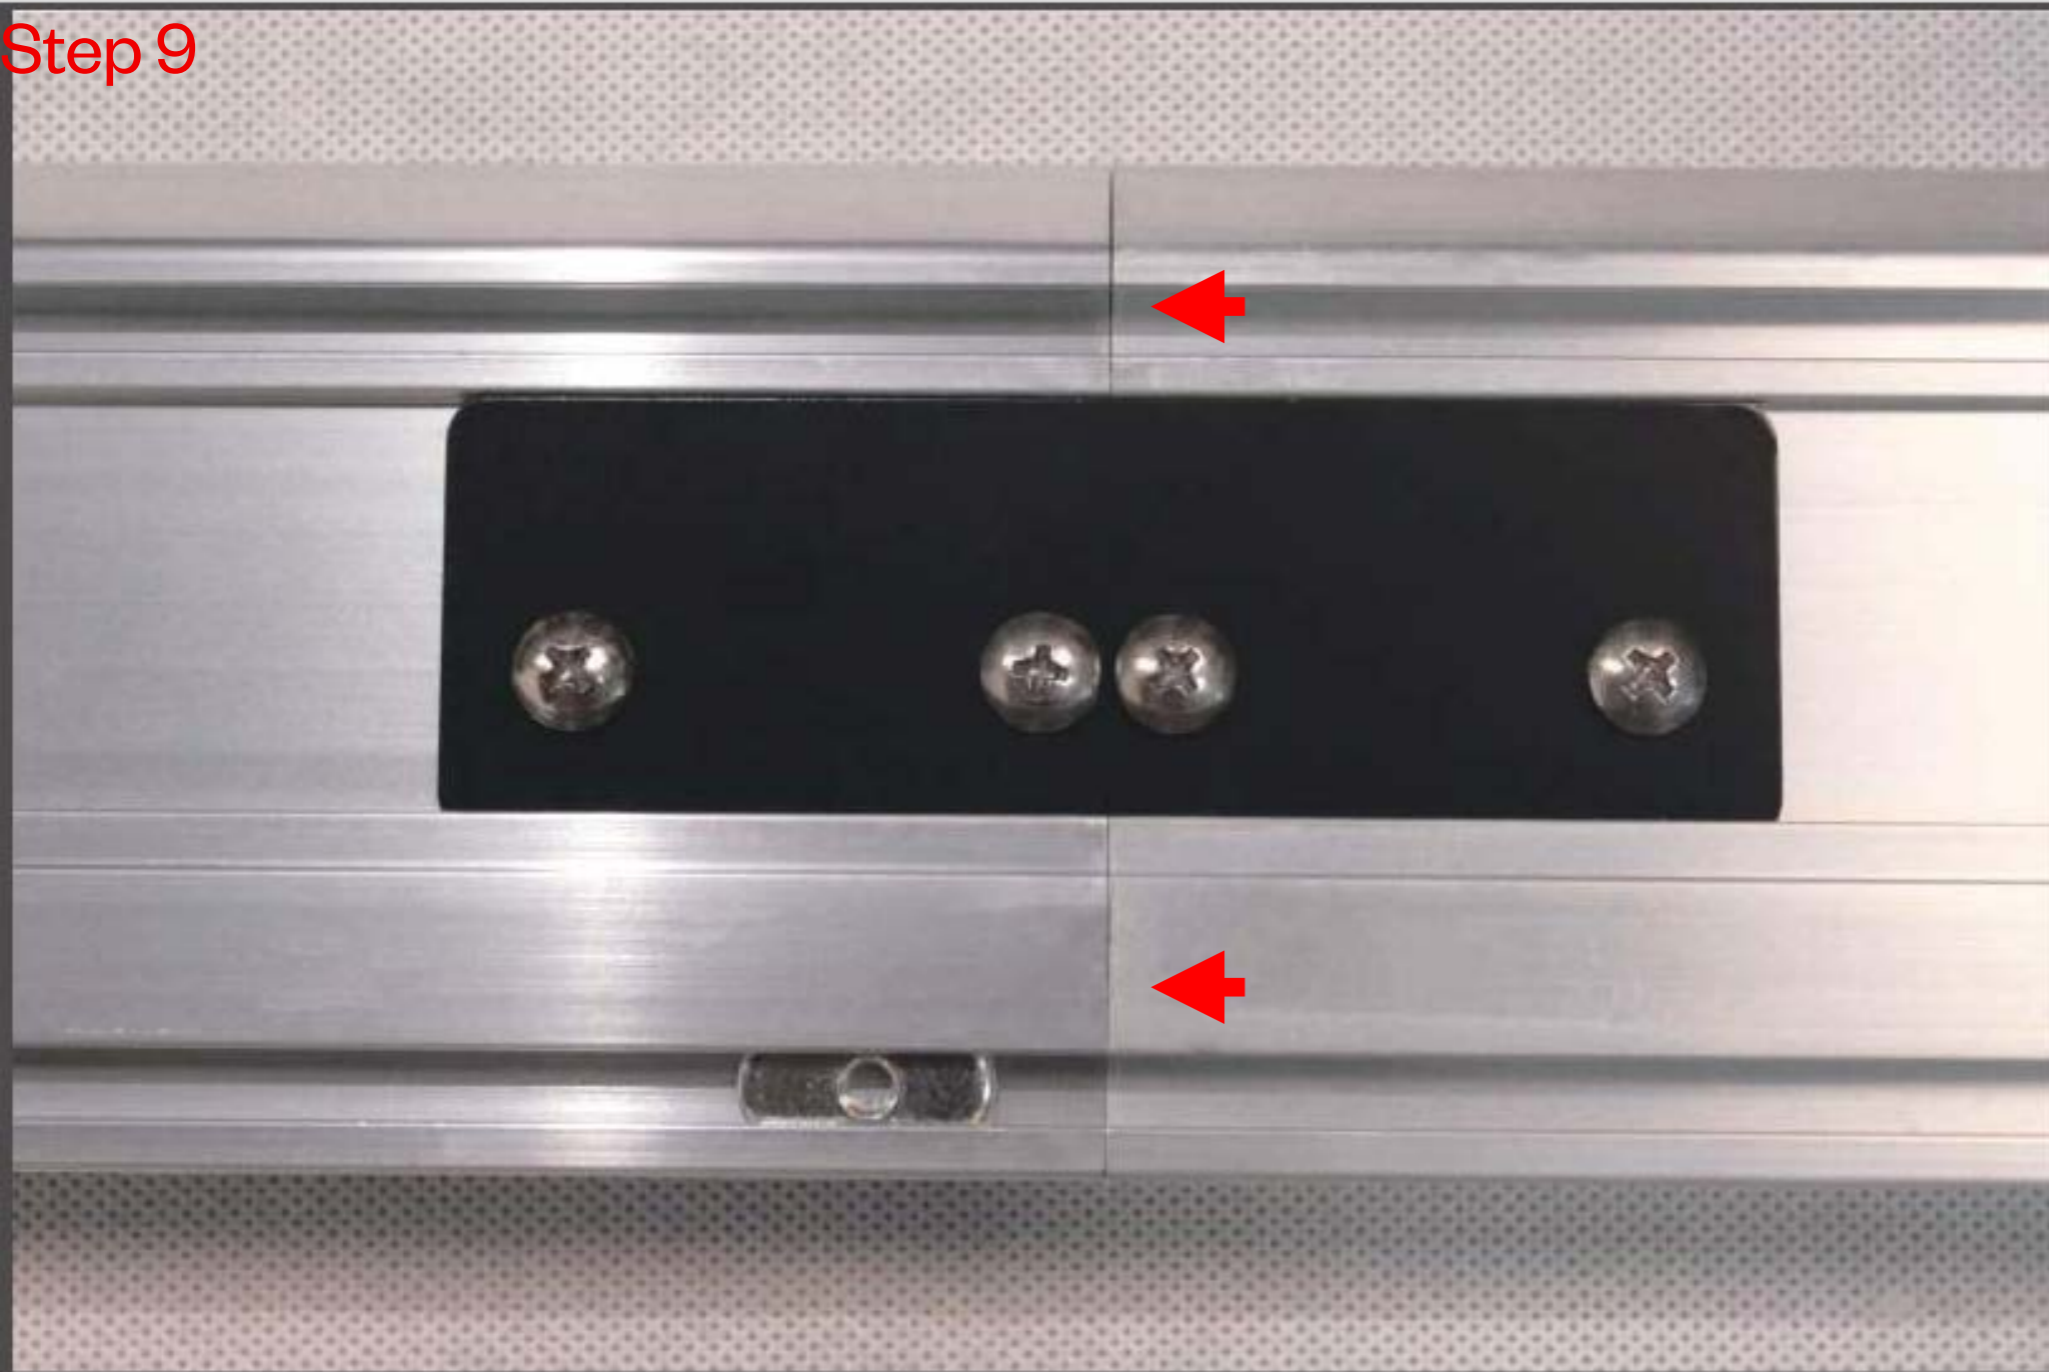

---

## Frame Installation

**Step 9.** Please note that it is crucial for the silver frame to have no gap whatsoever. See image for reference






**Steps 10-12.** Assembly of corner connection parts: place corner parts inside the silver frame and connect the counter part, make sure the holes are aligned properly. *When installing the two corner pieces, this should be done simultaneously and inserted at the same time.* See images for reference

---

## Frame Installation

Step 11

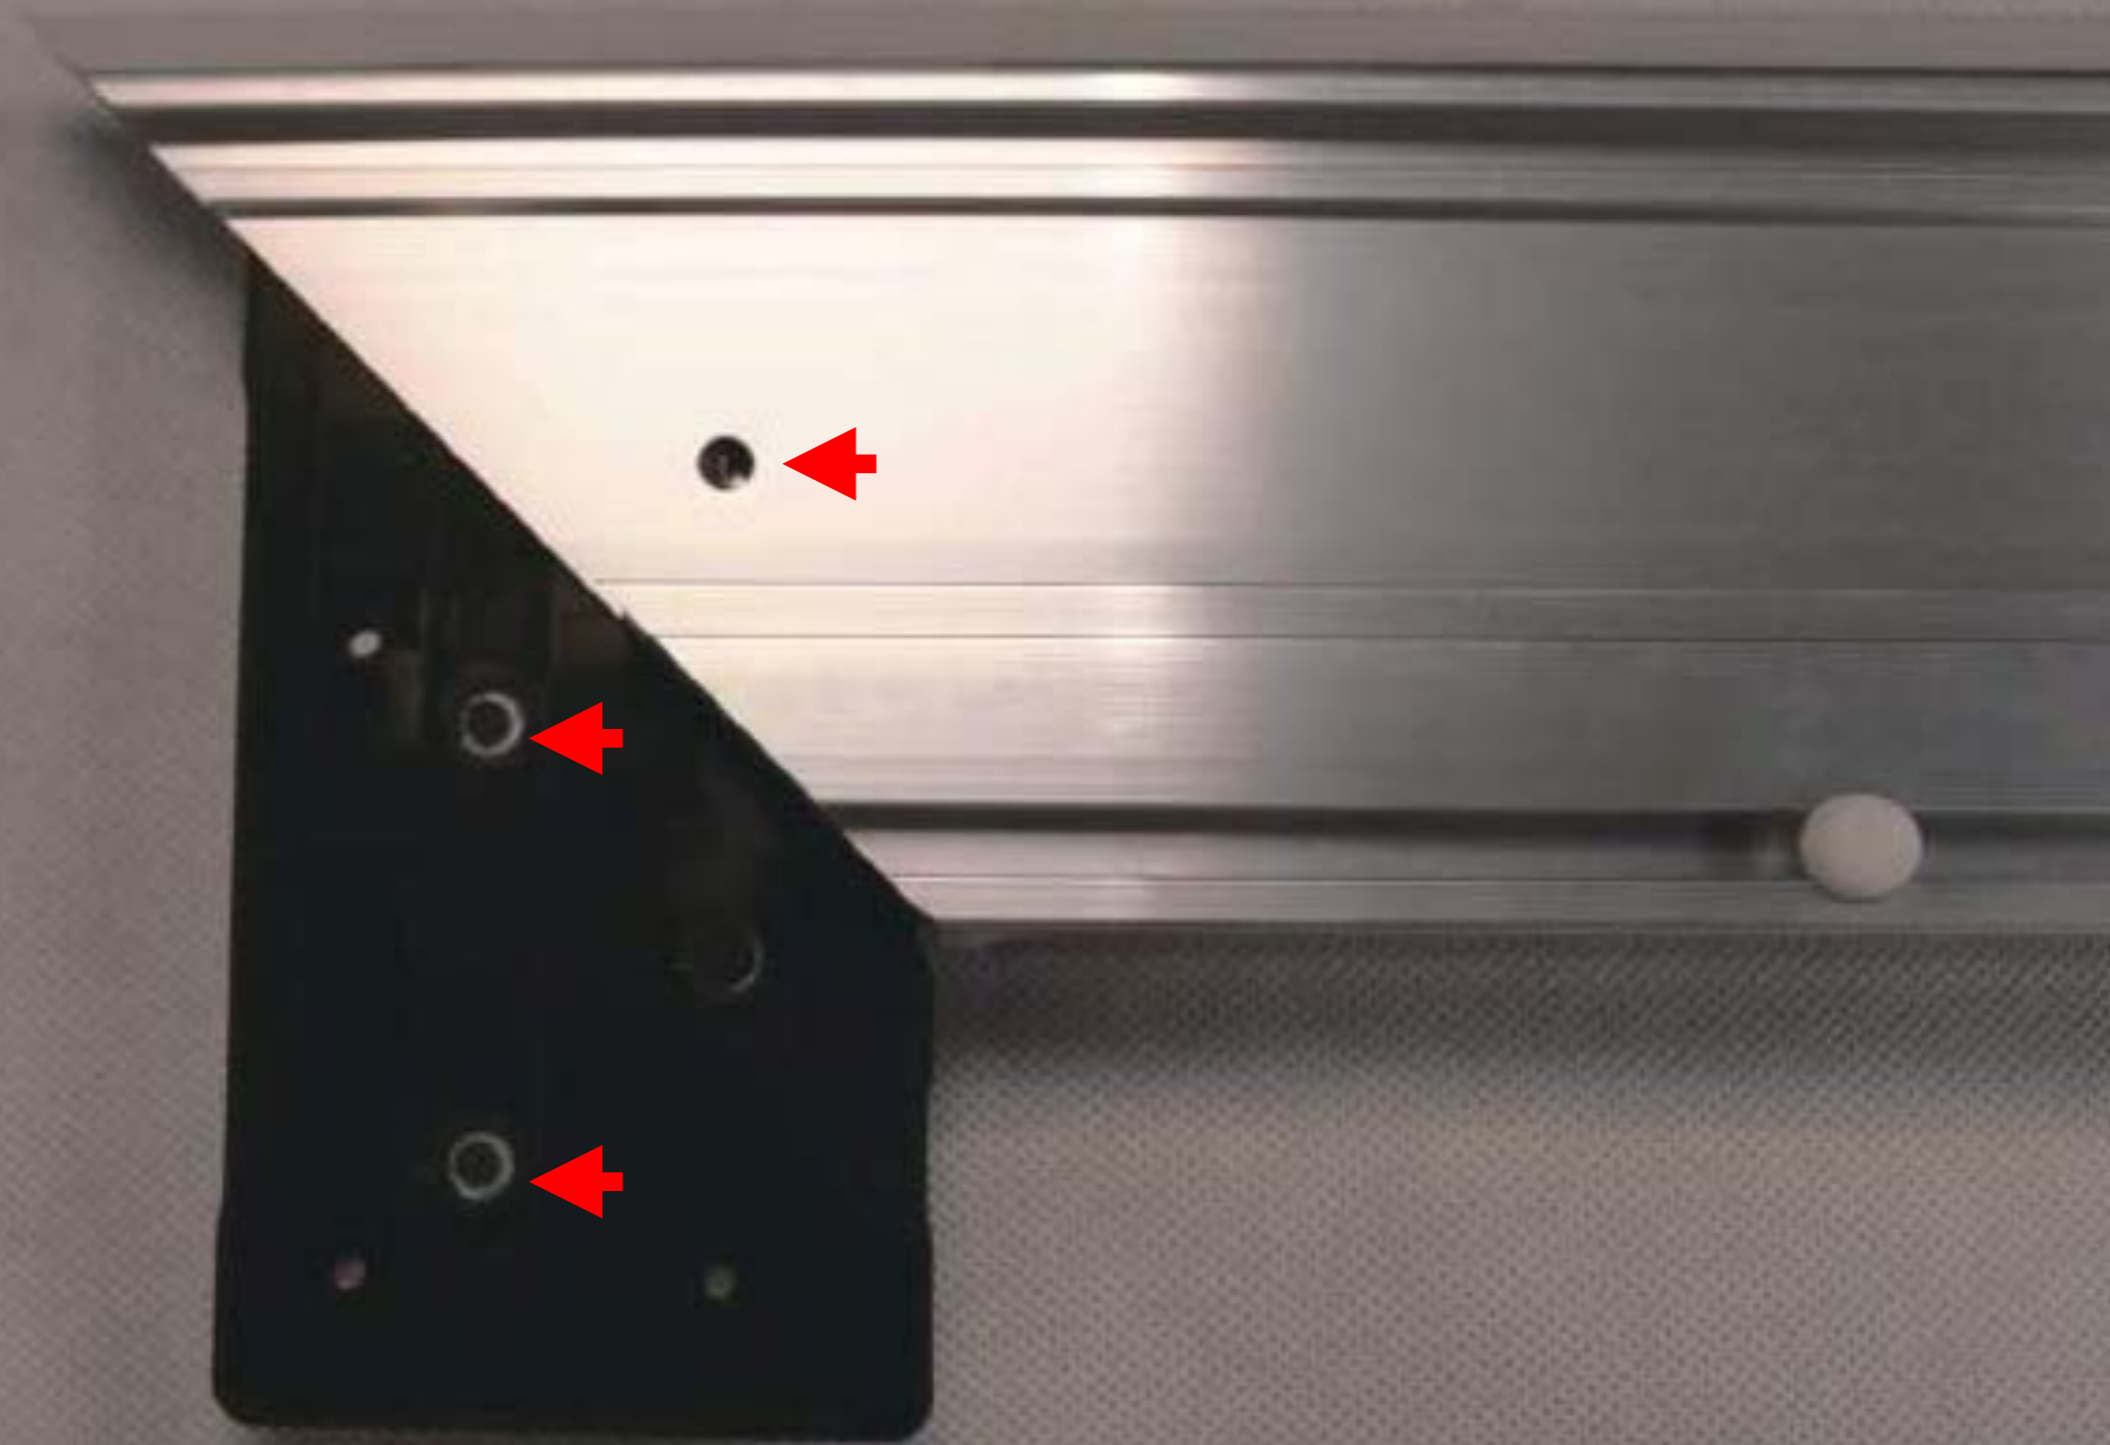


Step 12



---

## Frame Installation

**Step 13.** Please note that it is crucial for the silver frame to have no gap whatsoever. See image for reference

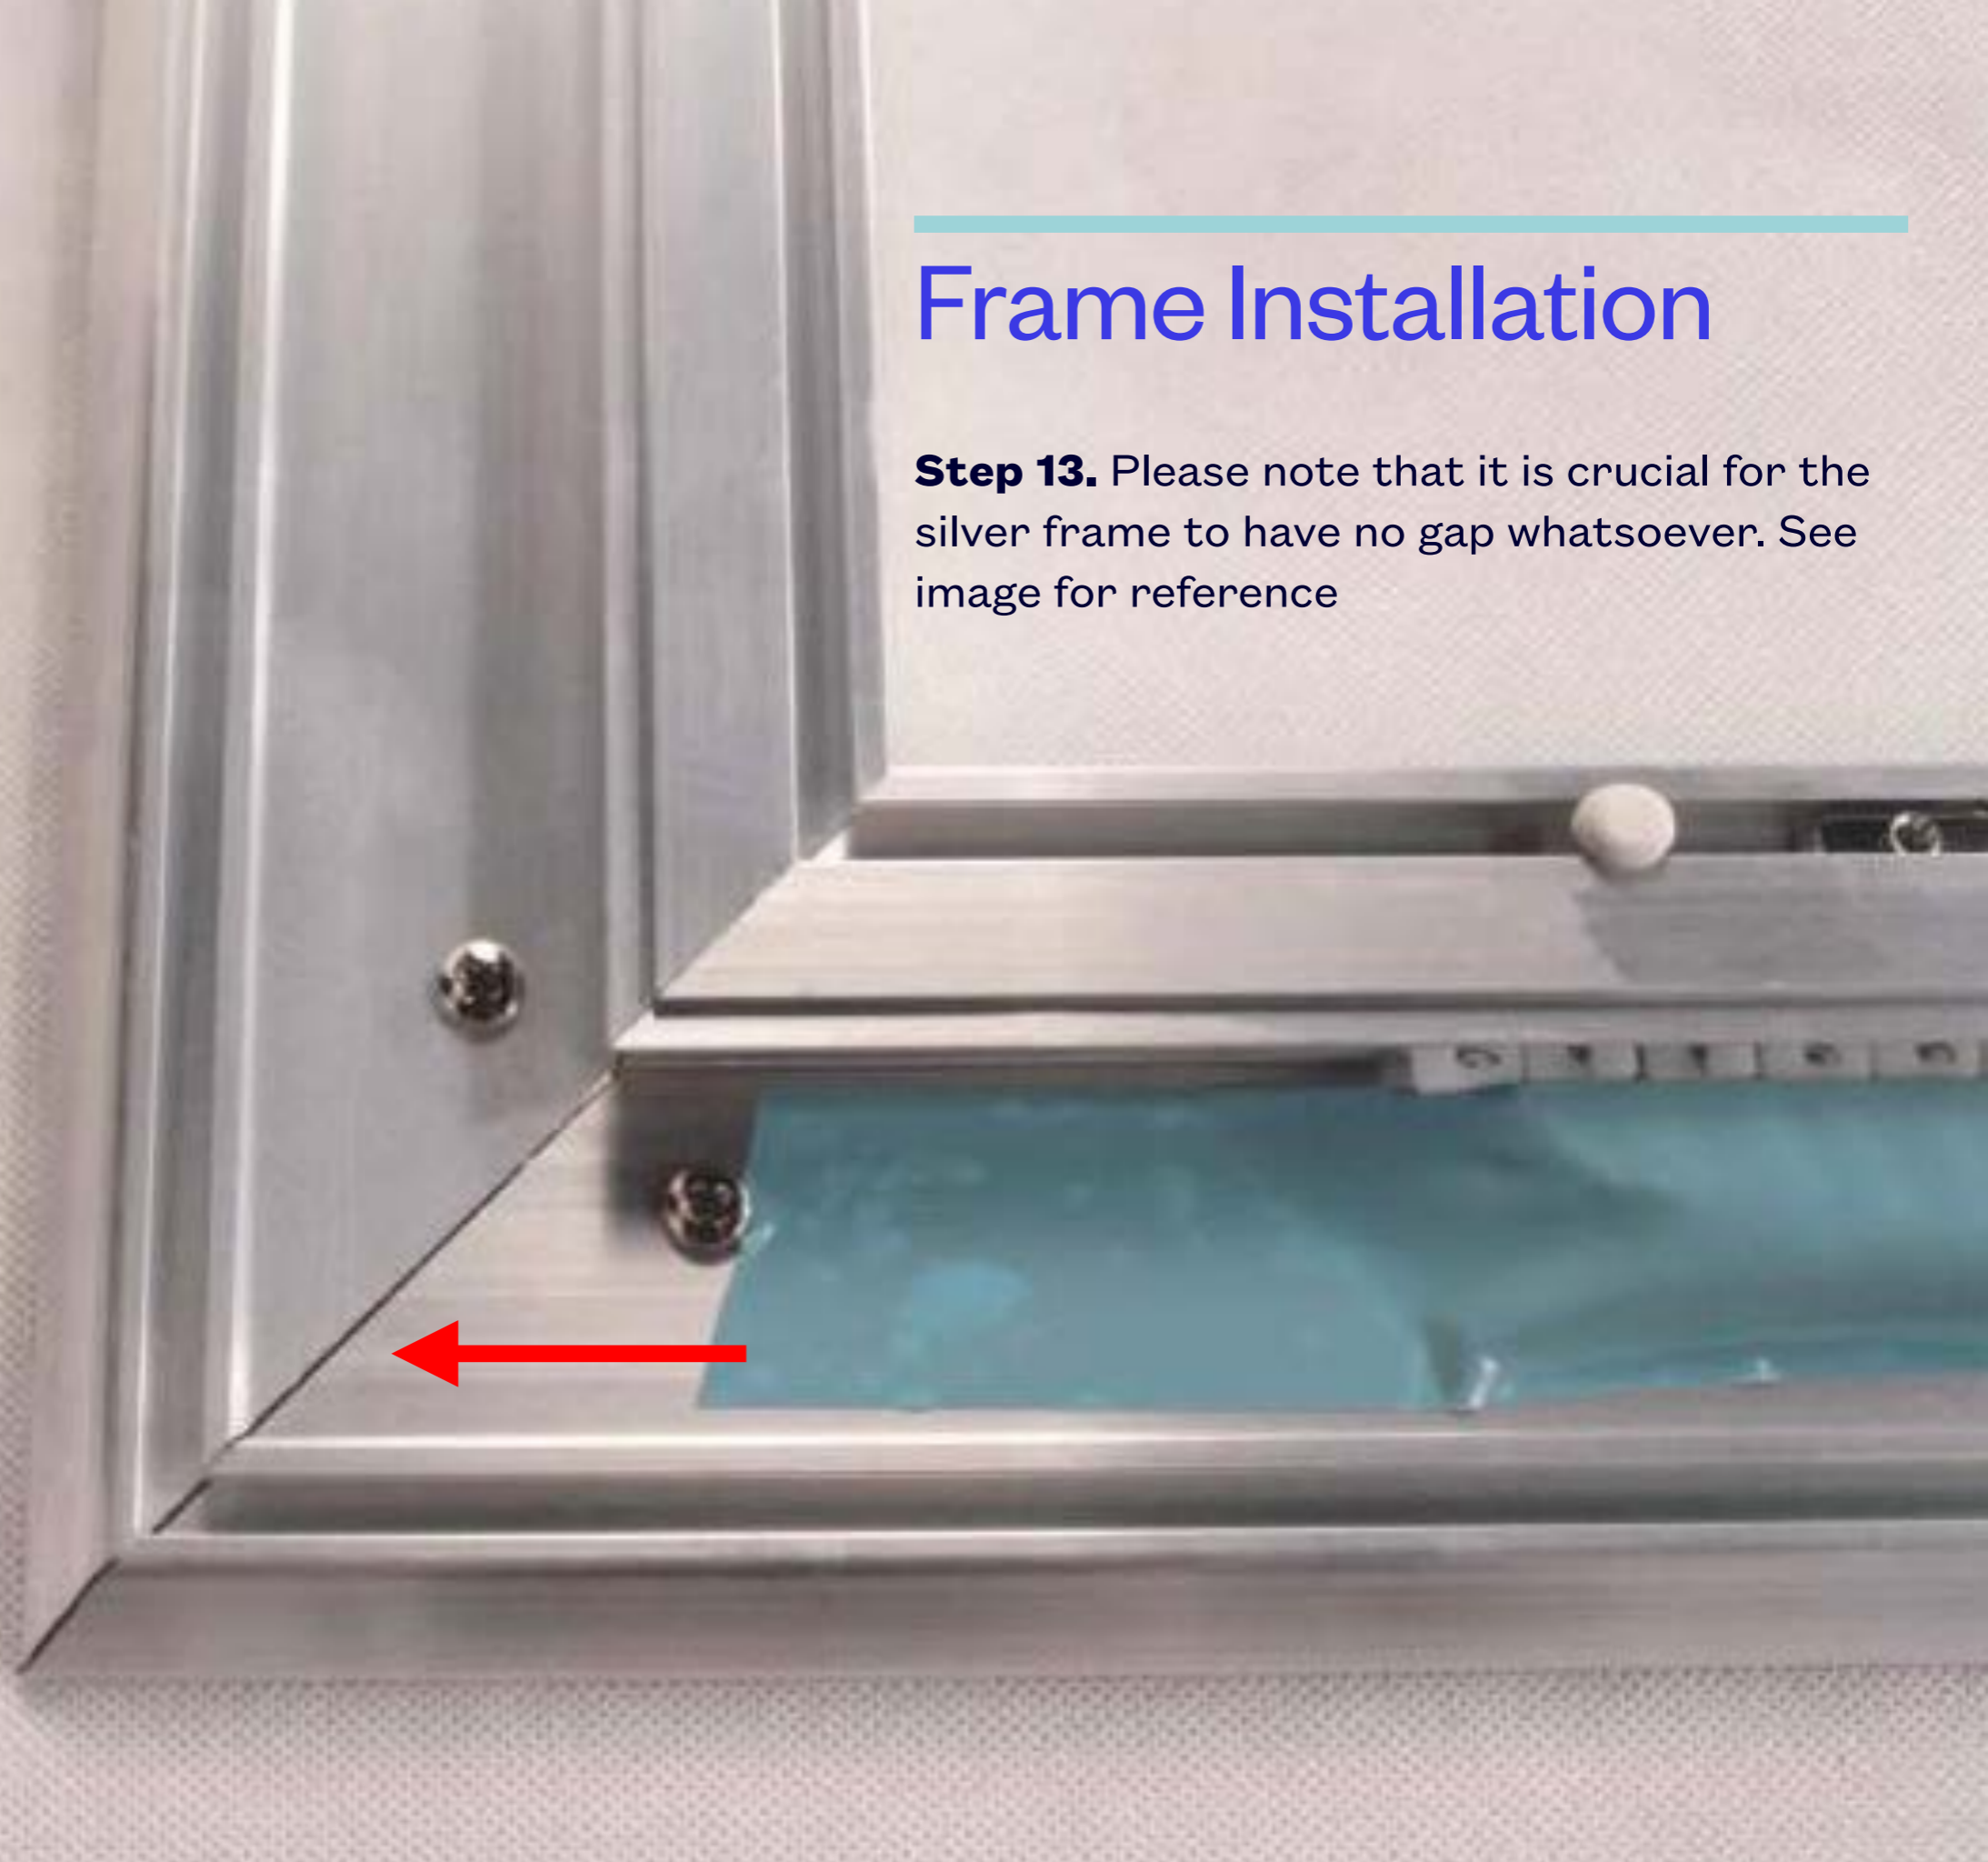




**This image is to show WHAT a IMPROPER installation would look like.**

## Frame Installation

**Step 14.** As the image points out, if the position of the silver frame is inaccurate this will cause any creasing, wrinkle or creases when installing the fabric.

Step 15

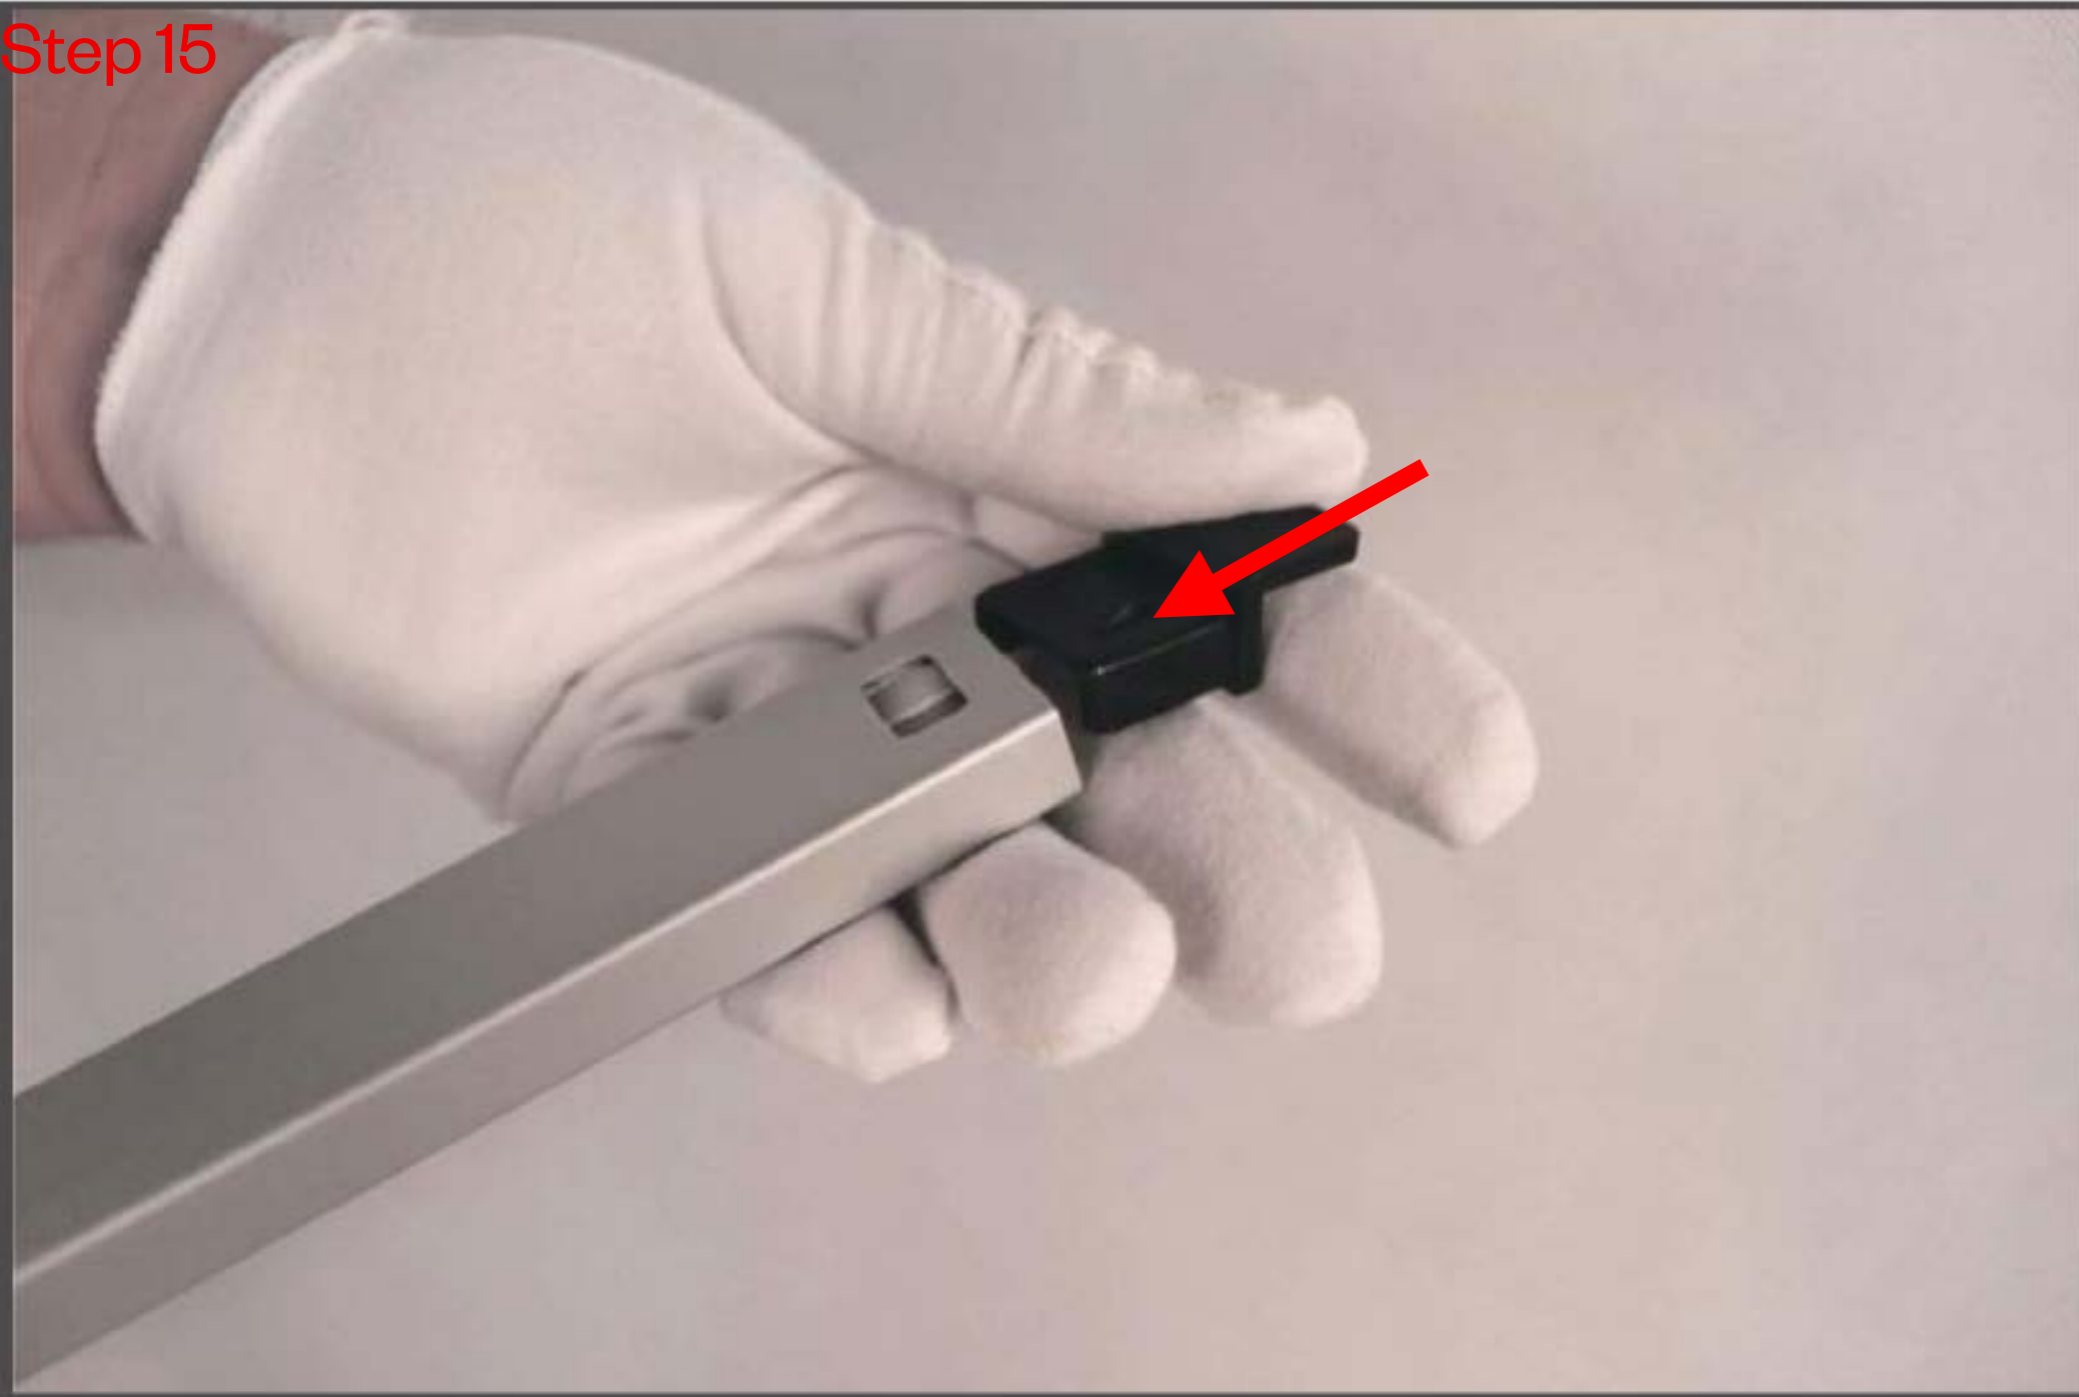

---

## Frame Installation

**Step 15.** When installing the support bar, please insert the plastic buckle on both sides. See image for reference.


## Step 16

**Step 16.** After installing the black piece, this is what it should look like when it is properly settled within the silver part.




## Frame Installation

**Step 17.** There are a total of 7 nuts inside the silver frame, the one in the middle is for the support bar, so it will have 3 pieces on both sides and requires to be fastened with screw. See image for reference

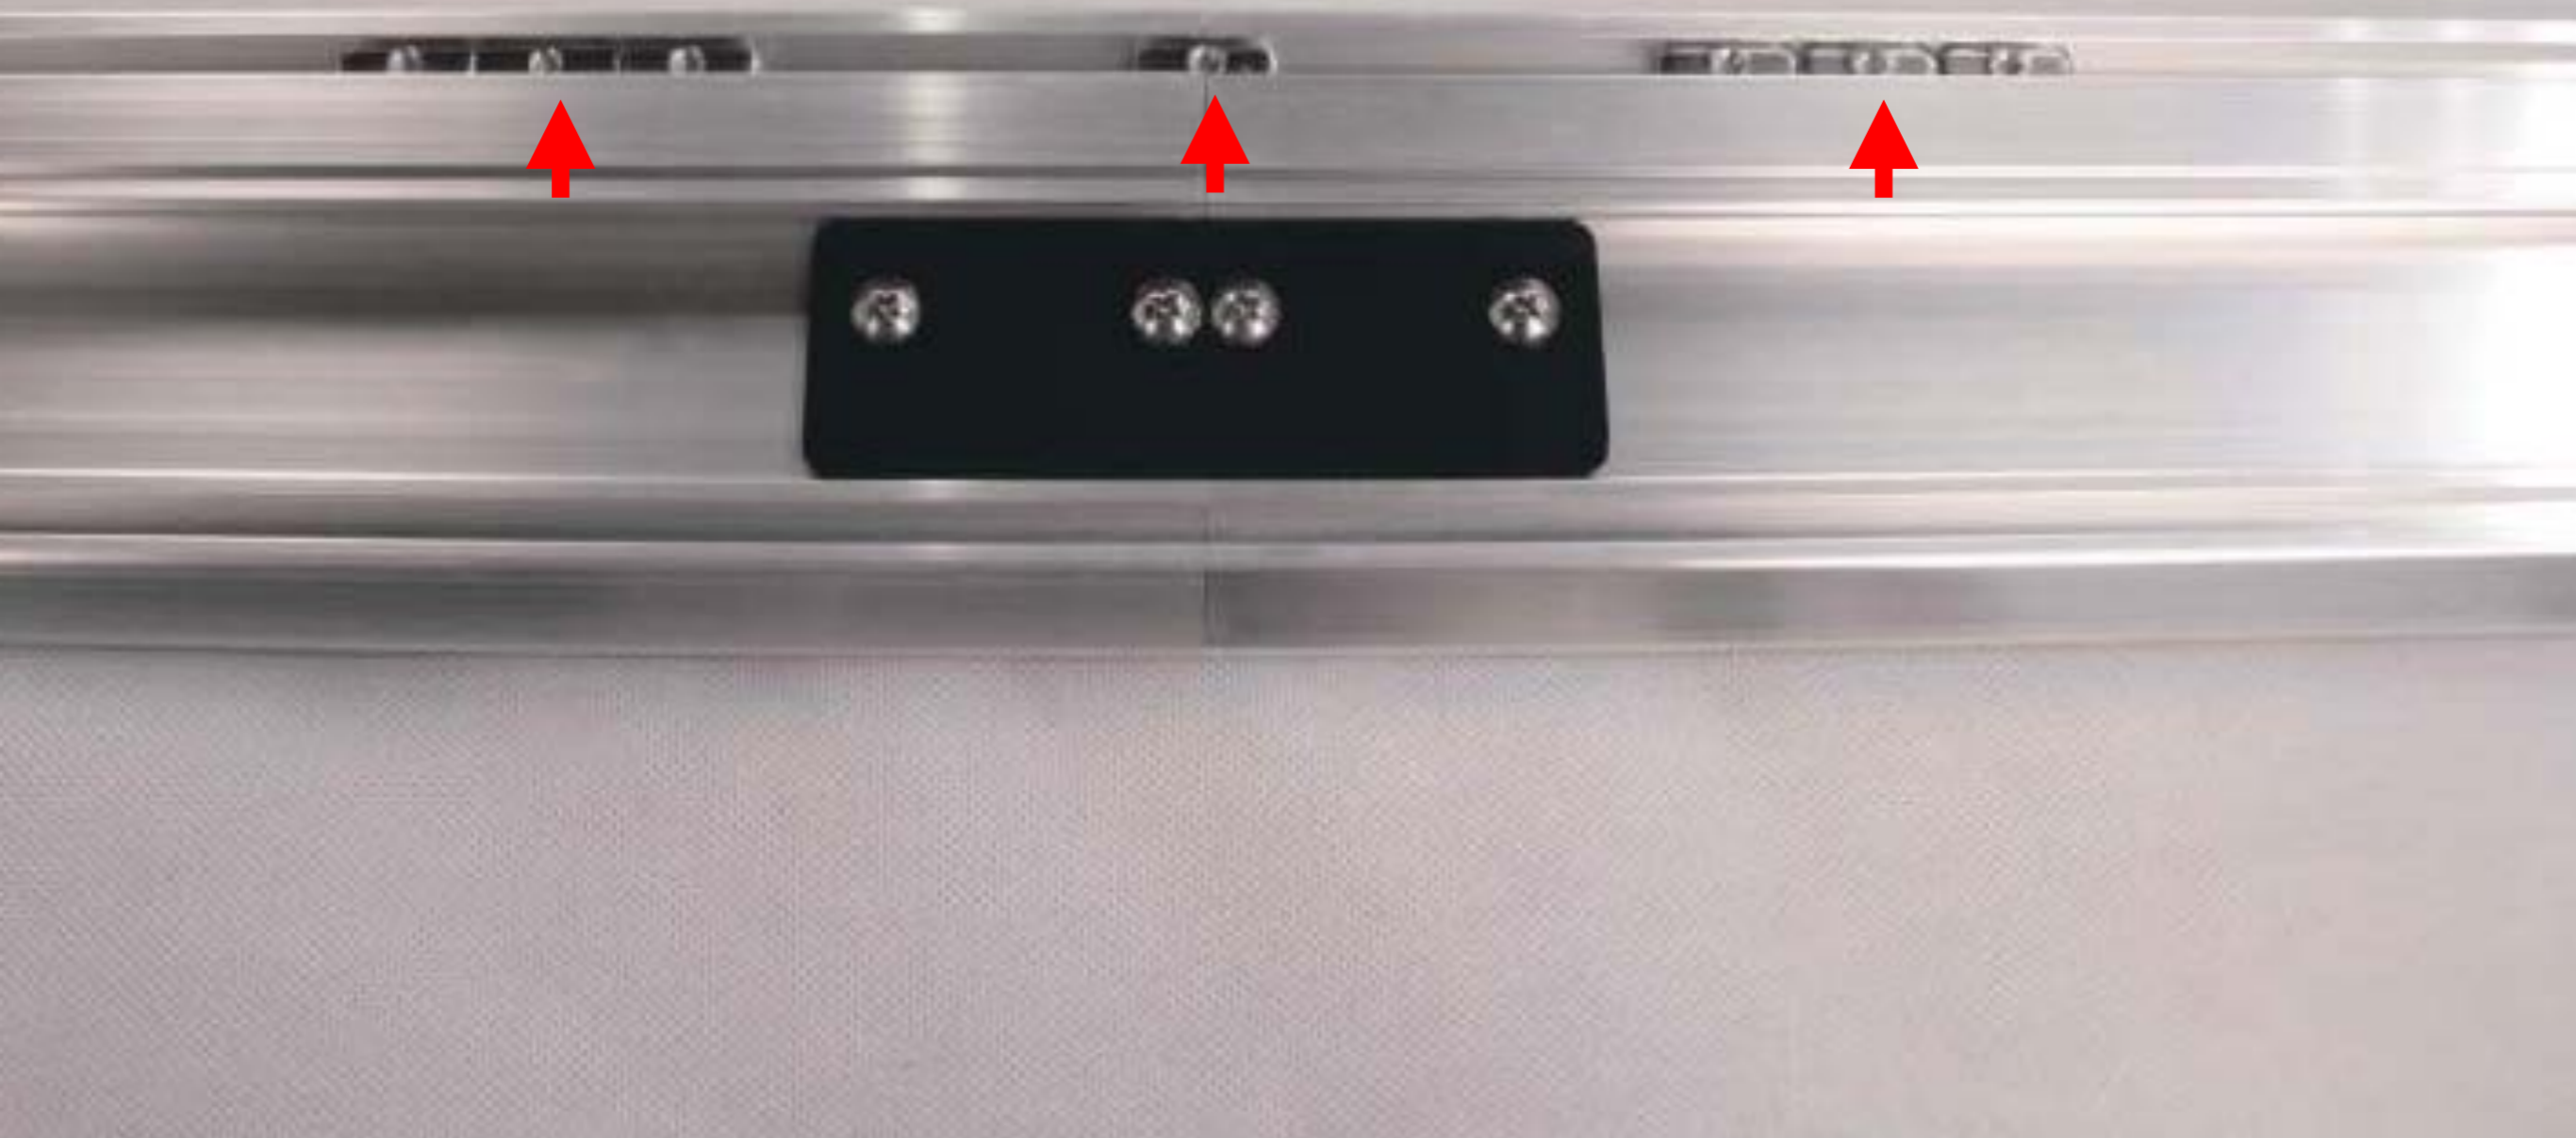




Step 18

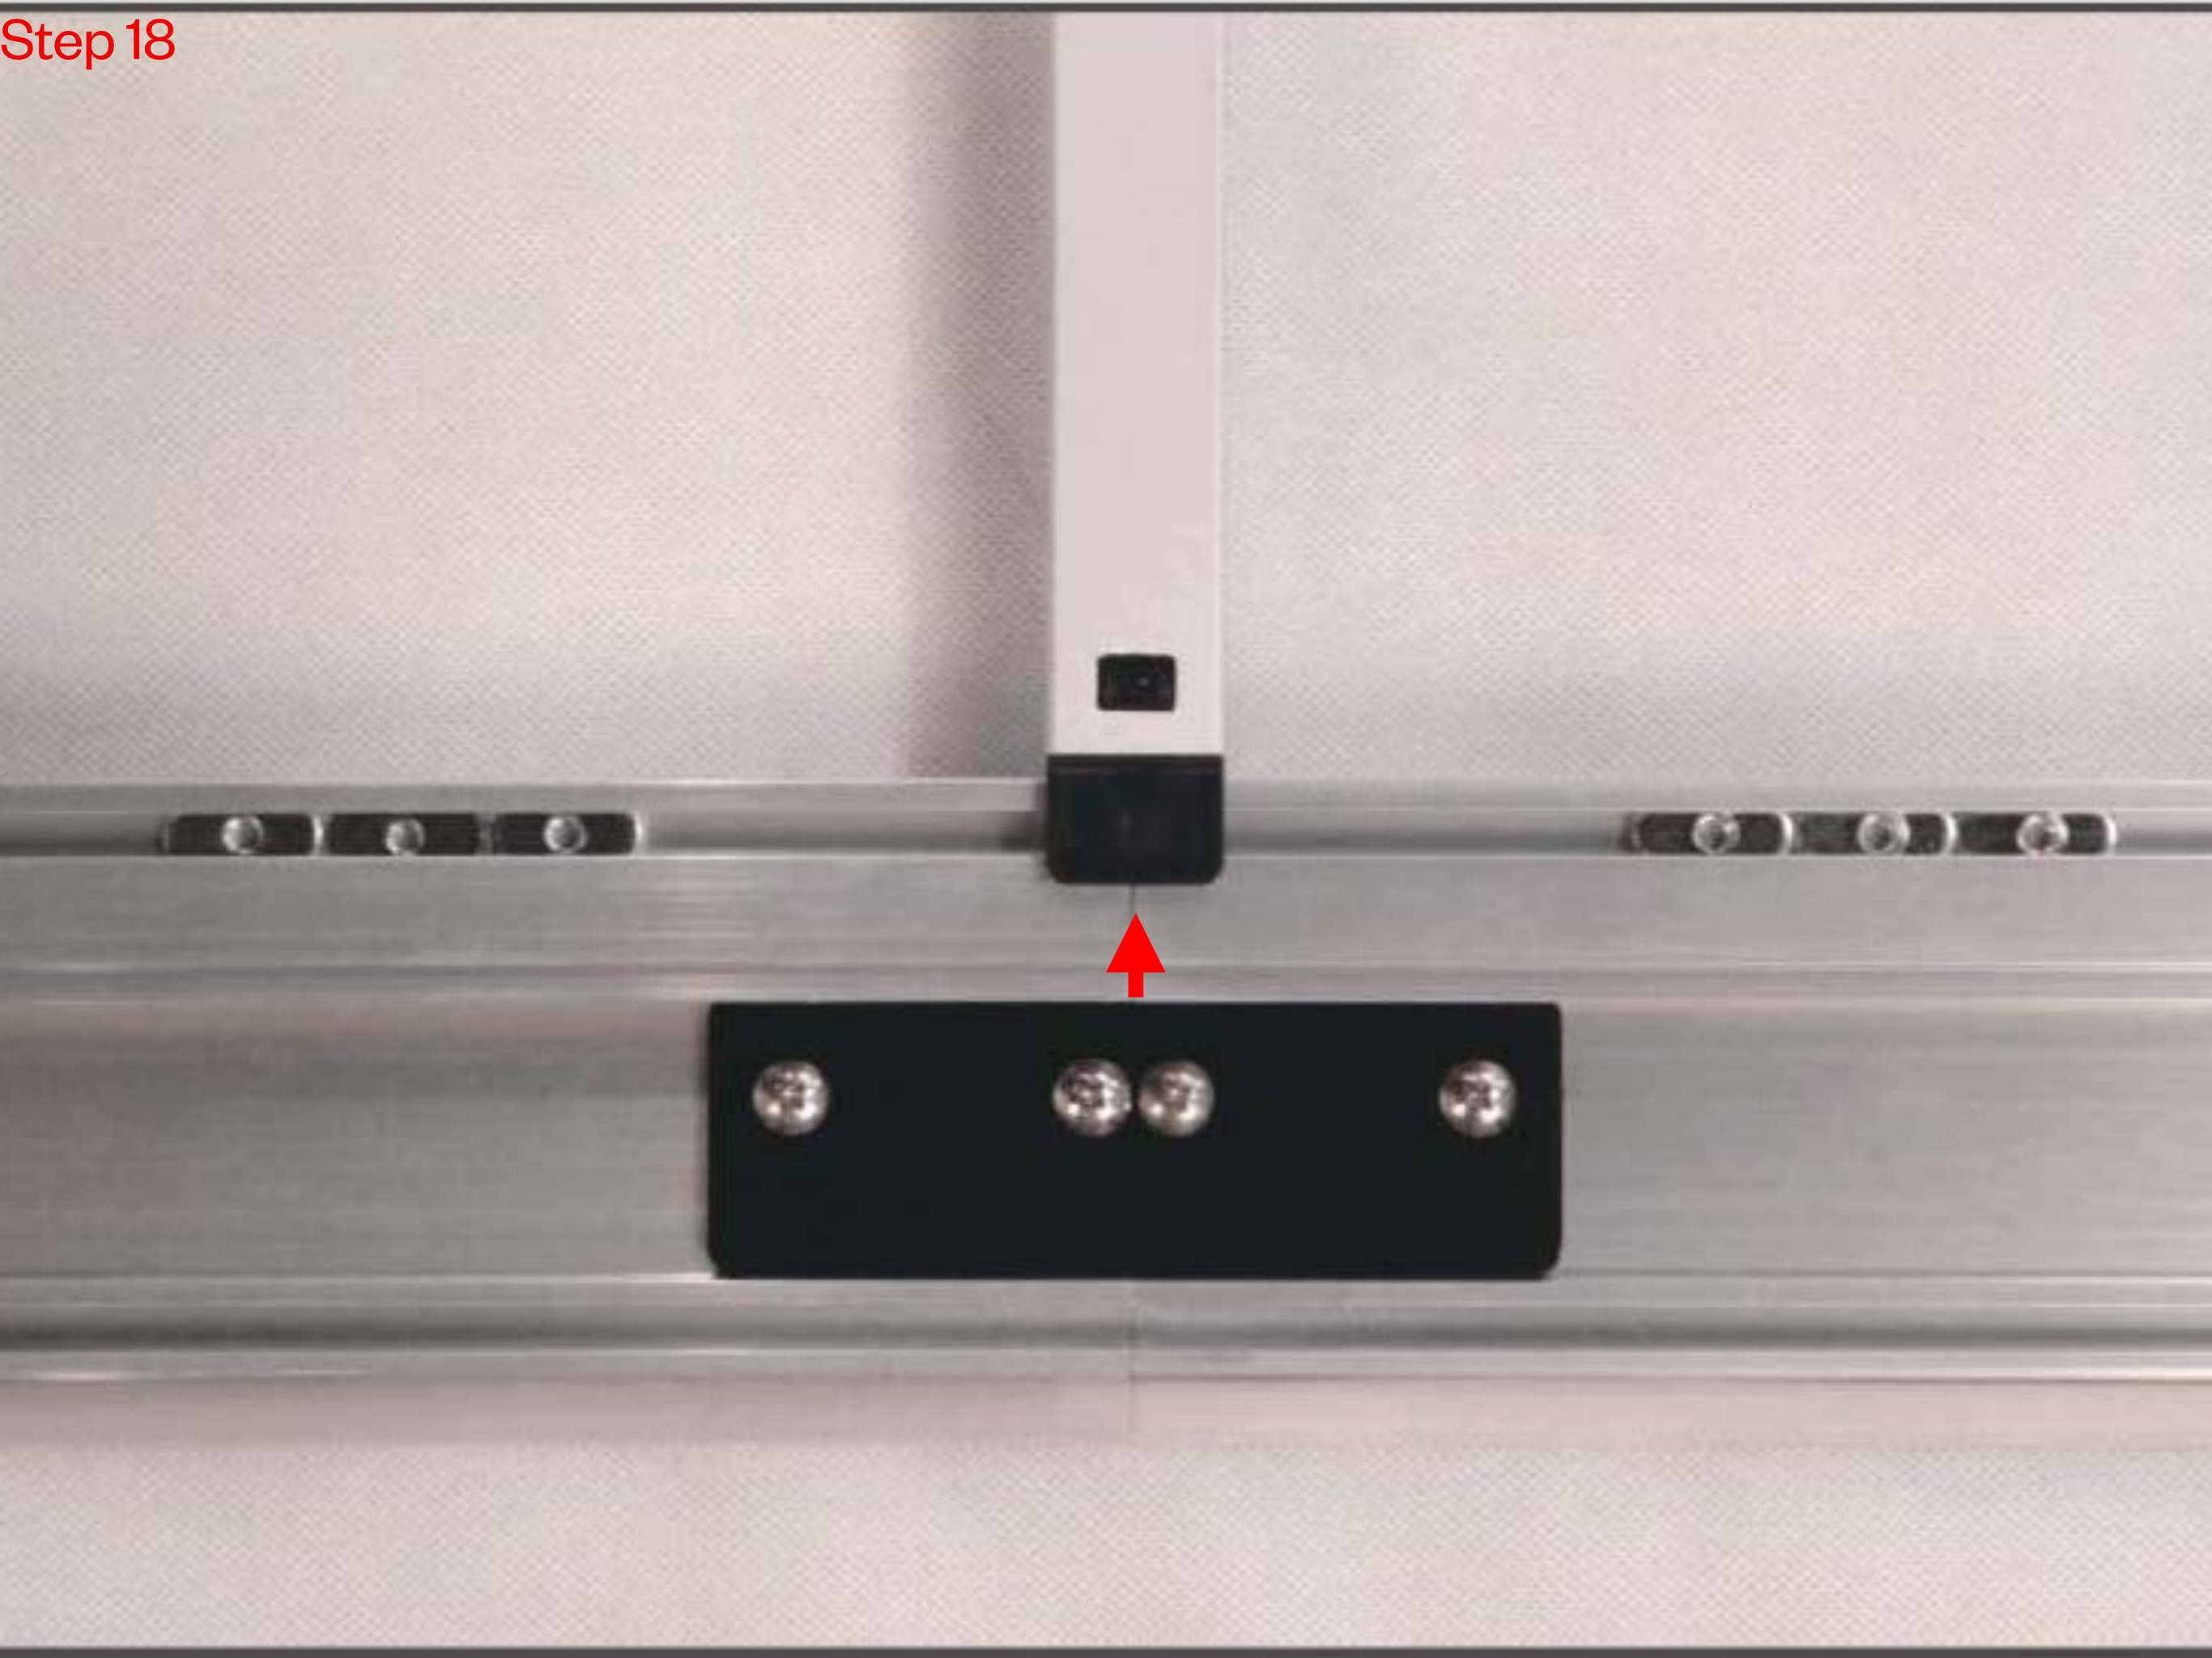

Step 19

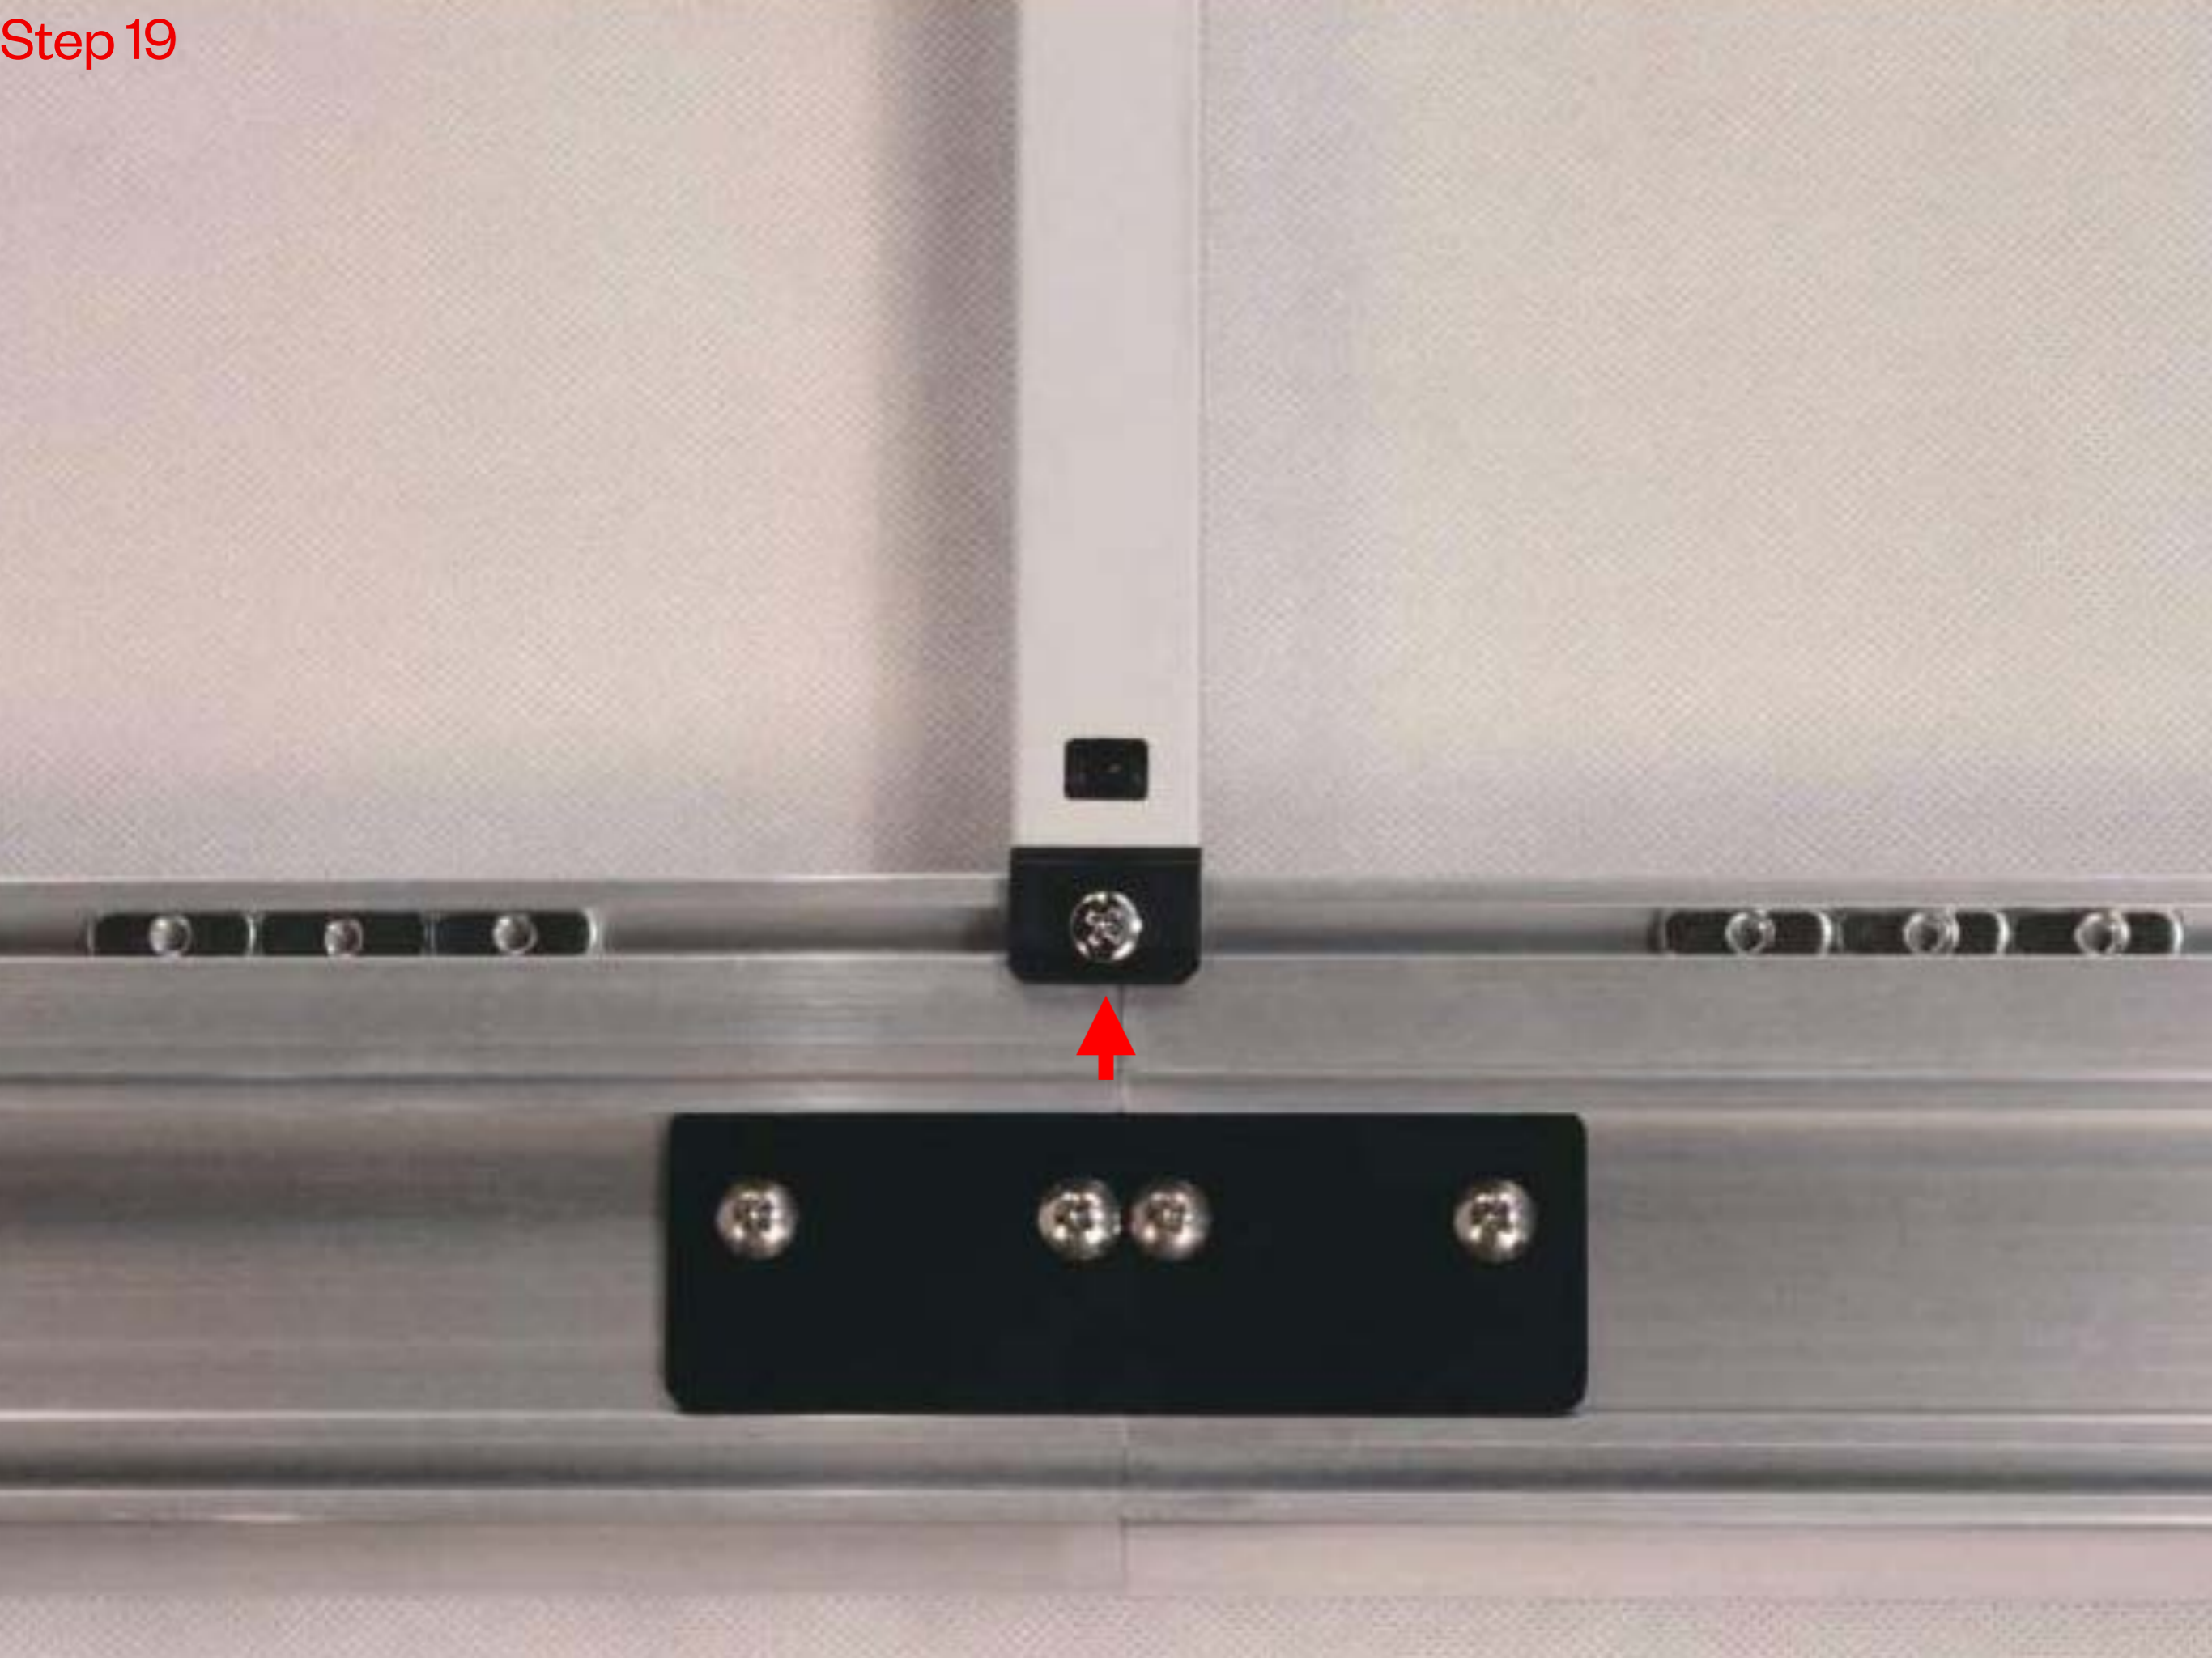



---

## Fabric Installation

**Step 20.** Unfold the form on the ground (make sure your ground surface is flat). This is extremely important because if the fabric is not flattened nor centered, your screen will have creases, wrinkles and deformities.



## Step 21



**Step 21.** Roll the fabric out so it is facing down, the shine and fabric should appear as shown in the image; this is also extremely important to note that everything should be as flat as can be; *centering everything is essential to a proper install.*

## Step 22

**Step 22.** As you roll out the fabric and make sure you pull the fabric at the same time from left and right. *Again, it is crucial that this is flattened out as much as possible and centered as you begin to unroll the fabric.*



## Step 23

### **Step 23.**

Emphasizing the importance of flattening and timing the roll out. *Again, it is crucial that this is flattened out as much as possible and centered as you begin to unroll the fabric.*




# Step 24



**Step 24.** Place the silver frame on top of the fabric. *Centering everything is essential to a proper install.*

## Step 25

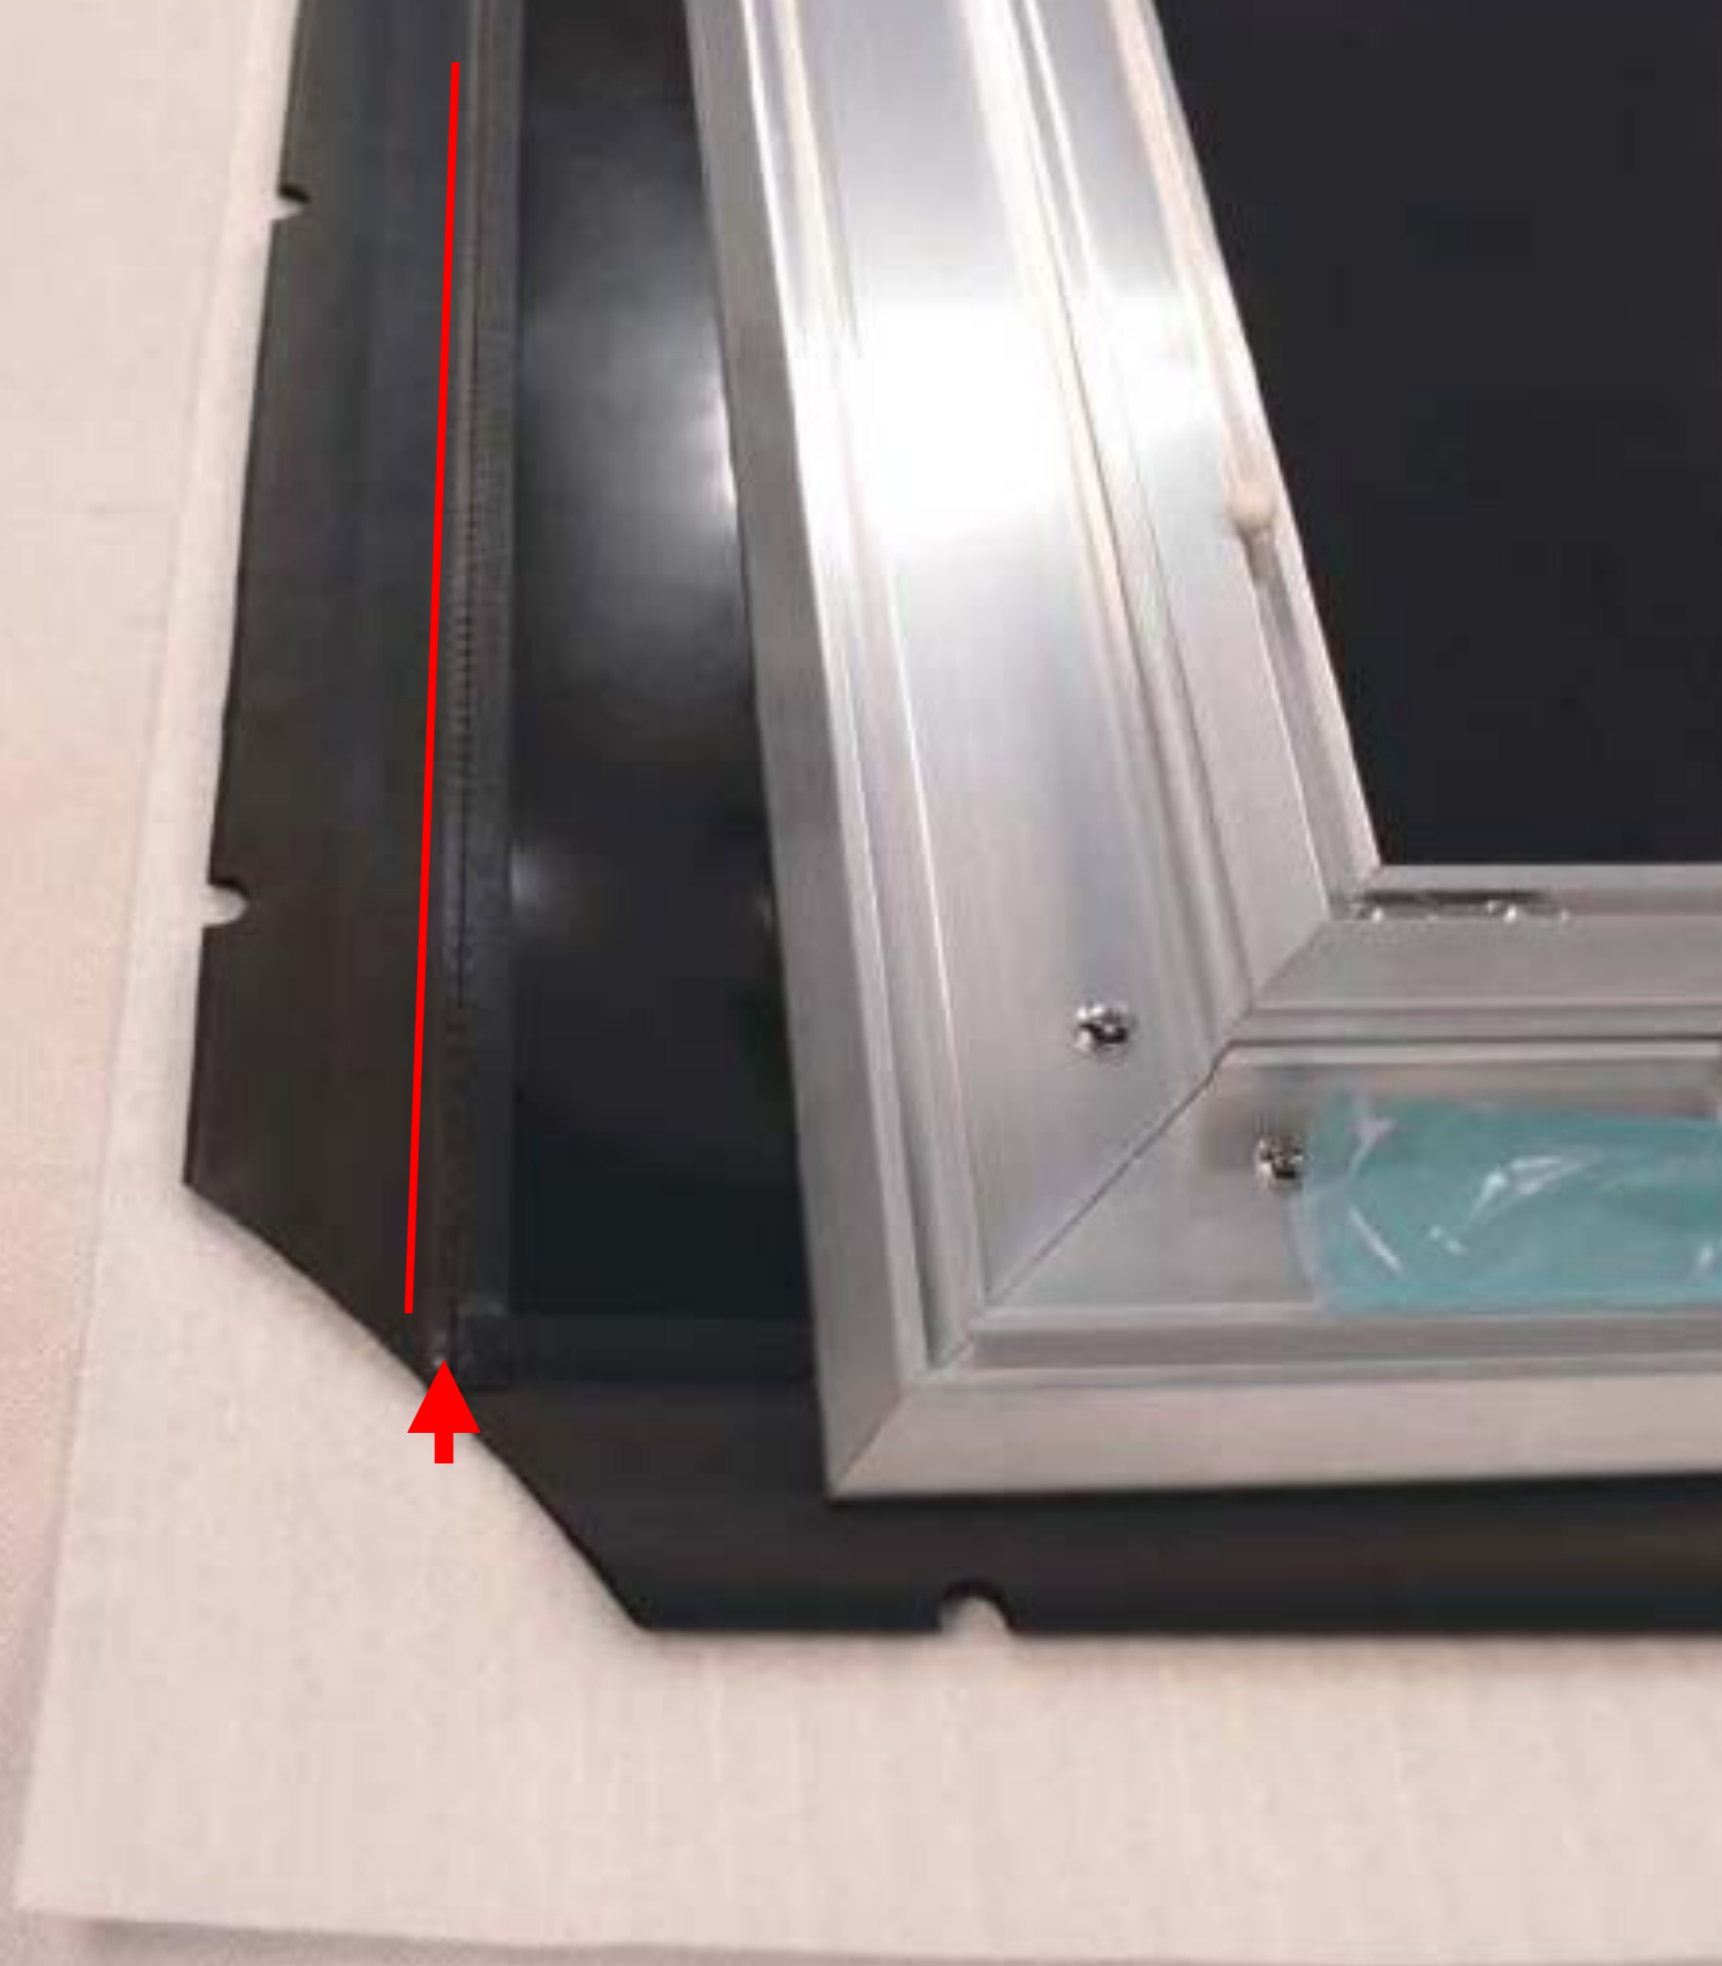


**Step 25.** There are dotted lines on all four sides of the fabric to help guide the fabric down.



## Step 26

**Step 26.** EXTREMELY IMPORTANT: The silver frame must be aligned with the dotted line on all four sides. PLEASE MAKE SURE IT IS AS CLOSE TO IT AS POSSIBLE.

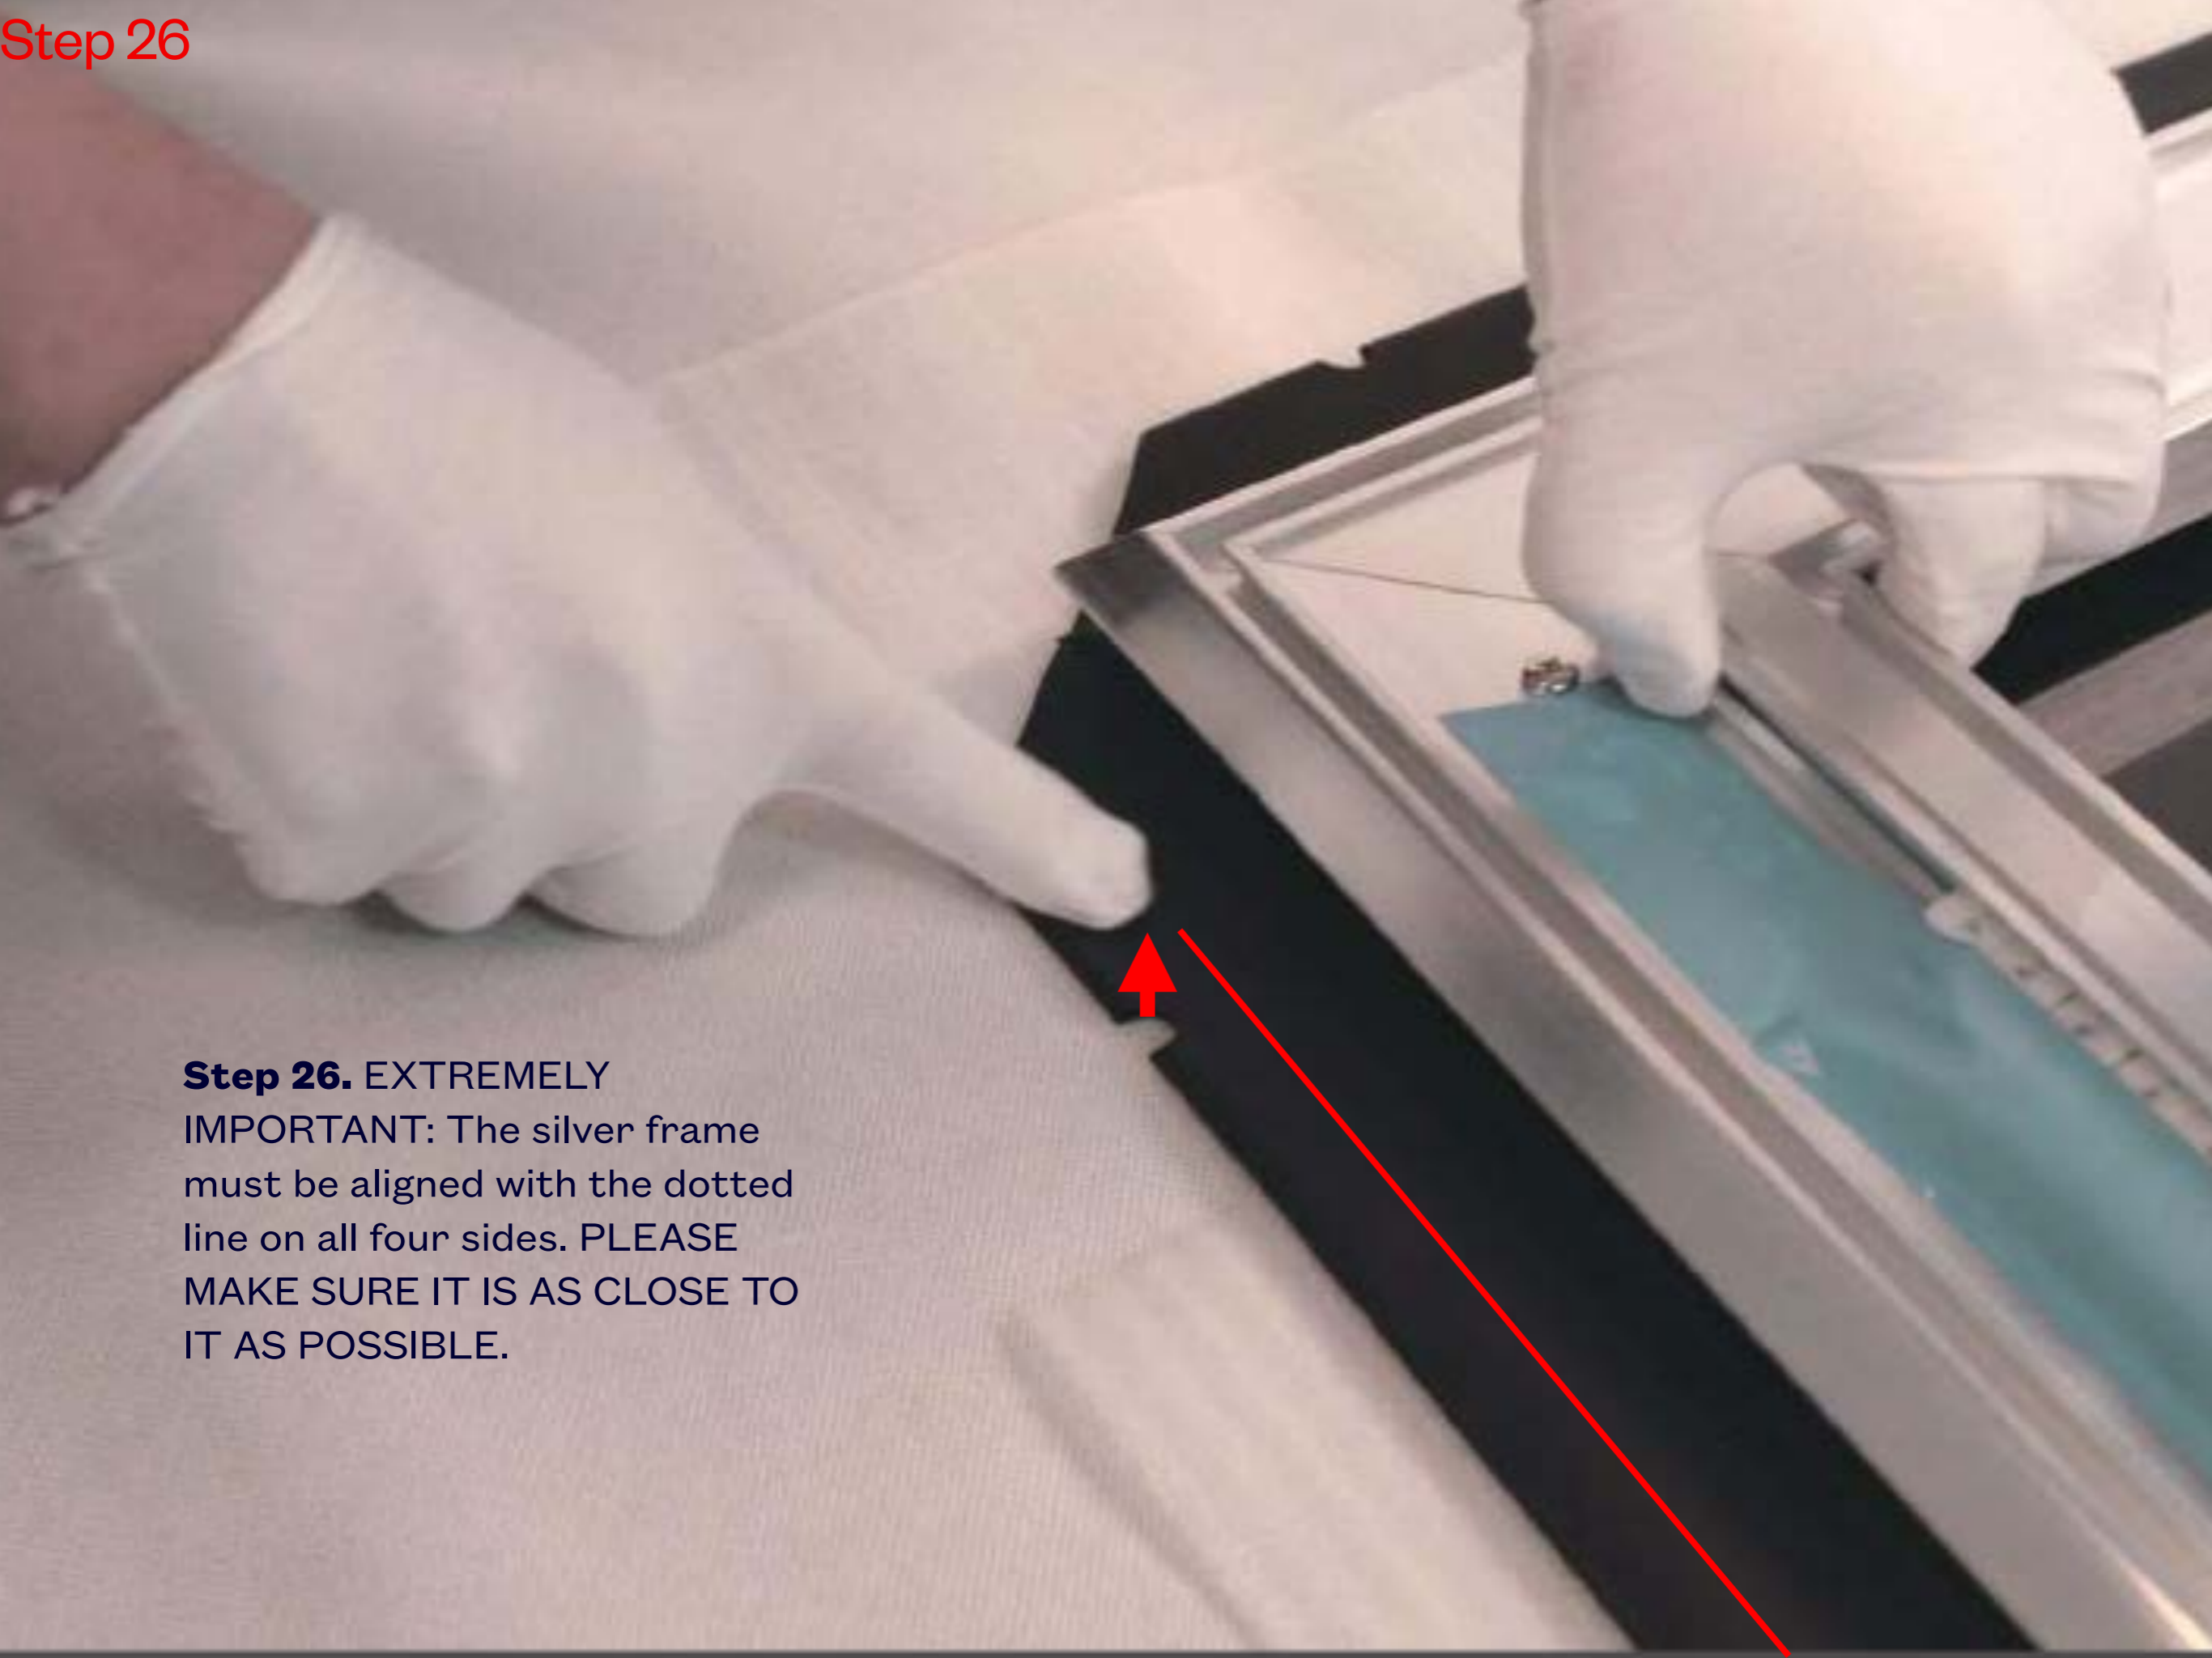

Step 27



**Step 26.** EXTREMELY IMPORTANT: The silver frame must be aligned with the dotted line on all four sides. PLEASE MAKE SURE IT IS AS CLOSE TO IT AS POSSIBLE.

# Step 28



**Step 28.** This is to show you what a WRONG installation would look like, clearly both sides are not aligned properly, the silver frame here is not aligned with the dotted line.

## Step 29

**Step 29.** Check again on all four sides that you are not seeing the viewing area of the fabric, the dotted line is your key and guide to the perfect alignment.



Step 30



**Step 30.** Insert the tension rods on four sides and make sure the tension rods are totally hidden inside the edge of the fabric

## Step 31




**Step 31.** The tension rods should be completely sealed and the only silver you should see is from the small hole where it peeps out.

DOWN

## Step 32

**Step 32.** Here is an example of IMPROPER INSTALLATION , as you can see the tension rod is clearly outside of the sleeve.

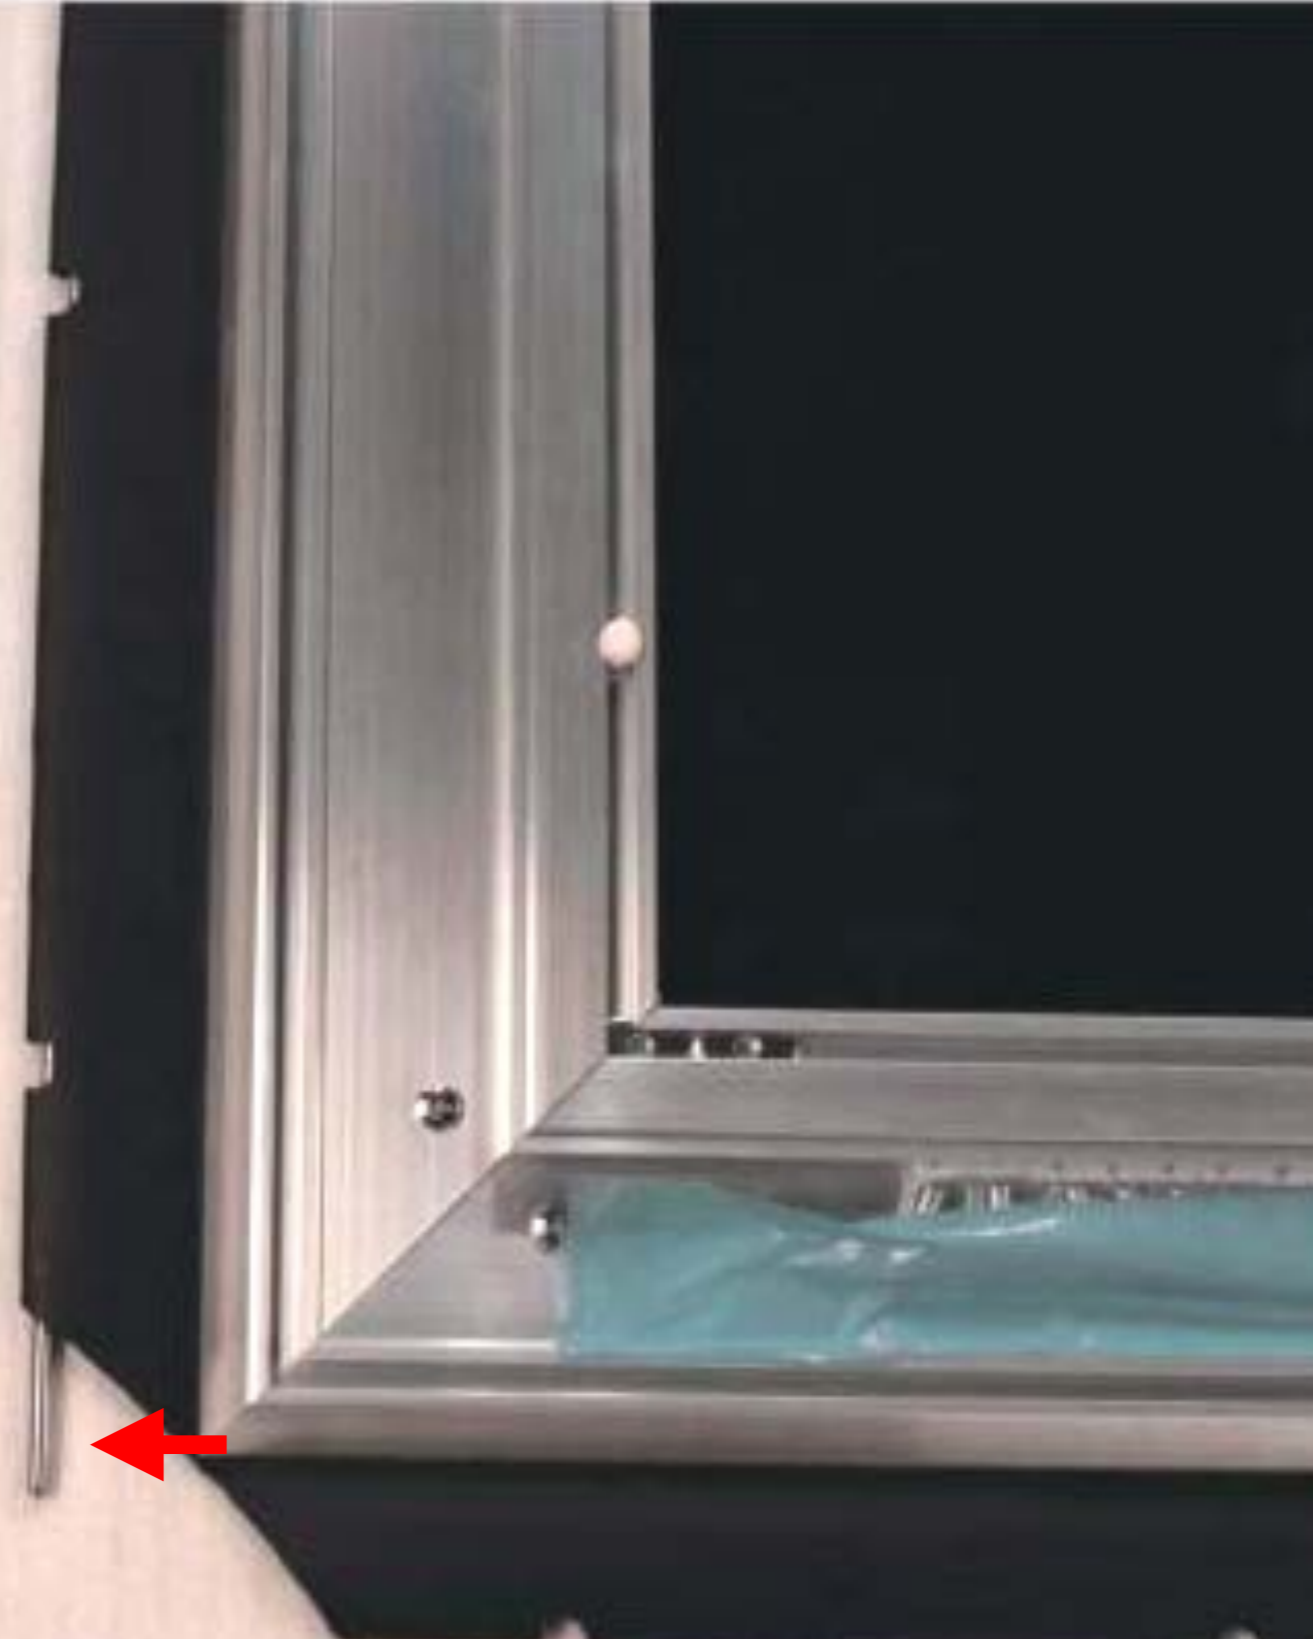


## Step 33

**Step 33.** Remove the tape on all four sides, be careful the springs do not fly out and get lost.






Step 34

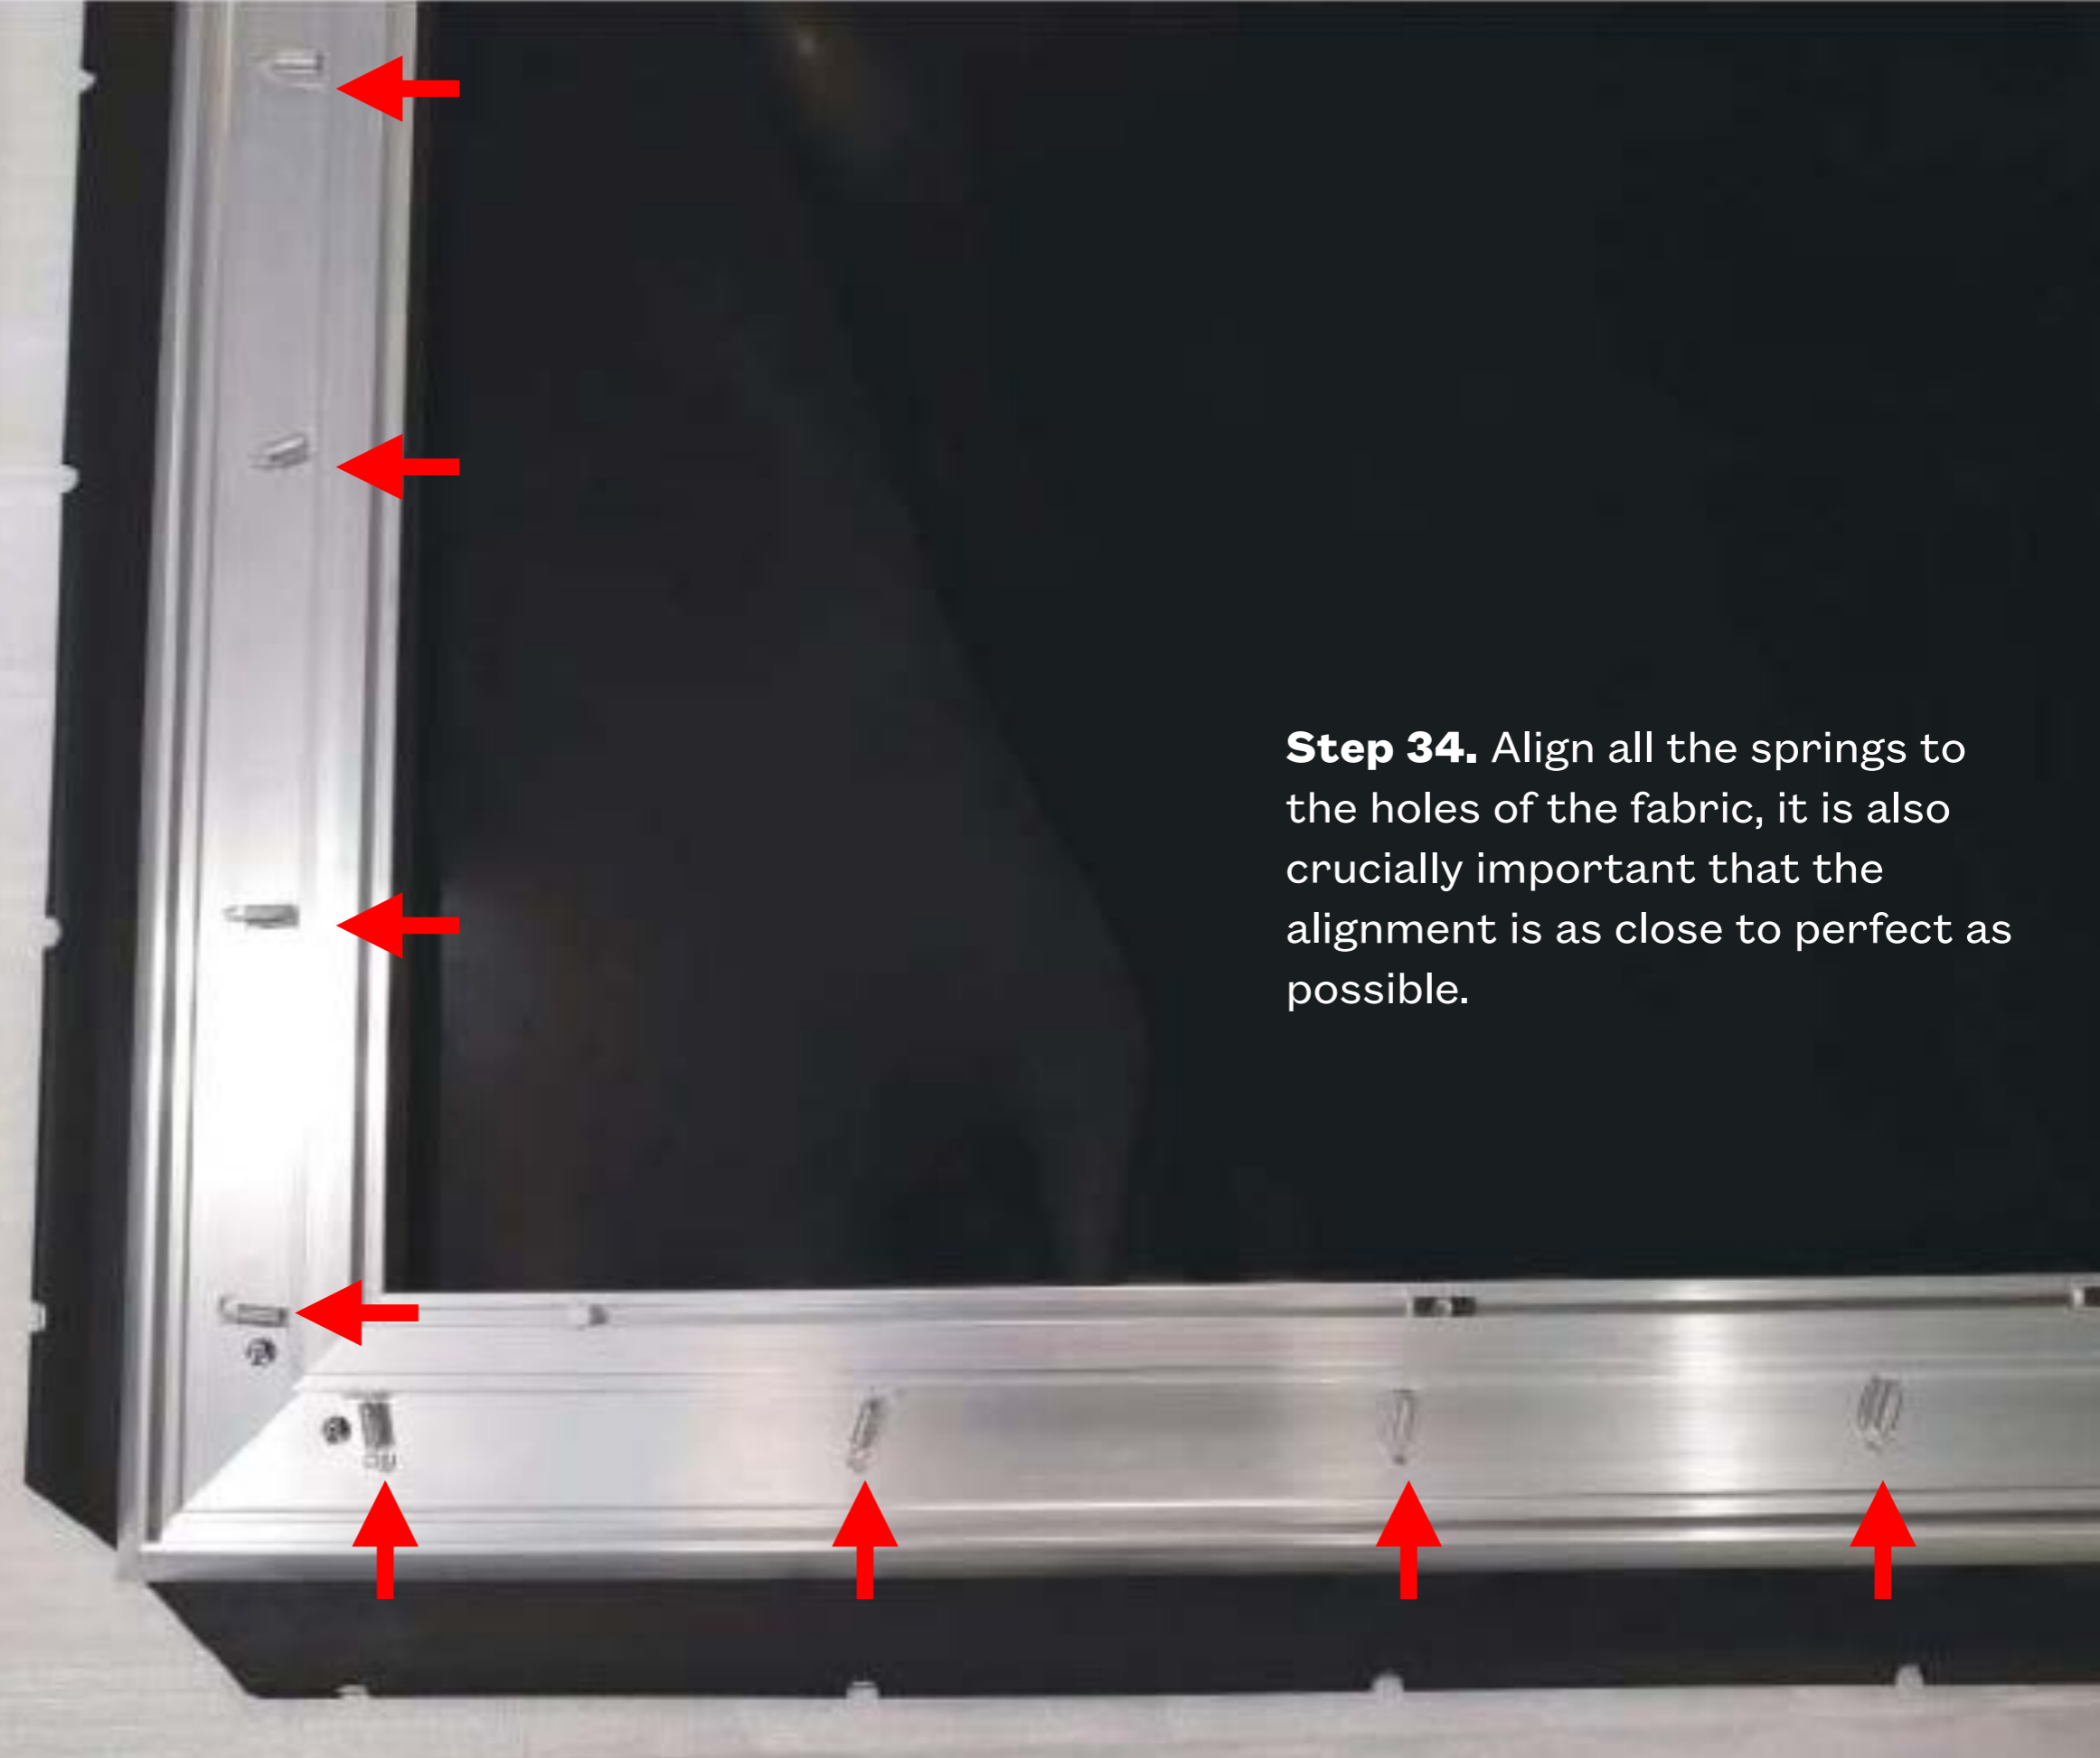

**Step 34.** Align all the springs to the holes of the fabric, it is also crucially important that the alignment is as close to perfect as possible.


# Step 35

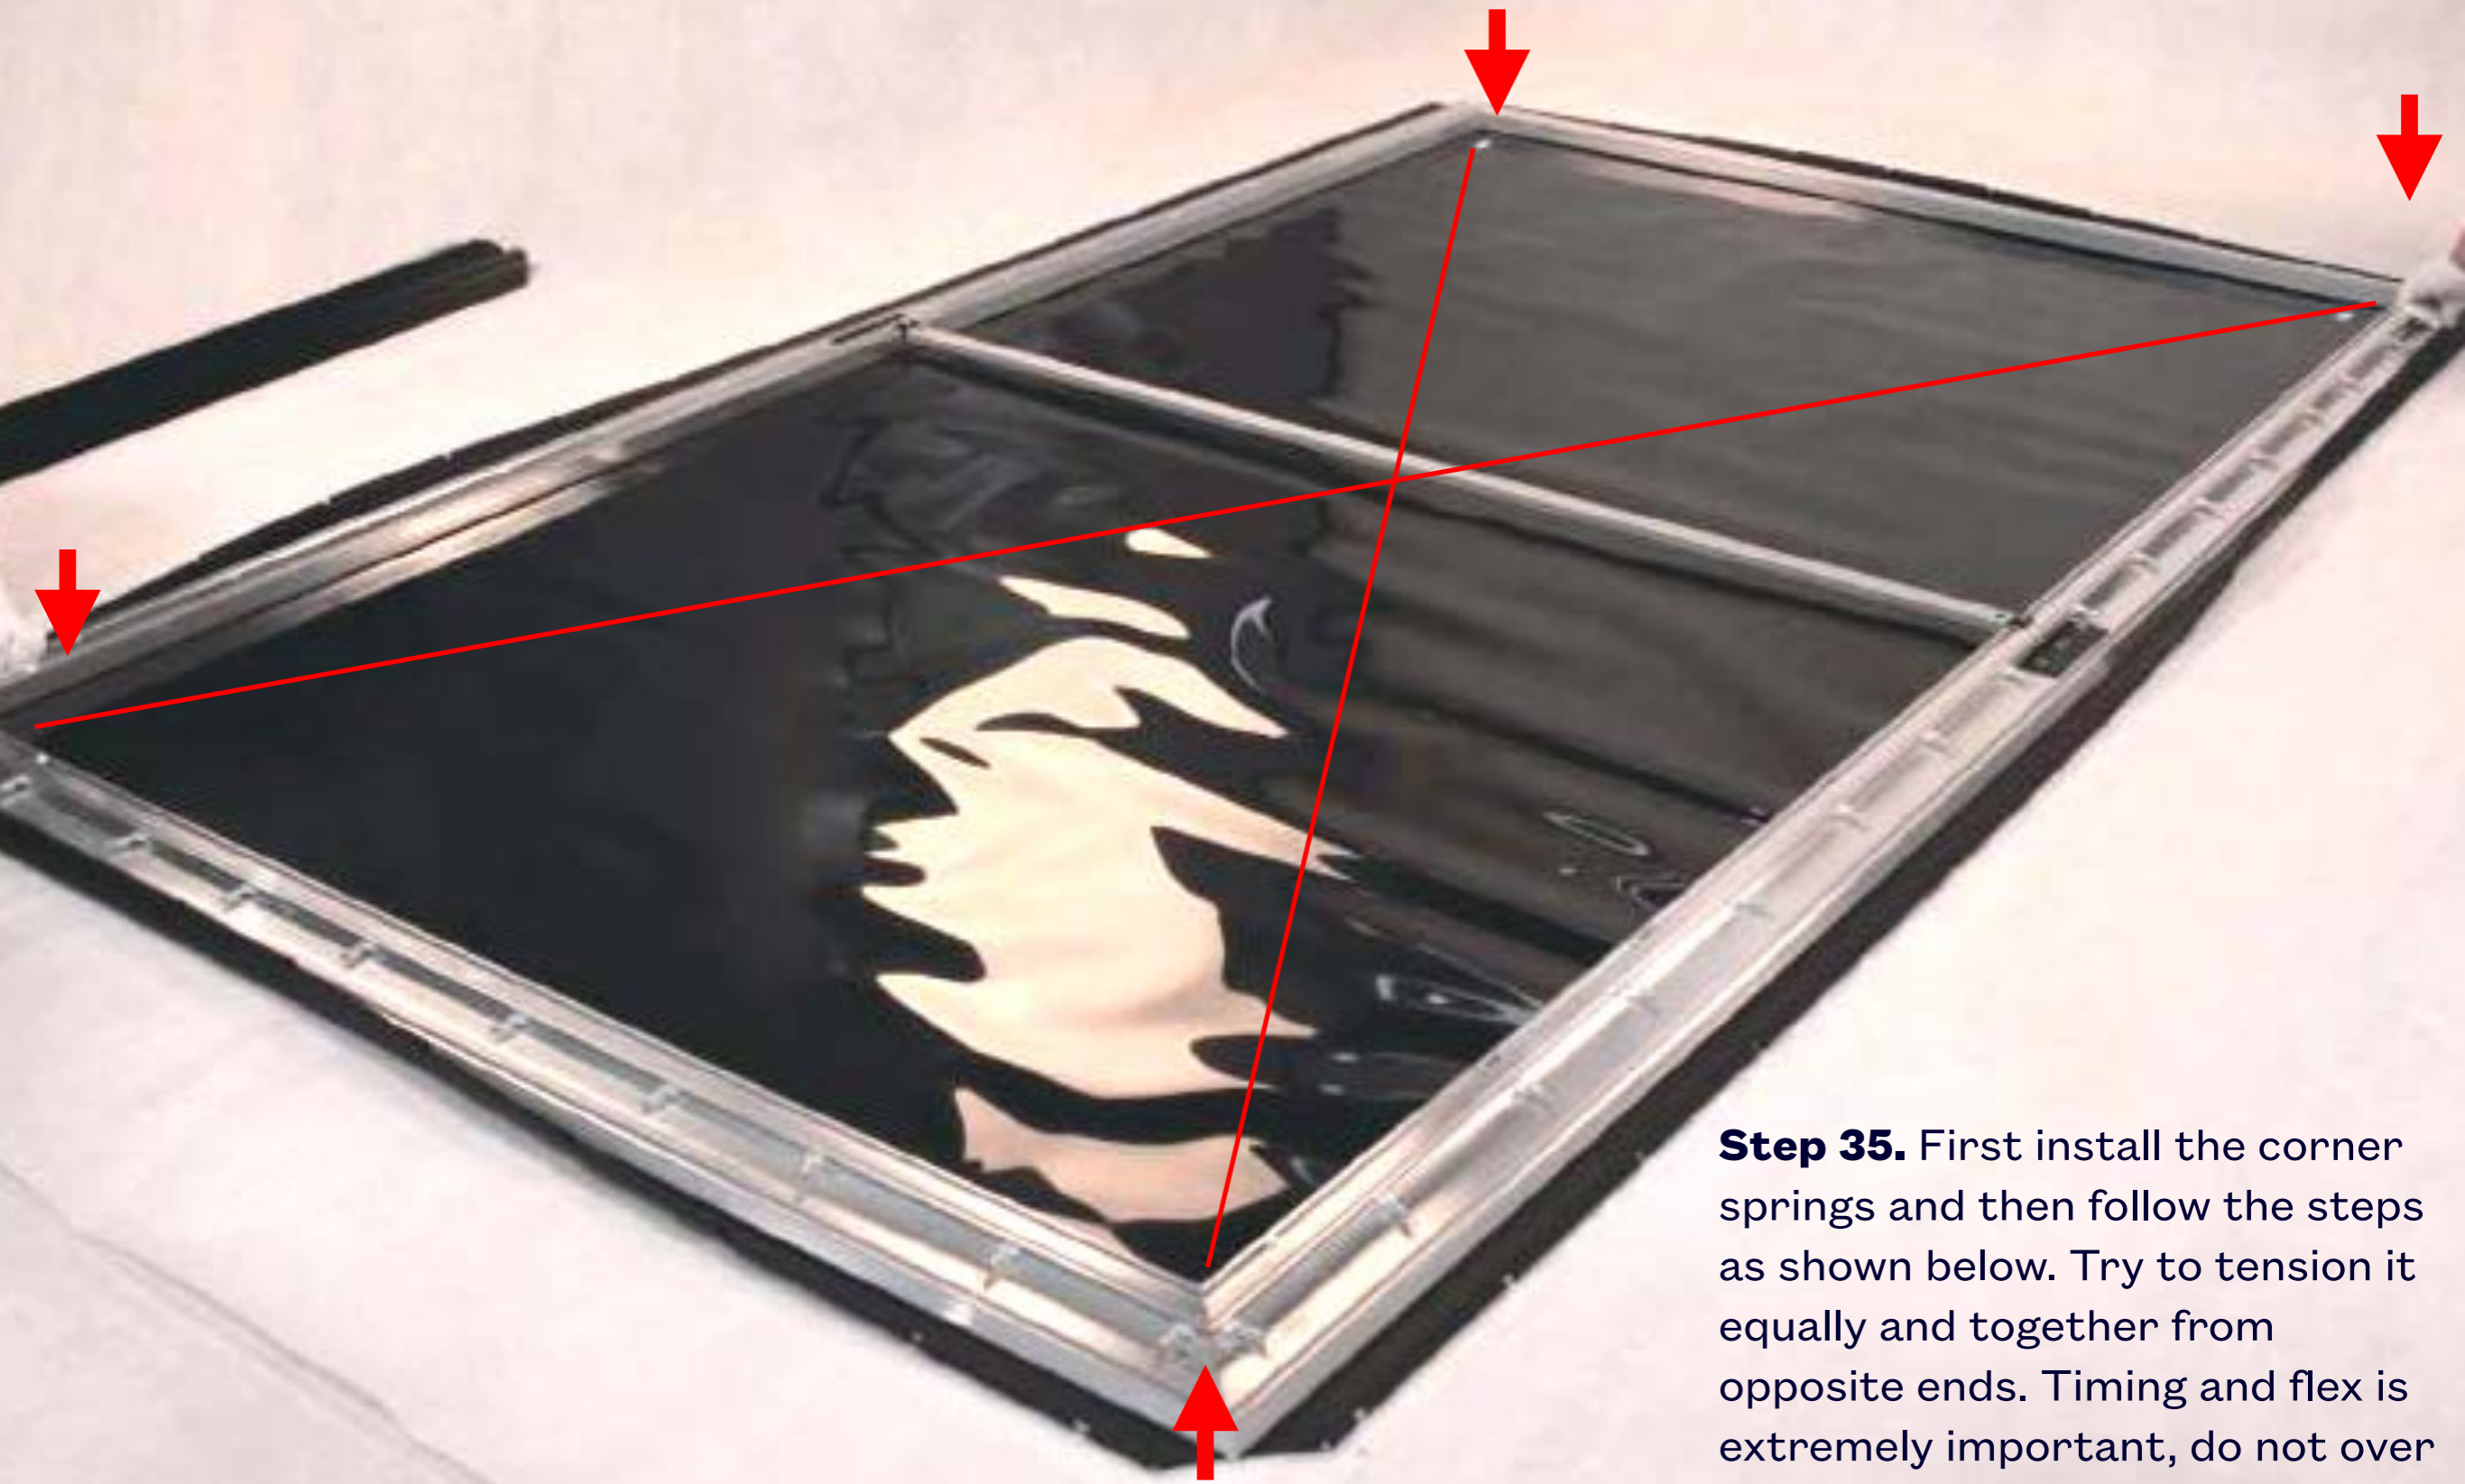

**Step 35.** First install the corner springs and then follow the steps as shown below. Try to tension it equally and together from opposite ends. Timing and flex is extremely important, do not over extend one or the other or else may cause creasing and wrinkling.


## Step 36

**Step 36.** Make sure the springs are aligned properly with the holes of the fabric. Two people must be doing this at the same time, when installing the corner, please install the two springs as pointed out at the same time. Again, try to be as accurate as possible.

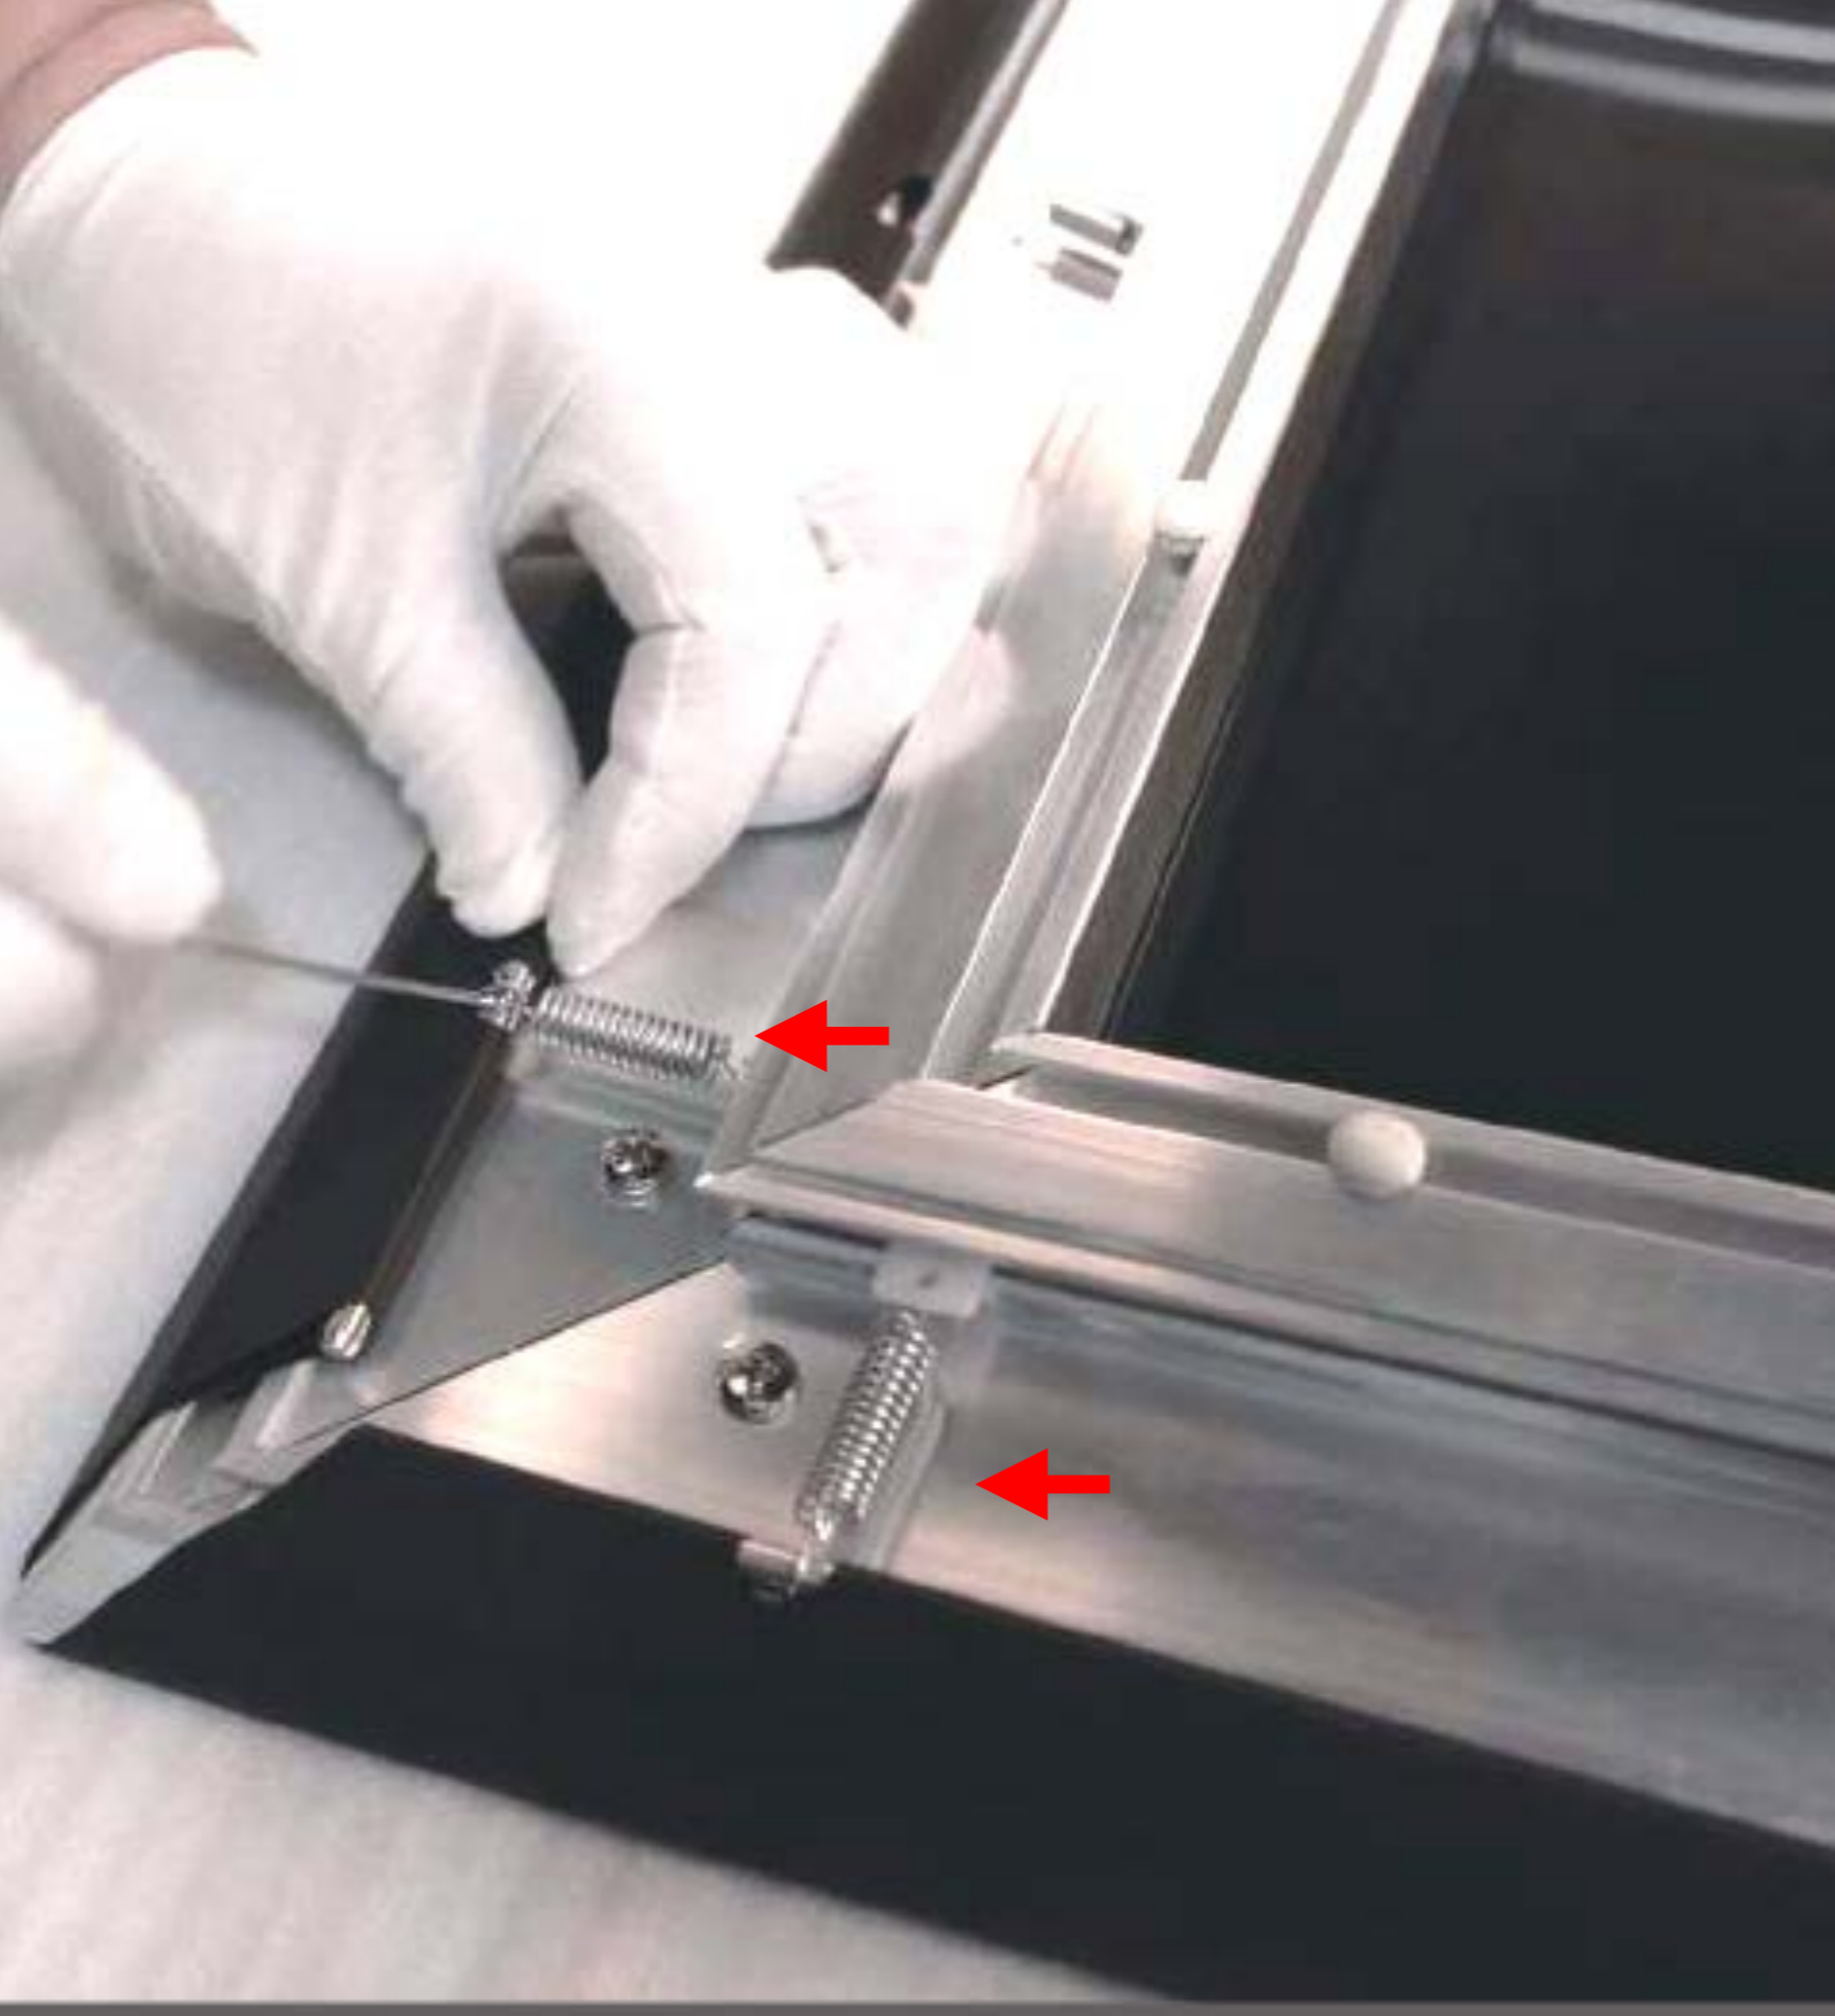


# Step 37

**Step 37.** This is what it should look like, perfectly straight and almost creating a right angle look (90 degrees).

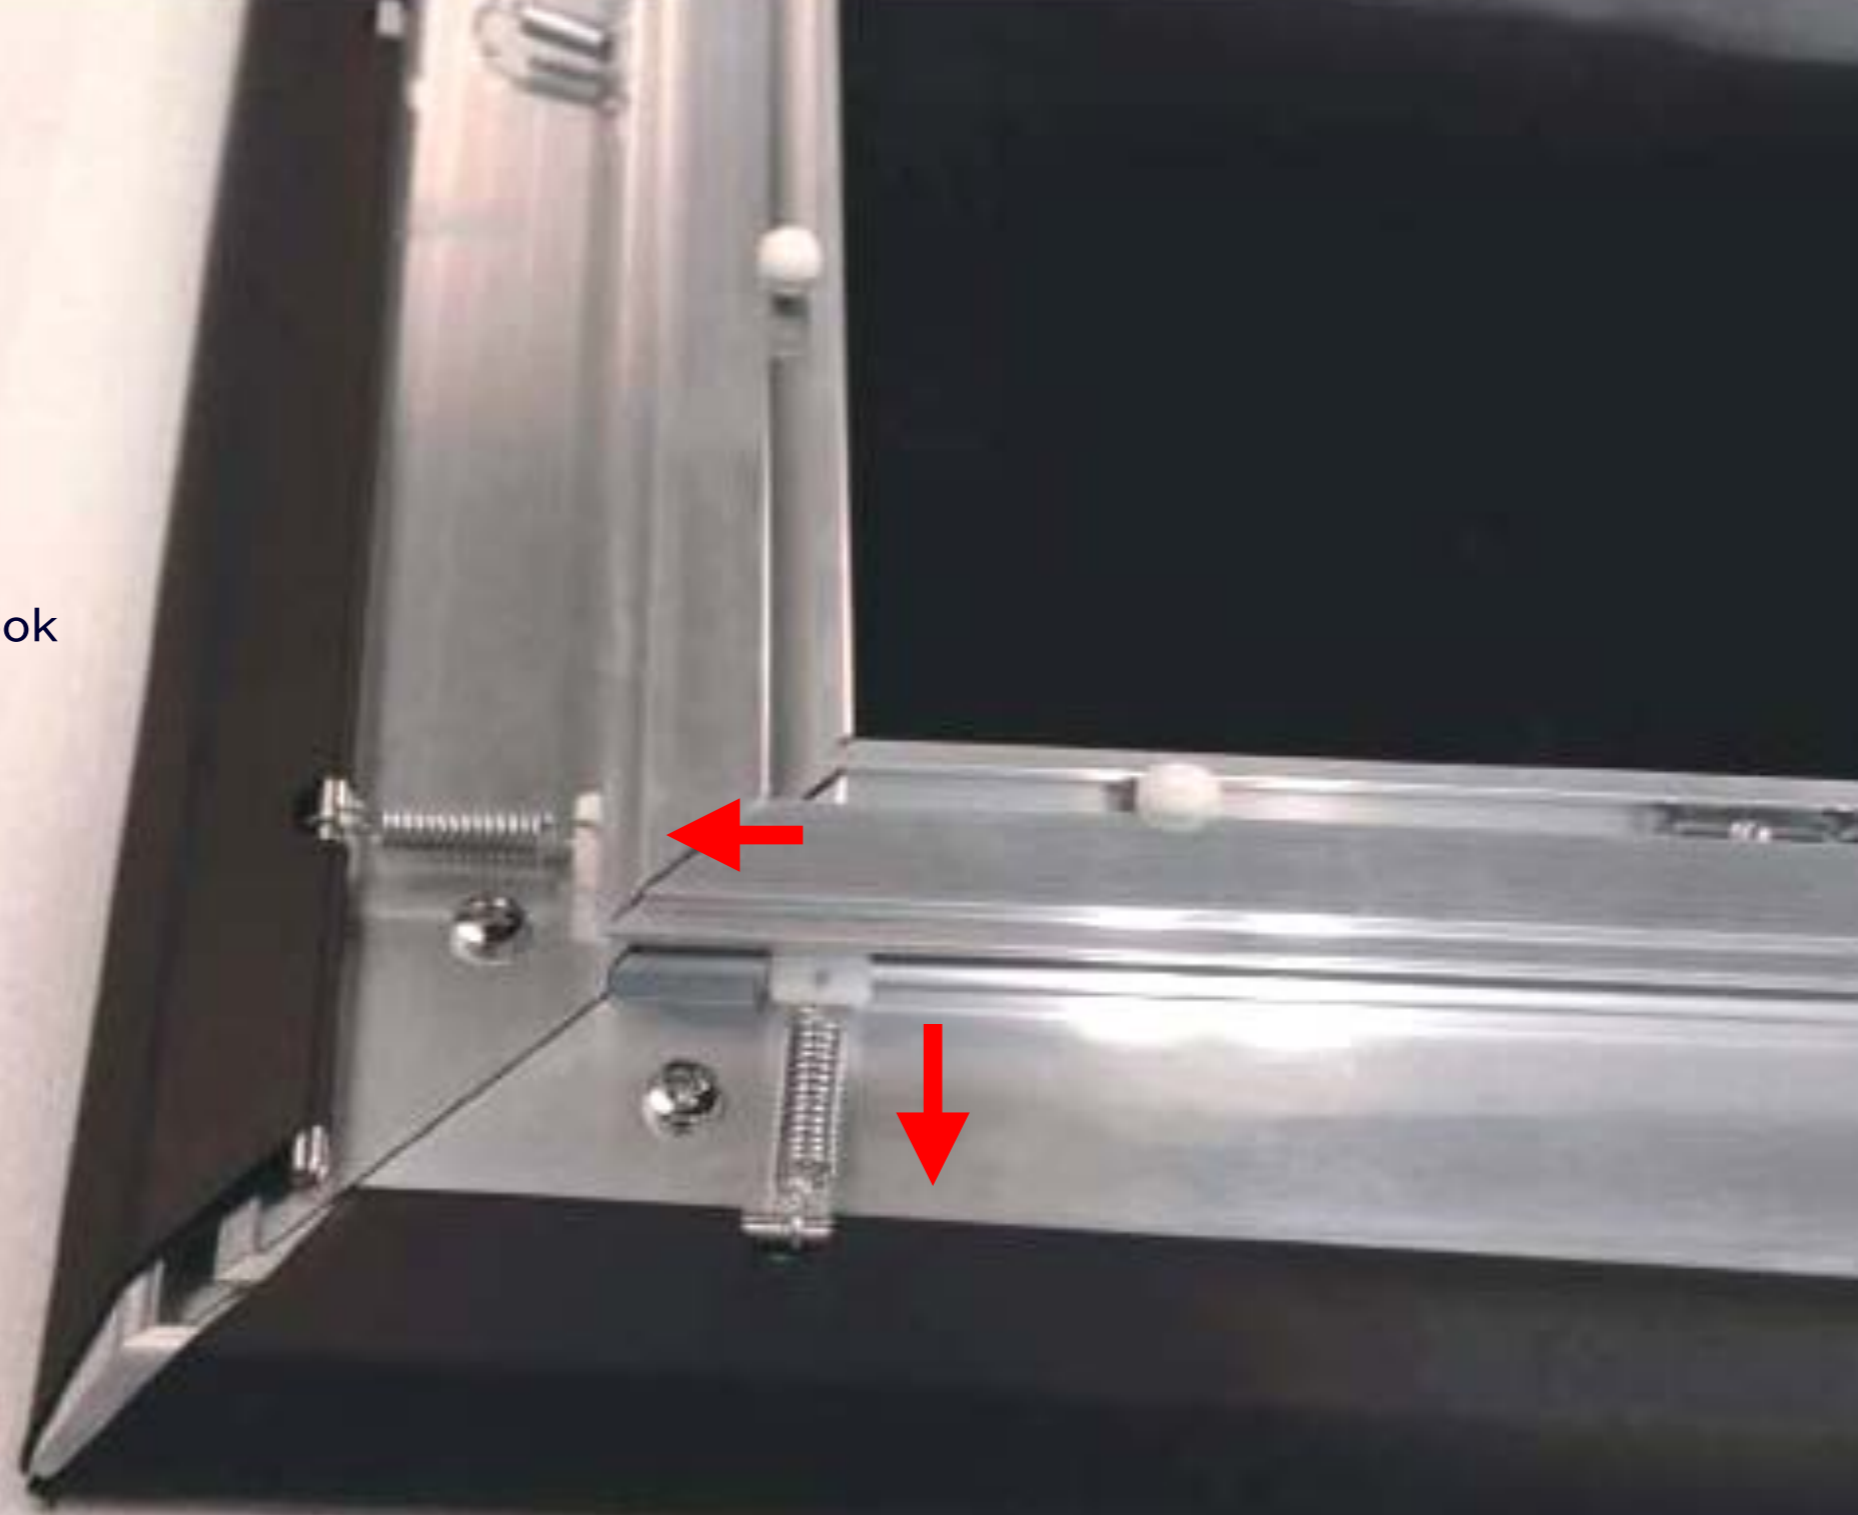


## Step 38

**Step 38.** Install the middle springs on two sides at the exact same time so the tensioning is balanced; extremely fragile and sensitive if tension is off even by a little.

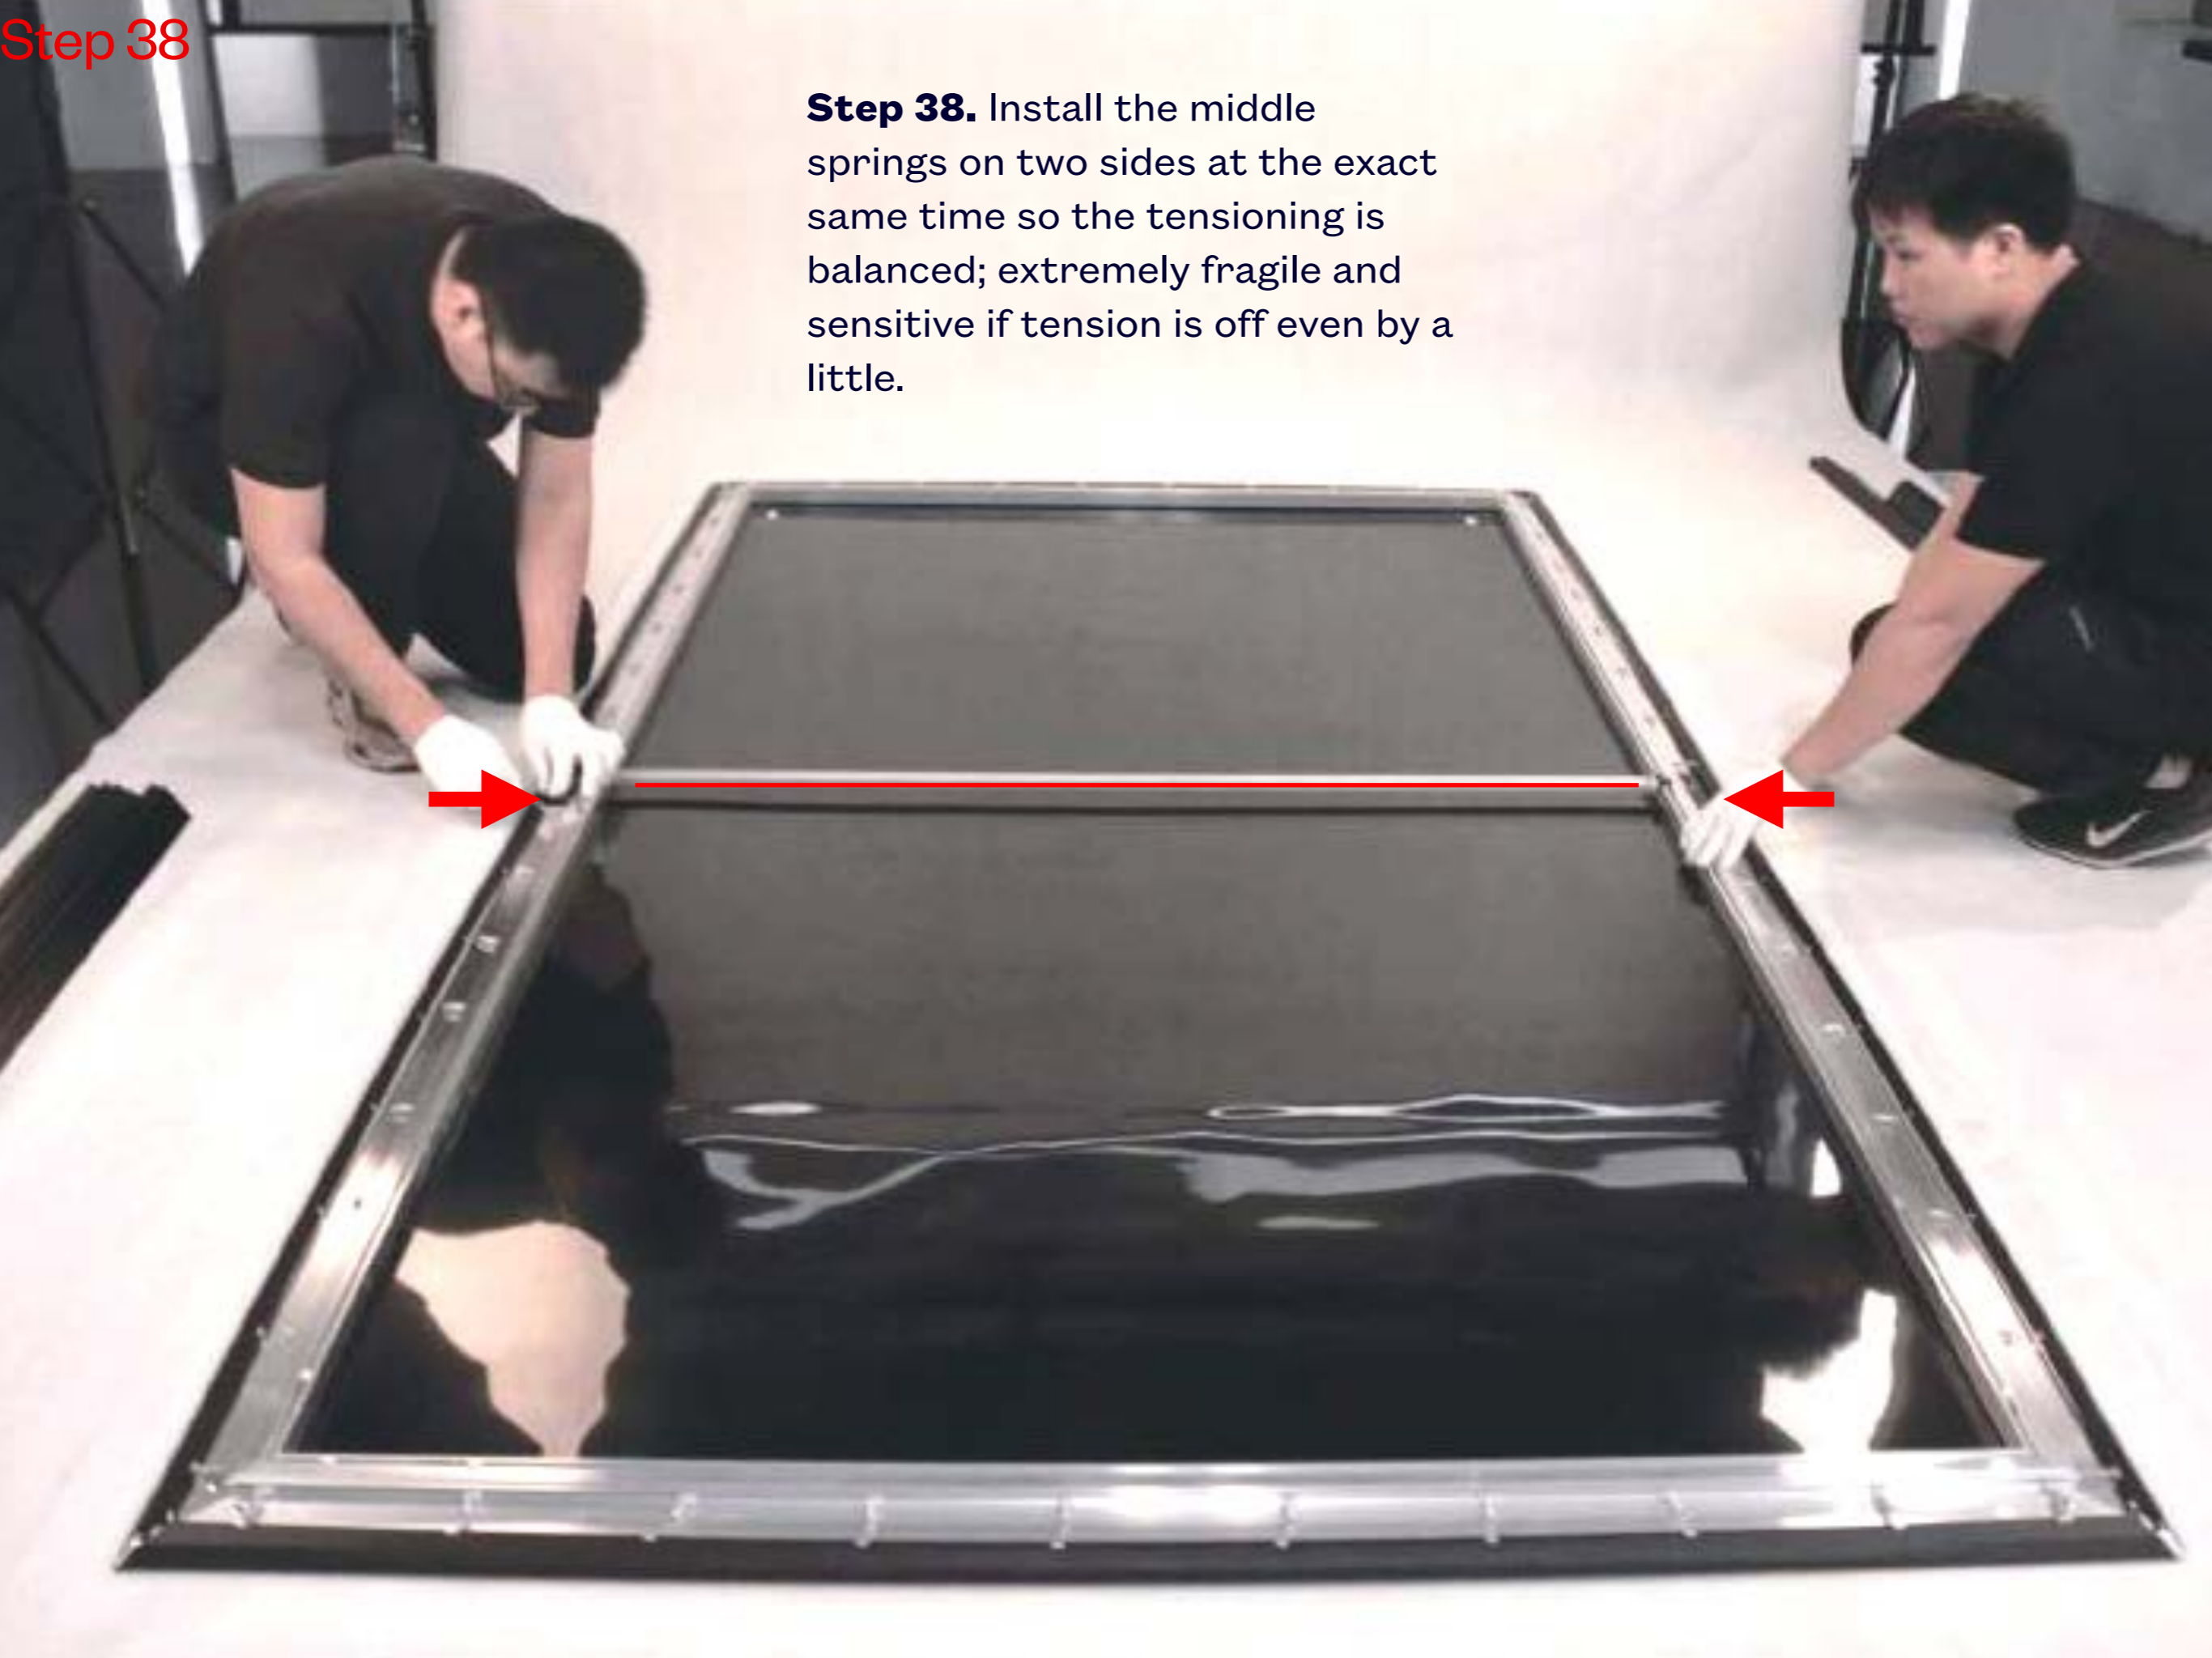


## Step 39

**Step 39.** Doing this step at the same time is also very important, the installation of the two springs should be done from both ends at the same time as stated in Steps 38 and 39.

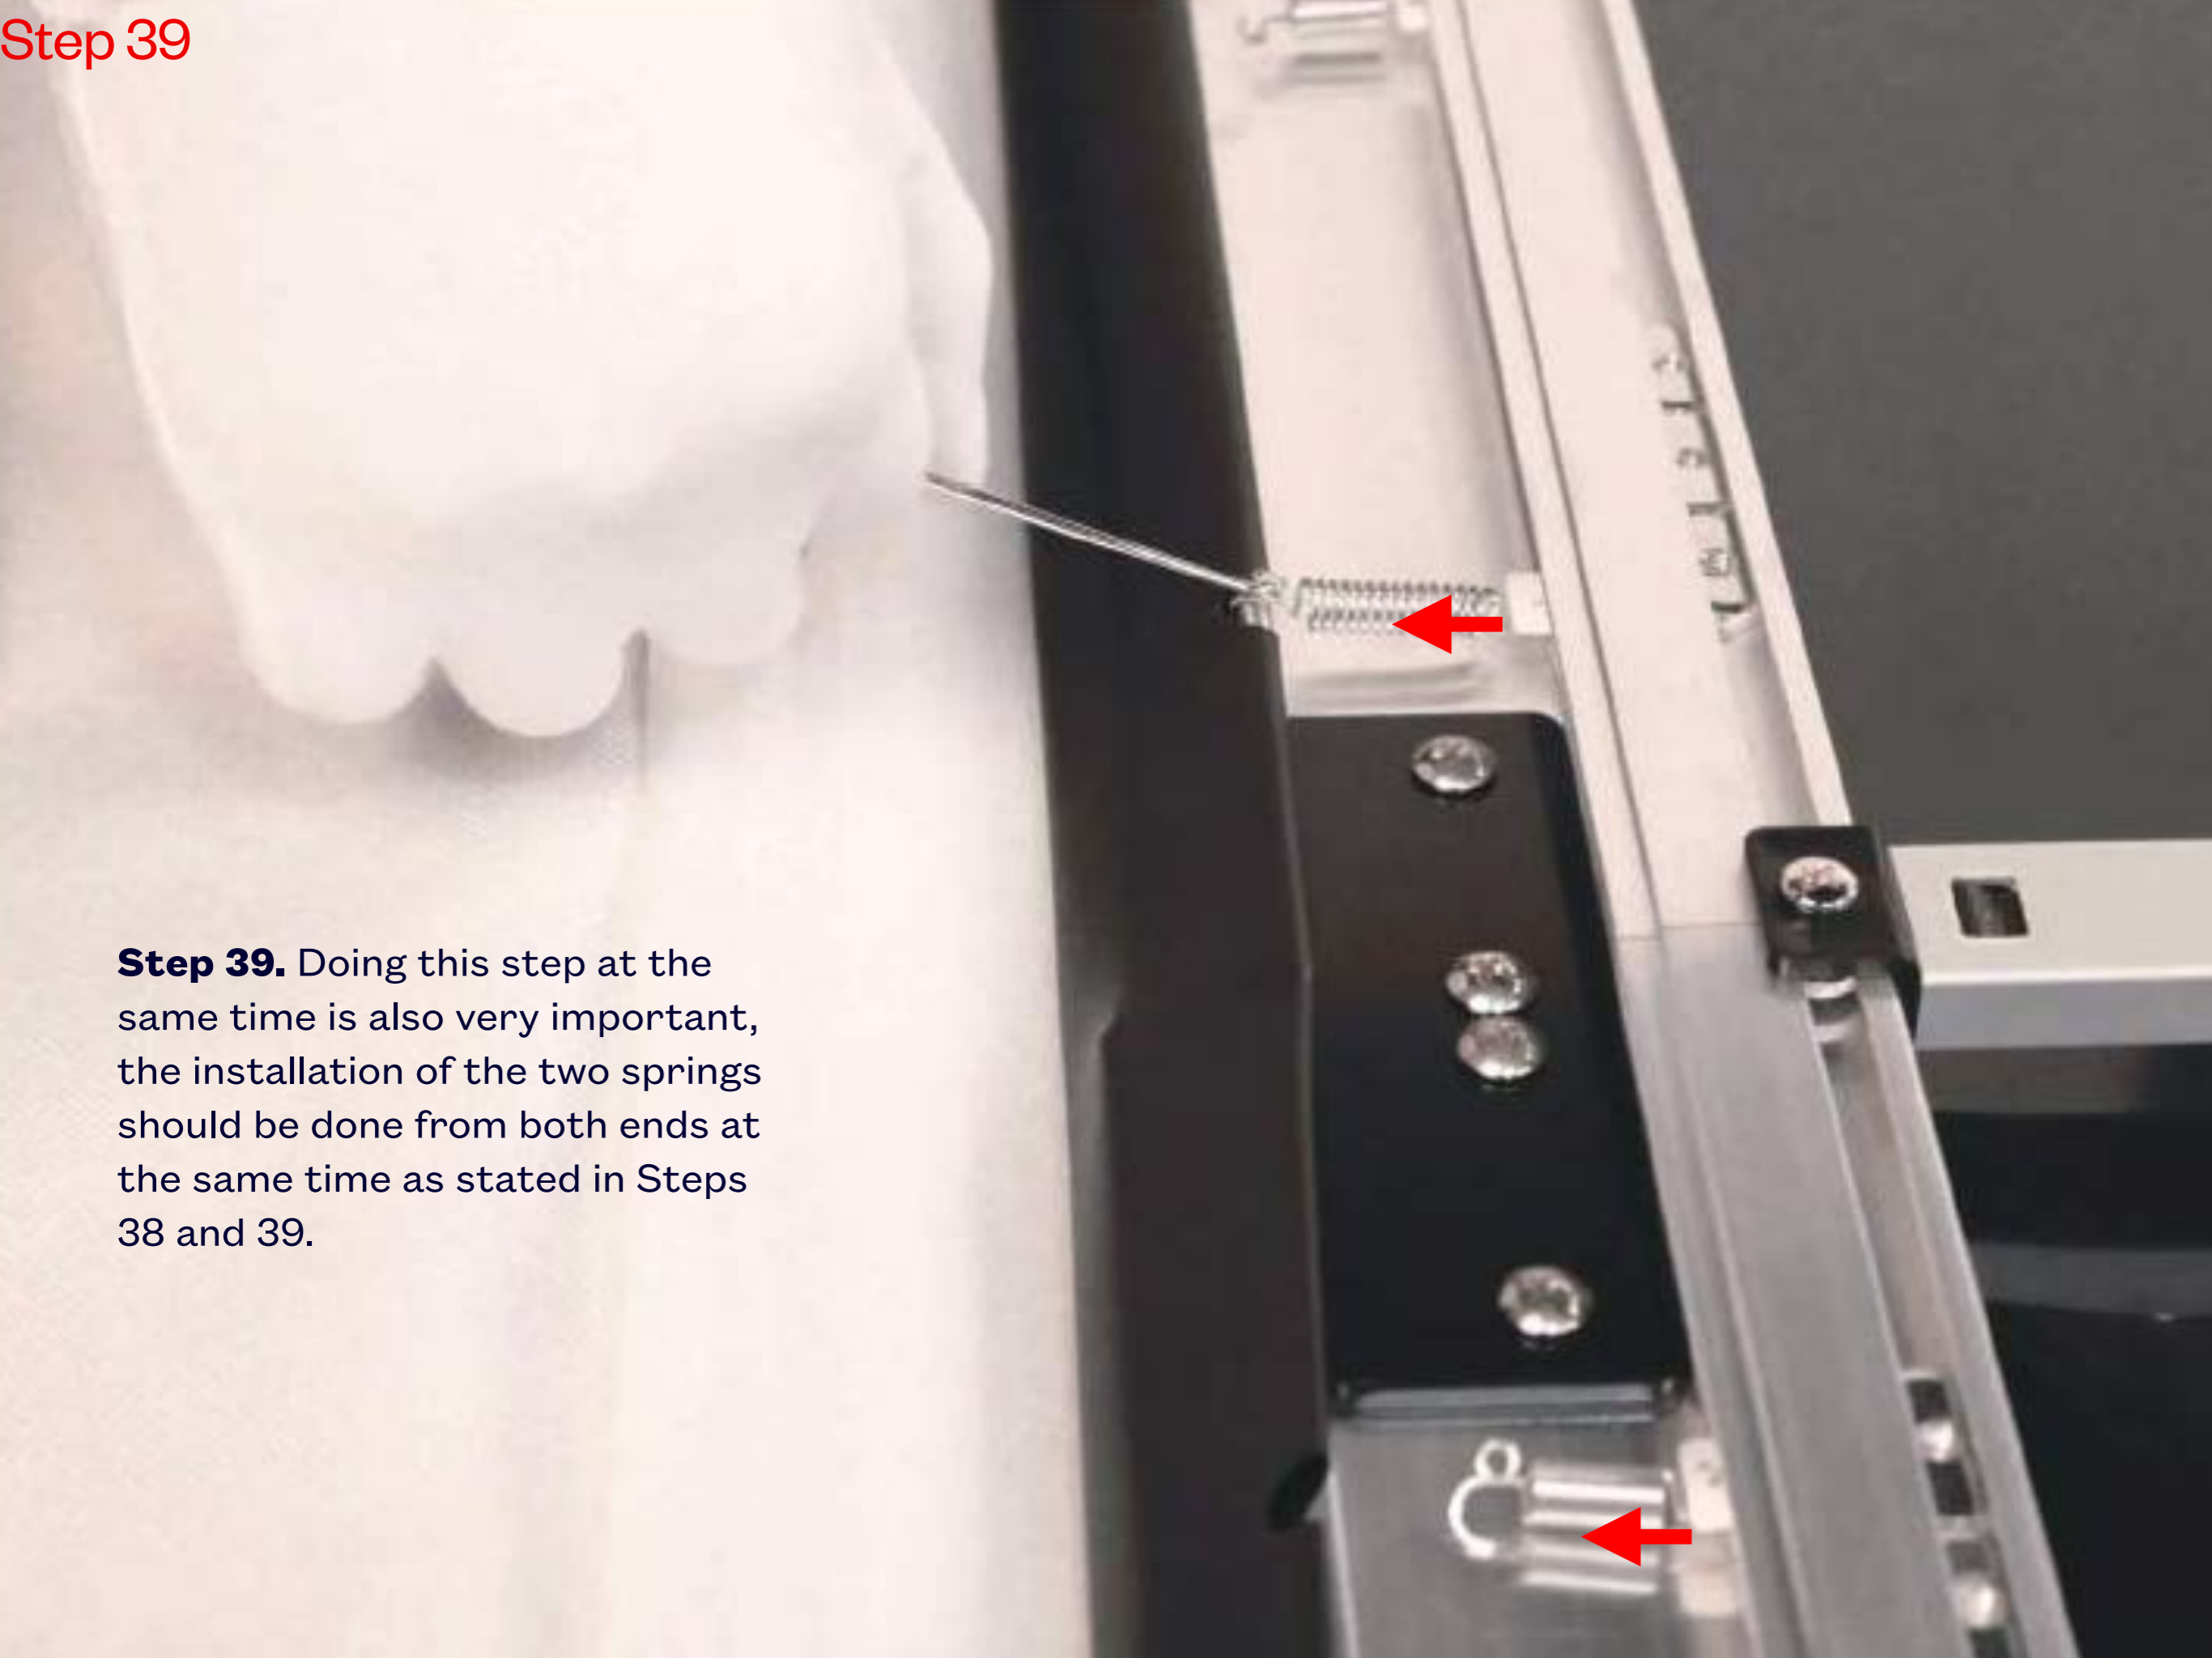

Step 40

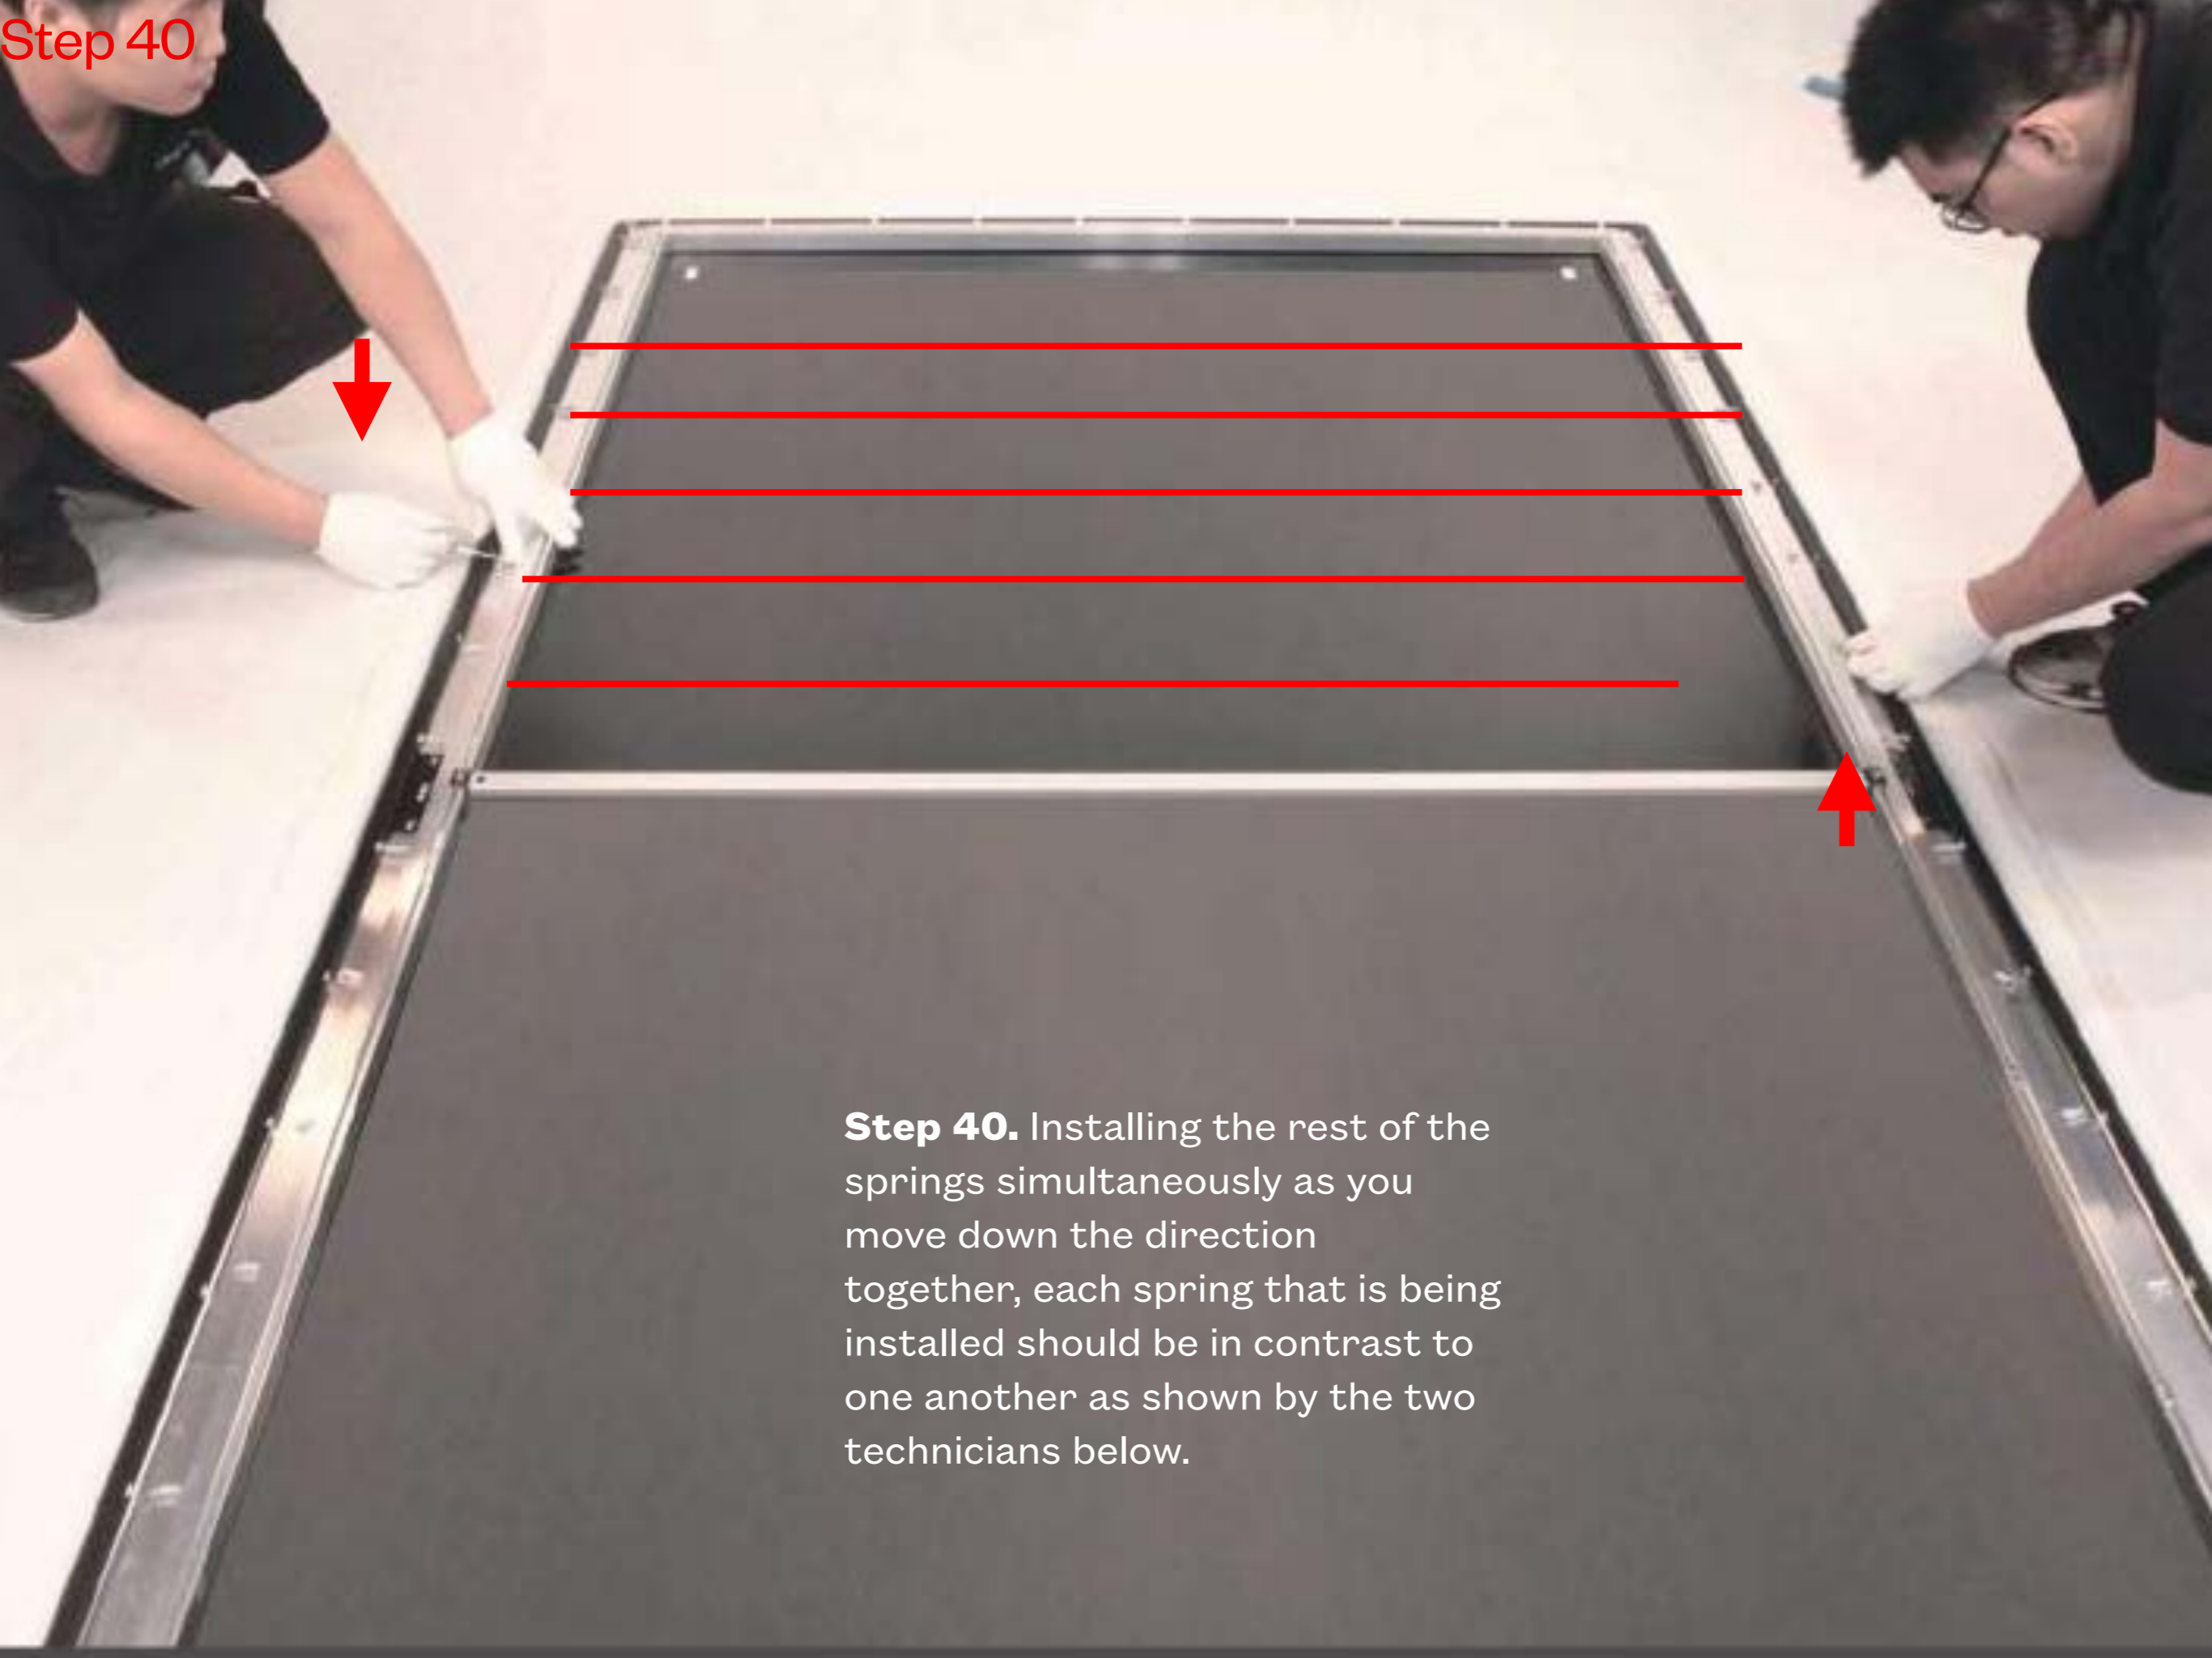

**Step 40.** Installing the rest of the springs simultaneously as you move down the direction together, each spring that is being installed should be in contrast to one another as shown by the two technicians below.


## Step 41



**Step 41.** After the springs have all been installed, please check the surface by elevating it upright and checking the flatness and tensioned pull on all ends. MAKE SURE IT IS STRAIGHT AND FLAT AS CAN BE




# Step 43

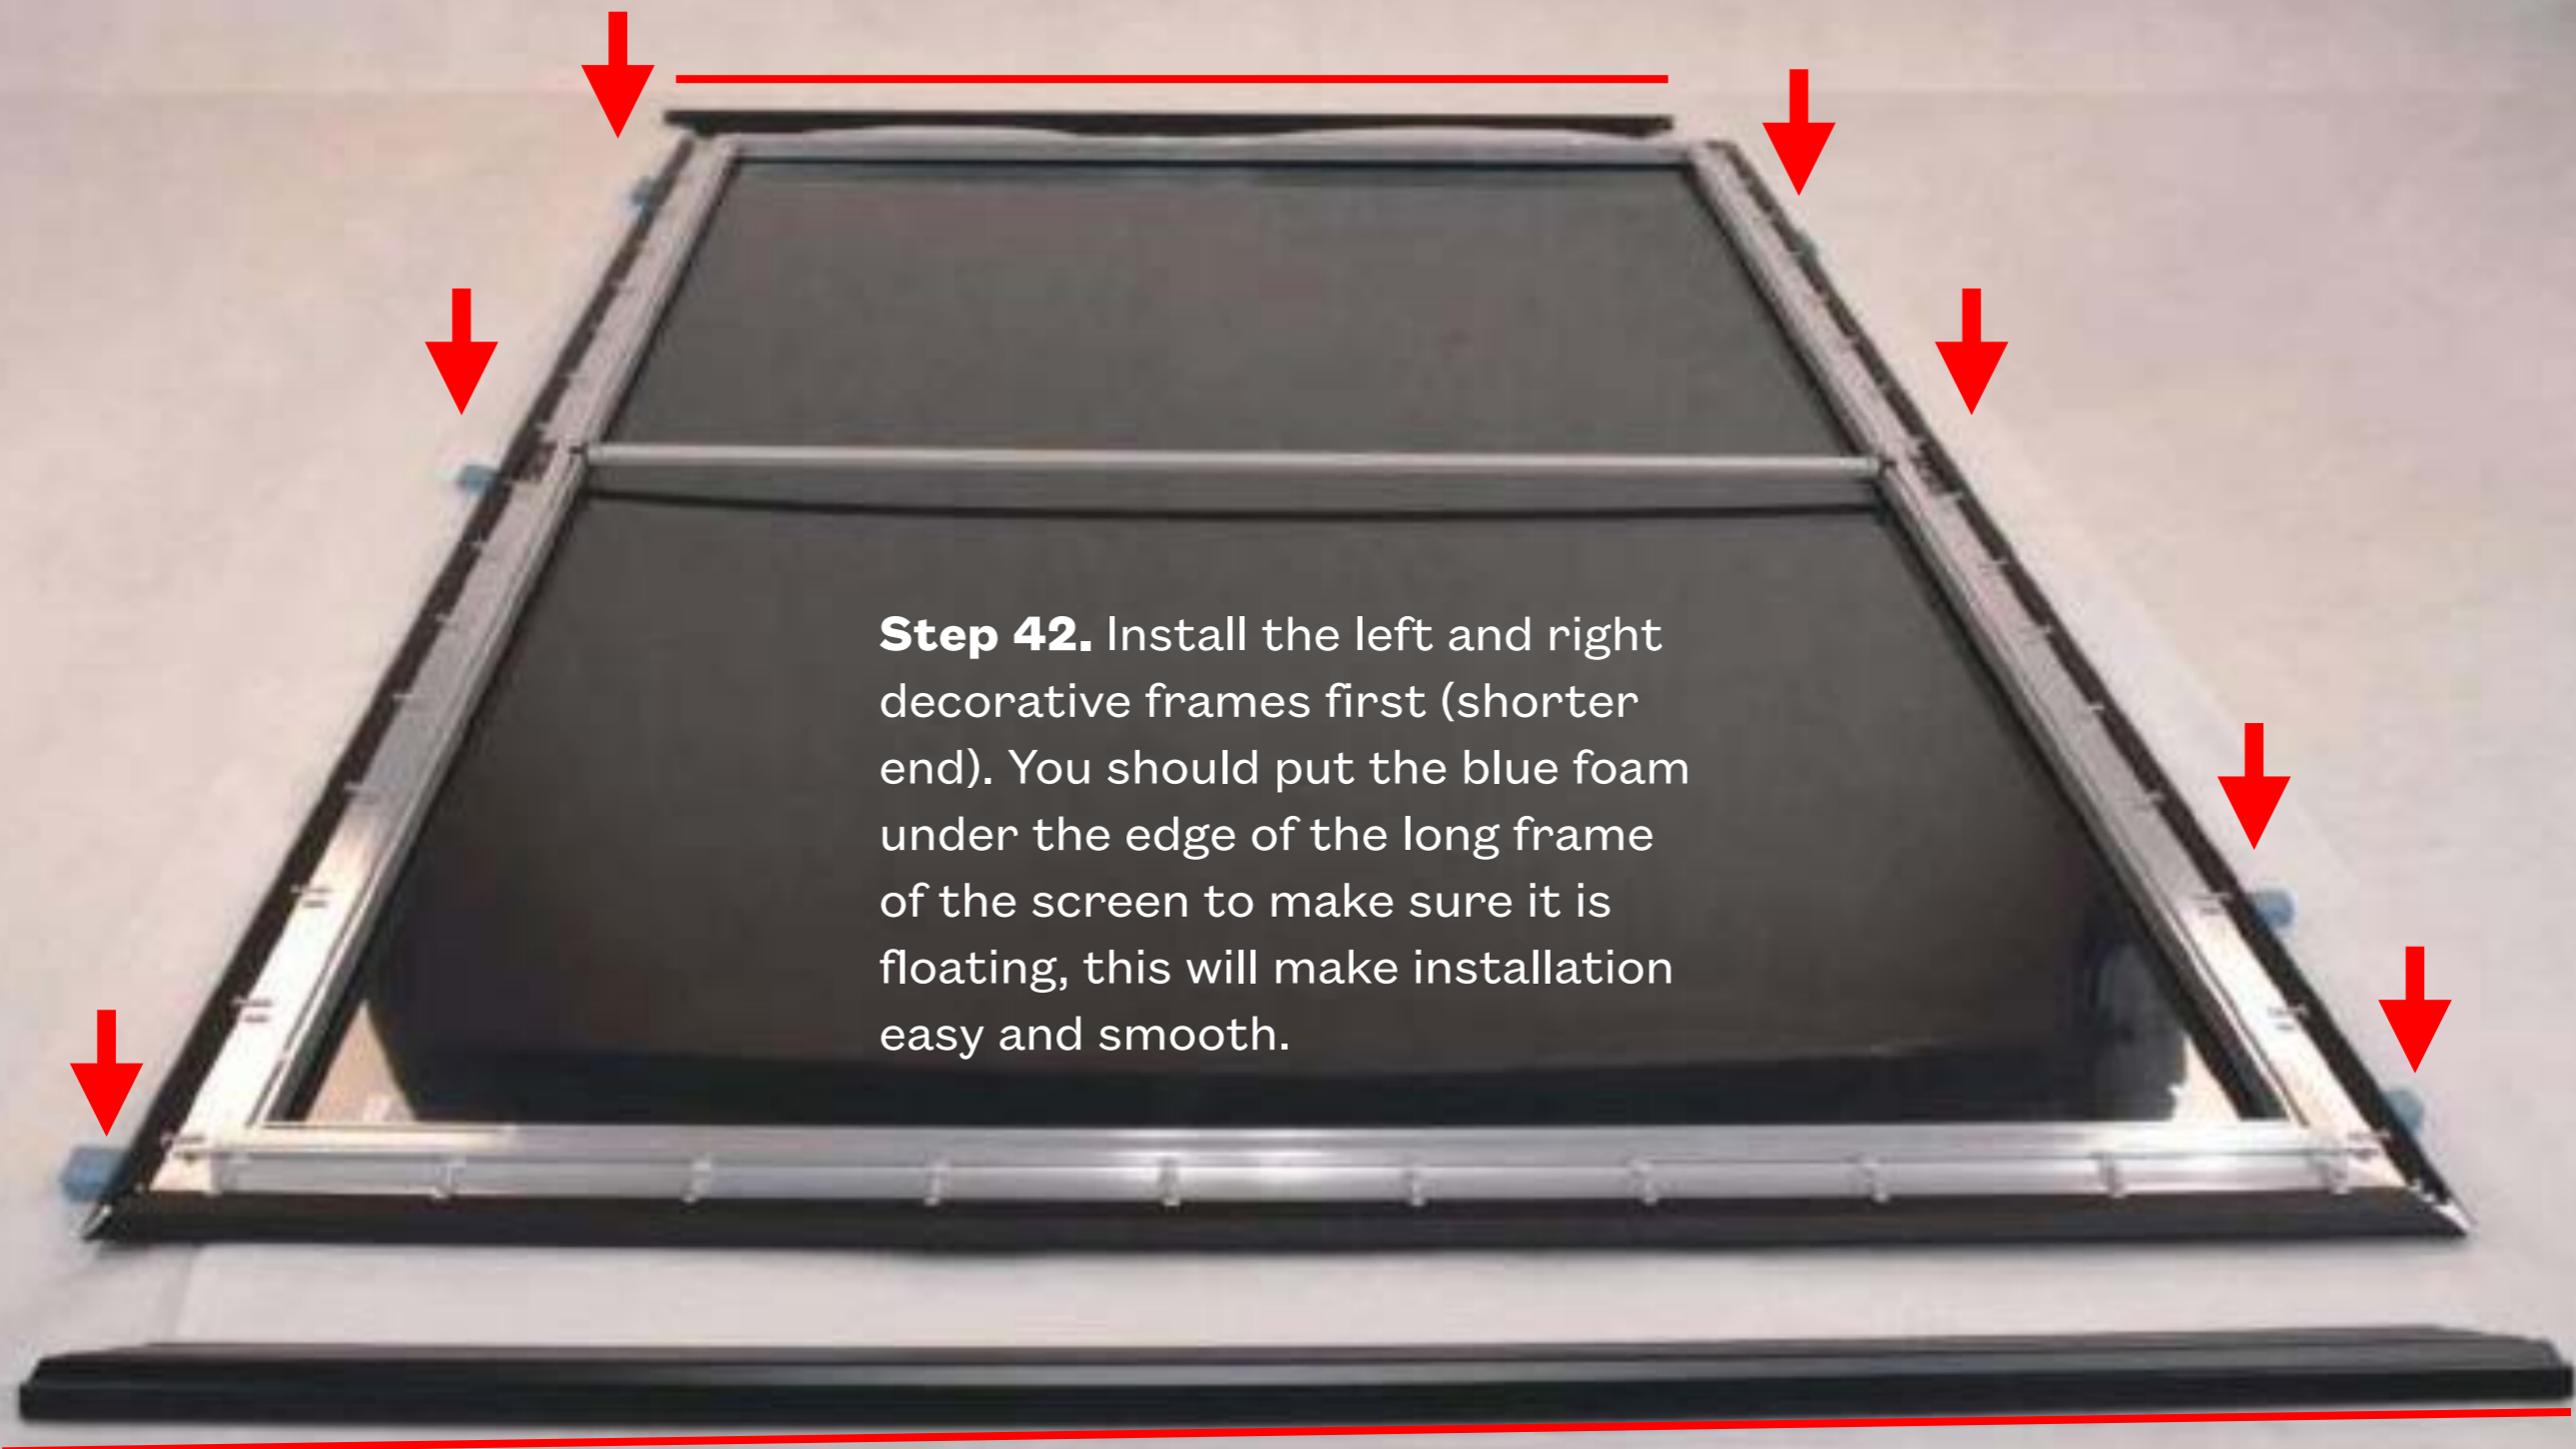

**Step 42.** Install the left and right decorative frames first (shorter end). You should put the blue foam under the edge of the long frame of the screen to make sure it is floating, this will make installation easy and smooth.

## Step 43

**Step 43.** Assure the frame is installed in the slot properly

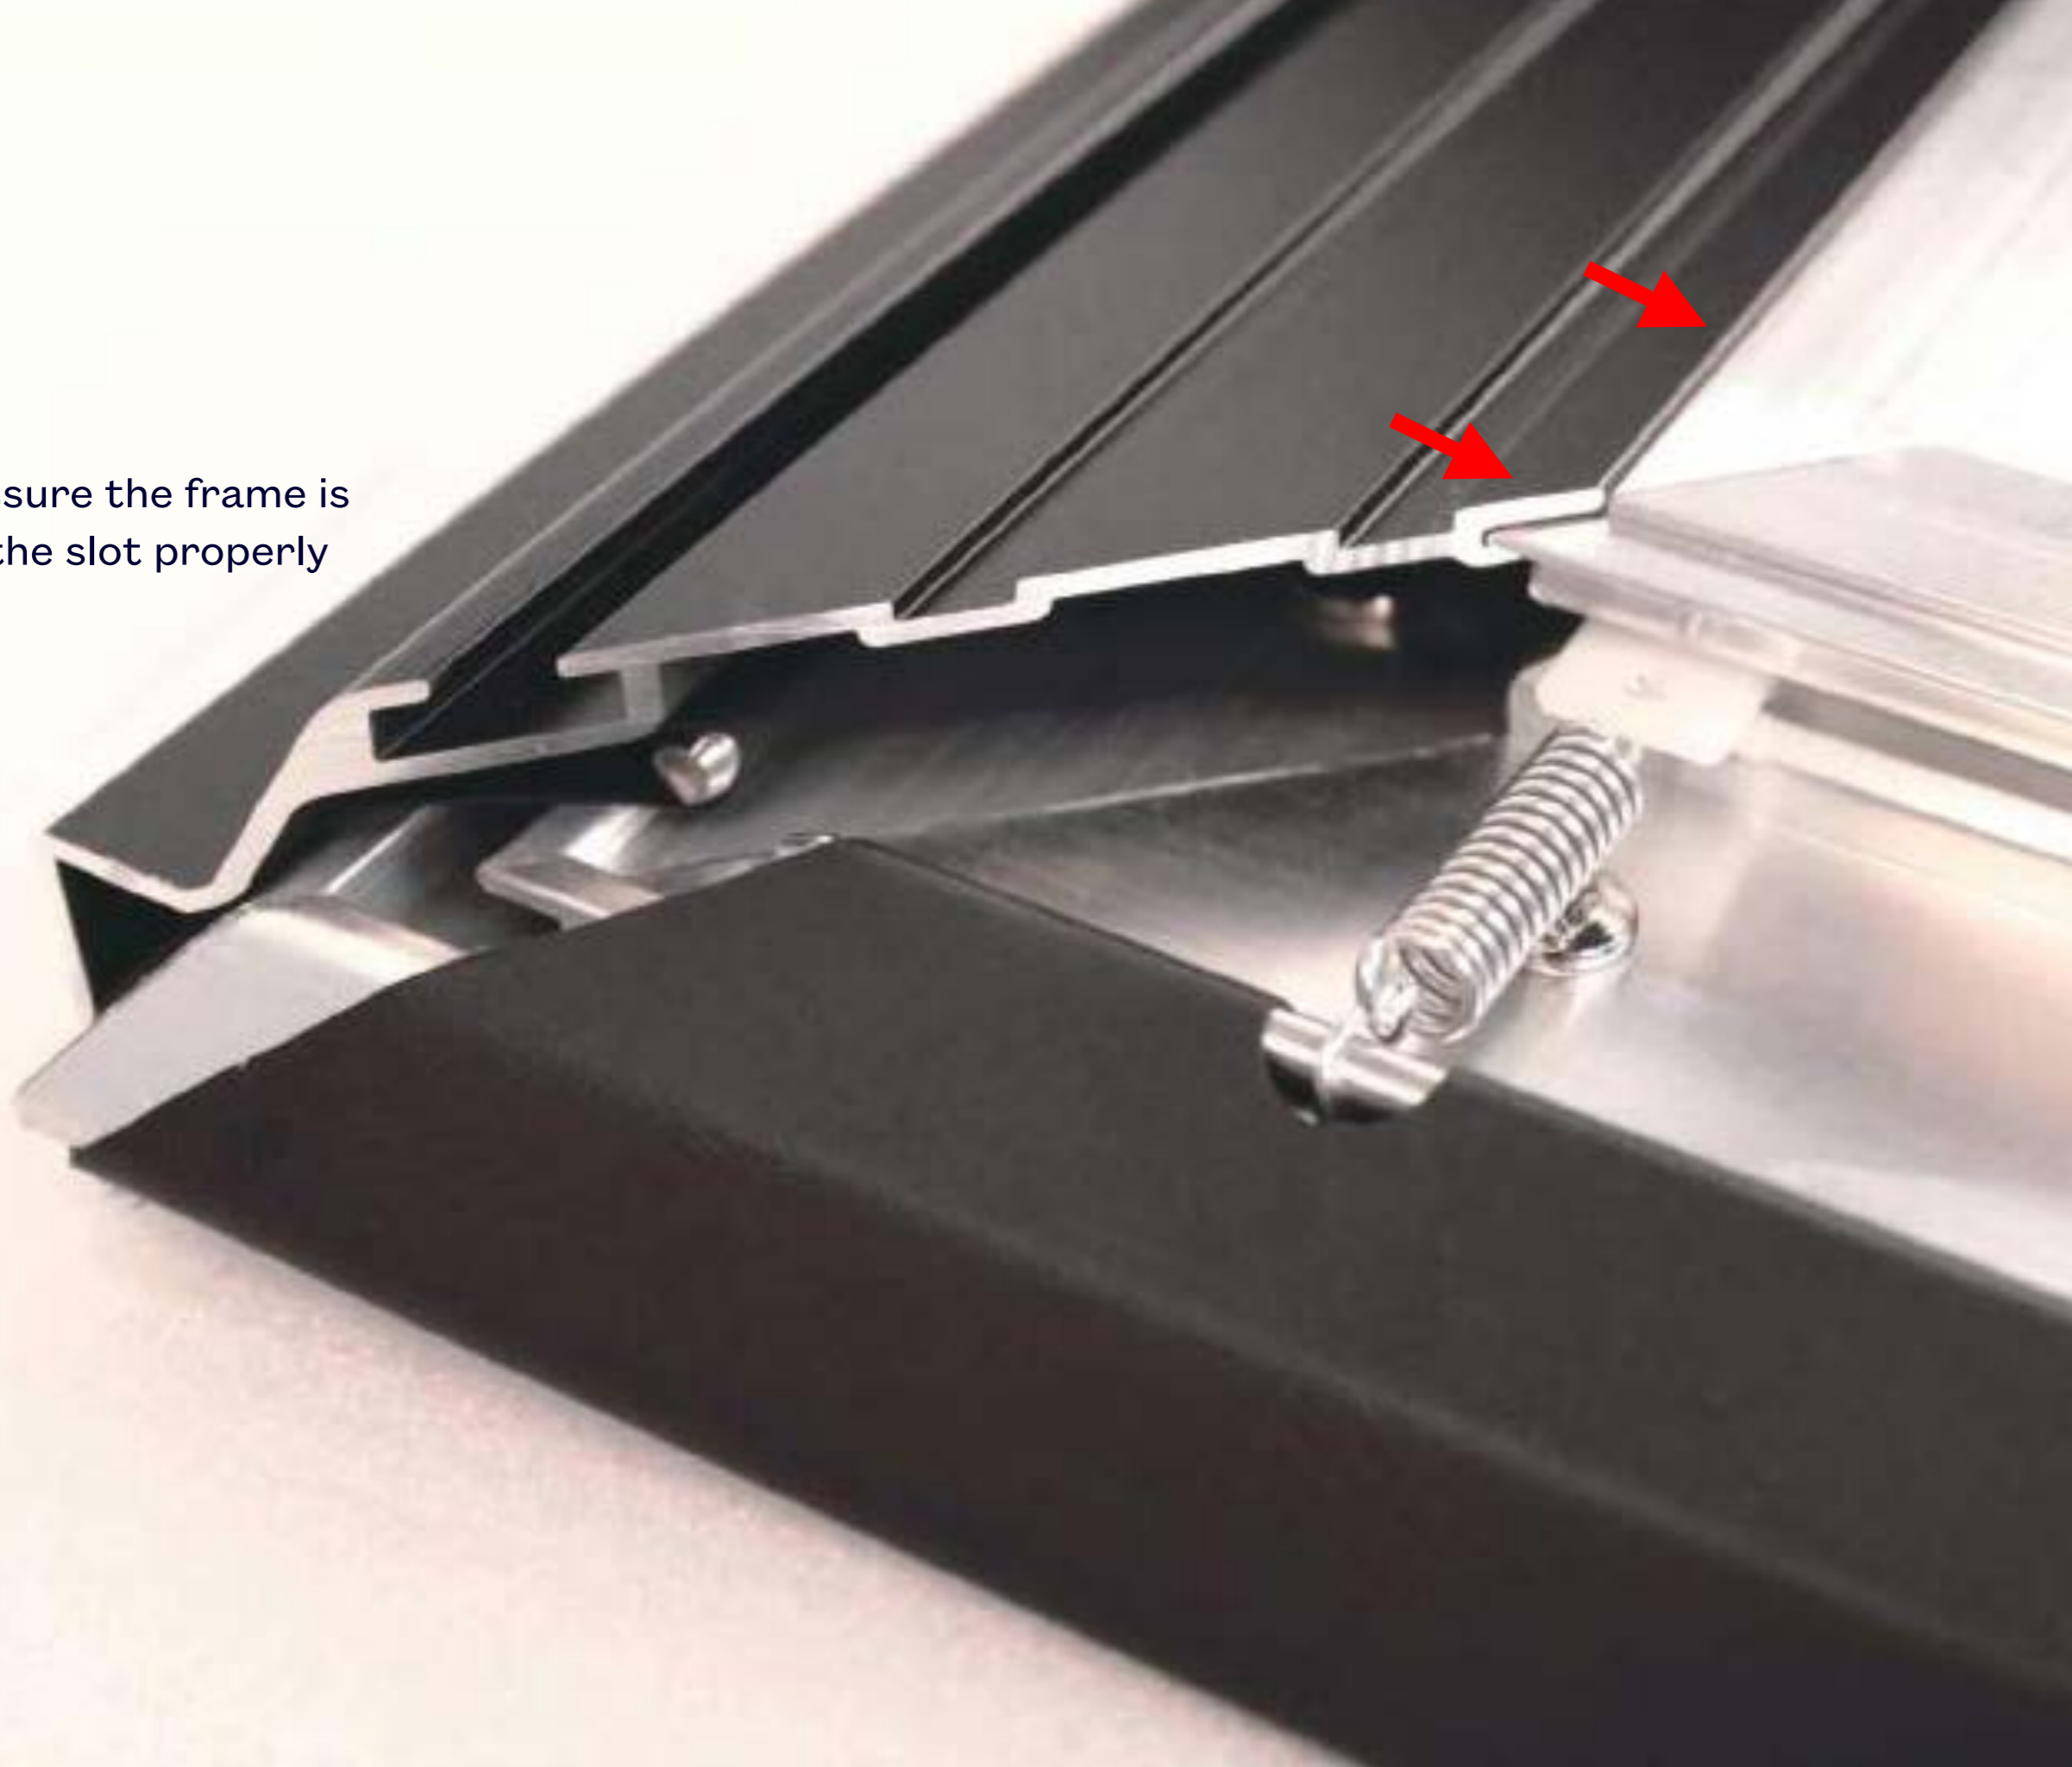

## Step 44

**Step 44.** This is an example of what happens if it is IMPROPERLY INSTALLED, the decorative frame is not in the slot of the silver frame.



# Step 45

**Step 45.** Fastening these black parts on four corners first would alleviate the edges from unwanted tensioning.




## Step 46

**Step 46.** Again, fasten these black parts on four corners first would alleviate the edges from unwanted tensioning.




# Step 47

**Step 47.** Again, fasten these black parts on four corners first would alleviate the edges from unwanted tensioning.

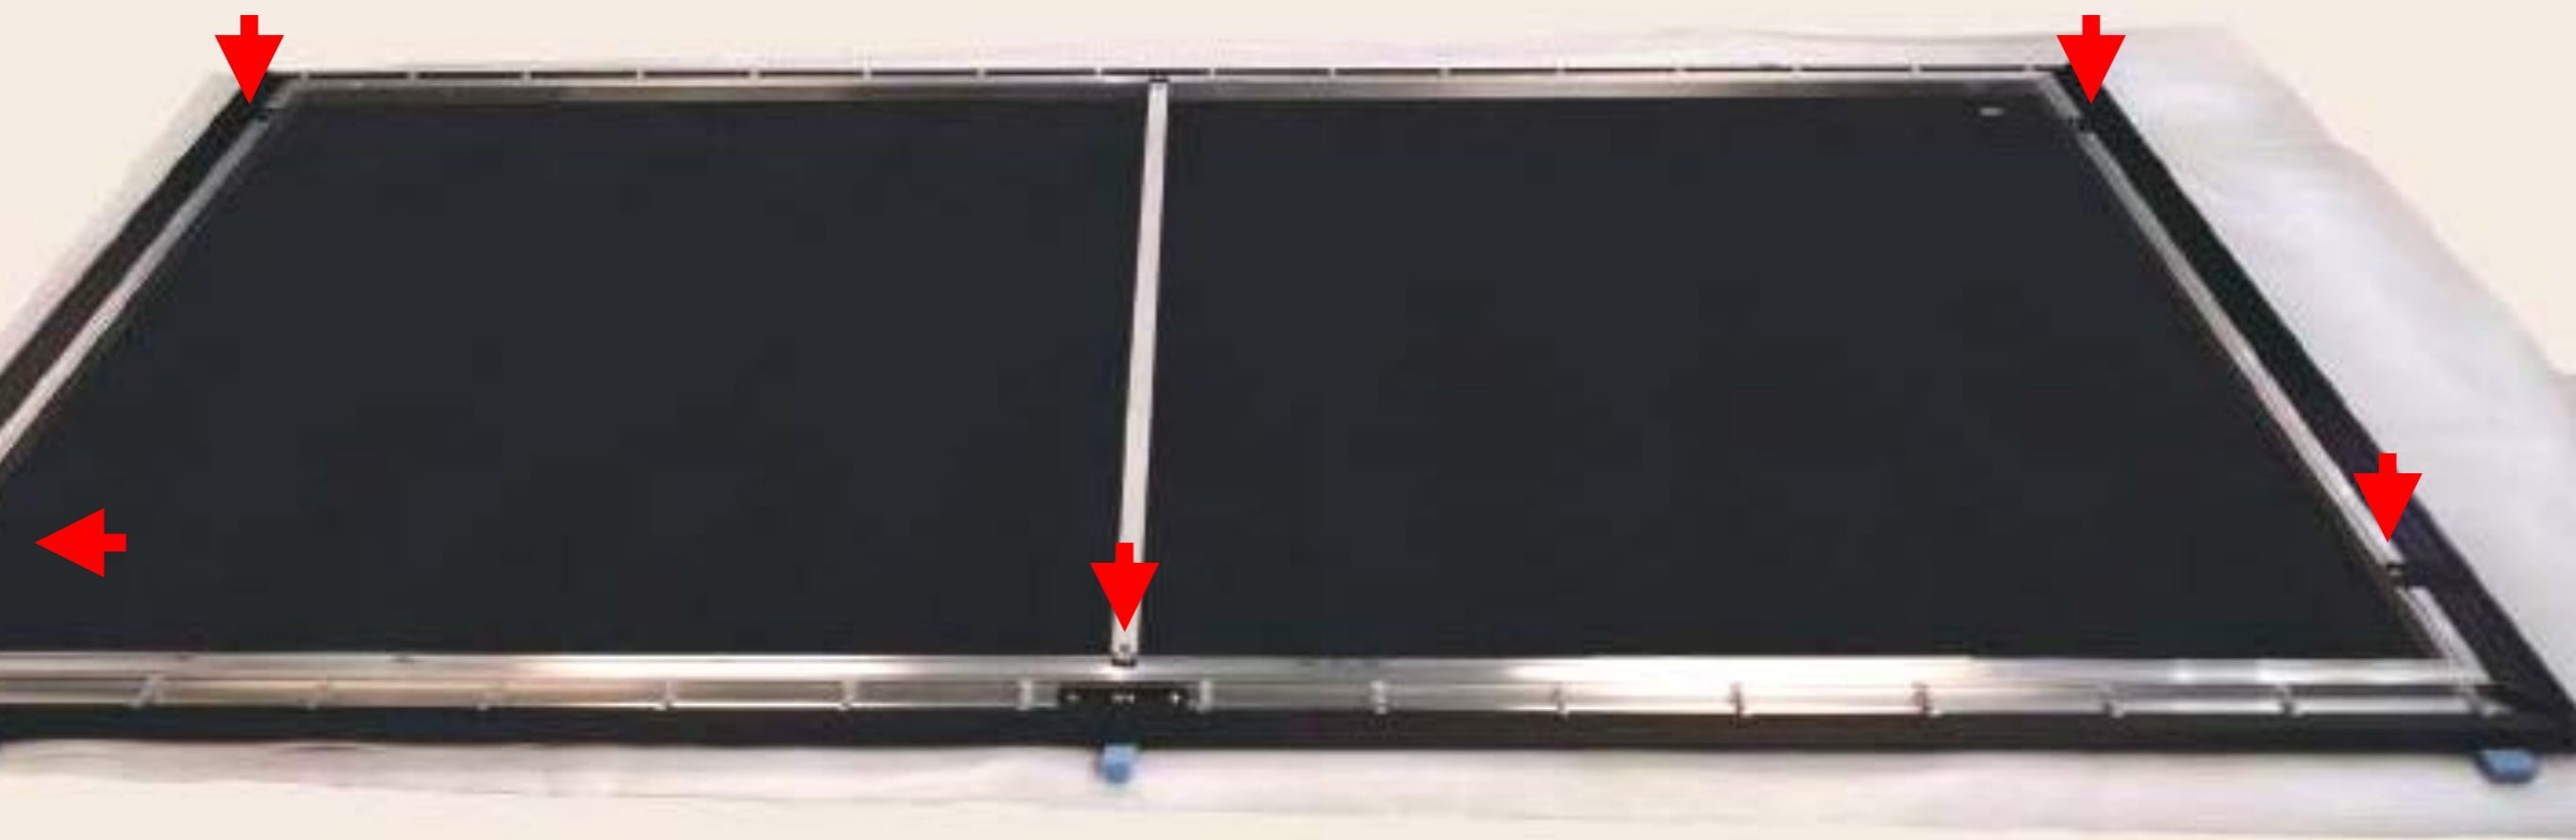

# Step 48

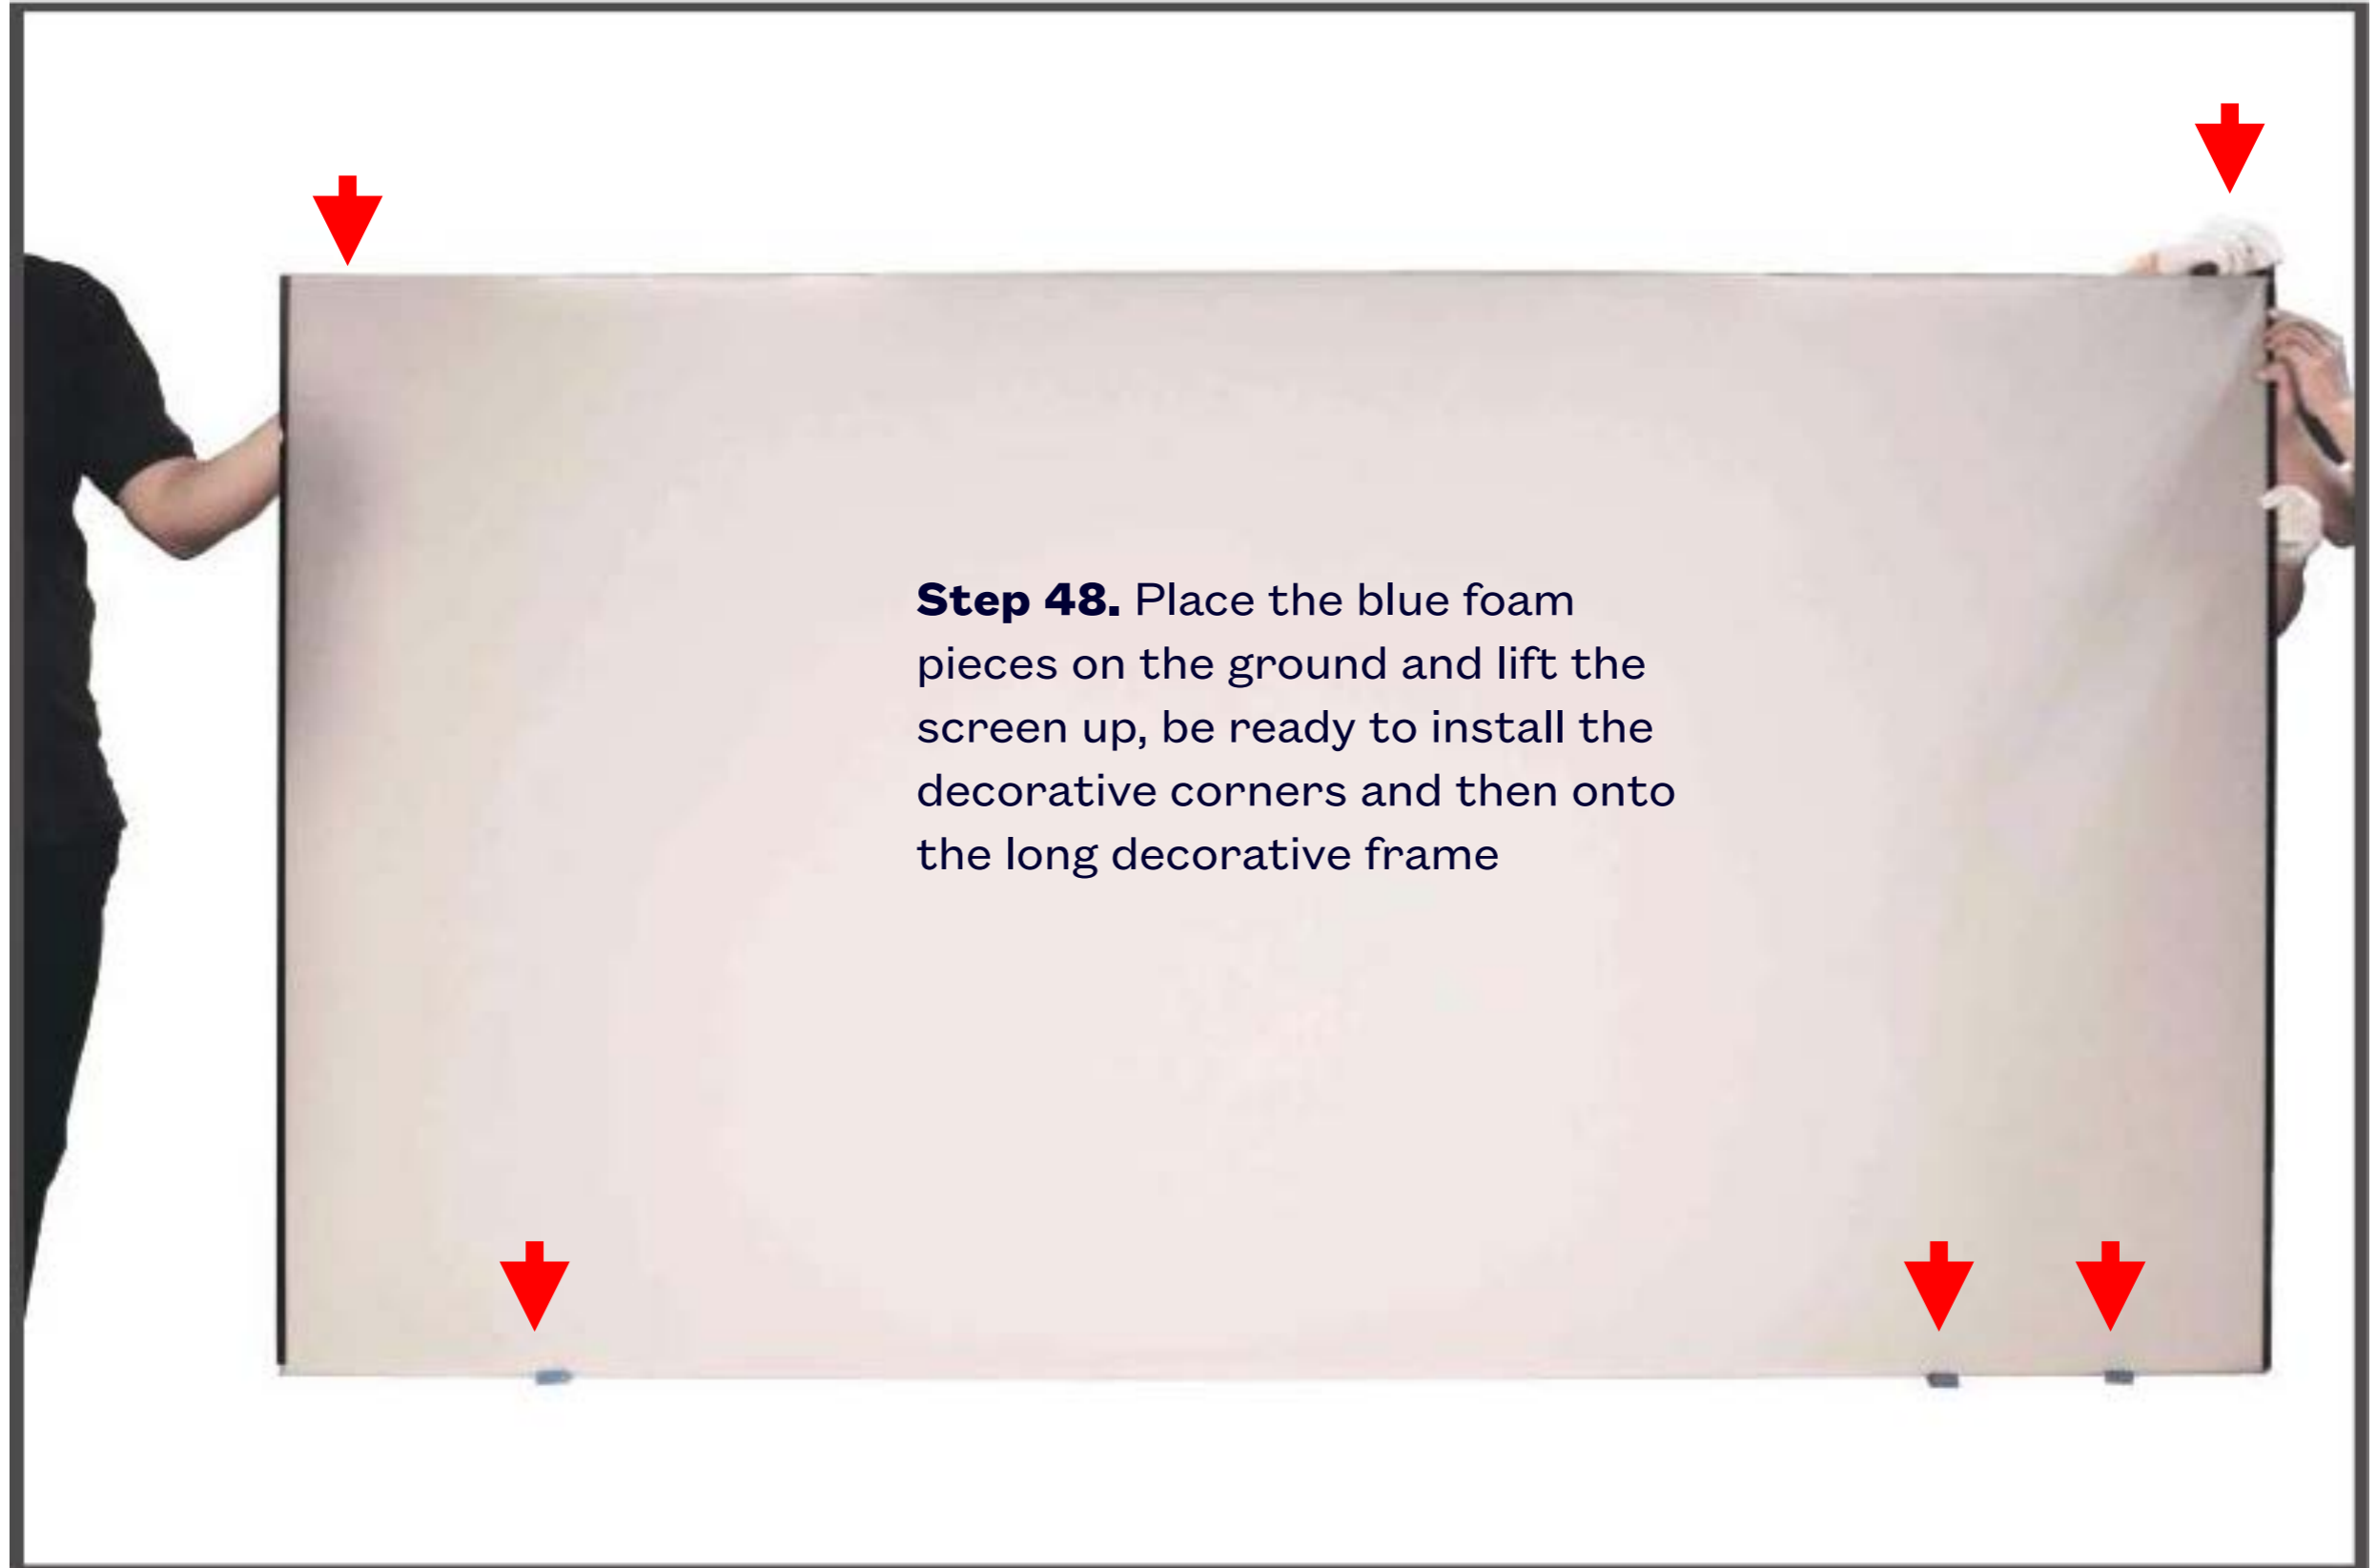

**Step 48.** Place the blue foam pieces on the ground and lift the screen up, be ready to install the decorative corners and then onto the long decorative frame

Step 49



**Step 49.** The corner pieces insert in from the short frame first and on both sides see images from Steps 49 and 50.



Step 50



## Step 51



**Step 51.** Now install the longer decorative frame from the middle and slide it to the corner as shown from the image. It is a easier install on the first piece and the other piece might need to fiddle with the screw of the black fastened parts on the short decorative frame (see next Step).

## Step 52



**Step 52.** Again, the first piece will install very smoothly and the other piece may require some playing around with the screw of the black fastened parts.

## Step 53



**Step 53.** Please leave the middle nut out of the three on there and the remainder nuts can be screwed with the black fastening pieces.

## Step 54



**Step 54.** Now you can reverse the screen and do the last step again for the other side.

## Step 55




**Step 55.** Now you can reverse the screen and do the last step again for the other side.

## Step 56

**Step 56.** Install the magnet chip on the other side of the middle nut as instructed and see sticker for fabric's direction (important for up and down).



## Step 57

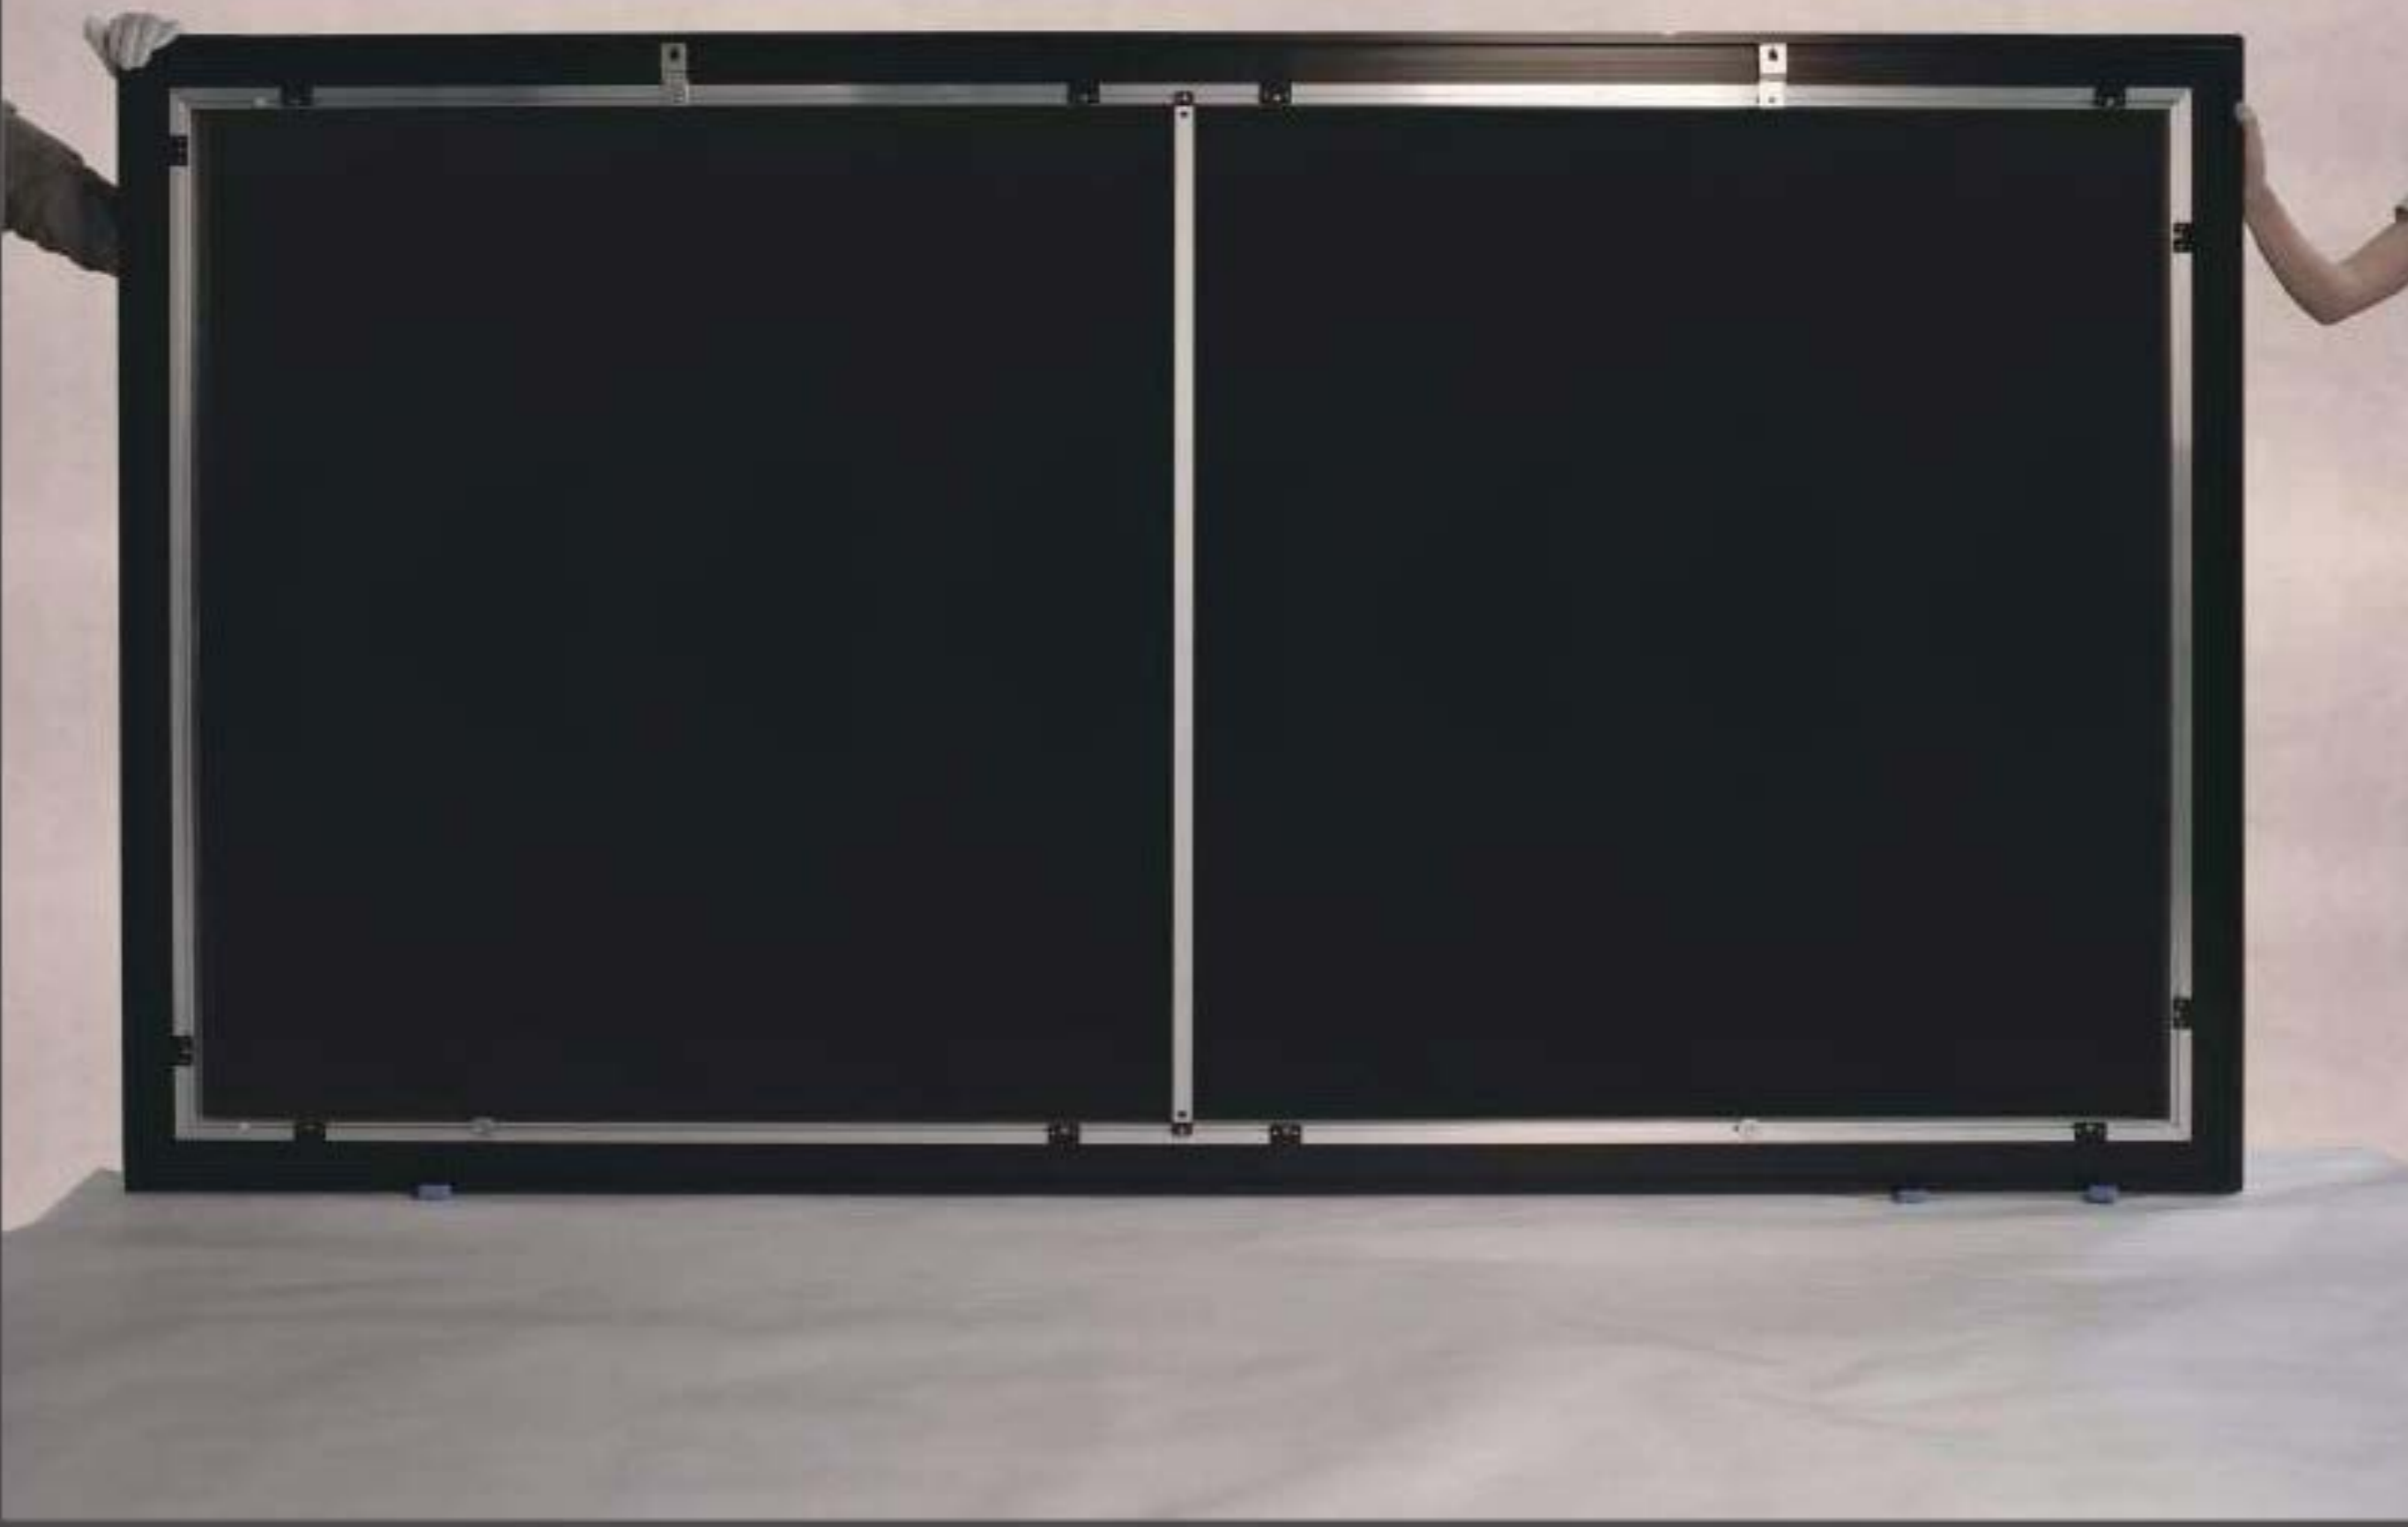

**Step 57.** Back view after everything has been installed properly, check for imperfections to see which steps to review and repeat.



## Step 57



**Step 57.** Front view after everything has been installed properly, check for imperfections to see which steps to review and repeat.

---

# **PLEASE READ IF SCREEN IS IMPERFECT**

**IF THE SCREEN HAS CREASES, WRINKLES OR ANY DEFORMITIES ON THE SURFACE PLEASE CHECK IF YOUR FABRIC WAS CENTERED 100% BEFORE INSTALLING THE FRAME**

**IF THE FABRIC STITCHING APPEARS TO BE SHOWING INSTEAD OF HIDING UNDERNEATH THE FRAME PLEASE CHECK IF THE FRAME WAS ASSEMBLED PROPERLY**

**IF THERE IS ANY OTHER ISSUES WITH THE FRAME OR SURFACE PLEASE CONTACT YOUR DEALER IMMEDIATELY AND GRANDVIEW WILL ASSIST YOU AS SOON AS POSSIBLE.**

**MOST OF THE ISSUES AND DEFECTS WE HAVE EXPERIENCED WITH THESE SCREENS ARE INSTALLATION/USER ERROR**