


# RESISTO

## H<sub>2</sub>O PRIMER

### PRIMER

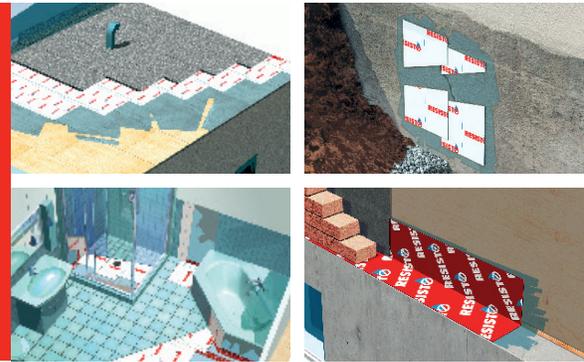

Emulsion polymer based (water based) primer that is particularly recommended, when using a solvent-based primer is not recommended.

- Improves adhesion of self-adhesive membranes
- Easy and fast application
- Does not damage polystyrene

#### PRODUCT PURPOSE

Application	Waterproofing complement	
Building Part	Roofing	Showers and bathrooms
	Walls	
Substrates	Wood	Concrete
	Polystyrene	Gypsum

#### PRODUCT CHARACTERISTICS

Installation Method	Paint brush	Sprayer
	Roller	
Maximum exposure	Once, dry, cover as soon as possible	

#### PACKAGING

Code	Containers	Indicative Covering Depending on the surface porosity*	Quantity per Pallet
30116	910 ml (0.25 US gal)	55 - 90 ft <sup>2</sup> (5 - 8 m <sup>2</sup> )	486
30112	3.78 l (1 US gal)	208 - 340 ft <sup>2</sup> (19 - 31 m <sup>2</sup> )	150
30111	18.9 l (5 US gal)	608 - 1040 ft <sup>2</sup> (56 - 96 m <sup>2</sup> )	36

#### PROPERTIES

Properties	H <sub>2</sub> O PRIMER
Color	Blue
Specific gravity at 20 °C (68 °F)	1.00 kg/L
Solids by weight	55%
Viscosity	500 cP

(All values are nominal)

## H<sub>2</sub>O PRIMER

### INSTALLATION

Storage	Two years in its original closed packaging, in a cool, well-ventilated area. Store in a cool, dry place between 5 °C to 40 °C (41 °F to 104°F).			
Minimum Application Temperature	5 °C (41 °F). The product must be at a minimum temperature of 10 °C (50 ° F) before application.			
Tools Required		Paint brush		Sprayer
		Roller		
Surface preparation	The substrate must be dry, clean and free of dust, grease or other contaminants.			
Installation	<ol style="list-style-type: none"> <li>1. Mix the product before and during application.</li> <li>2. Apply the product according to the chosen method.</li> <li>3. Allow the primer to dry before installing the waterproofing membrane.</li> <li>4. The primer is dry when sticky to the touch, but not messy.</li> </ol>			
Drying time	Between 30 minutes and 3 hours, depending on ambient temperature and the amount applied.			
Cleaning	Clean wet tools with water. When the primer is dry, clean with solvents (mineral spirits, paint thinner, xylene, etc.).			
Tricks / Tips	For greater efficiency, install the membrane or the sealing strip as soon as the primer is dry.			
Recommendations/ Limitations	The membranes should be installed the same day as the application. Not suitable for plastic surfaces such as vinyl siding, or panels with a water-repellent surface treatment. Do not use to seal the self-adhesive membrane joints, as a coating between two membranes or asphaltic panels.			
Warnings	Keep out of the reach of children. Properly close the container after each use. Keep out of the sun and away from ignition sources. Do not pour residues in drains.			

