


ROBINET DE DOUCHE SHOWER FAUCET

GUIDE D'INSTALLATION INSTALLATION GUIDE

OUTILS NÉCESSAIRES

TOOLS REQUIRED

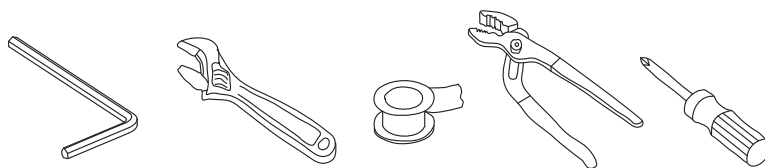

ÉTAPE STEP

1


Coupez l'alimentation d'eau avant de commencer l'installation.
Shut off the main water supply before beginning installation.

ÉTAPE STEP

2

Rappel : Veuillez installer le robinet avec des tuyaux en cuivre
Reminder: Please install with copper pipes.

2 1/2" (64mm)

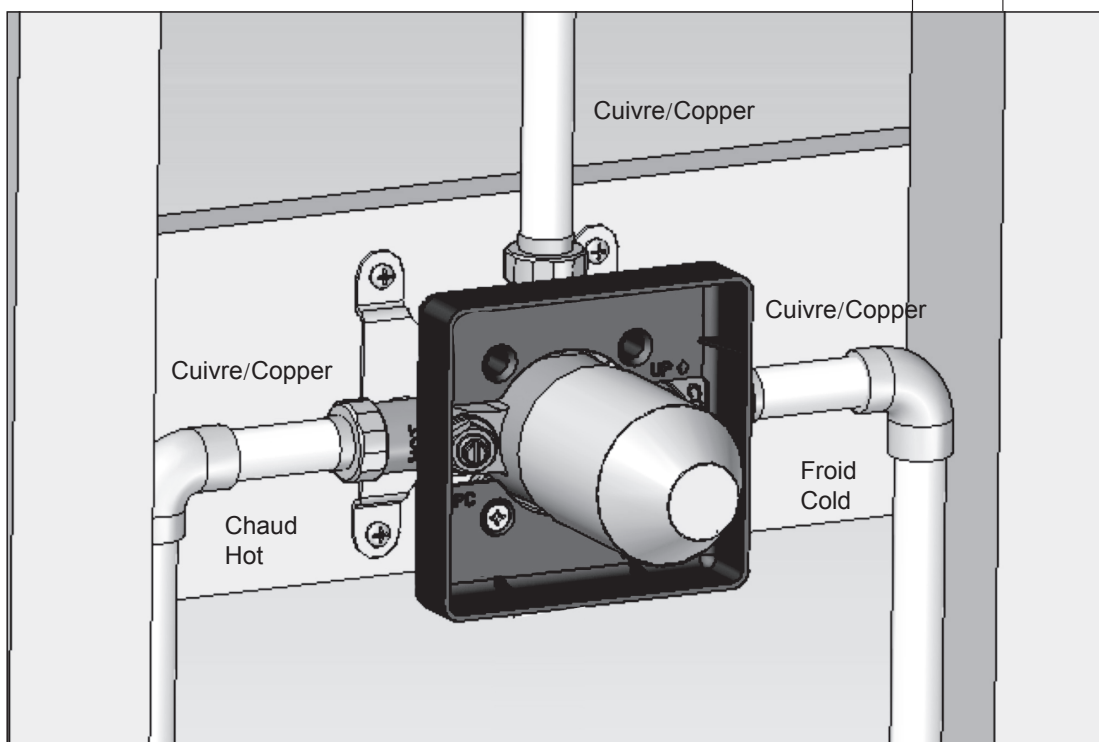

T0421

OLGA

3051686

FINI CHROME FINISH


TASSILI.CA



TASSILI®


ÉTAPE
STEP

3

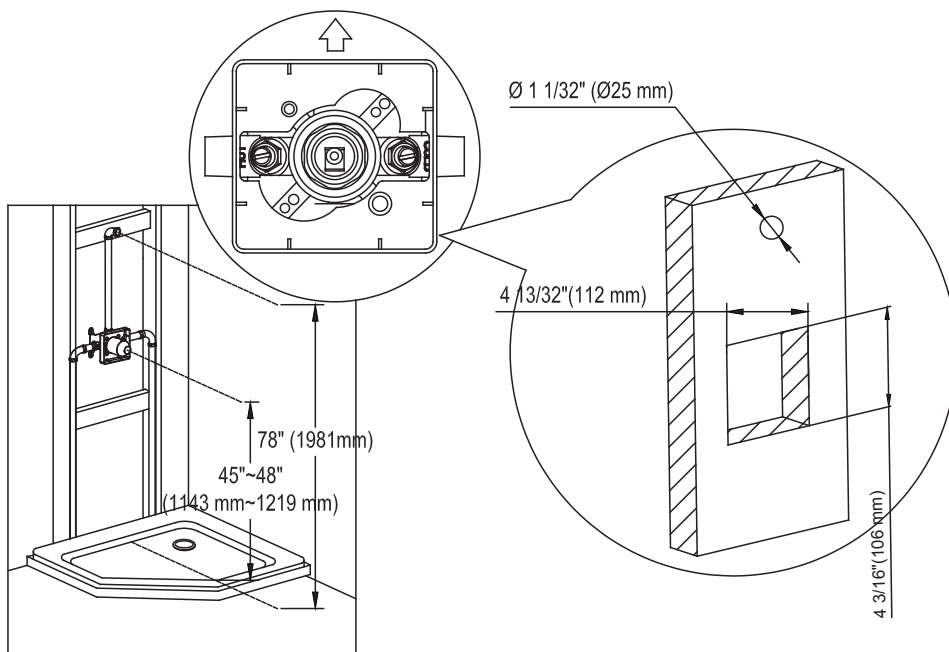


ÉTAPE
STEP

4

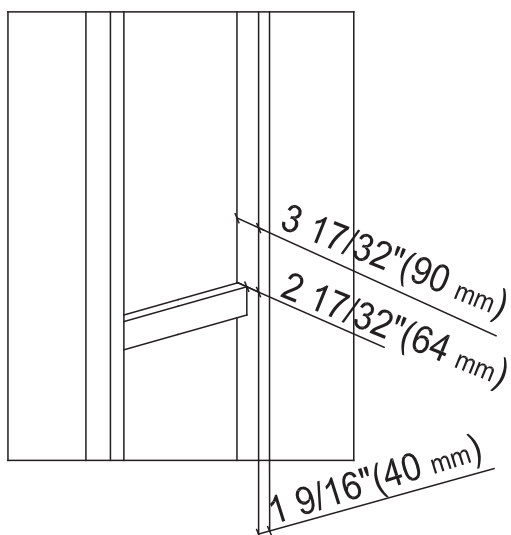


ÉTAPE
STEP

5

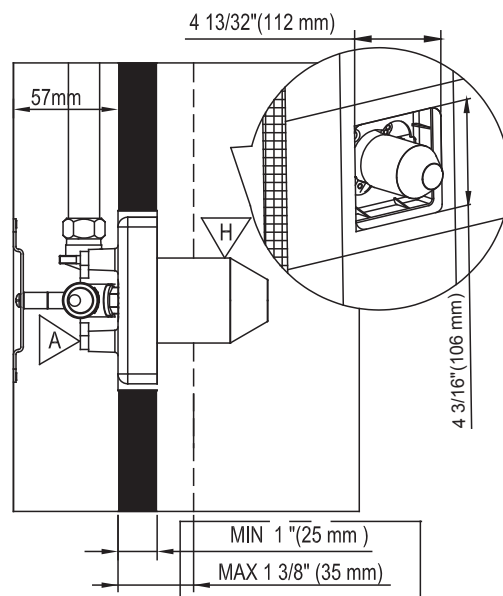

ÉTAPE
STEP


6

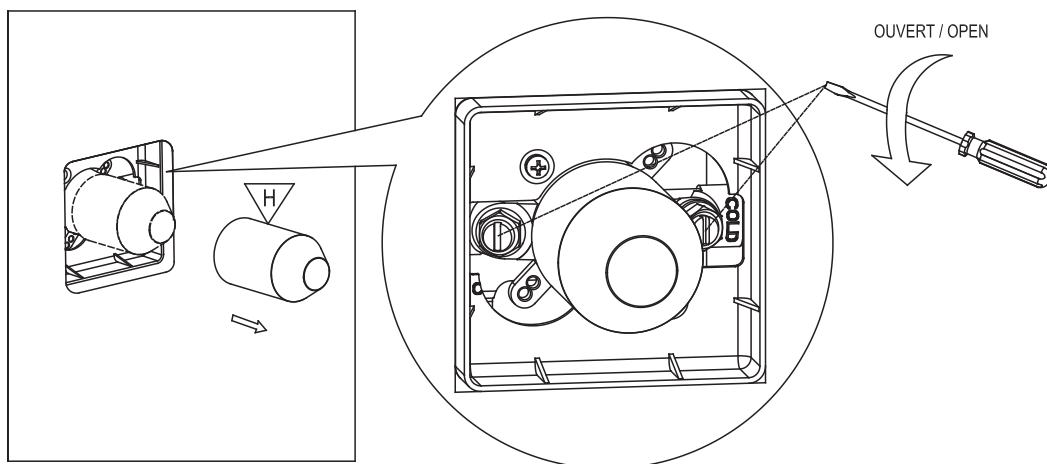


ROBINET DE DOUCHE
SHOWER FAUCET

GUIDE D'INSTALLATION
INSTALLATION GUIDE


ÉTAPE 7
STEP

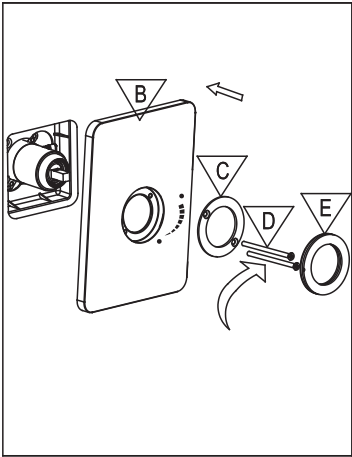


ÉTAPE 8
STEP

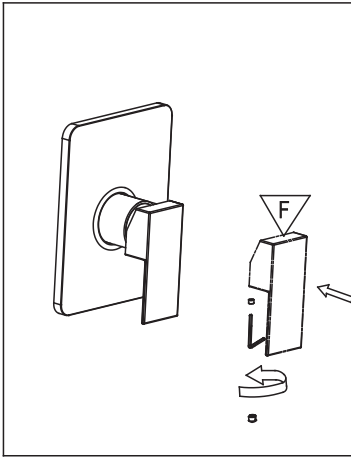

ÉTAPE 9
STEP

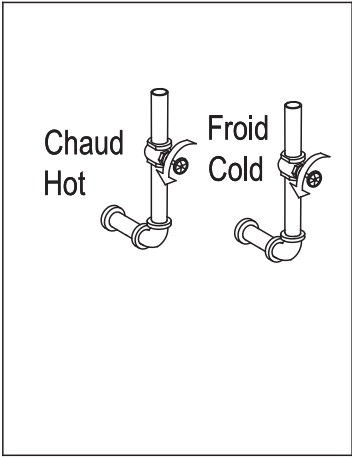

ÉTAPE 10
STEP

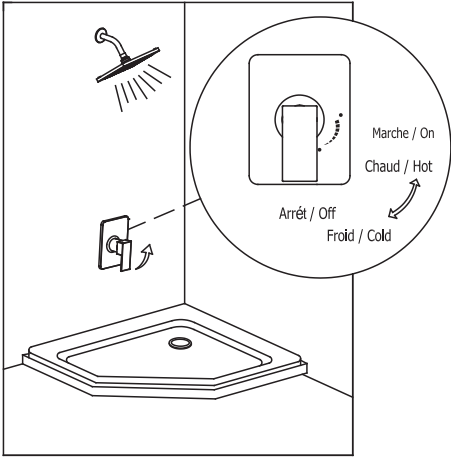

*IMPORTANT : Aucune construction ne devrait être effectuée par l'installateur sans avoir le produit en main. Les mesures pourraient varier en raison de perfectionnements apportés au produit au fil du temps. Ni le fabricant, ni le distributeur ne pourront être tenus responsables d'un écart entre les mesures présentées ici et les mesures réelles du produit. Ce produit devrait être installé par un professionnel certifié, conformément à la réglementation en vigueur.

*CAUTION: Never install unless you are in possession of the product. Measurements may vary as a result of improvements made to the product over time. Neither the manufacturer nor the distributor shall be liable for variances between the measurements shown here and the product's actual measurements. This product should be installed by a certified professional, in accordance with the regulations in effect.