



ALINA | CHROME
3051764

ÉTAPE 1 **Coupez l'alimentation d'eau avant de commencer l'installation.**
STEP Shut off the main water supply before beginning installation.

ÉTAPE 2 **Rappel : Veuillez installer le robinet avec des tuyaux en cuivre**
STEP **Reminder: Please install with copper pipes.**

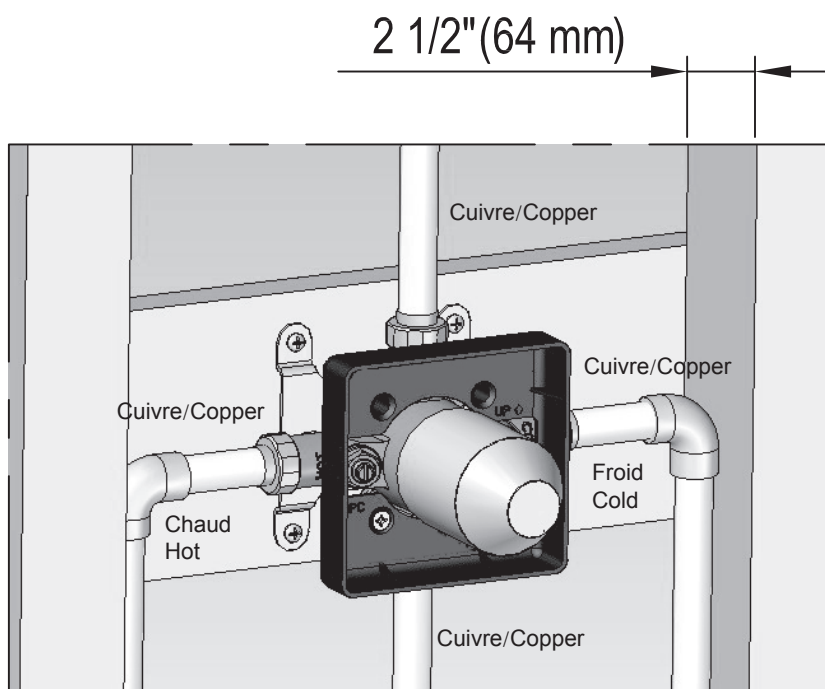


ÉTAPE 3
STEP

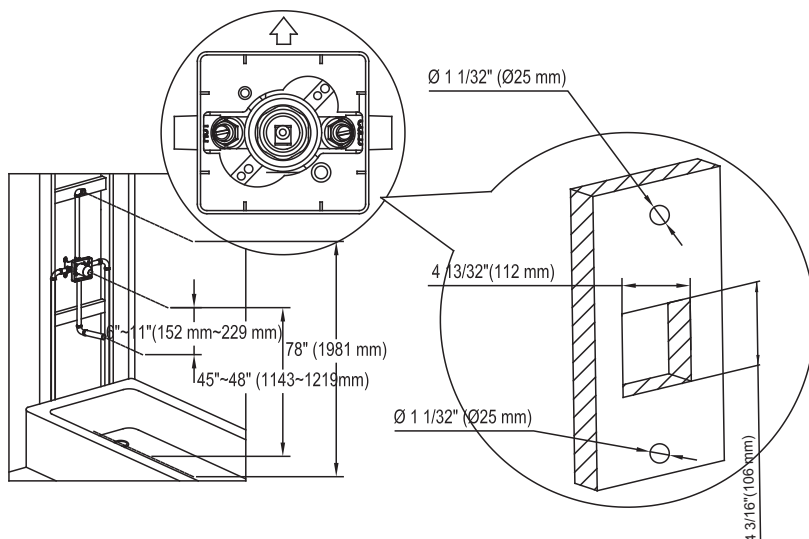


ÉTAPE
STEP

4

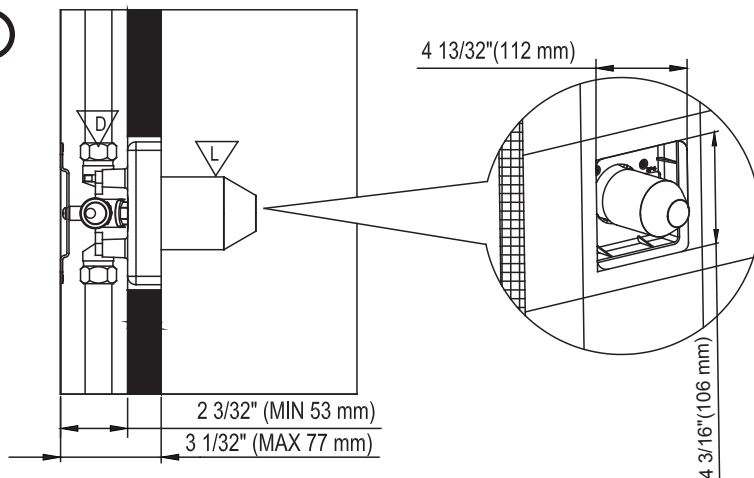


ÉTAPE
STEP

5

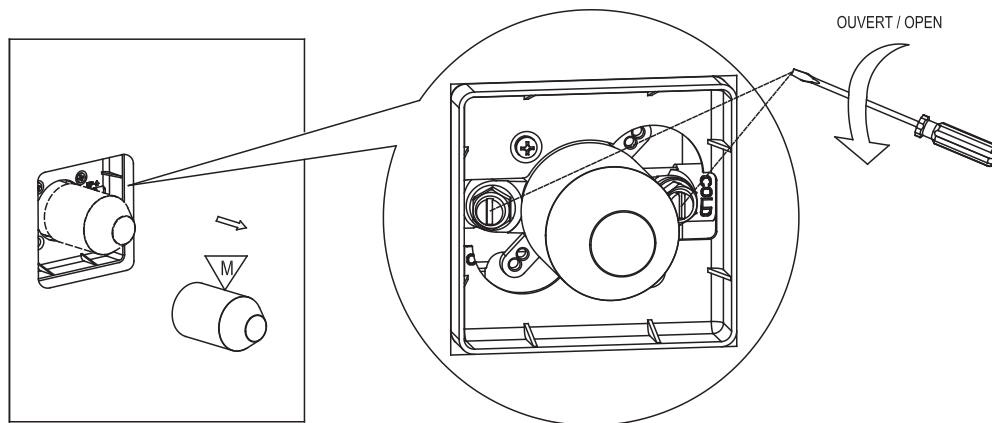


ÉTAPE
STEP

6

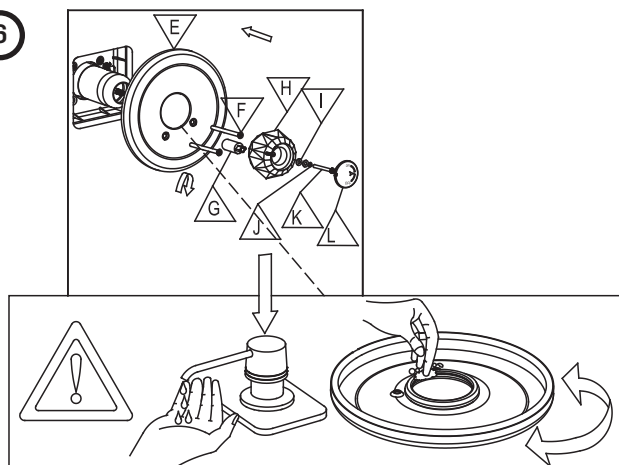


ÉTAPE
STEP

7

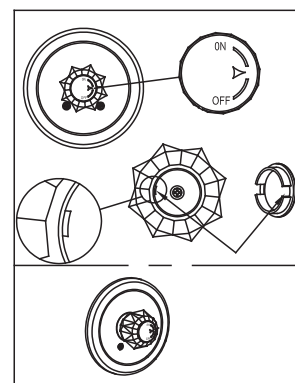


ÉTAPE
STEP

8

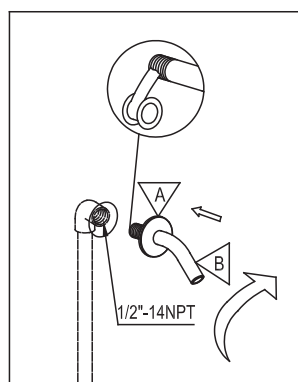

ÉTAPE
STEP

9

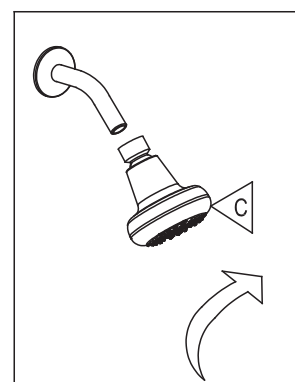


FICHE TECHNIQUE DATA SHEET


ROBINET BAIN-DOUCHE BATHTUB & SHOWER FAUCET

ALINA | CHROME
3051764


ÉTAPE 10 STEP

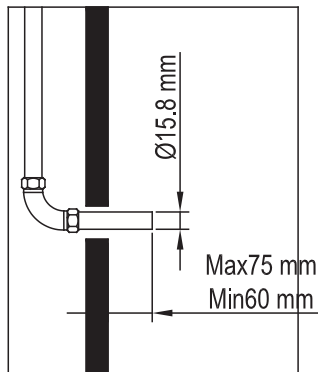


ÉTAPE 11 STEP

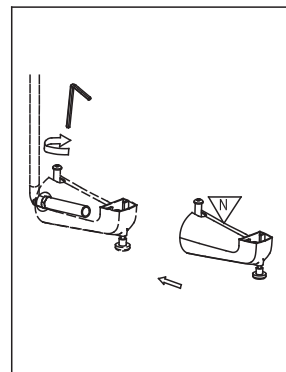


ÉTAPE 12 STEP

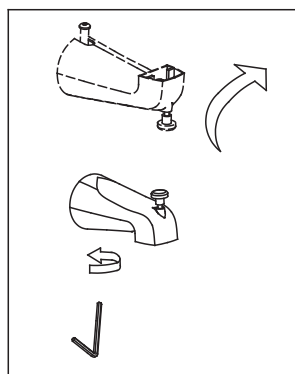


ÉTAPE 13 STEP

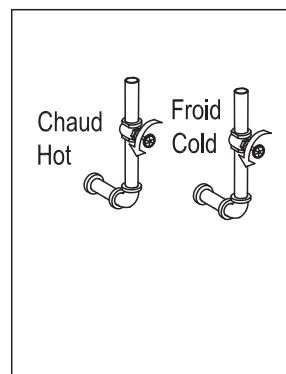

ÉTAPE 14 STEP

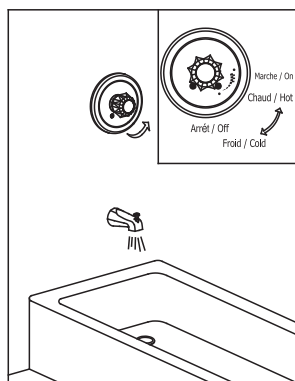

ÉTAPE 15 STEP

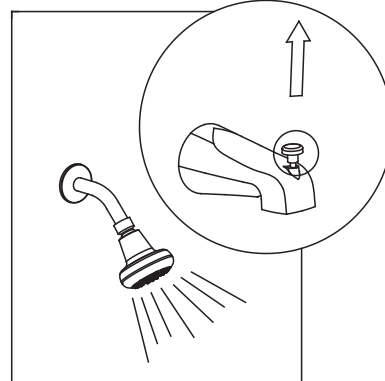

T0421

GARANTIE À VIE LIMITÉE
LIMITED LIFETIME WARRANTY

*IMPORTANT : Aucune construction ne devrait être effectuée par l'installateur sans avoir le produit en main. Les mesures pourraient varier en raison de perfectionnements apportés au produit au fil du temps. Ni le fabricant, ni le distributeur ne pourront être tenus responsables d'un écart entre les mesures présentées ici et les mesures réelles du produit. Ce produit devrait être installé par un professionnel certifié, conformément à la réglementation en vigueur.

*CAUTION: Never install unless you are in possession of the product. Measurements may vary as a result of improvements made to the product over time. Neither the manufacturer nor the distributor shall be liable for variances between the measurements shown here and the product's actual measurements. This product should be installed by a certified professional, in accordance with the regulations in effect.