


ROBINET DE CUISINE AVEC RINCE-LÉGUMES KITCHEN FAUCET WITH SIDE SPRAYER

GUIDE D'INSTALLATION INSTALLATION GUIDE


OUTILS NÉCESSAIRES

TOOLS REQUIRED

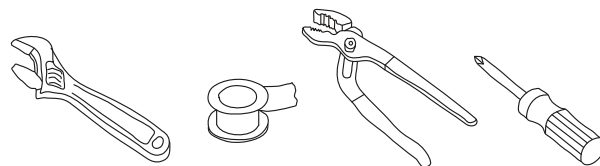


ÉTAPE 1 **1** **Coupez l'alimentation d'eau avant de commencer l'installation.**
STEP Shut off the main water supply before beginning the installation.


ÉTAPE 2 **2**
STEP

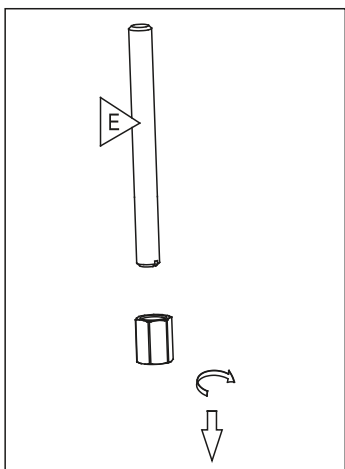


ÉTAPE 3 **3**
STEP

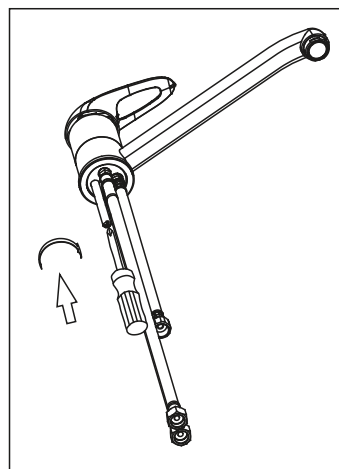

ÉTAPE 4 **4**
STEP

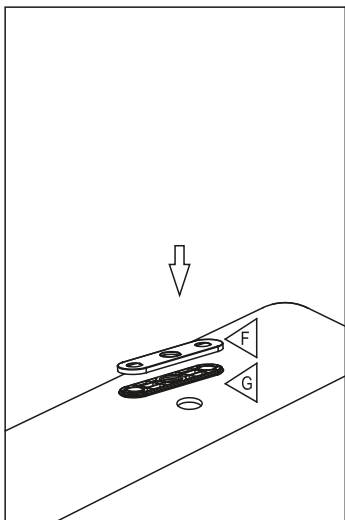

ÉTAPE 5 **5**
STEP

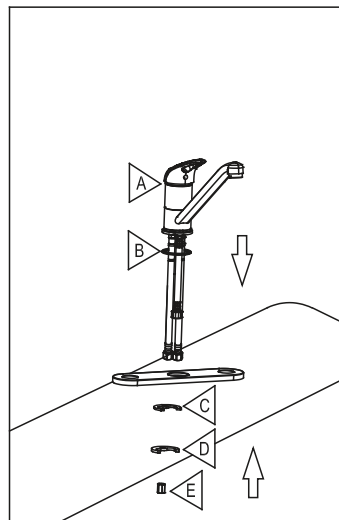

VARO
3051867

FINI CHROME
CHROME FINISH




TASSILI.CA

TASSILI®


ÉTAPE
STEP

6

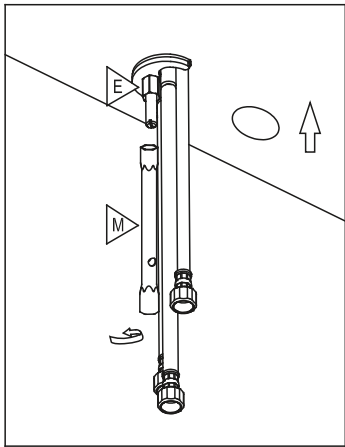


ÉTAPE
STEP

7

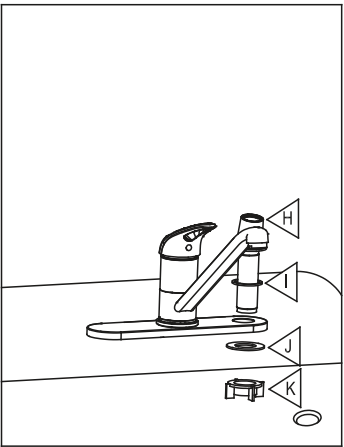


ÉTAPE
STEP

8

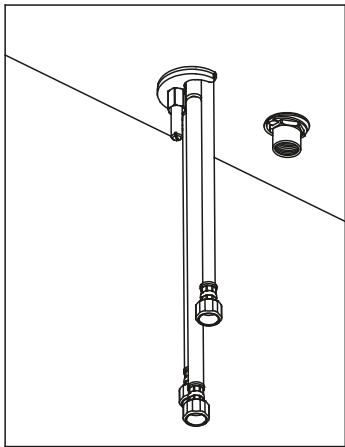


ÉTAPE
STEP

9

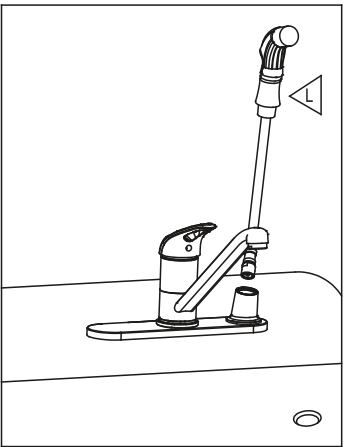


ÉTAPE
STEP

10

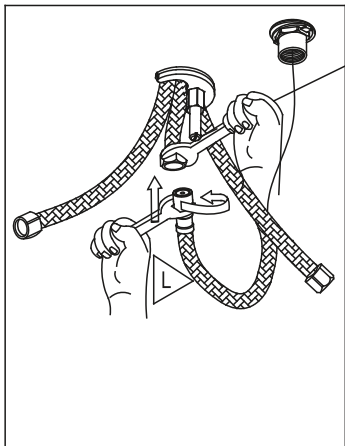


ÉTAPE
STEP


11

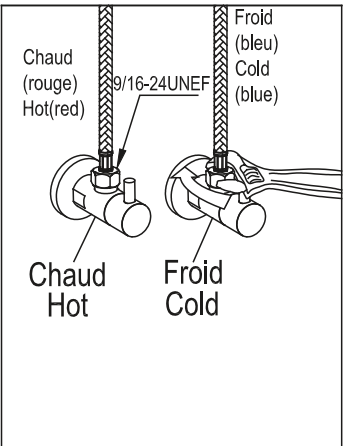


ÉTAPE 12
STEP

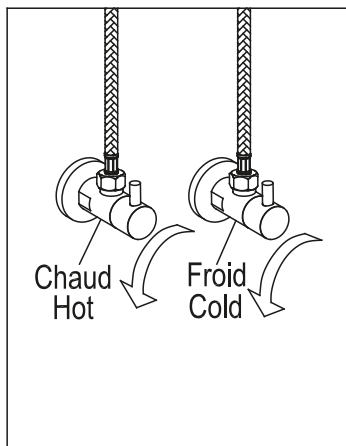


ÉTAPE 13
STEP

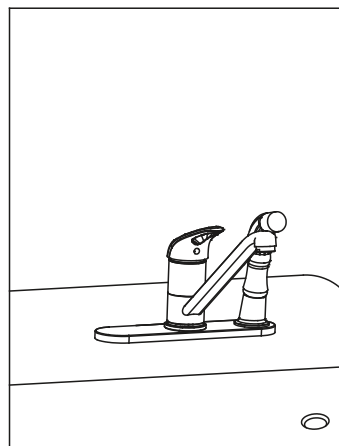

ÉTAPE 14
STEP

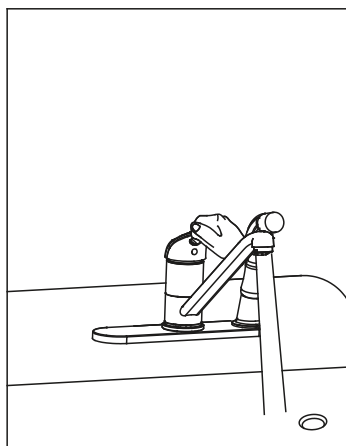

ÉTAPE 15
STEP

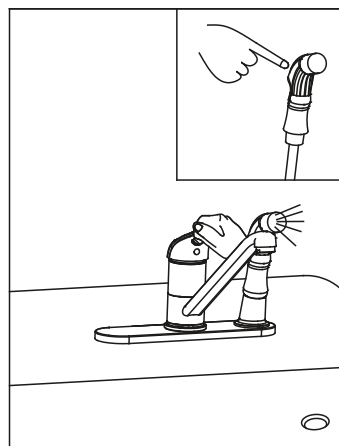

T2301

IMPORTANT: AUCUNE INSTALLATION NE DEVRAIT ÊTRE COMMENCÉE SANS AVOIR LE PRODUIT EN MAIN. LES MESURES POURRAIENT VARIER EN RAISON DE PERFECTIONNEMENTS APPORTÉS AU PRODUIT AU FIL DU TEMPS. NI LE FABRICANT, NI LE DISTRIBUTEUR NE POURRONT ÊTRE TENUS RESPONSABLES D'UN ÉCART ENTRE LES MESURES PRÉSENTÉES ICI ET LES MESURES RÉELLES DU PRODUIT. CE PRODUIT DEVRAIT ÊTRE INSTALLÉ PAR UN PROFESSIONNEL CERTIFIÉ, CONFORMÉMENT À LA RÉGLEMENTATION EN VIGUEUR.

CAUTION: NEVER INSTALL UNLESS YOU ARE IN POSSESSION OF THE PRODUCT. MEASUREMENTS MAY VARY AS A RESULT OF IMPROVEMENTS MADE TO THE PRODUCT OVER TIME. NEITHER THE MANUFACTURER NOR THE DISTRIBUTOR SHALL BE LIABLE FOR VARIANCES BETWEEN THE MEASUREMENTS SHOWN HERE AND THE PRODUCT'S ACTUAL MEASUREMENTS. THIS PRODUCT SHOULD BE INSTALLED BY A CERTIFIED PROFESSIONAL, IN ACCORDANCE WITH THE REGULATIONS IN EFFECT.