




ROBINET DE BAIN
BATHTUB FAUCET

GUIDE D'INSTALLATION
INSTALLATION GUIDE

OUTILS NÉCESSAIRES
TOOLS REQUIRED

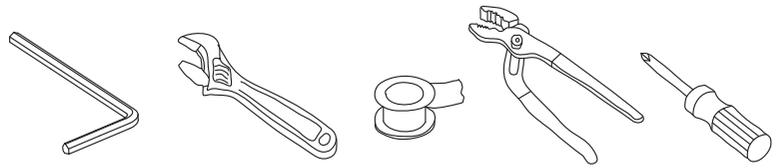

ÉTAPE 1 **1** **Coupez l'alimentation d'eau avant de commencer l'installation.**
STEP SHUT OFF THE MAIN WATER SUPPLY BEFORE BEGINNING THE INSTALLATION.

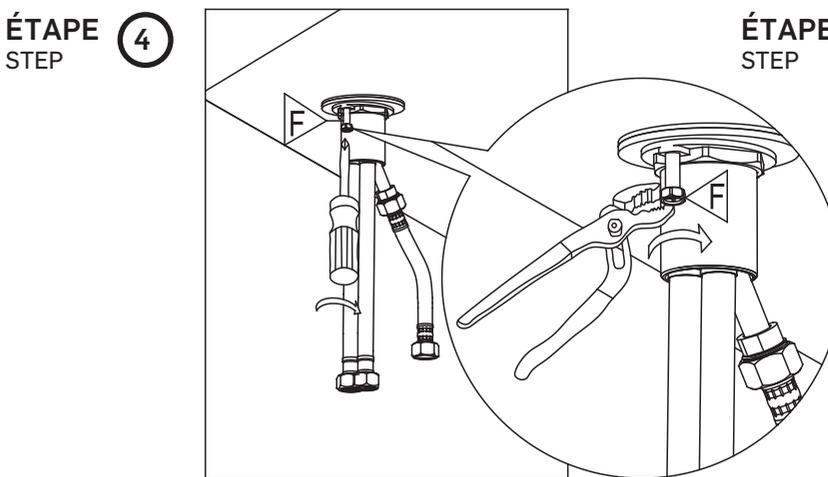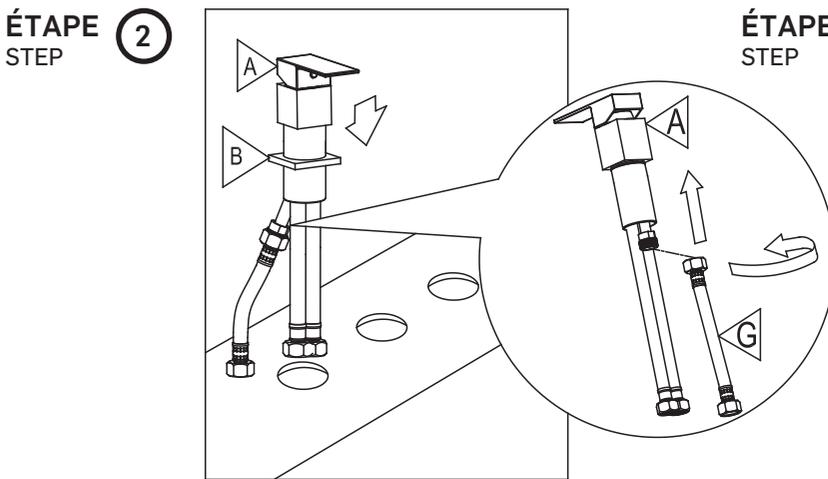

TOLOMEO

3051910
TS2304


TASSILI.CA

FINI NOIR
BLACK FINISH




TASSILI SUPRA[®]


ÉTAPE
STEP 6

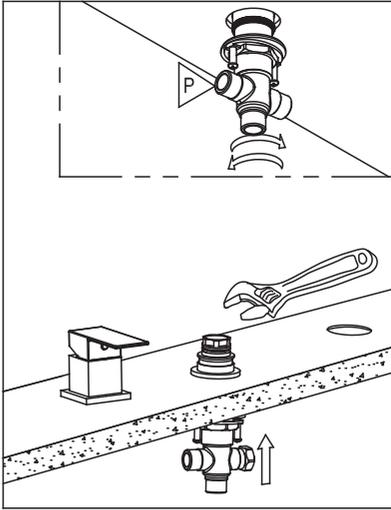


ÉTAPE
STEP 7

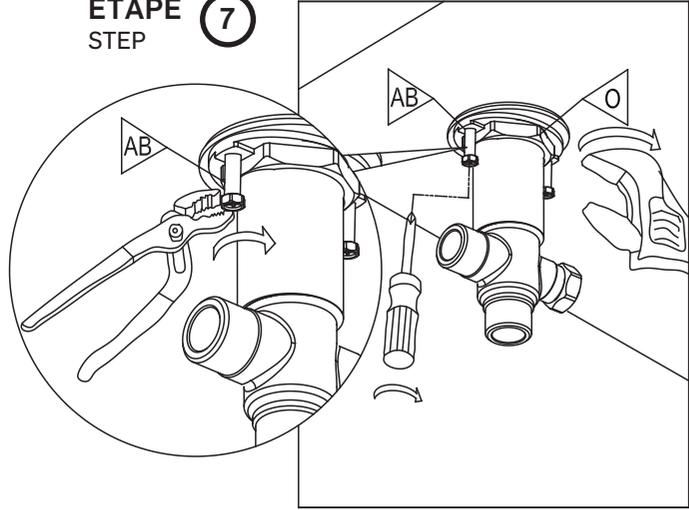


ÉTAPE
STEP 8

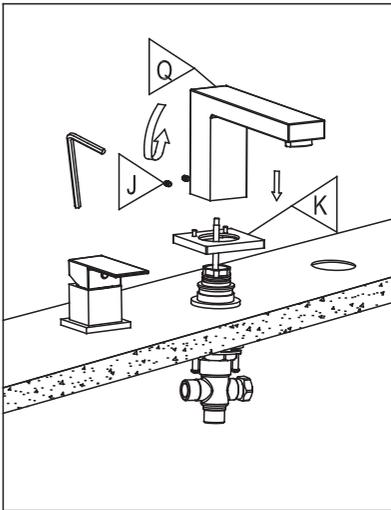


ÉTAPE
STEP 9

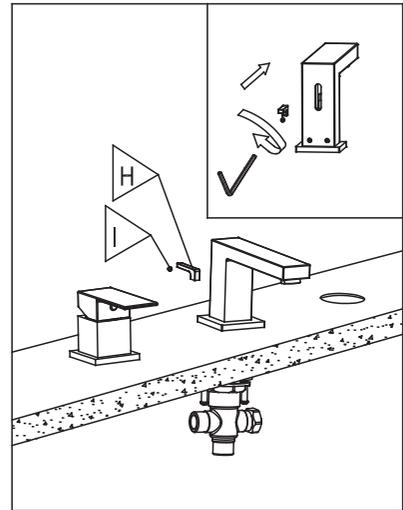


ÉTAPE
STEP 10

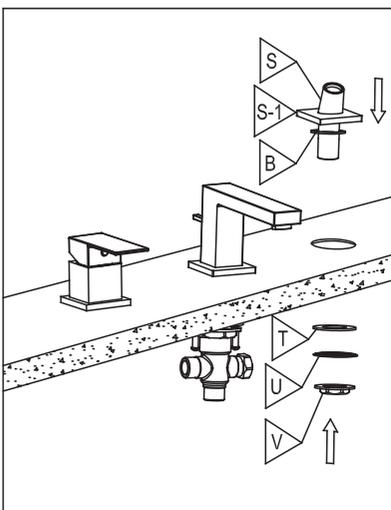


ÉTAPE
STEP 11

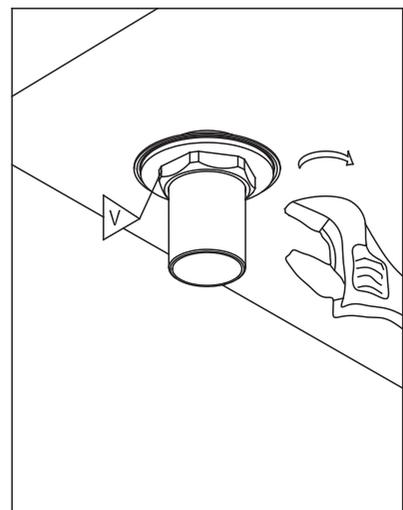


ÉTAPE 12
STEP

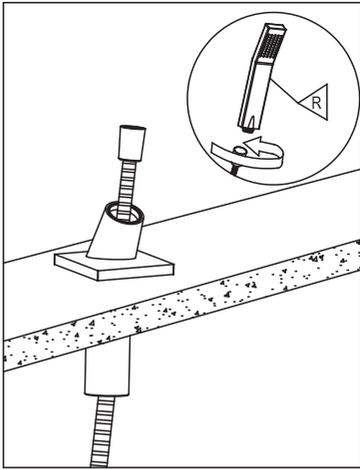


ÉTAPE 13
STEP

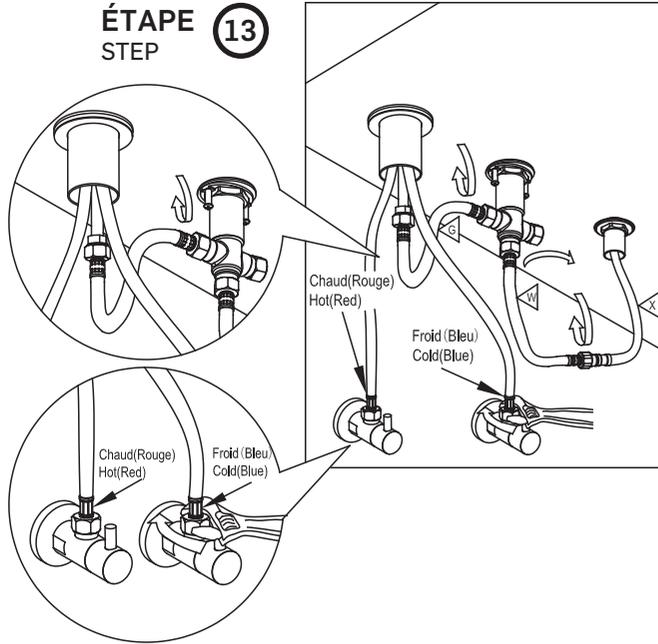

ÉTAPE 14
STEP

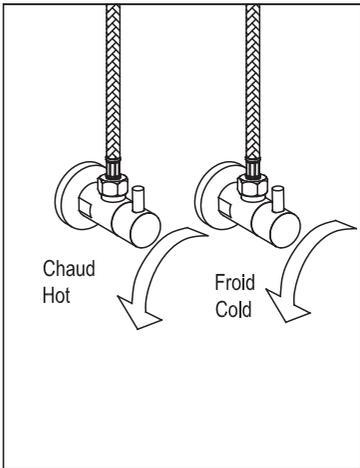

ÉTAPE 15
STEP

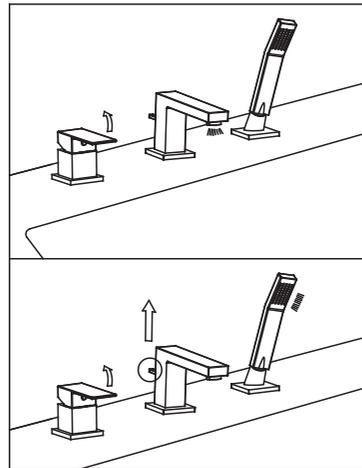

AVERTISSEMENT : AUCUNE INSTALLATION NE DEVRAIT ÊTRE COMMENCÉE SANS AVOIR LE PRODUIT EN MAIN. LES MESURES POURRAIENT VARIER EN RAISON DE PERFECTIONNEMENTS APPORTÉS AU PRODUIT AU FIL DU TEMPS. NI LE FABRICANT, NI LE DISTRIBUTEUR NE POURRONT ÊTRE TENUS RESPONSABLES D'UN ÉCART ENTRE LES MESURES PRÉSENTÉES ICI ET LES MESURES RÉELLES DU PRODUIT. CE PRODUIT DEVRAIT ÊTRE INSTALLÉ PAR UN PROFESSIONNEL CERTIFIÉ, CONFORMÉMENT À LA RÉGLEMENTATION EN VIGUEUR.

WARNING: NEVER INSTALL UNLESS YOU ARE IN POSSESSION OF THE PRODUCT. MEASUREMENTS MAY VARY AS A RESULT OF IMPROVEMENTS MADE TO THE PRODUCT OVER TIME. NEITHER THE MANUFACTURER NOR THE DISTRIBUTOR SHALL BE LIABLE FOR VARIANCES BETWEEN THE MEASUREMENTS SHOWN HERE AND THE PRODUCT'S ACTUAL MEASUREMENTS. THIS PRODUCT SHOULD BE INSTALLED BY A CERTIFIED PROFESSIONAL, IN ACCORDANCE WITH THE REGULATIONS IN EFFECT.