


ROBINET DE BAIN BATHTUB FAUCET

GUIDE D'INSTALLATION INSTALLATION GUIDE


OUTILS NÉCESSAIRES

TOOLS REQUIRED

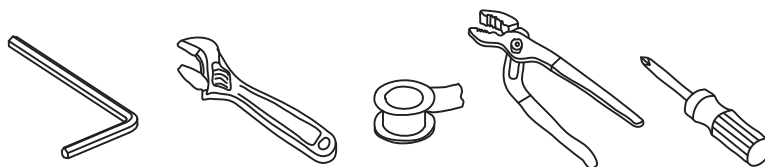


ÉTAPE 1 **Coupez l'alimentation d'eau avant de commencer l'installation.**
STEP Shut off the main water supply before beginning the installation.


ÉTAPE 2
STEP

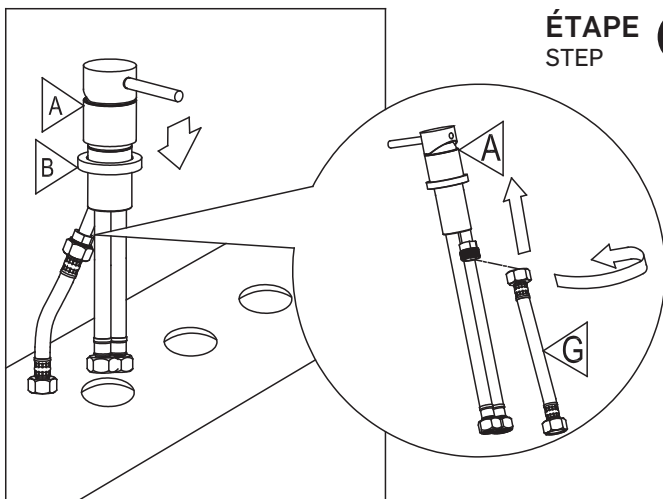


ÉTAPE 3
STEP

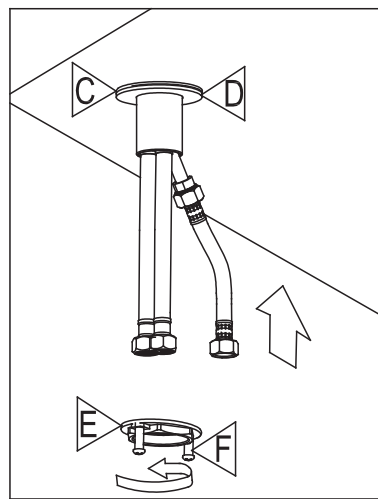

ÉTAPE 4
STEP

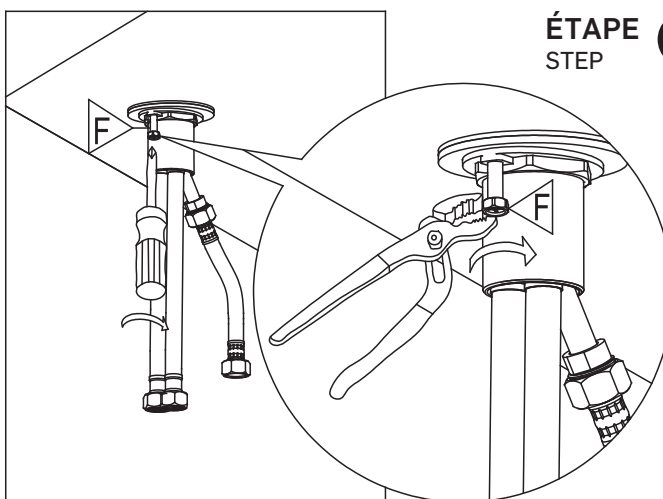

ÉTAPE 5
STEP

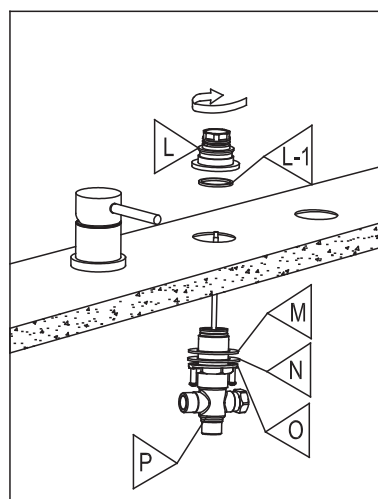

LAVO
33002544
TS2304


TASSILI.CA

FINI CHROME
CHROME FINISH




TASSILI SUPRA®


ÉTAPE 6
STEP

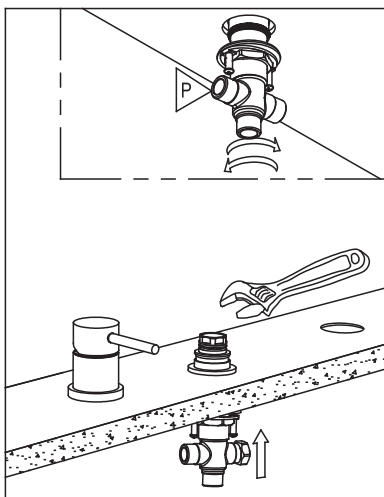


ÉTAPE 7
STEP

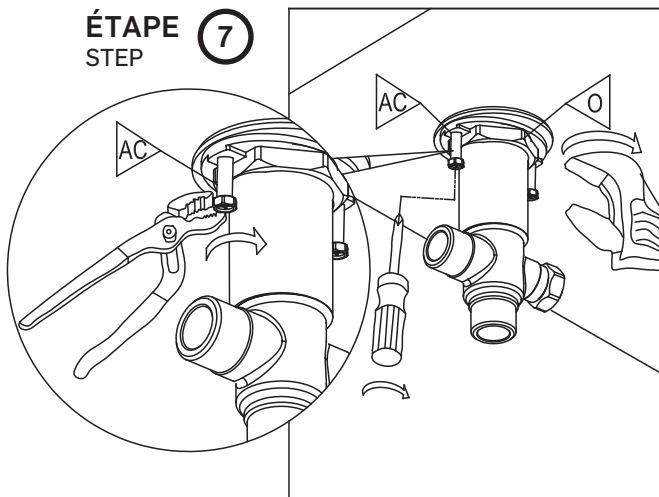


ÉTAPE 8
STEP

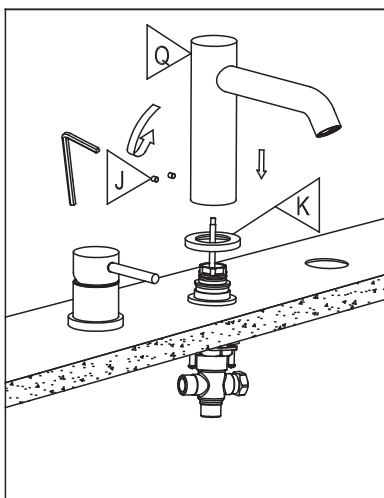


ÉTAPE 9
STEP

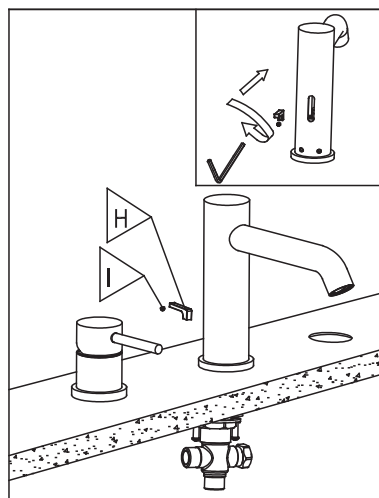


ÉTAPE 10
STEP

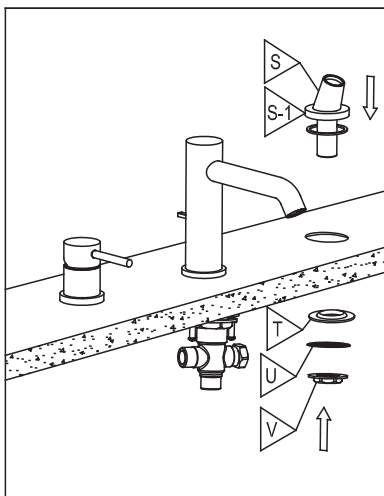


ÉTAPE 11
STEP

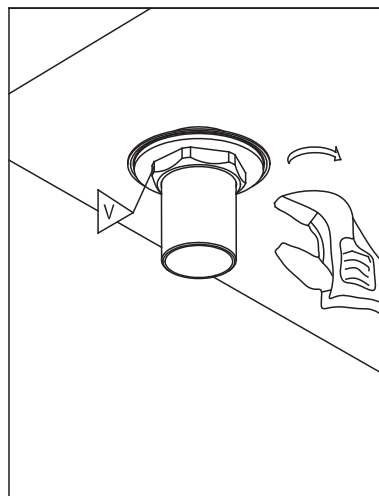


ÉTAPE 12 STEP

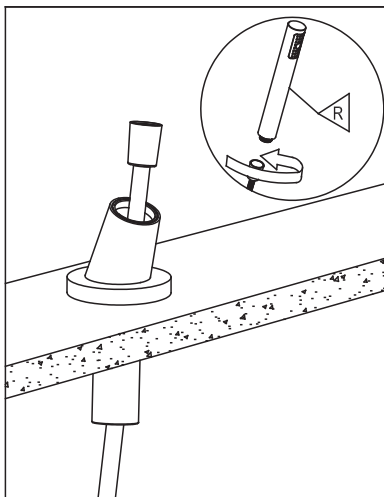


ÉTAPE 13 STEP

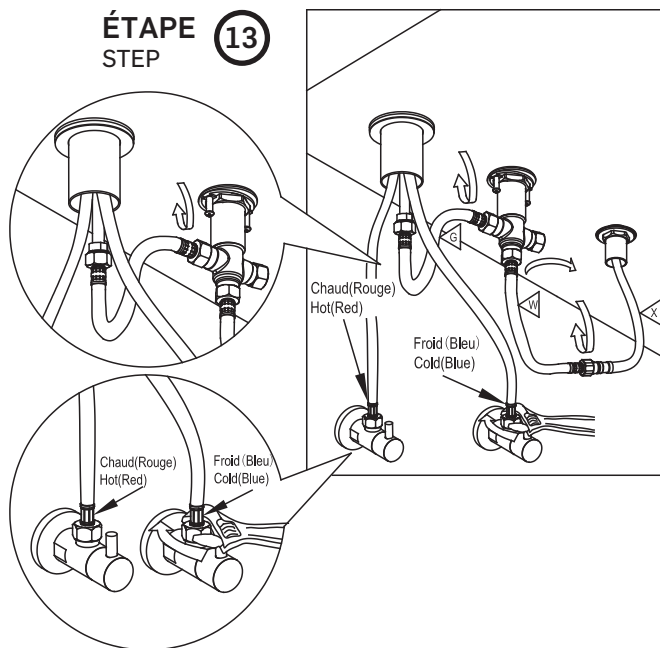

ÉTAPE 14 STEP

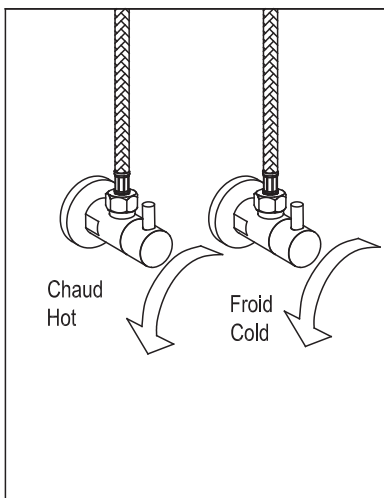

ÉTAPE 15 STEP

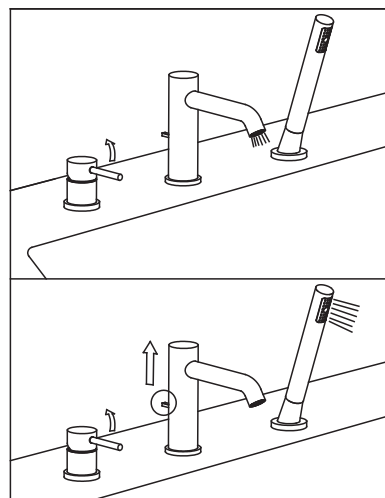

TS2304

AVERTISSEMENT : AUCUNE INSTALLATION NE DEVRAIT ÊTRE COMMENCÉE SANS AVOIR LE PRODUIT EN MAIN. LES MESURES POURRAIENT VARIER EN RAISON DE PERFECTIONNEMENTS APPORTÉS AU PRODUIT AU FIL DU TEMPS. NI LE FABRICANT, NI LE DISTRIBUTEUR NE POURRONT ÊTRE TENUS RESPONSABLES D'UN ÉCART ENTRE LES MESURES PRÉSENTÉES ICI ET LES MESURES RÉELLES DU PRODUIT. CE PRODUIT DEVRAIT ÊTRE INSTALLÉ PAR UN PROFESSIONNEL CERTIFIÉ, CONFORMÉMENT À LA RÉGLEMENTATION EN VIGUEUR.

WARNING: NEVER INSTALL UNLESS YOU ARE IN POSSESSION OF THE PRODUCT. MEASUREMENTS MAY VARY AS A RESULT OF IMPROVEMENTS MADE TO THE PRODUCT OVER TIME. NEITHER THE MANUFACTURER NOR THE DISTRIBUTOR SHALL BE LIABLE FOR VARIANCES BETWEEN THE MEASUREMENTS SHOWN HERE AND THE PRODUCT'S ACTUAL MEASUREMENTS. THIS PRODUCT SHOULD BE INSTALLED BY A CERTIFIED PROFESSIONAL, IN ACCORDANCE WITH THE REGULATIONS IN EFFECT.