



NICHE DE DOUCHE SHOWER NICHE

GUIDE D'INSTALLATION INSTALLATION GUIDE


OUTILS NÉCESSAIRES TOOLS REQUIRED

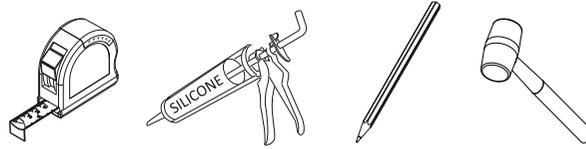


ÉTAPE 1 STEP 1

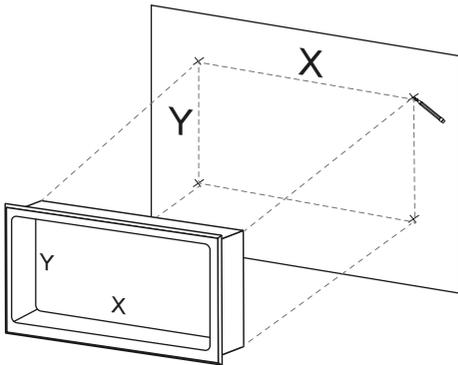


ÉTAPE 2 STEP 2

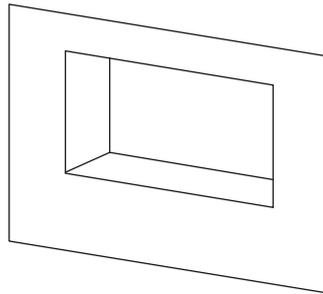


ÉTAPE 3 STEP 3

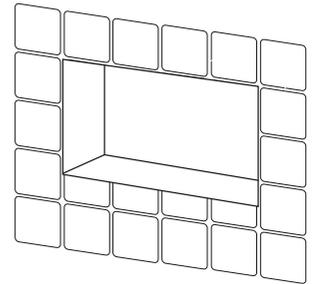


ÉTAPE 4 STEP 4

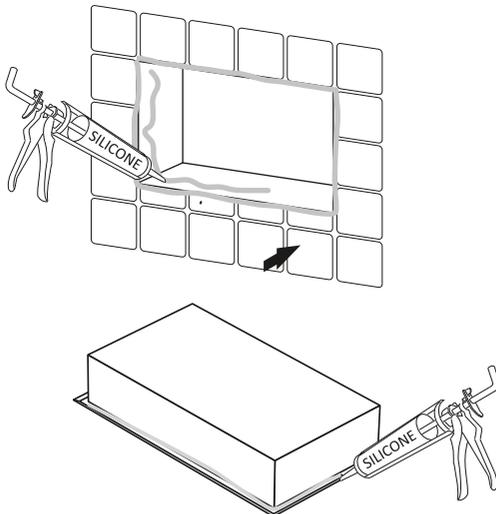

ÉTAPE 5 STEP 5

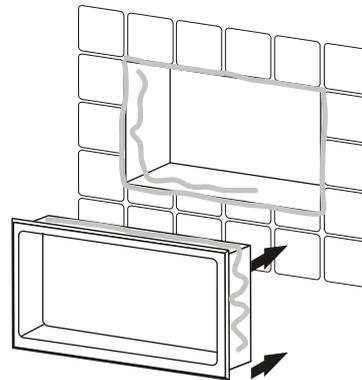

ÉTAPE 6 STEP 6

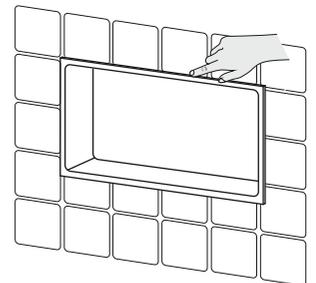

AVERTISSEMENT : POUR UNE INSTALLATION ÉTANCHE, ASSUREZ-VOUS D'UTILISER DES MATÉRIEAUX CONÇUS À CET EFFET.

WARNING: FOR A WATERPROOF INSTALLATION, BE SURE TO USE MATERIALS DESIGNED FOR THIS PURPOSE.

33003151
TS2311

NOIR
BLACK



TASSILI.CA

TASSILI SUPRA®

AVERTISSEMENT : AUCUNE INSTALLATION NE DEVRAIT ÊTRE COMMENCÉE SANS AVOIR LE PRODUIT EN MAIN. LES MESURES POURRAIENT VARIER EN RAISON DE PERFECTIONNEMENTS APPORTÉS AU PRODUIT AU FIL DU TEMPS. NI LE FABRICANT, NI LE DISTRIBUTEUR NE POURRONT ÊTRE TENUS RESPONSABLES D'UN ÉCART ENTRE LES MESURES PRÉSENTÉES ICI ET LES MESURES RÉELLES DU PRODUIT. CE PRODUIT DEVRAIT ÊTRE INSTALLÉ PAR UN PROFESSIONNEL CERTIFIÉ, CONFORMÉMENT À LA RÉGLEMENTATION EN VIGUEUR.

WARNING: NEVER INSTALL UNLESS YOU ARE IN POSSESSION OF THE PRODUCT. MEASUREMENTS MAY VARY AS A RESULT OF IMPROVEMENTS MADE TO THE PRODUCT OVER TIME. NEITHER THE MANUFACTURER NOR THE DISTRIBUTOR SHALL BE LIABLE FOR VARIANCES BETWEEN THE MEASUREMENTS SHOWN HERE AND THE PRODUCT'S ACTUAL MEASUREMENTS. THIS PRODUCT SHOULD BE INSTALLED BY A CERTIFIED PROFESSIONAL, IN ACCORDANCE WITH THE REGULATIONS IN EFFECT.