



Read all instructions prior to installing product.
Refer to manufacturers safety instructions when operating any tools.


LATTICE - INSTALLING WITHOUT MOLDINGS

Installation Instructions


To register your product, please visit: barretteoutdoorliving.com

To obtain and review a copy of the warranty please visit barretteoutdoorliving.com.
You may also contact us at 1-800-336 2383 or email Cs.outdoorliving@ebarrette.com


1. Pre-drill oversized holes through lattice (drill the largest hole that screw head will allow without fitting through) (Fig. 1). Center each screw in oversized holes and do not overtighten to allow for expansion and contraction of lattice.

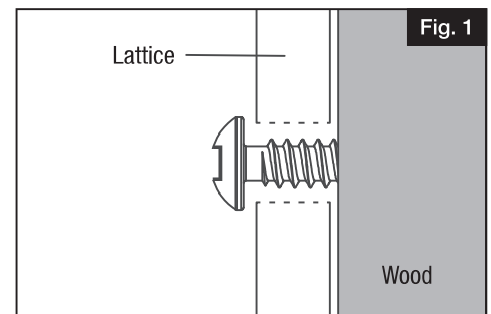

2. Hang the lattice with a support every 24" (Fig. 2). Attach sides and bottom loosely. (Do not tighten all the way). Do not use countersink screws.

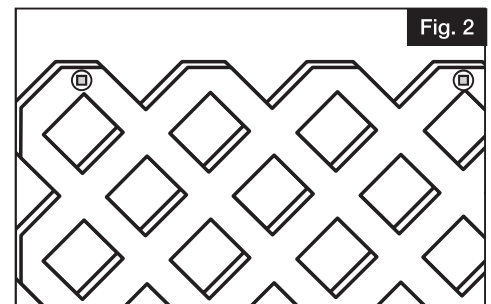

3. If using more than one panel, do not butt panels together. Leave 1/4" gap to allow for expansion and contraction (Fig. 3).

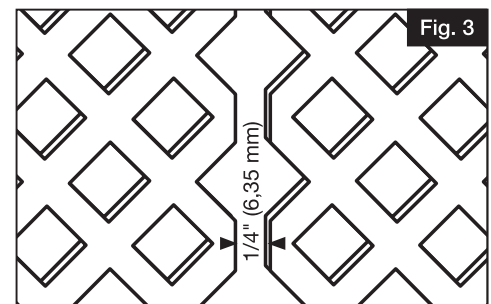

IMPORTANT THINGS TO REMEMBER

If the lattice bows, loosen attaching screws, make sure you have allowed enough gap for expansion and contraction. Place fasteners 24" apart. Do not use for horizontal installation. Do not use countersink screws.



Read all instructions prior to installing product.
Refer to manufacturers safety instructions when operating any tools.


LATTICE - INSTALLING WITH CAP & DIVIDER MOLDINGS

Installation Instructions


To register your product, please visit: barretteoutdoorliving.com

To obtain and review a copy of the warranty please visit barretteoutdoorliving.com.
You may also contact us at 1-800-336 2383 or email Cs.outdoorliving@ebarrette.com


1. Pre-drill oversized holes through lattice and molding (drill the largest hole that screw head will allow without fitting through) (Fig. 1). Center each screw in oversized holes and do not overtighten to allow for expansion and contraction of lattice.

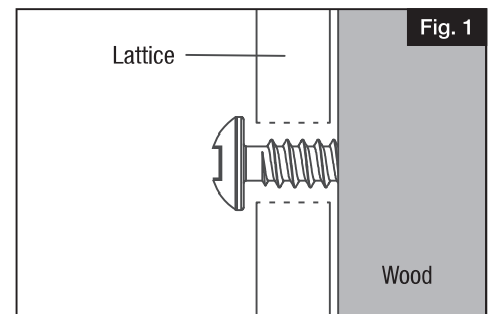

2. Along the top, drill and fasten every 24". Drill holes and hang through both molding and panel (Fig. 2).

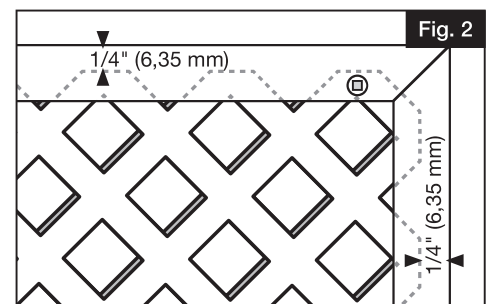

3. Along the sides and bottom, drill holes and put screws through molding only. Allow a 1/4" gap on all sides for expansion with cap and divider moldings (Fig. 3).

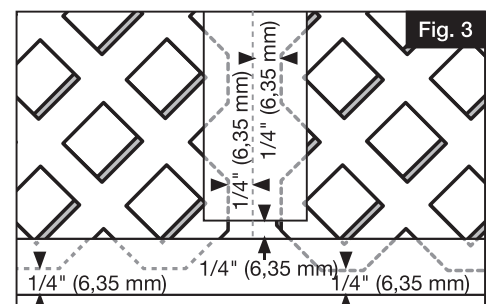

IMPORTANT THINGS TO REMEMBER

If the lattice bows, loosen attaching screws, make sure you have allowed enough gap for expansion and contraction. Place fasteners 24" apart. Do not use for horizontal installation. Do not use countersink screws.