


Dalton Storage Bed

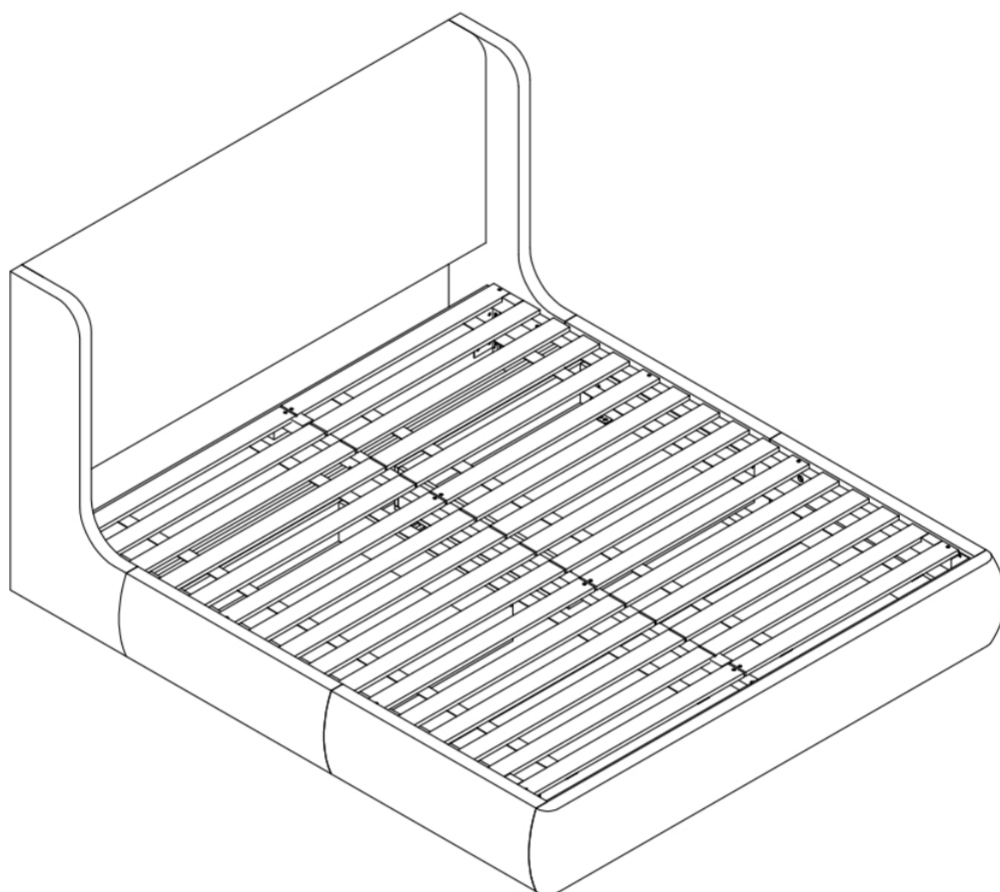

Hello there.

We're thrilled this Castlery piece has made it home.

We obsess over every joint, stitch, and finish because we design for real life—the spills, the lounging, the hosting, and the years that follow. So having a place in your home means a lot.


You're about to set it up and we've kept the steps simple. When you're done, share a photo or leave a review with **#AtHomeWithCastlery**. We love seeing our pieces in your homes.

Thanks again for choosing Castlery. Let's get building.


Contact us.

If you run into any issues or need a quick answer, we're here to help. Reach us anytime at www.castlery.com/contact-us


Before you start...

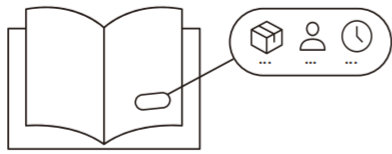


Confirm you have all cartons, review the assembly steps, set aside time, and get others to assist if needed.

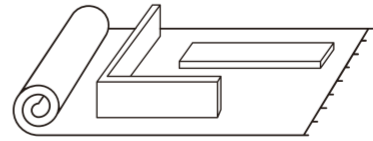


Ensure enough space for assembly. We recommend protecting your floor with a mat or cardboard to avoid scratches during the assembly process.

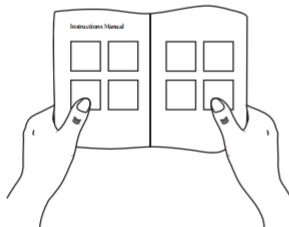


Read instructions carefully, and check that no parts are missing.

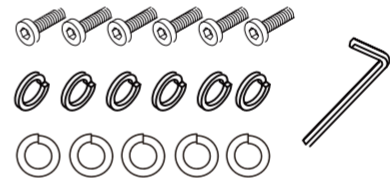


Lay out all hardware on a soft surface so you can easily identify them.

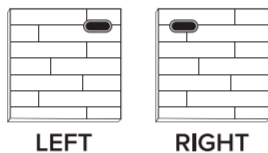

Carefully identify all components to differentiate which pieces are left and right.

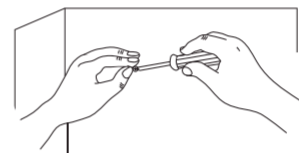

Follow the instructions closely.
Don't skip ahead!

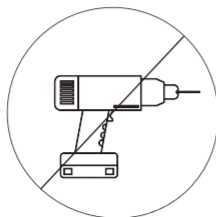


DO NOT over-tighten screws or use a drill.



Need a hand? Contact us:
www.castlery.com/contact-us

Overview

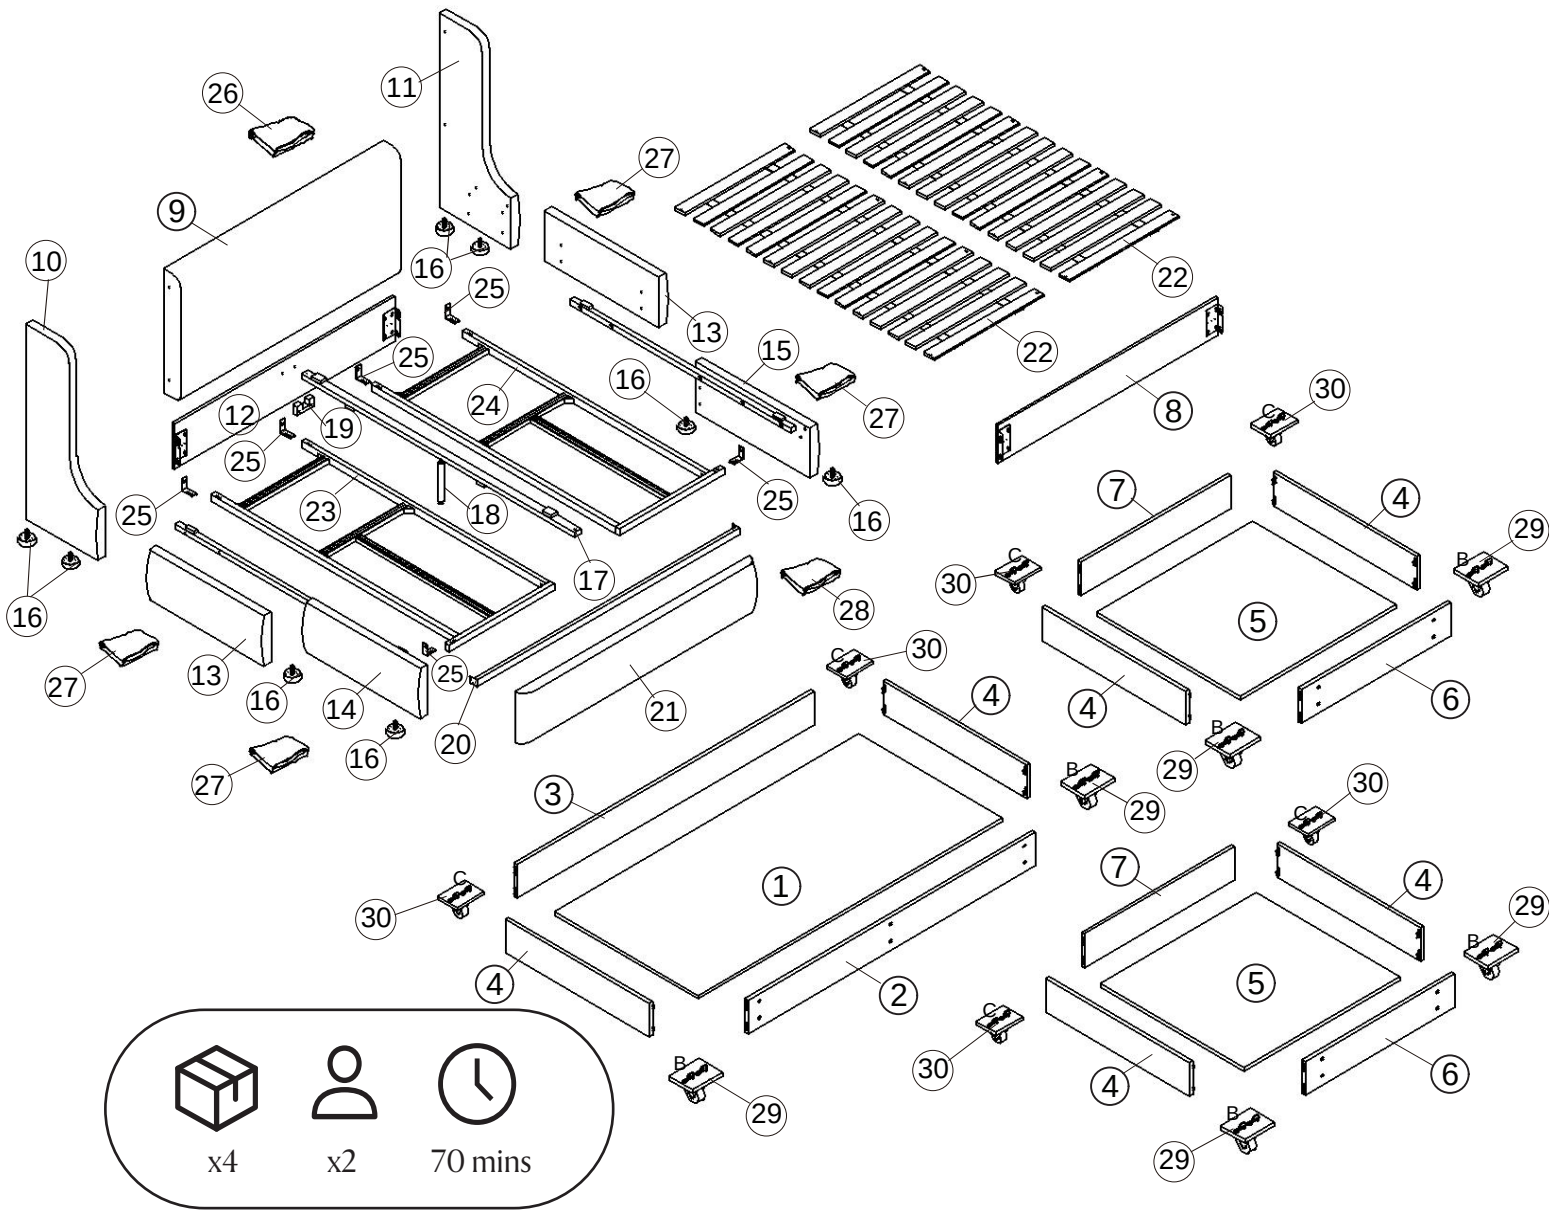

IMPORTANT: 2 persons needed for assembly.

This will help to minimize potential damage to the product or injury to persons during assembly.



There are inner box(es) that include components required to complete this assembly.



Please do not completely tighten all the hardware, until each assembly step is complete.




Before discarding the packaging, please use the checklist to ensure that you have all the parts required to assemble your product. Please kindly note if applicable please keep the original package when you want to return the product later.



If parts are missing or damaged, we will gladly ship your replacements parts free of charge. Please contact us via www.castlery.com/contact-us. Illustrations in this guide are for reference only and may be slightly different from the actual object.

Overview

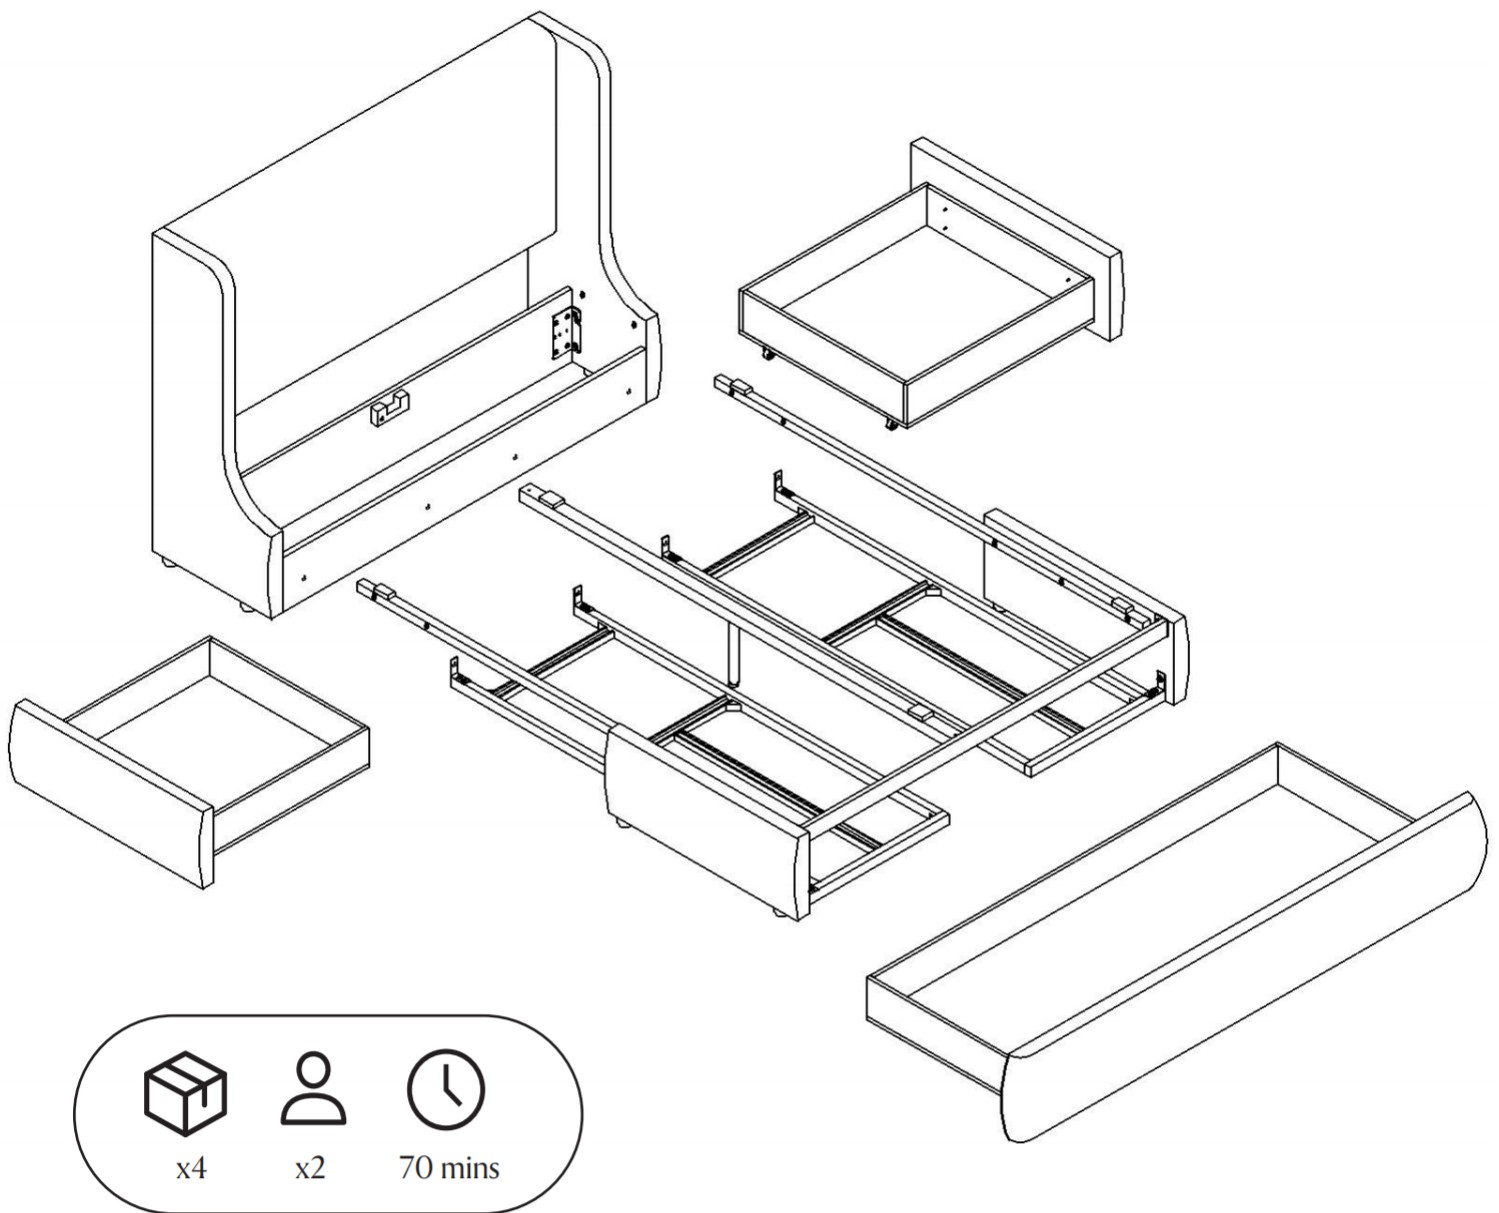

x4



x2



70 mins



IMPORTANT: 2 persons needed for assembly.

This will help to minimize potential damage to the product or injury to persons during assembly.



There are inner box(es) that include components required to complete this assembly.



Please do not completely tighten all the hardware, until each assembly step is complete.







Before discarding the packaging, please use the checklist to ensure that you have all the parts required to assemble your product. Please kindly note if applicable please keep the original package when you want to return the product later.



If parts are missing or damaged, we will gladly ship your replacements parts free of charge. Please contact us via www.castlery.com/contact-us. Illustrations in this guide are for reference only and may be slightly different from the actual object.


Parts

BOX 1 OF 4

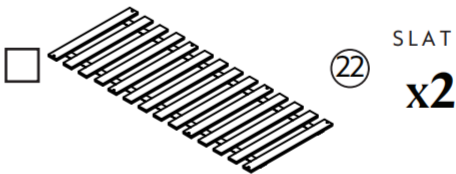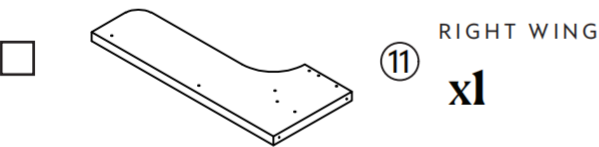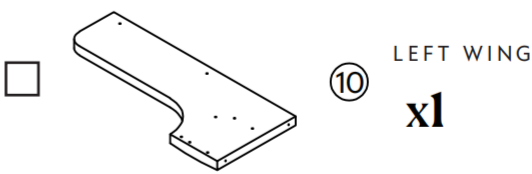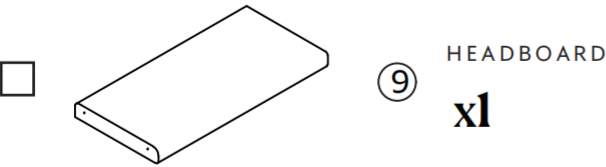


Parts


BOX 2 OF 4

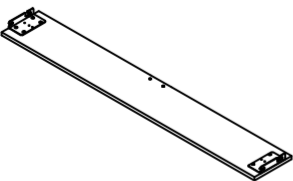- ☐
- 
- 12


WINGS CONNECTION
PANEL

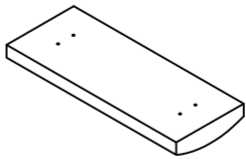x1
- ☐
- 
- 13

SIDE PANEL
(DRAWER)

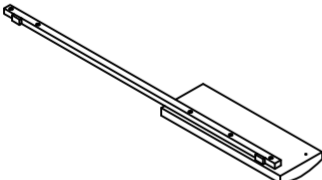x2
- ☐
- 
- 14


SIDE RAIL L

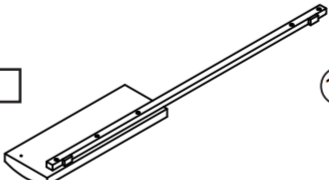x1
- ☐
- 
- 15

SIDE RAIL R

x1
- ☐
- 
- 16


LEGS

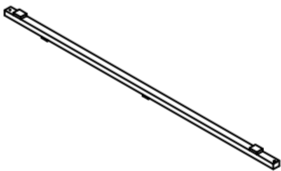x8
- ☐
- 
- 17

SUPPORT BAR

x1
- ☐
- 
- 18


SUPPORT LEG

x1
- ☐
- 
- 19


U-SHAPED
BRACKET

x1
- ☐
- 
- 20


METAL CONNECTOR

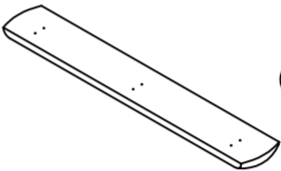x1
- ☐
- 
- 21

FOOTBOARD

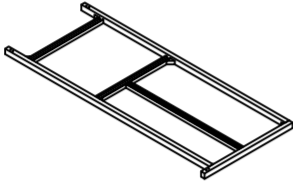x1
- ☐
- 
- 23

LEFT SLIDE RAIL

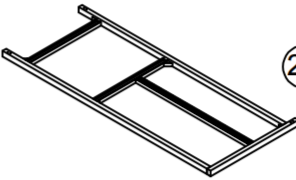x1
- ☐
- 
- 24

RIGHT SLIDE RAIL


x1
- ☐
- 
- 25

L-SHAPED METAL PLATE

x6

Parts

BOX 3 OF 4

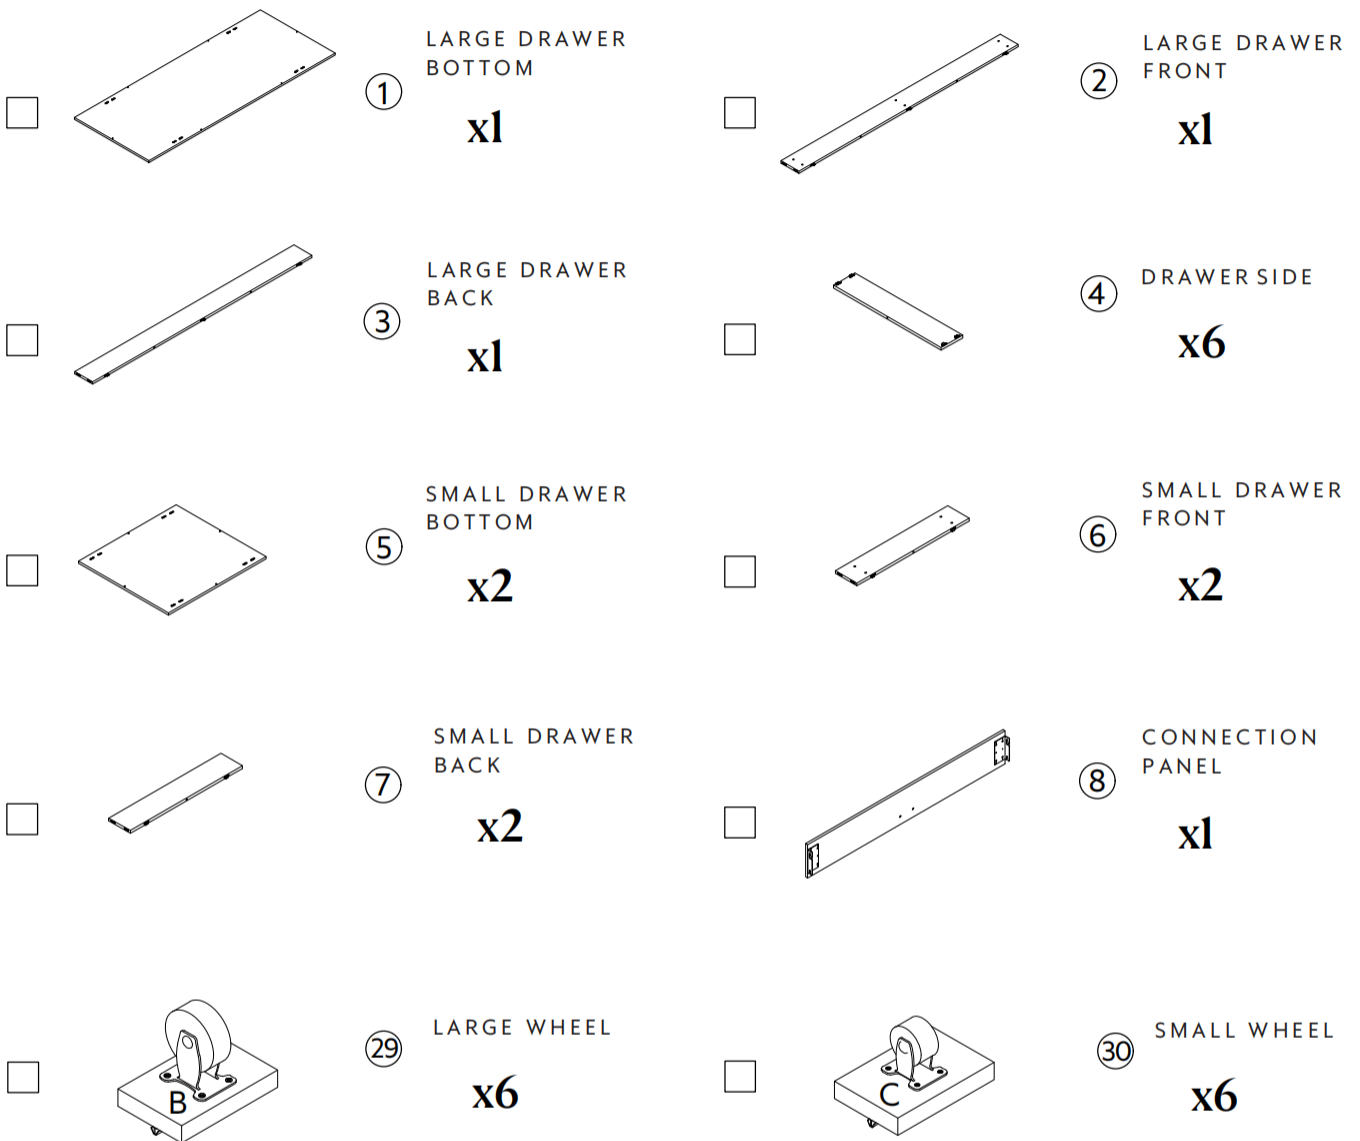

Parts

BOX 4 OF 4

☐



26

COVER

x1

☐



27

COVER

x4

☐









28

COVER


x1

Hardware


BOX 2 OF 4

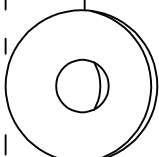					1" 2" 3" 4"																	
					mm 10 20 30 40 50 60 70 80 90 100 110 120																	
Ref	Name	Dimension	Qty	Spare Qty																		
D	Long Bolt	M8 x 50mm	8	1																		
E	Medium Bolt	M8 x 40mm	17	1																		
F	Short Bolt	M8 x 25mm	26	1																		
G	Spring Washer	M8 x 14mm	52	1																		
H	Flat Washer	M8 x 19mm	52	1																		
I	Screw	M5 x 25mm	16	1																		
J	Screw	M5 x 45mm	1	1																		
K	Short Bolt	M8 x 16mm	4	1																		
L	Allen Key	5x40x100mm	1	N/A																		


BOX 3 OF 4

					1" 2" 3" 4"																
					mm	10	20	30	40	50	60	70	80	90	100	110	120				
Ref	Name	Dimension	Qty	Spare Qty																	
A	Thumb Screw	M6 x 25mm	14	N/A																	


Step 1

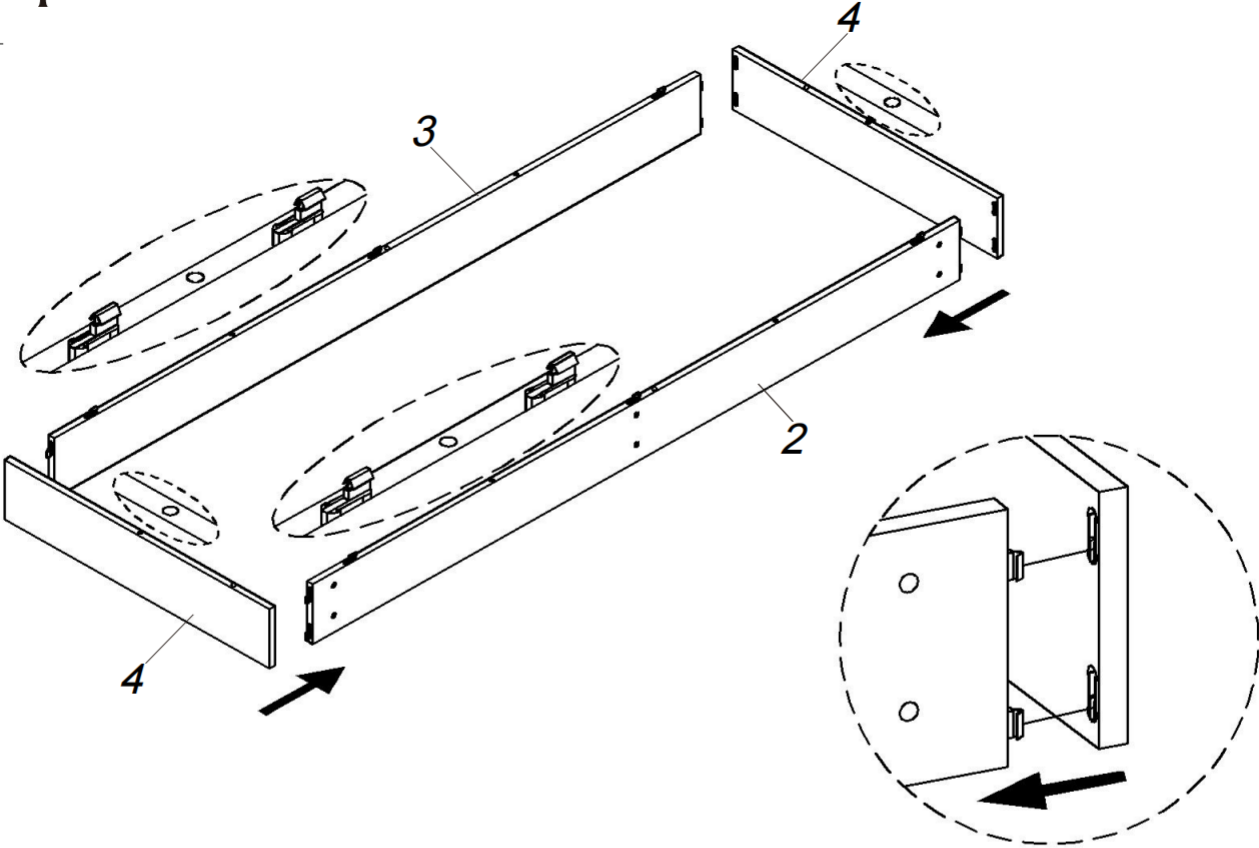


Step 2

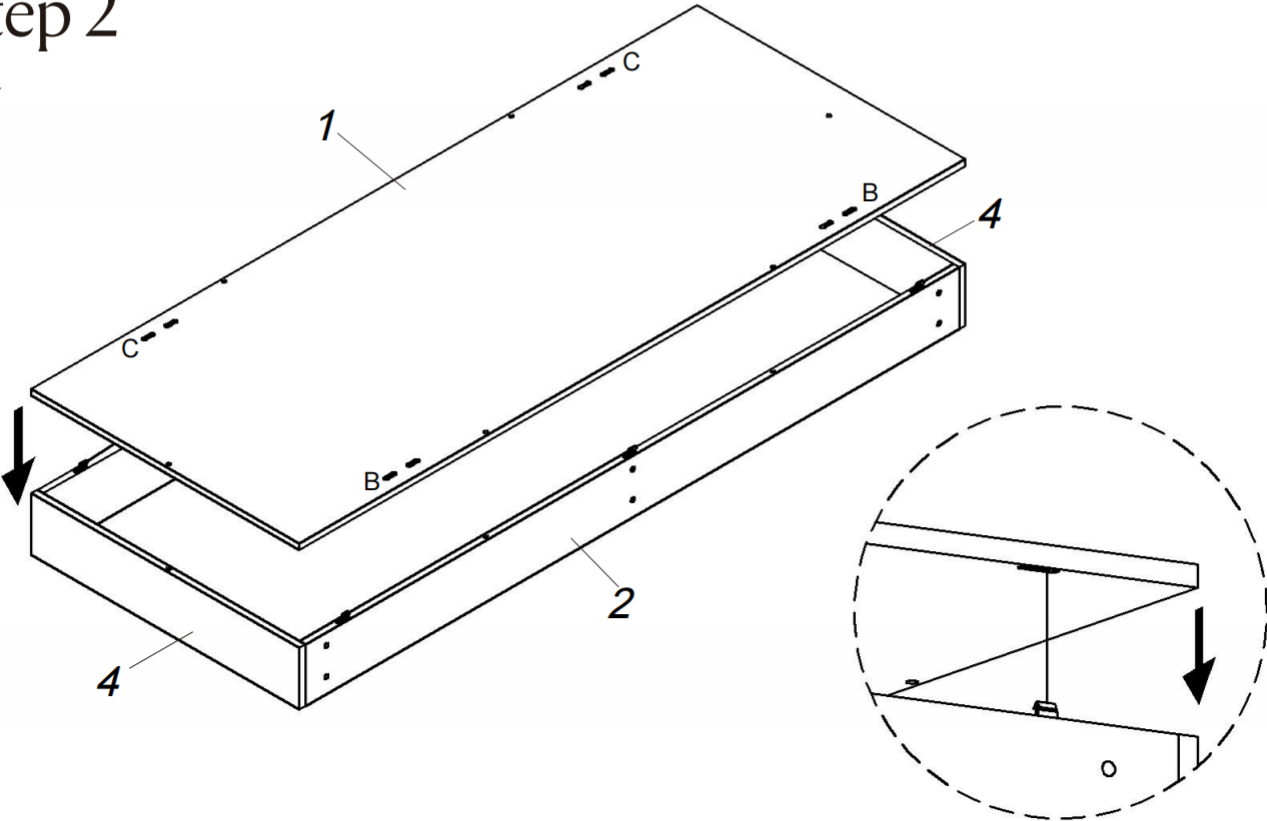






Step 5

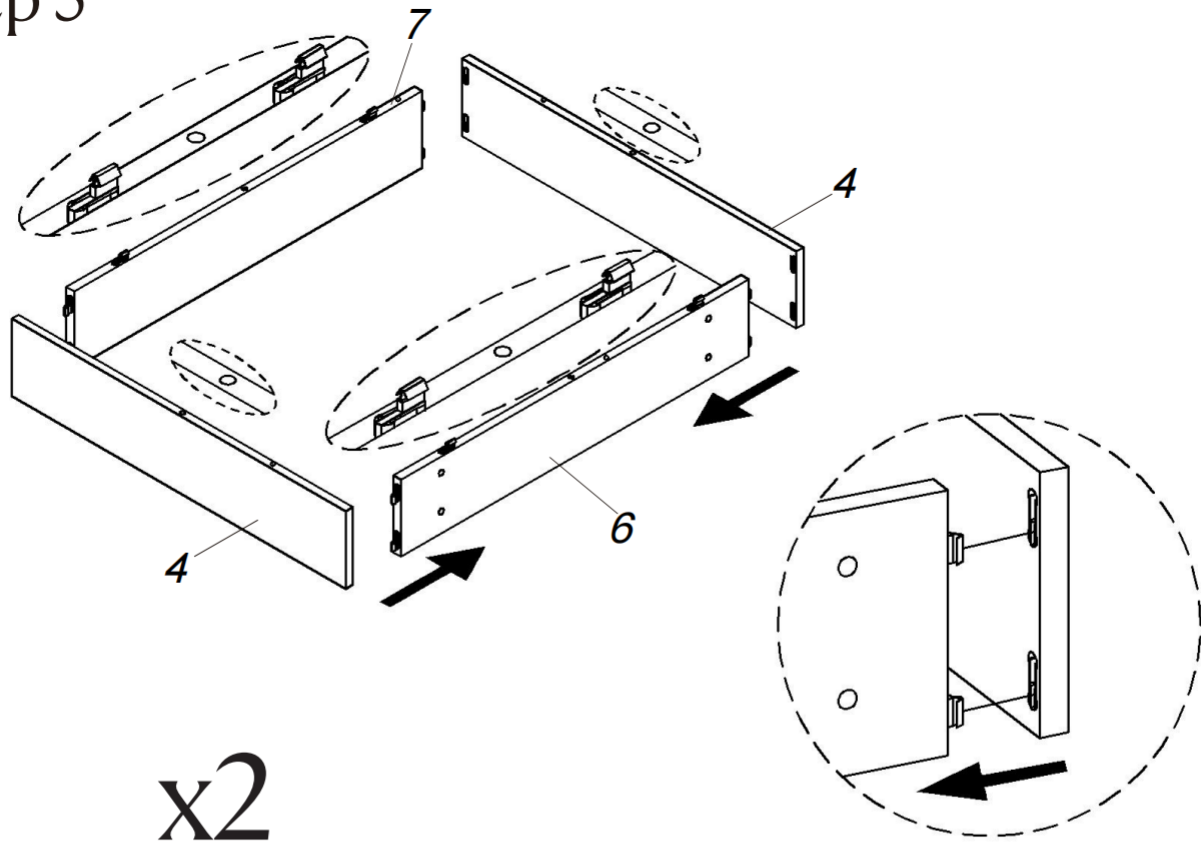

x2

Assemble the two small drawers using the same method.


Step 6

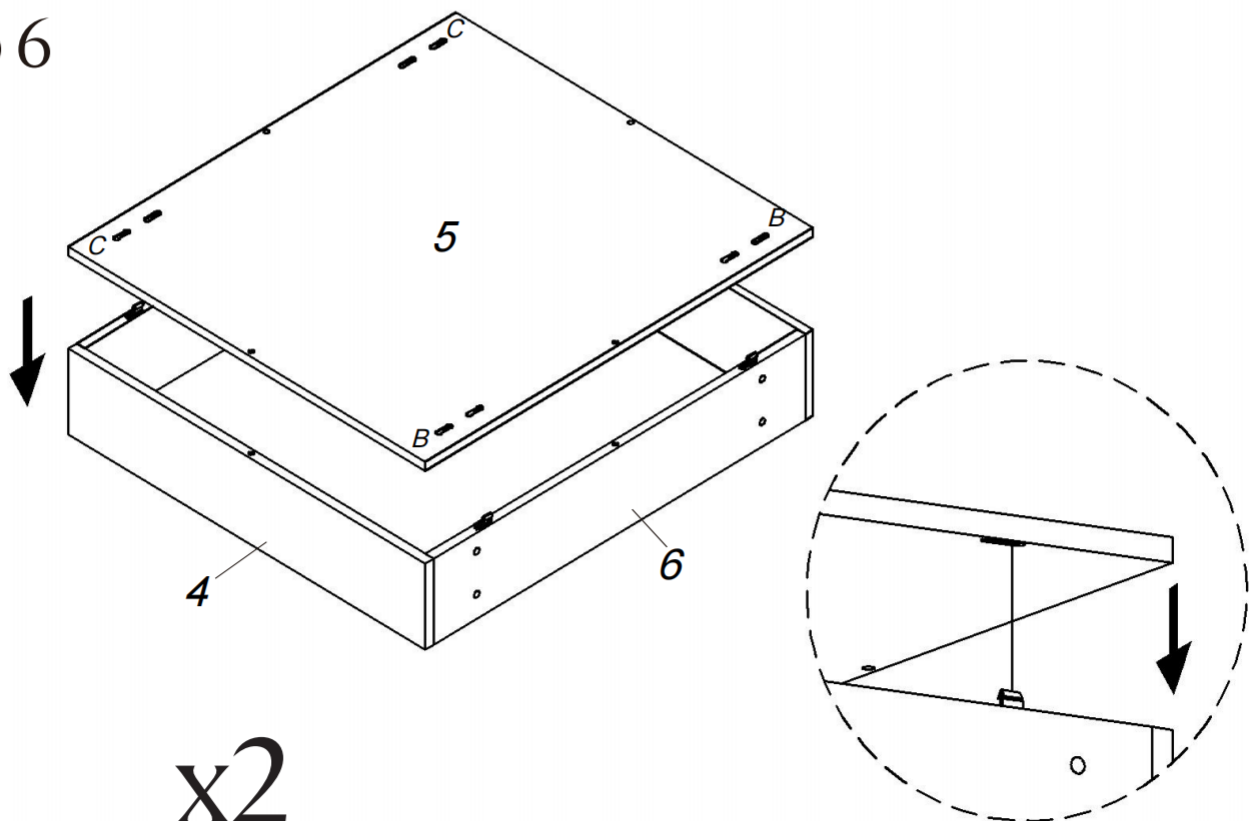

x2

Assemble the two small drawers using the same method.


Step 7

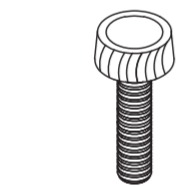

A M6*25mm ×4×2

x2

Assemble the two small drawers using the same method.

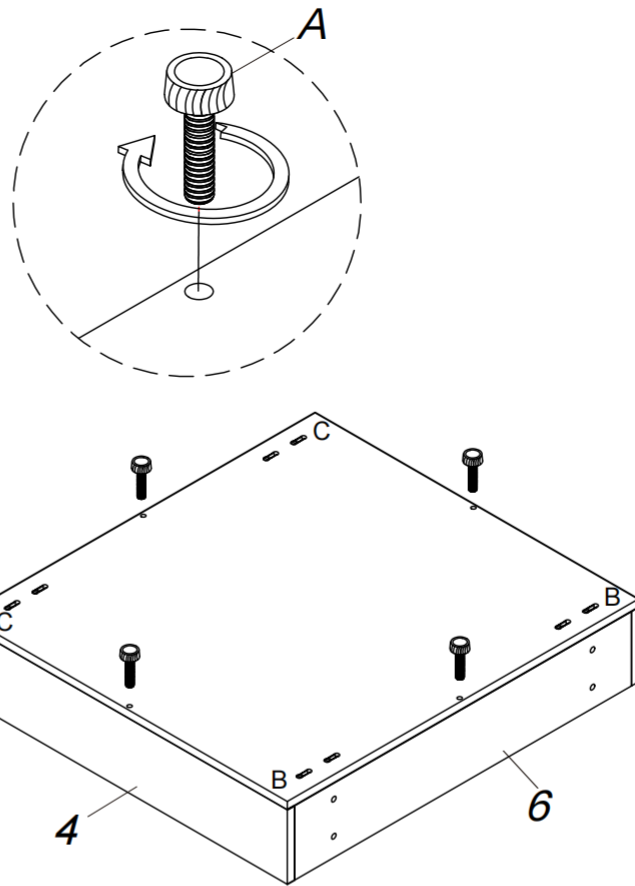


Step 8



Align to the right side of the slotted hole (as shown).

x2



Assemble the two small drawers using the same method.

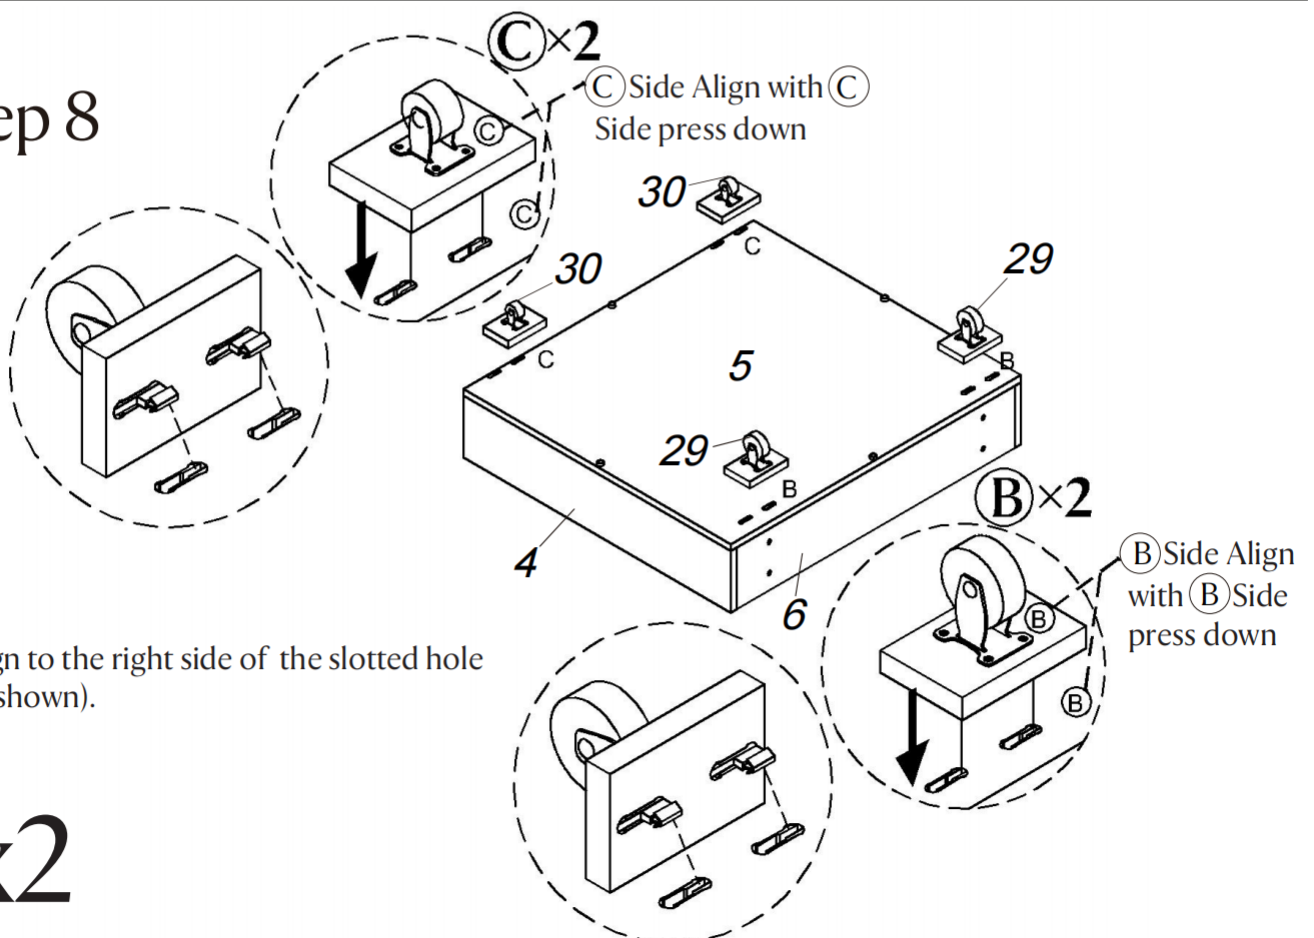

Step 9

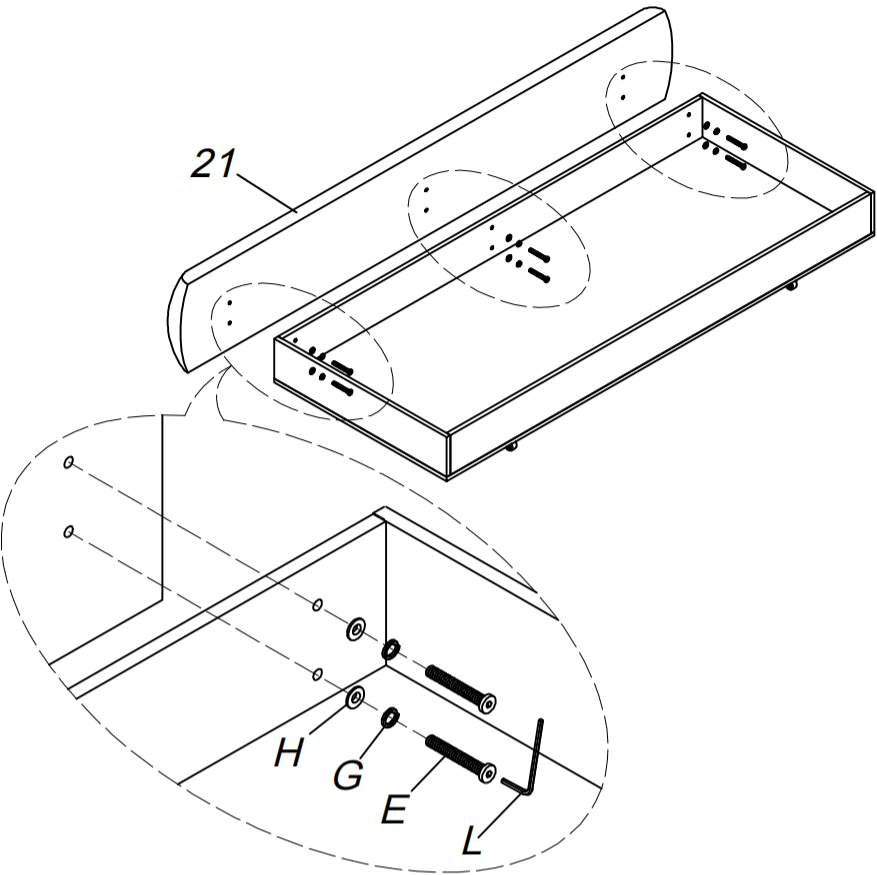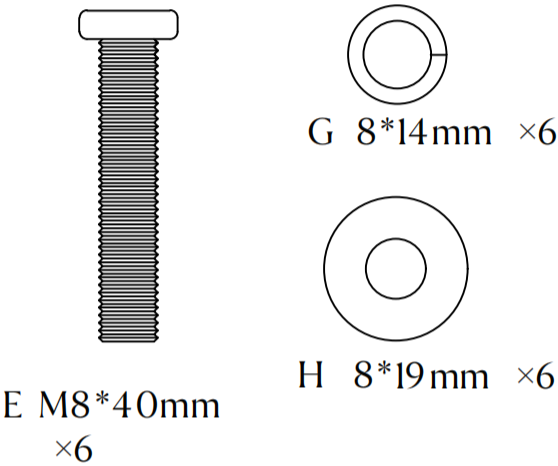


Step 10

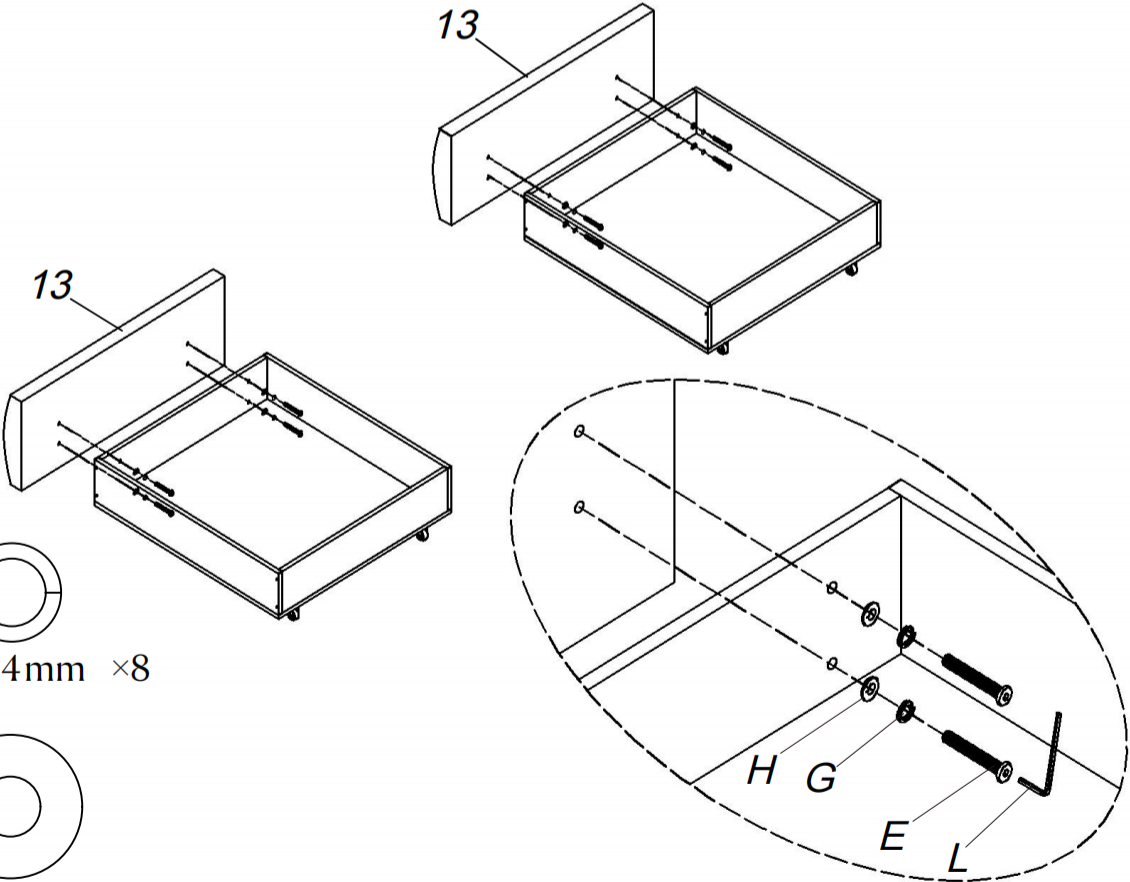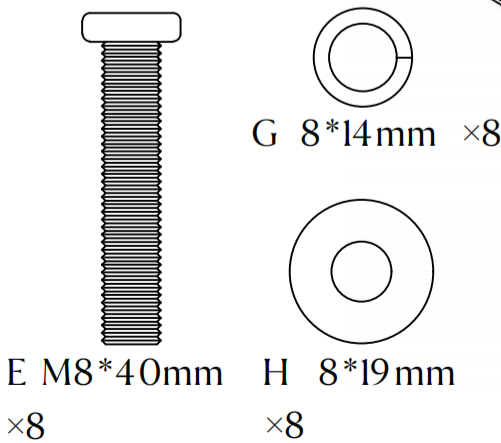


Step 11



Unzip the back of the headboard and take out slats from inside. Leave the zipper open for the next steps.

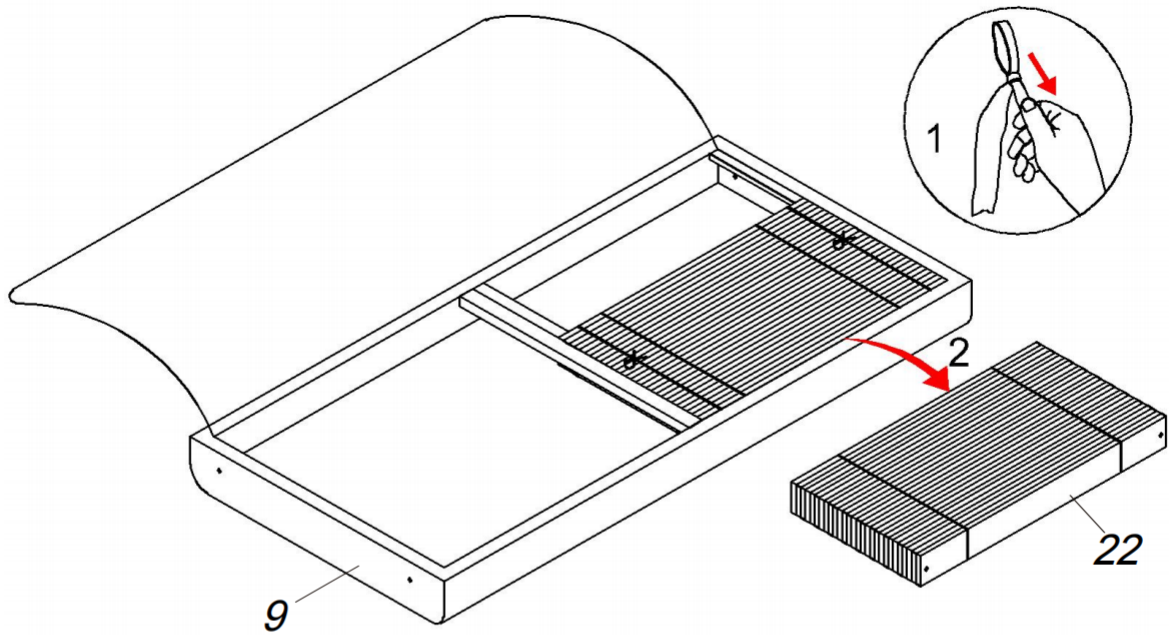



Step 12

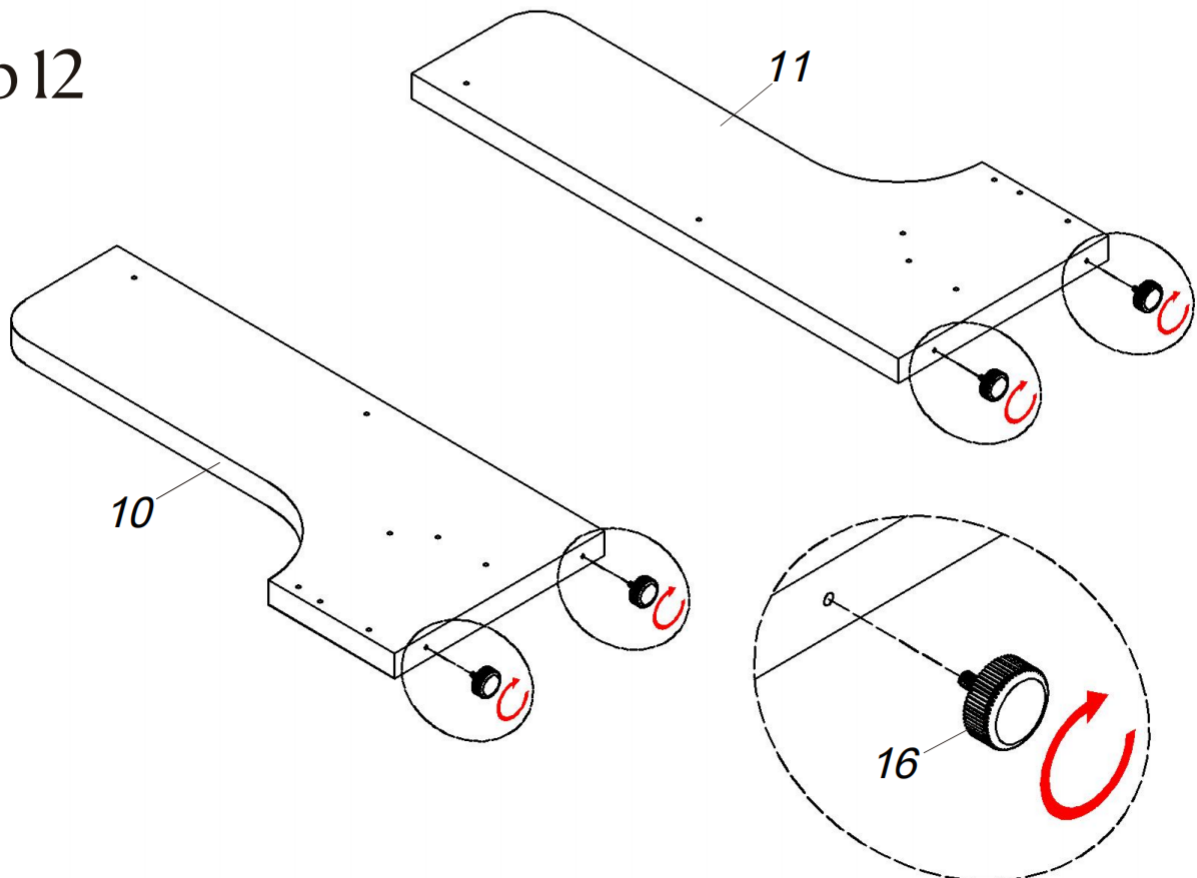


Step 13

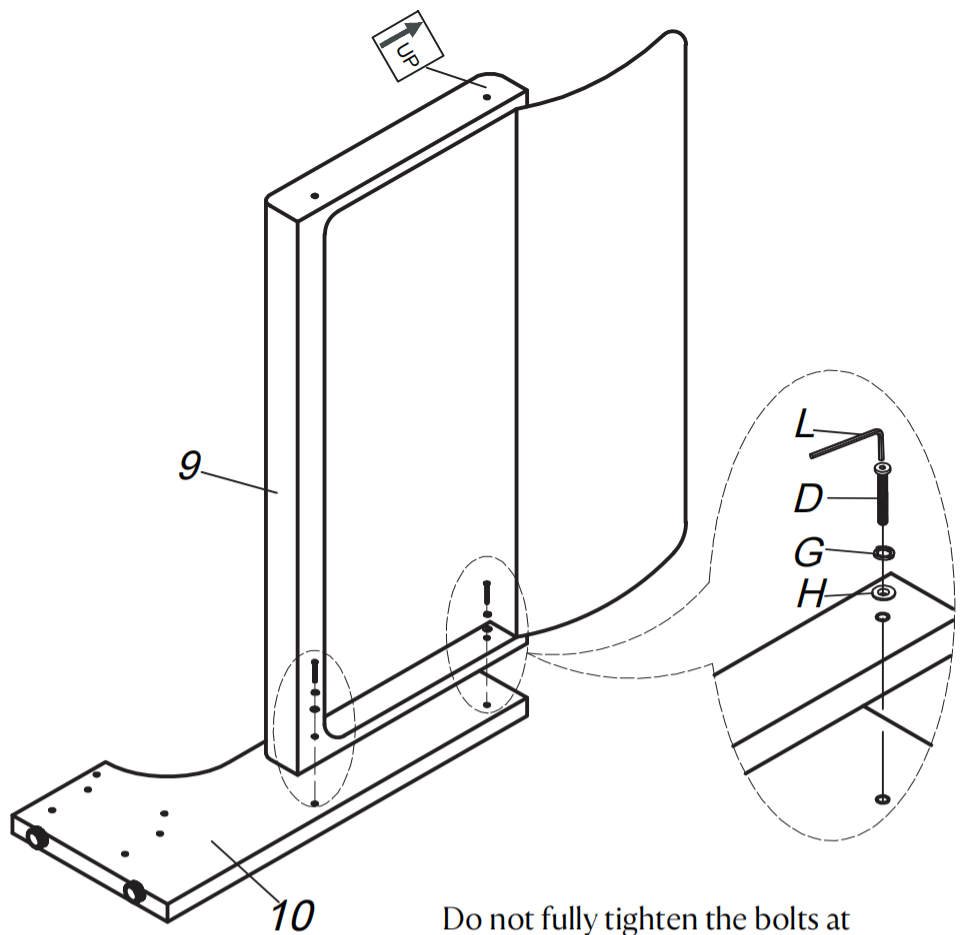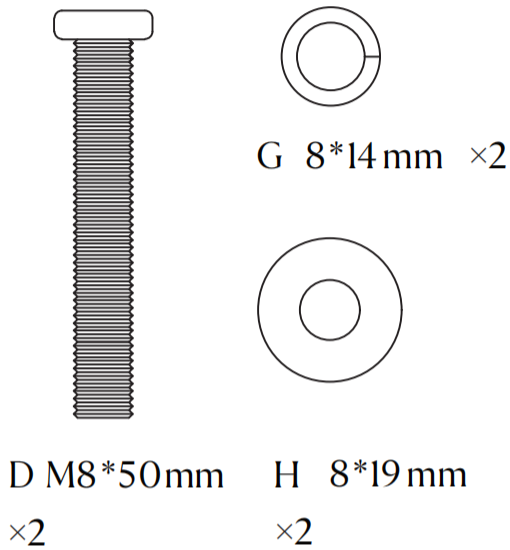

Step 14

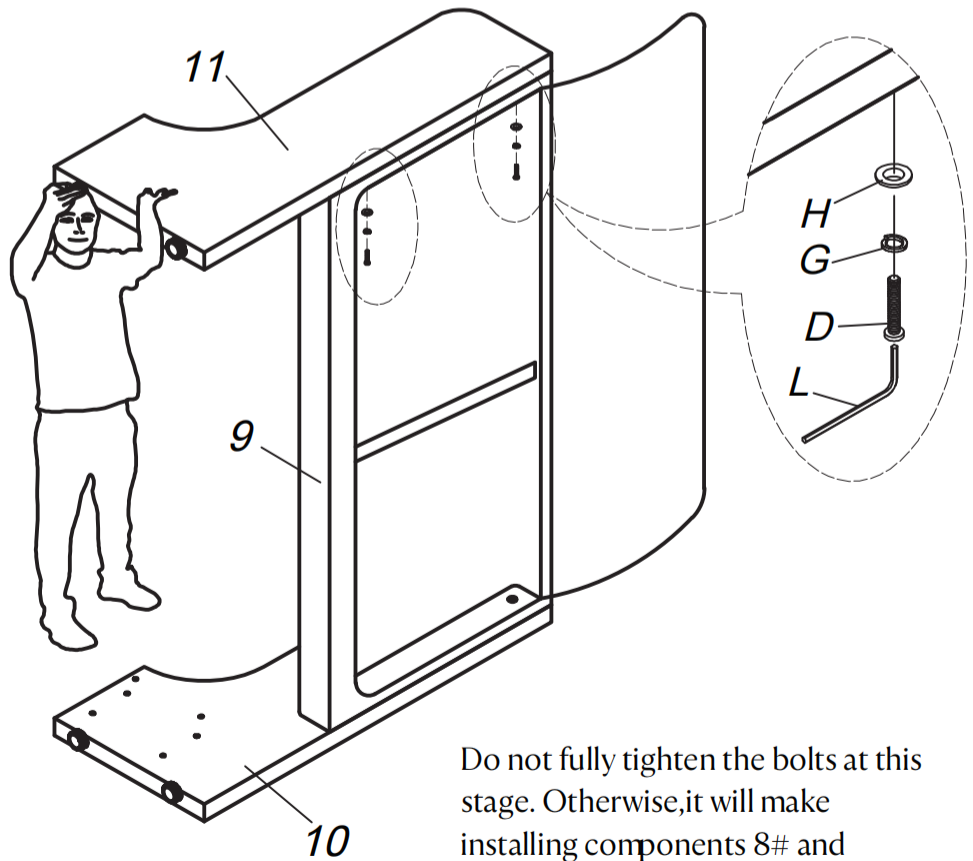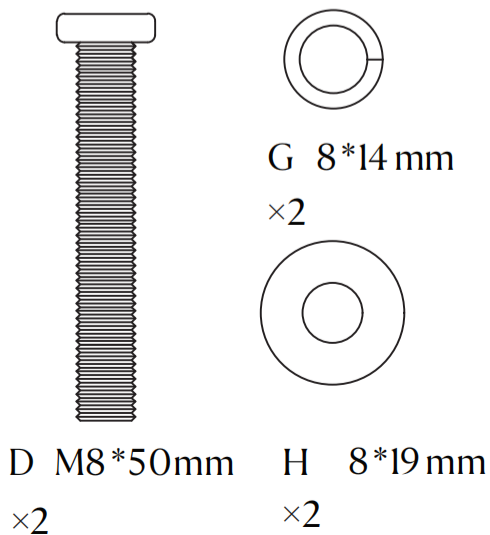


Step 15

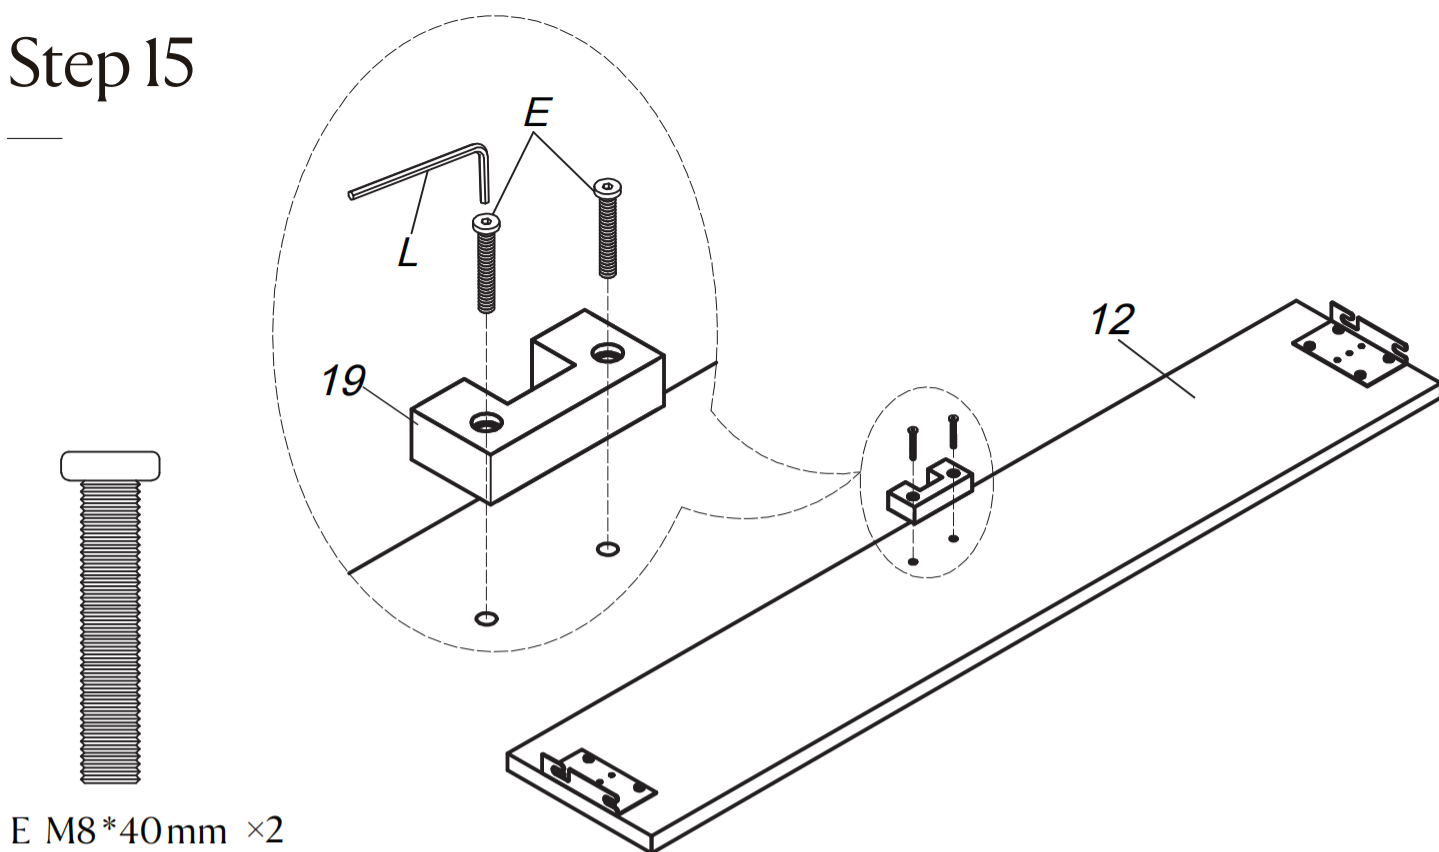



E M8*40mm ×2

Step 16

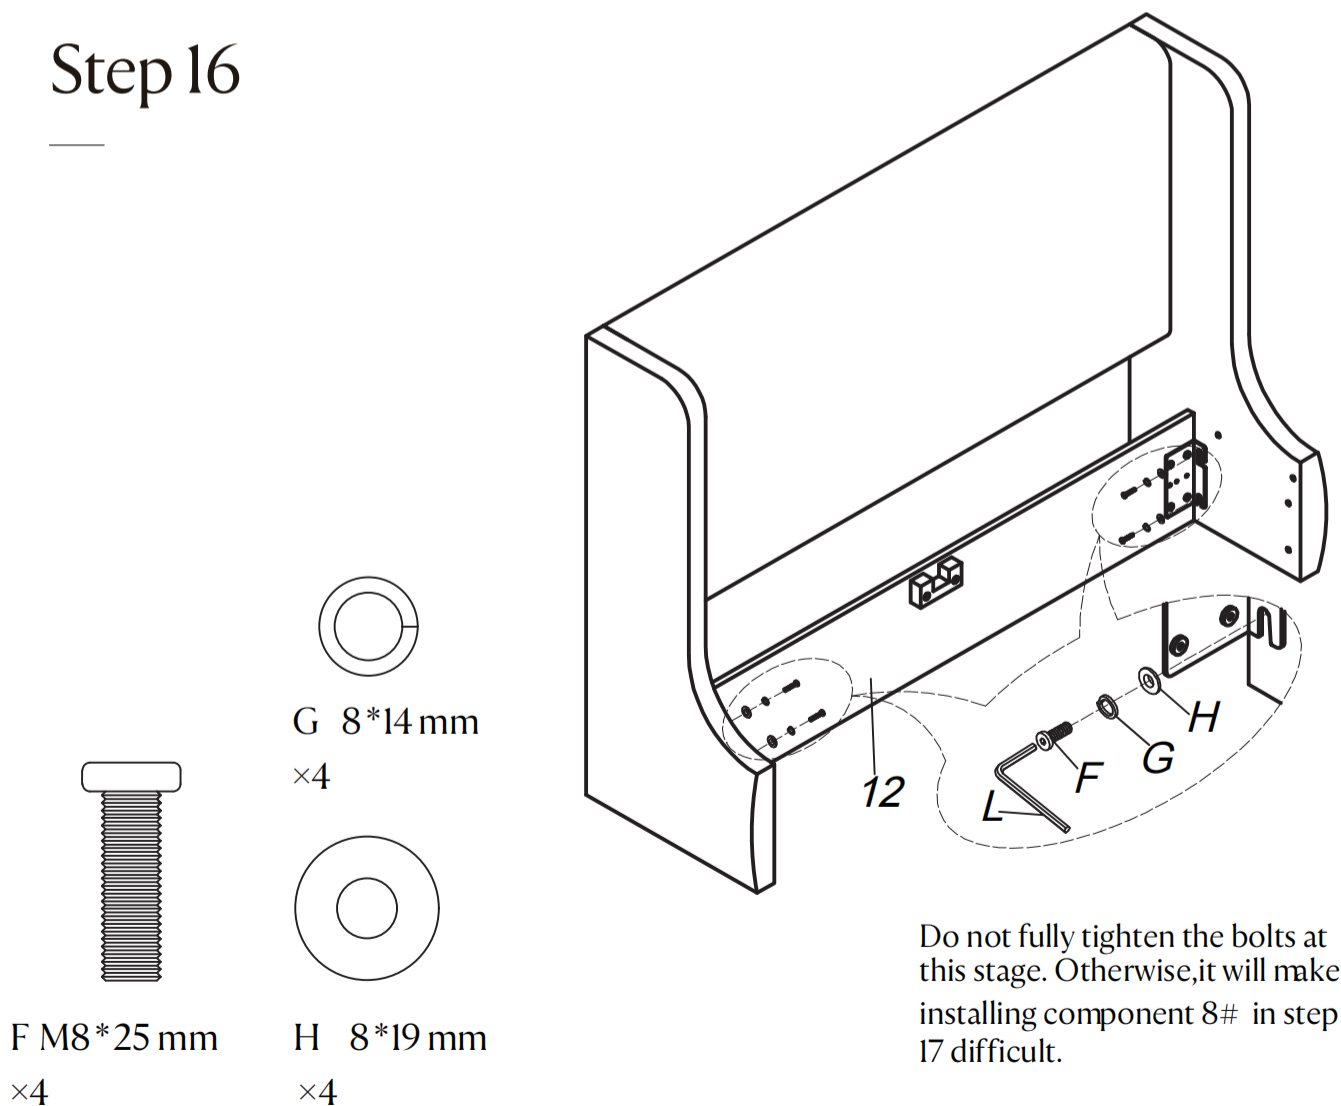


Do not fully tighten the bolts at this stage. Otherwise, it will make installing component 8# in step 17 difficult.


Step 17

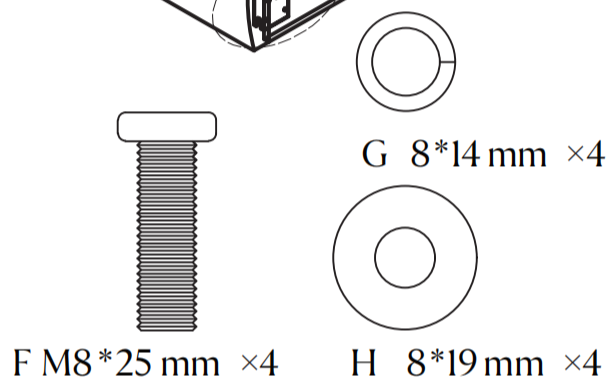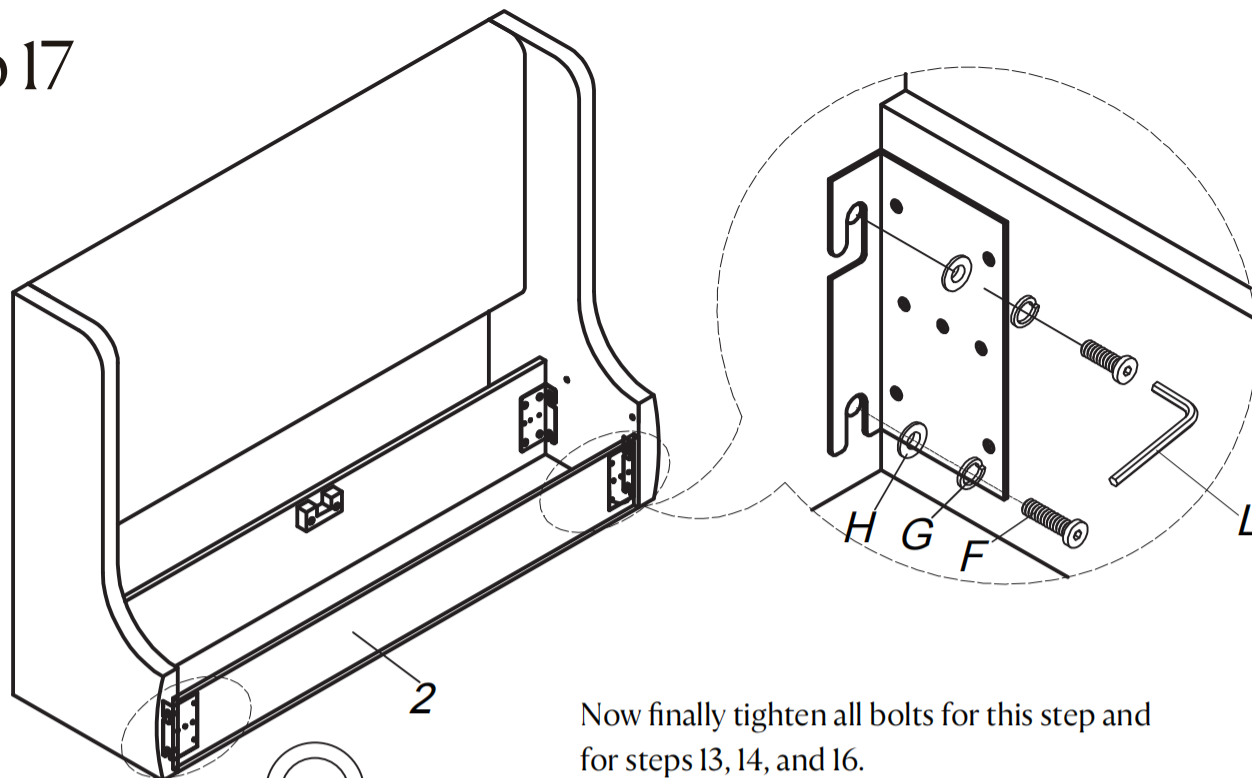


Step 18

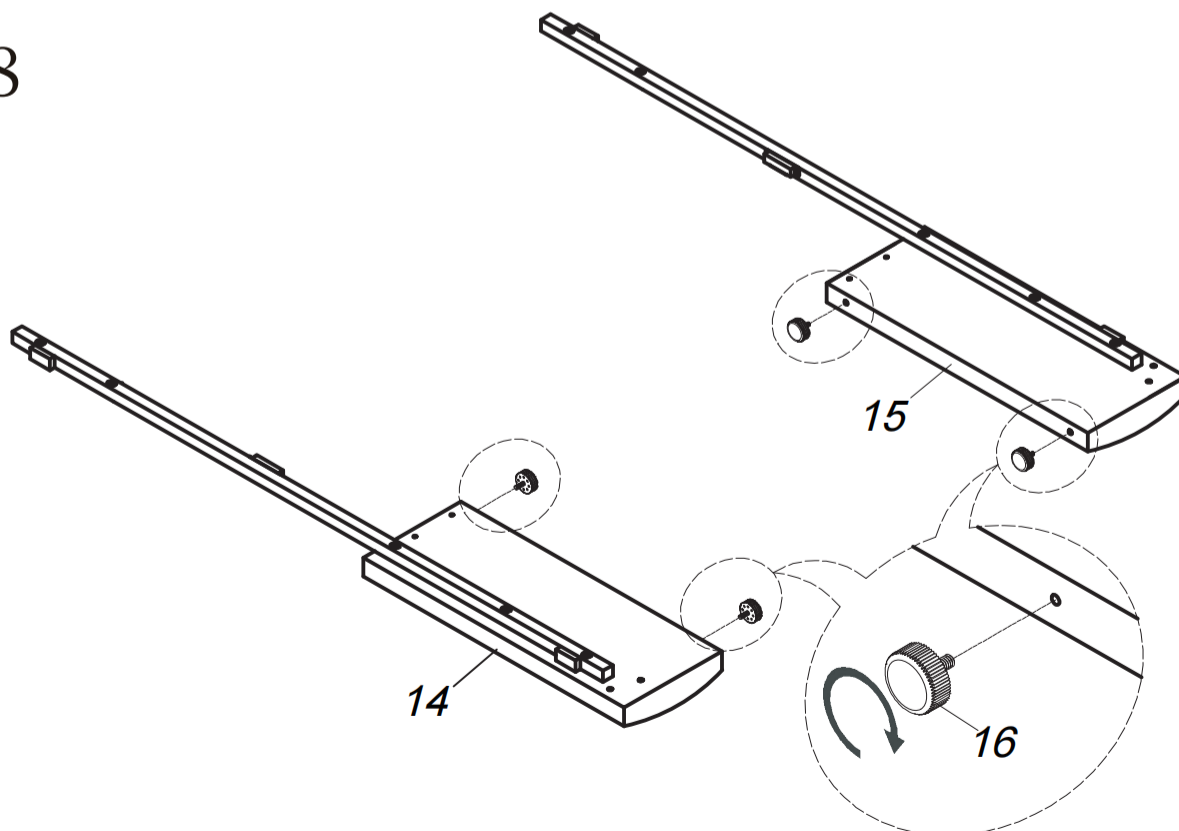


Step 19

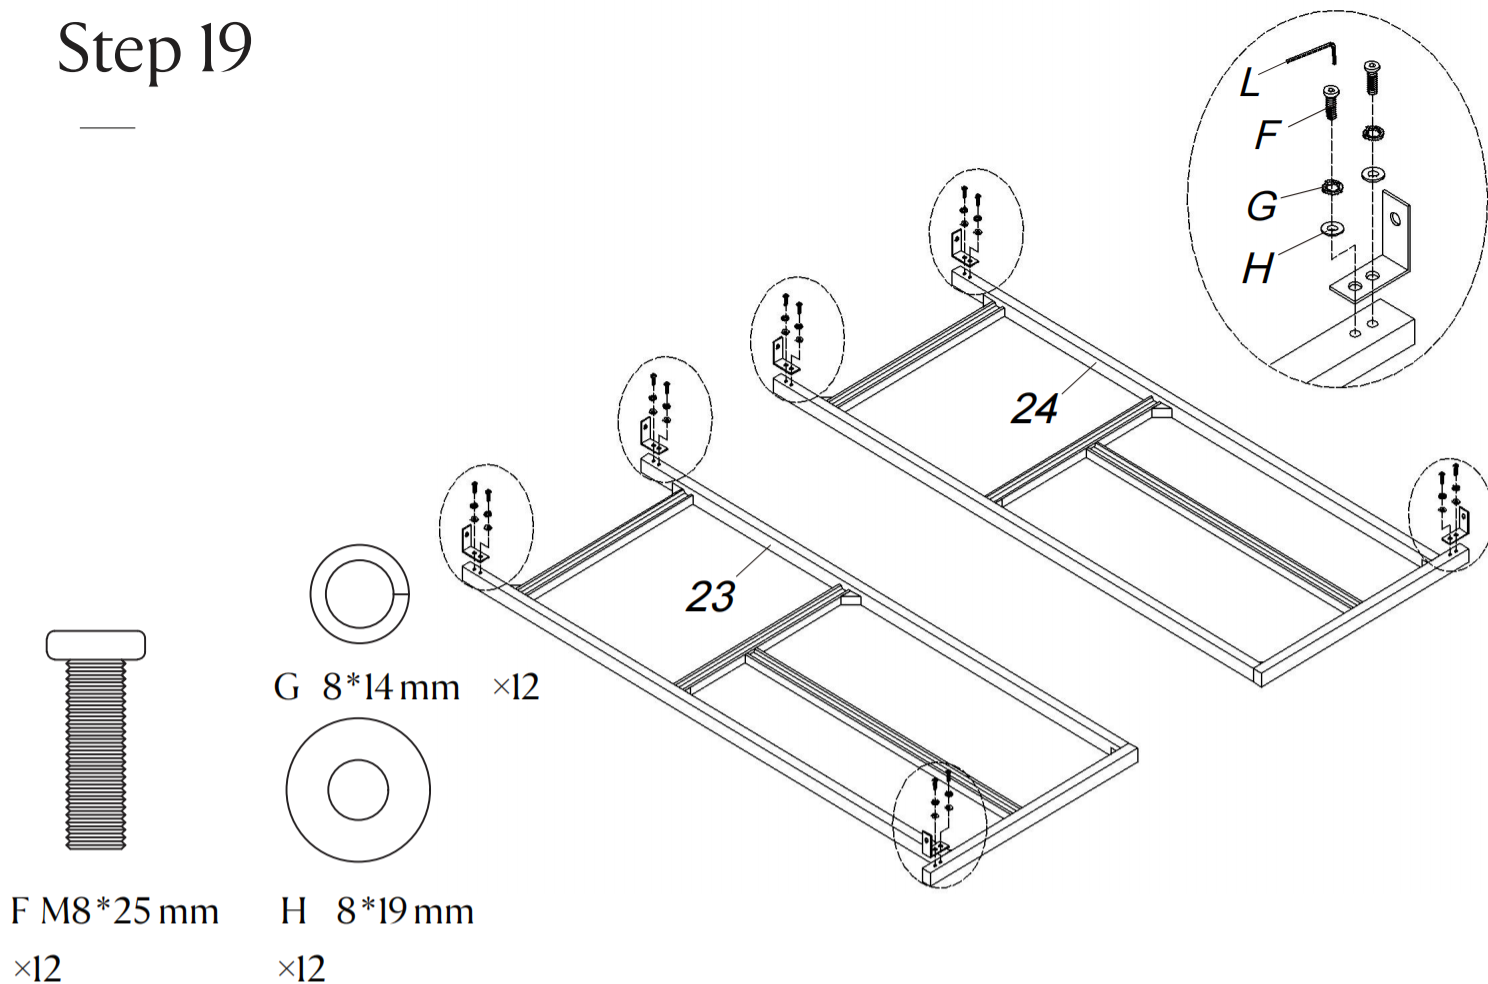


Step 20

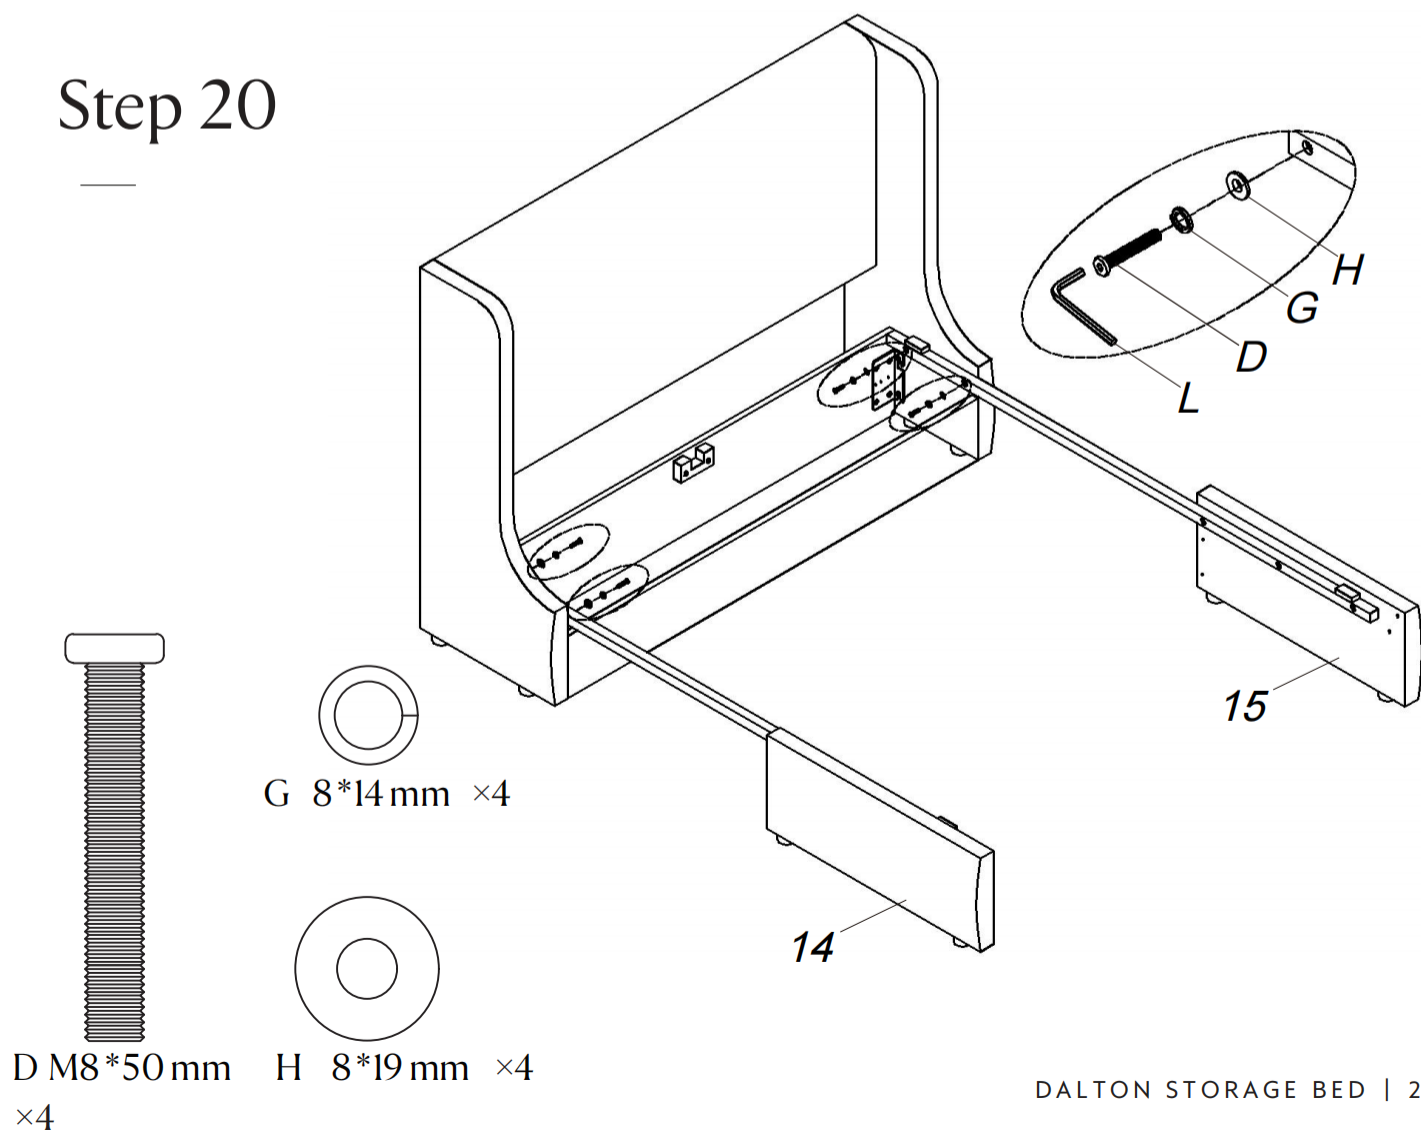


Step 21

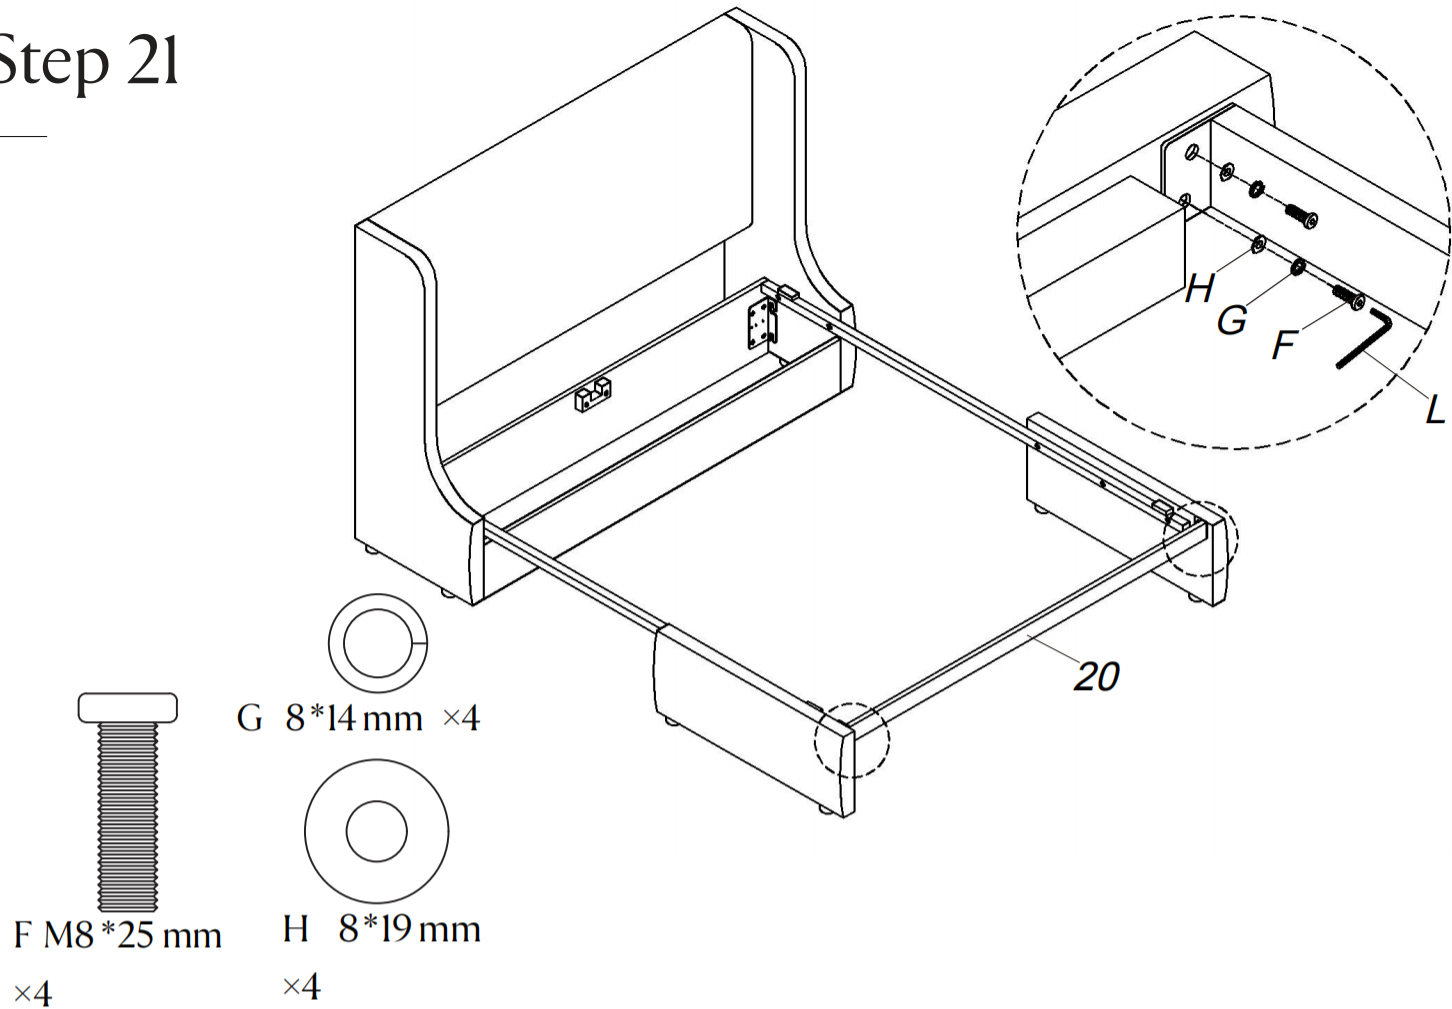



Step 22

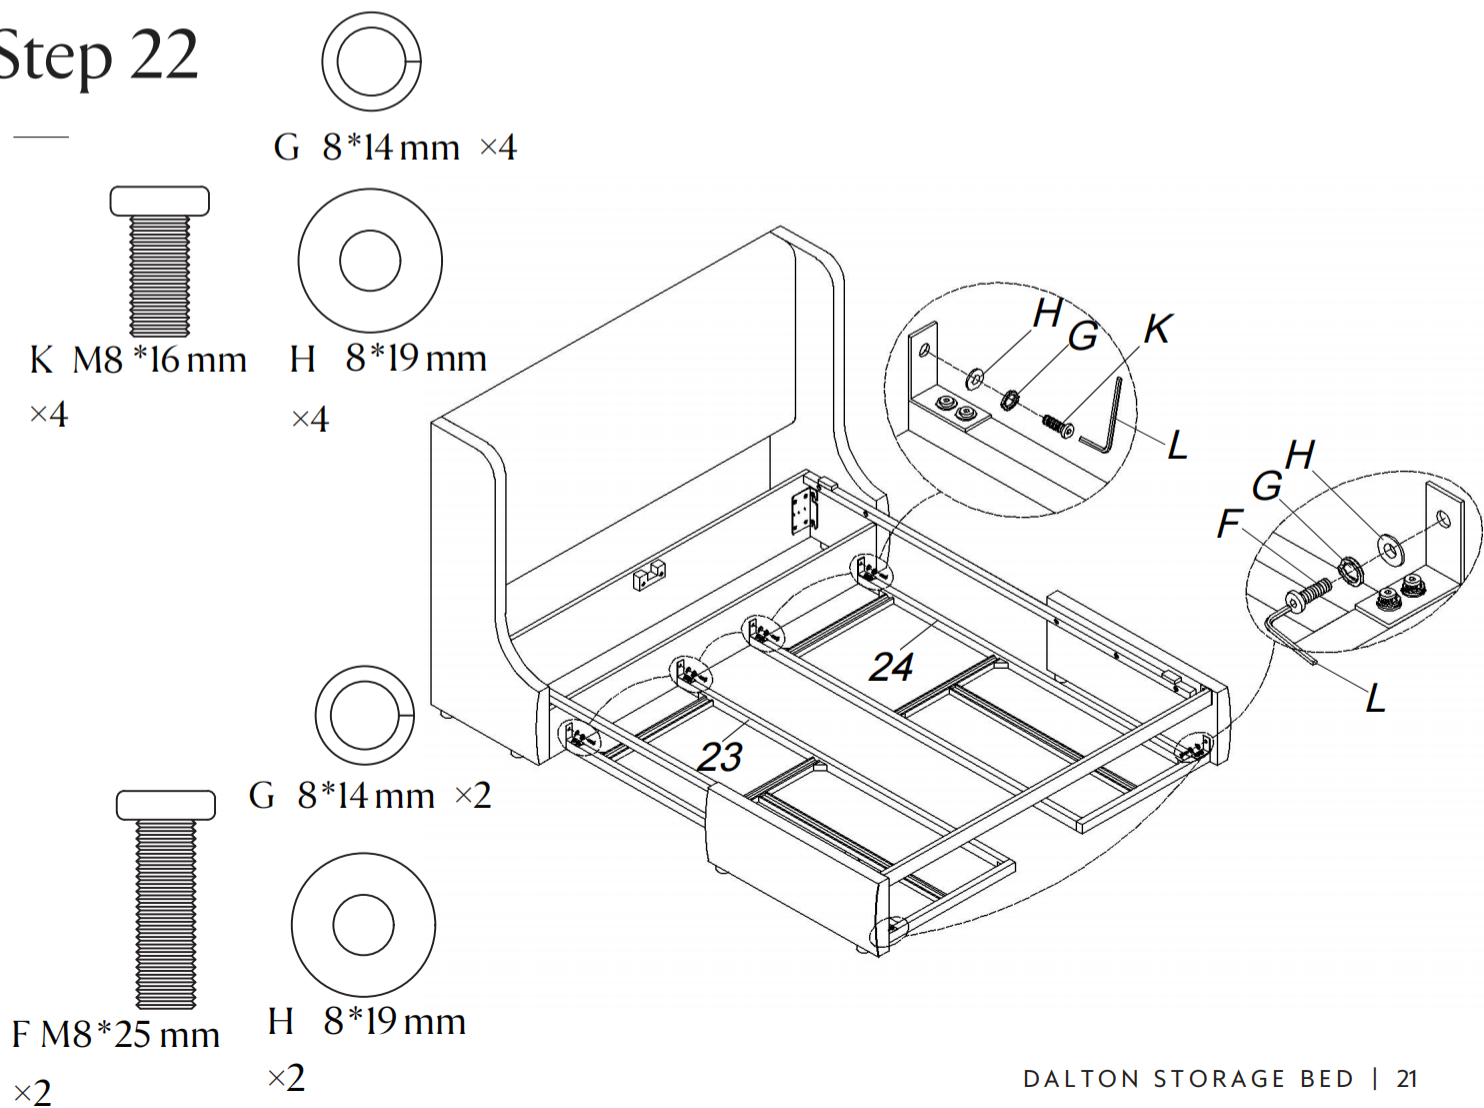


Step 23

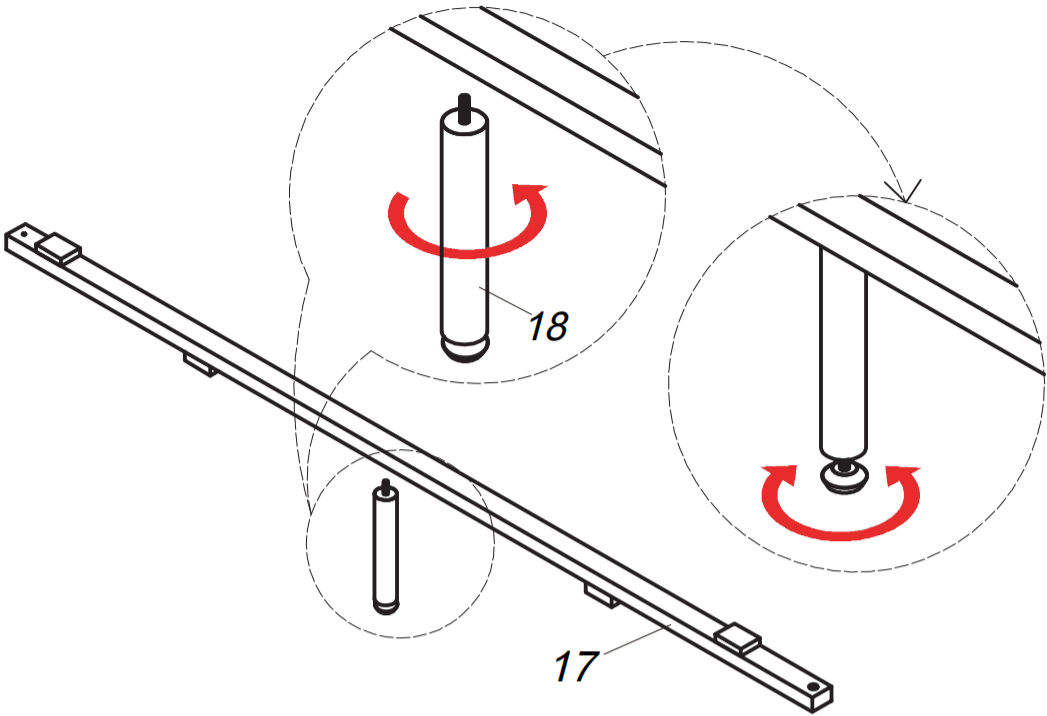


Step 24

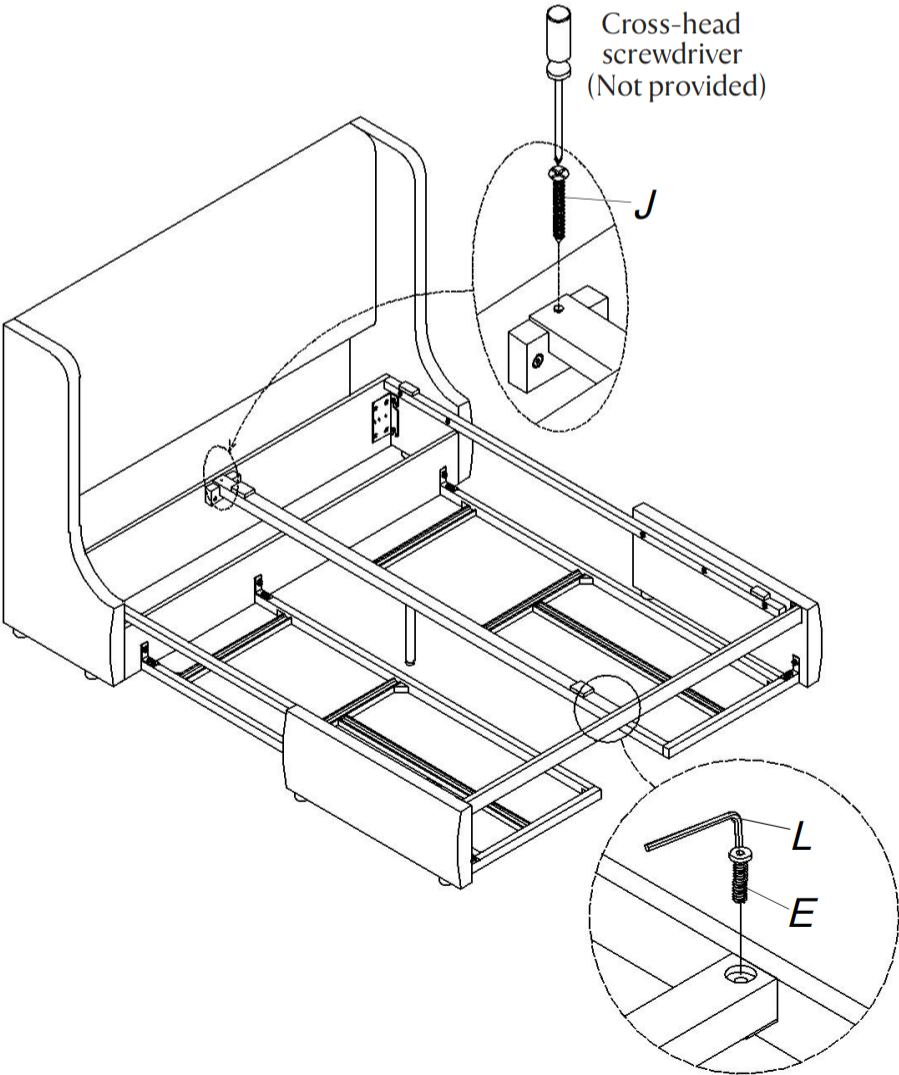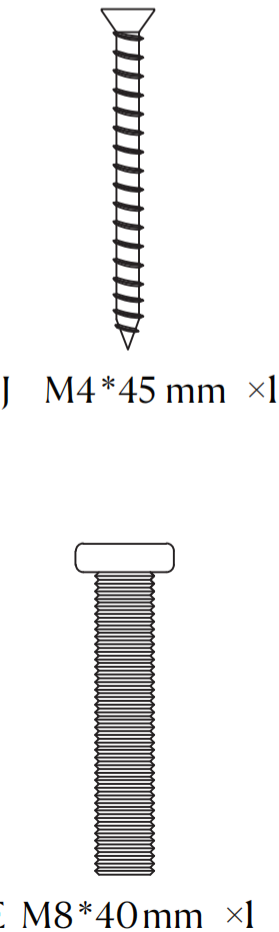


Step 25

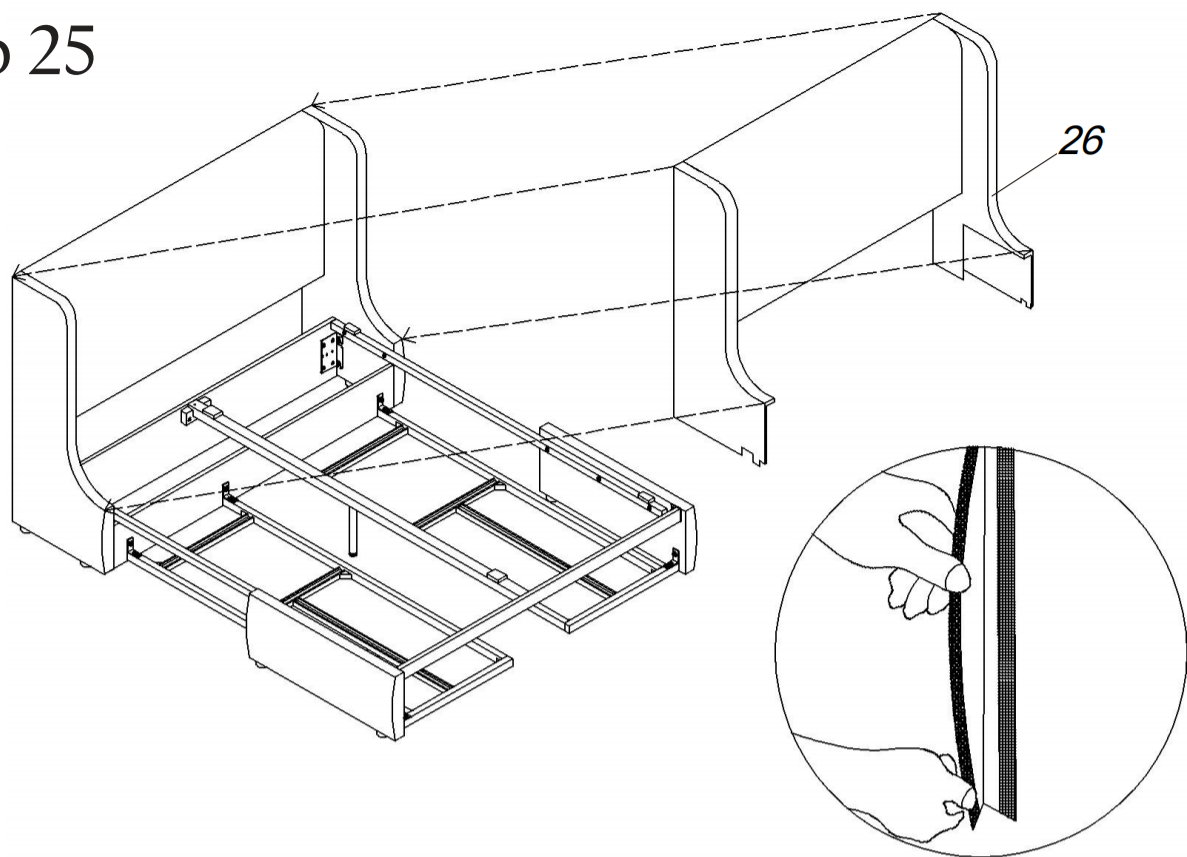


Step 26

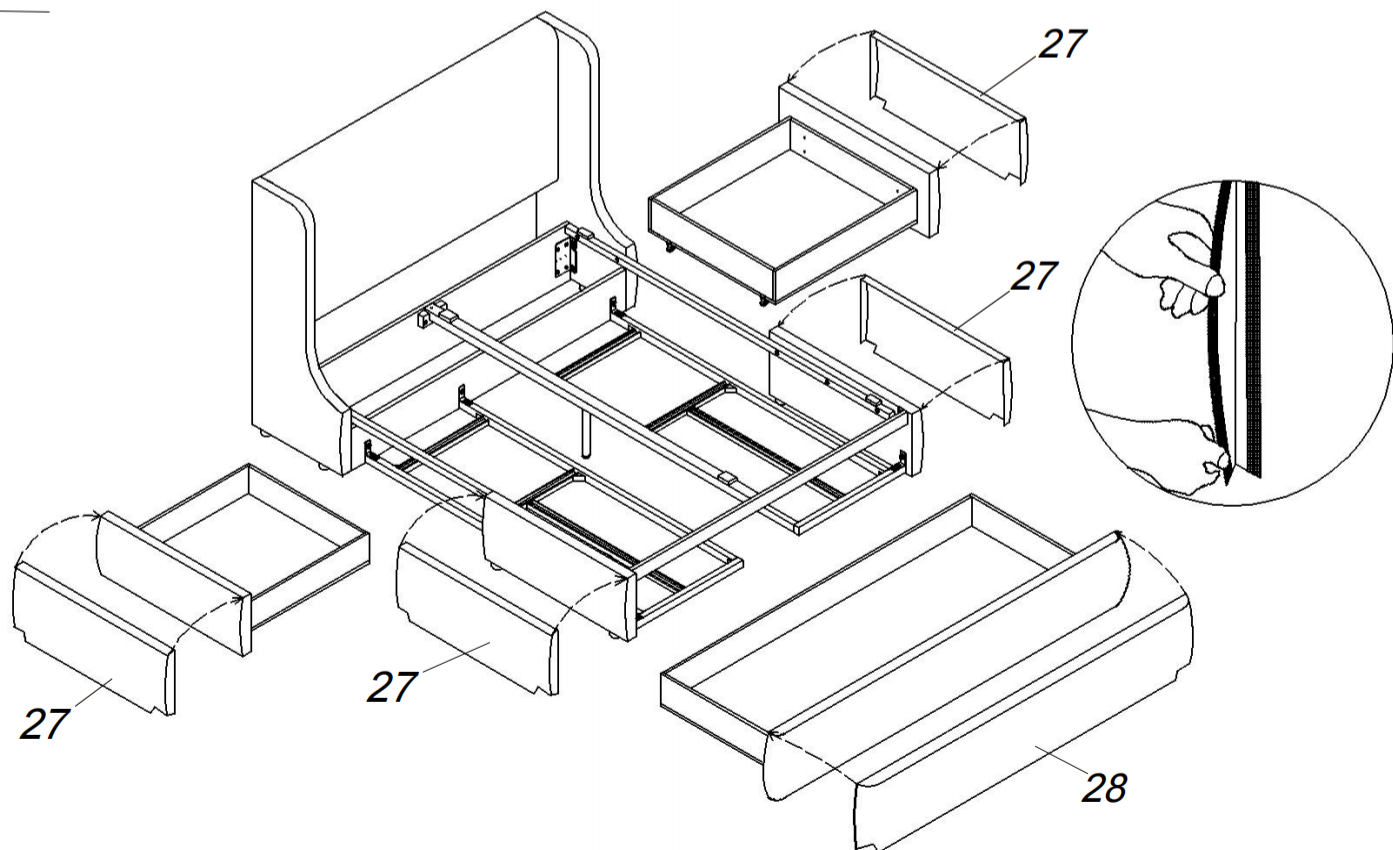

Step 27

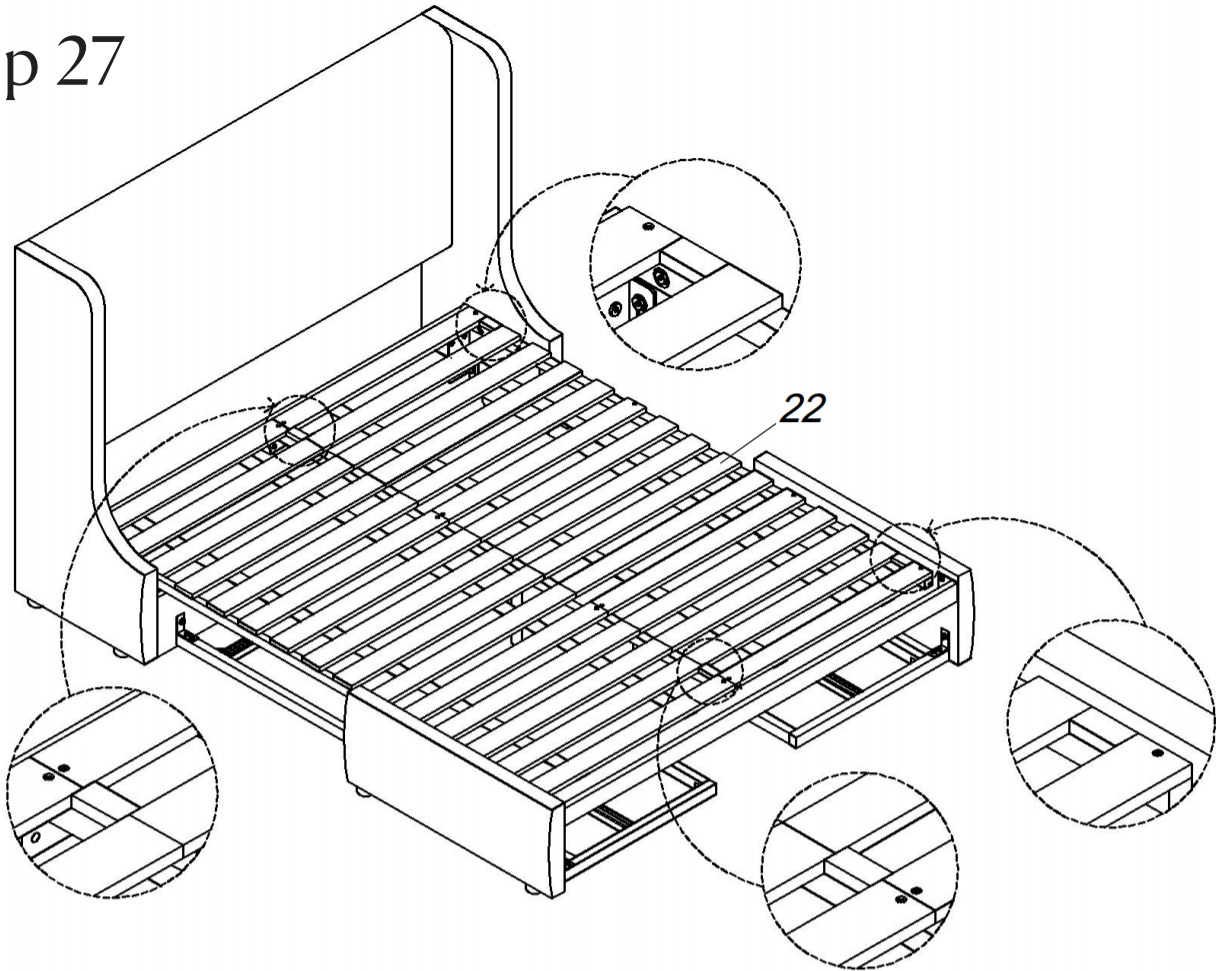


Step 28

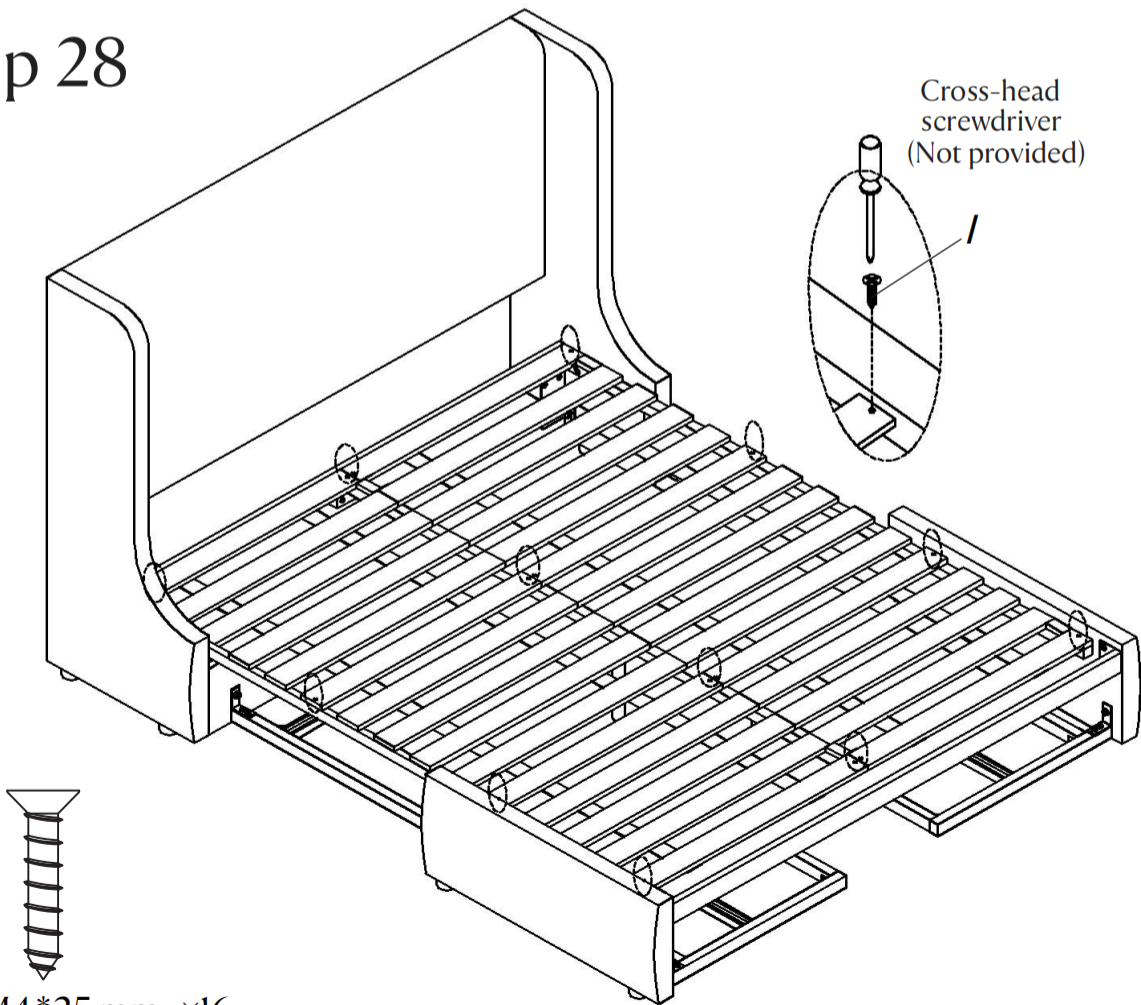


1 M4*25 mm ×16

Step 29

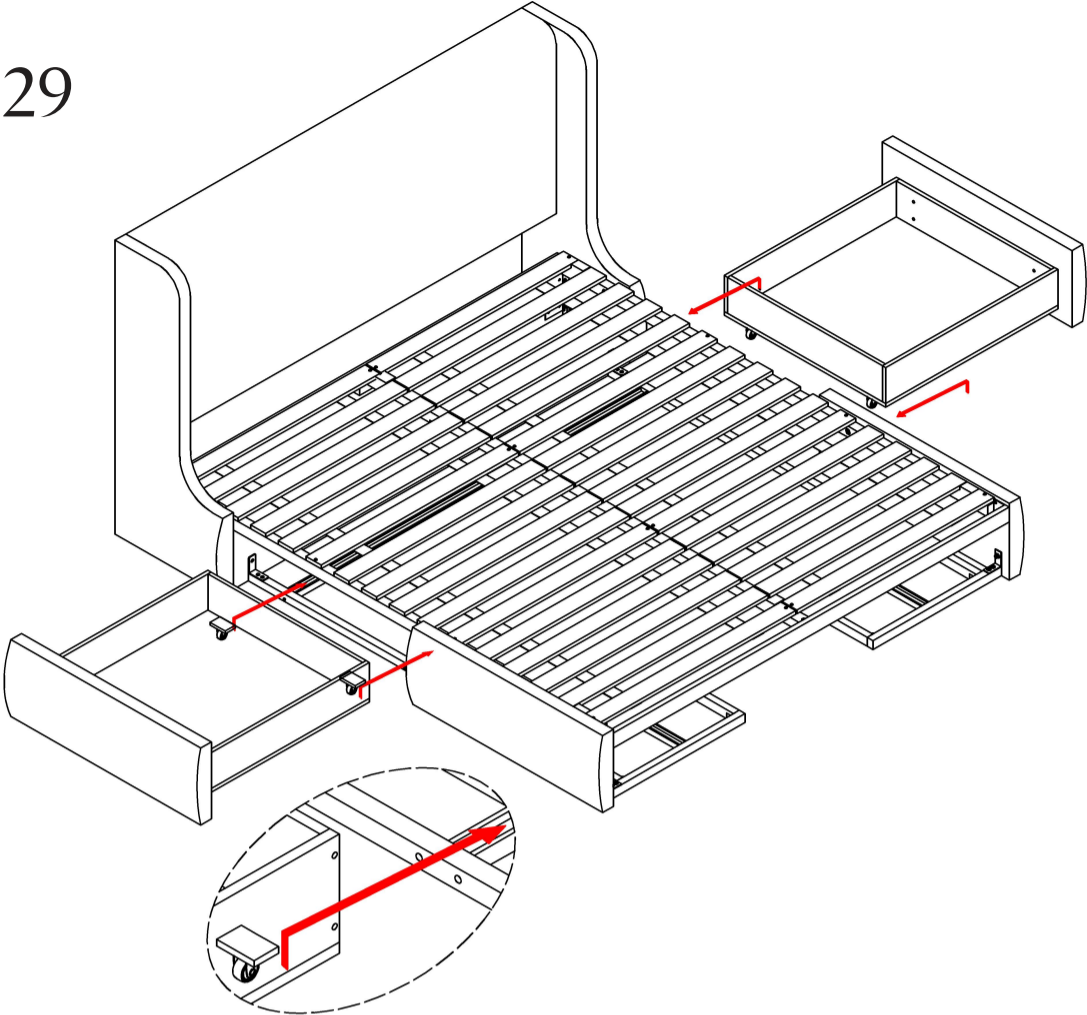

Step 30

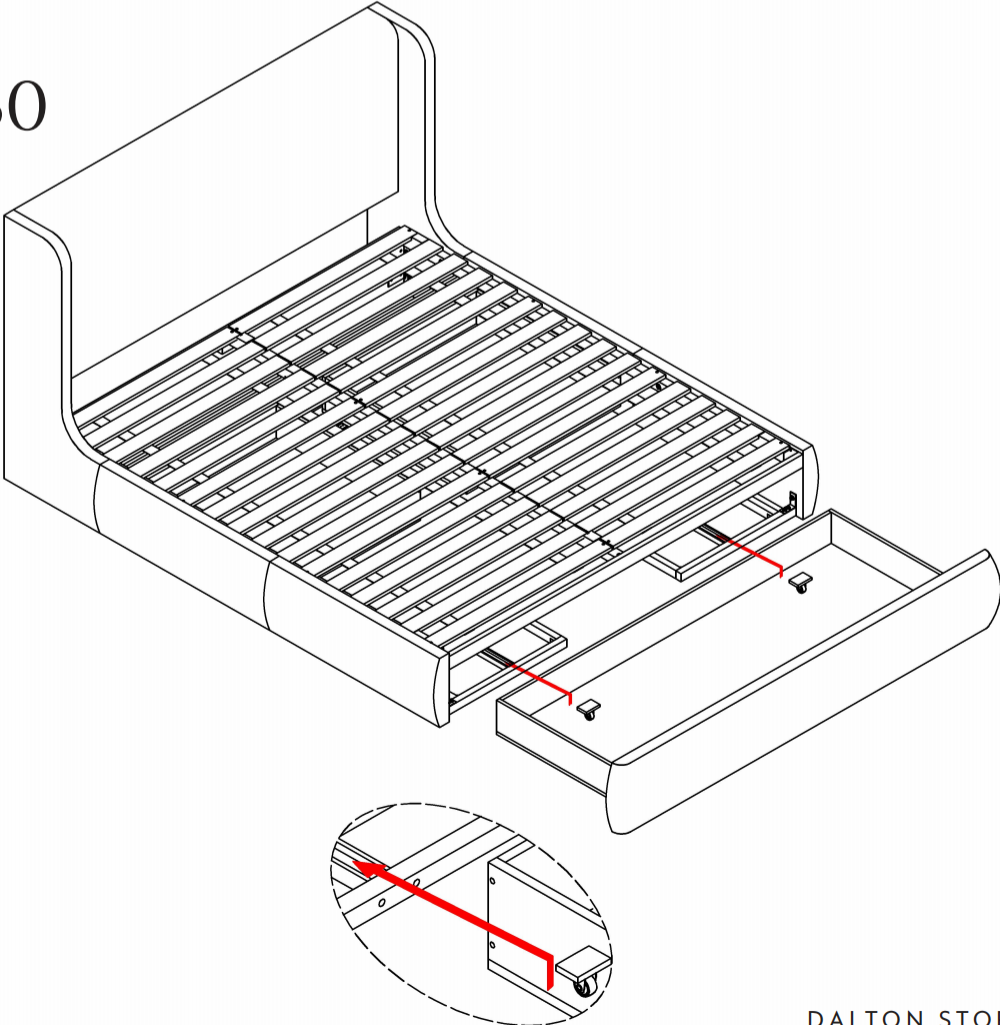

Finished!

Nice work. Just one last stretch.


Please remember to check:

- 01 To ensure bolts are tightened.
- 02 Do not miss the bolts installation.
- 03 To check if the drawers work well.

Always lift your Castlery product when moving it to your preferred location. Levelers (if any) may slant if you drag your product.

Finally, dust the product with a clean cloth (if needed).

You're all set! Enjoy your new living space, thanks to the addition of your Castlery product.

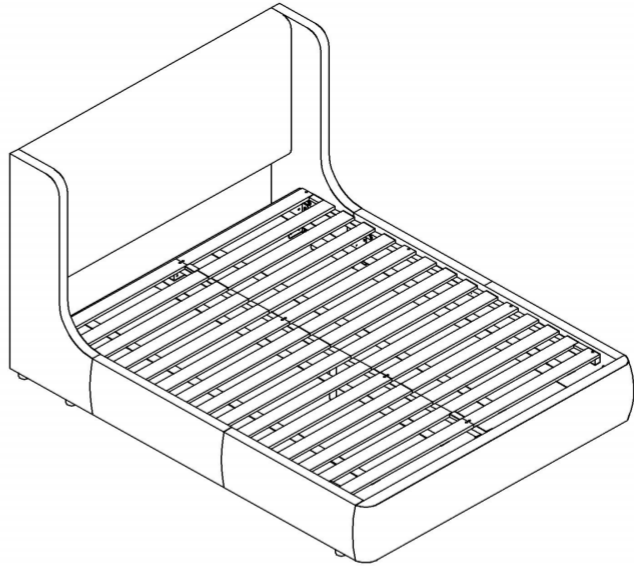


Note: Your actual product may have minor size differences due to manual measurements.


DRAWER DISASSEMBLY INSTRUCTIONS

Step 1


If the drawer needs to be reinstalled, follow these steps to disassemble and reassemble it.

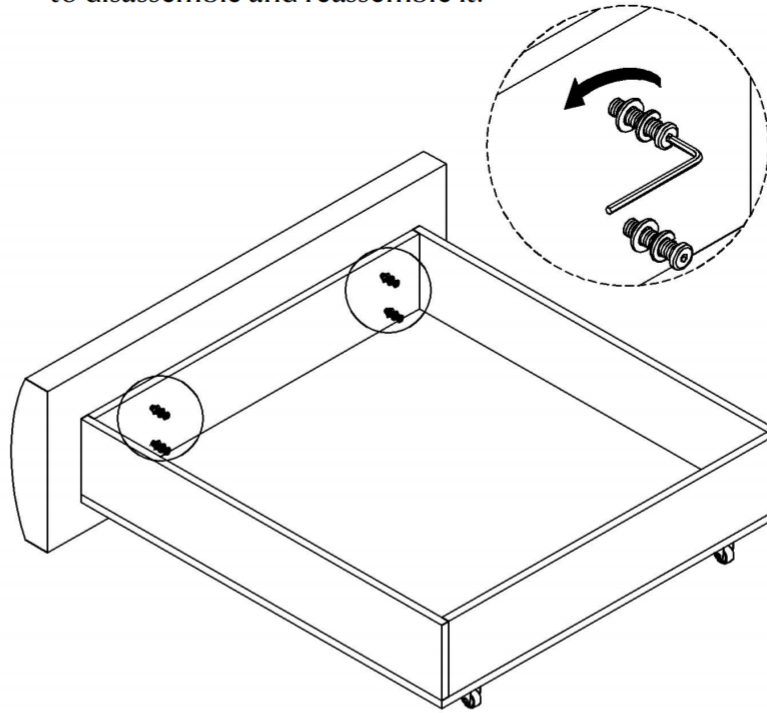


Step 2

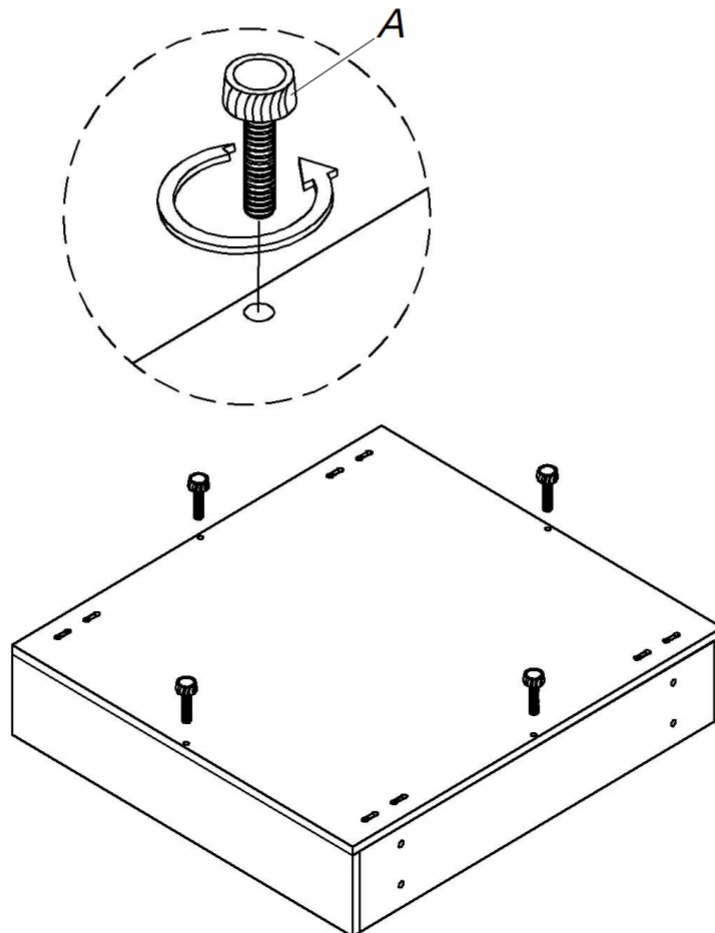


Step 3

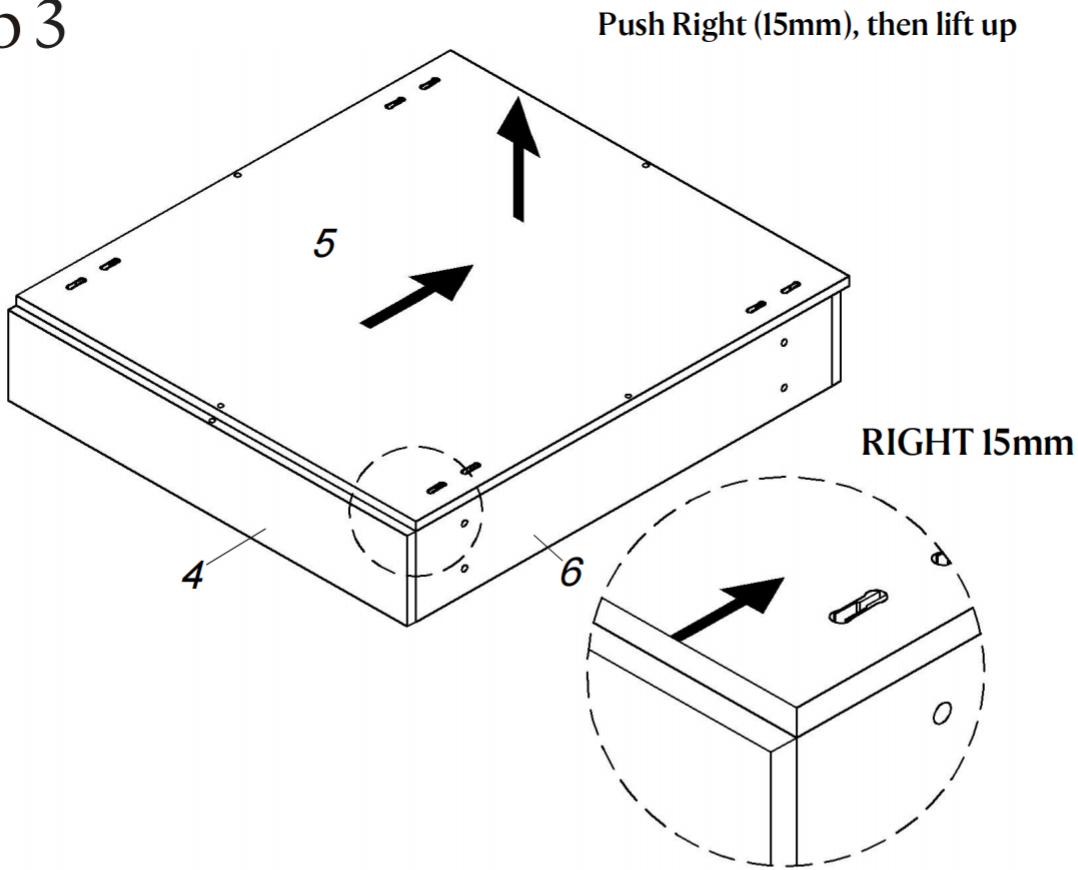

Step 4

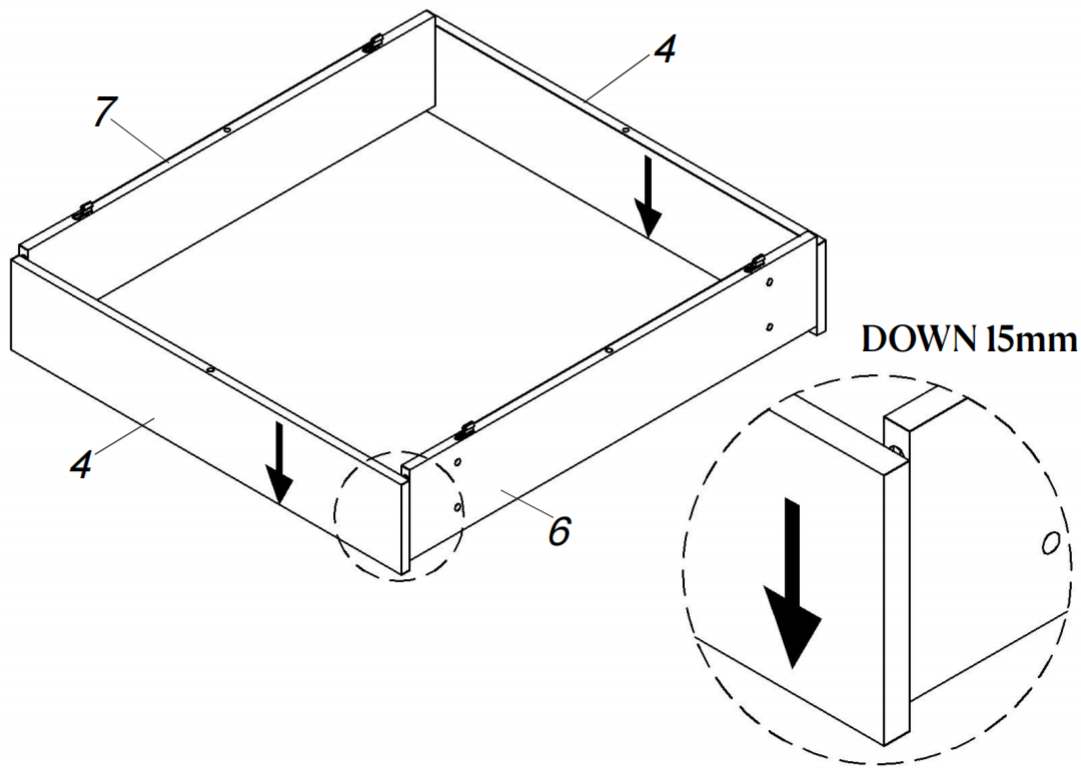

Step 5

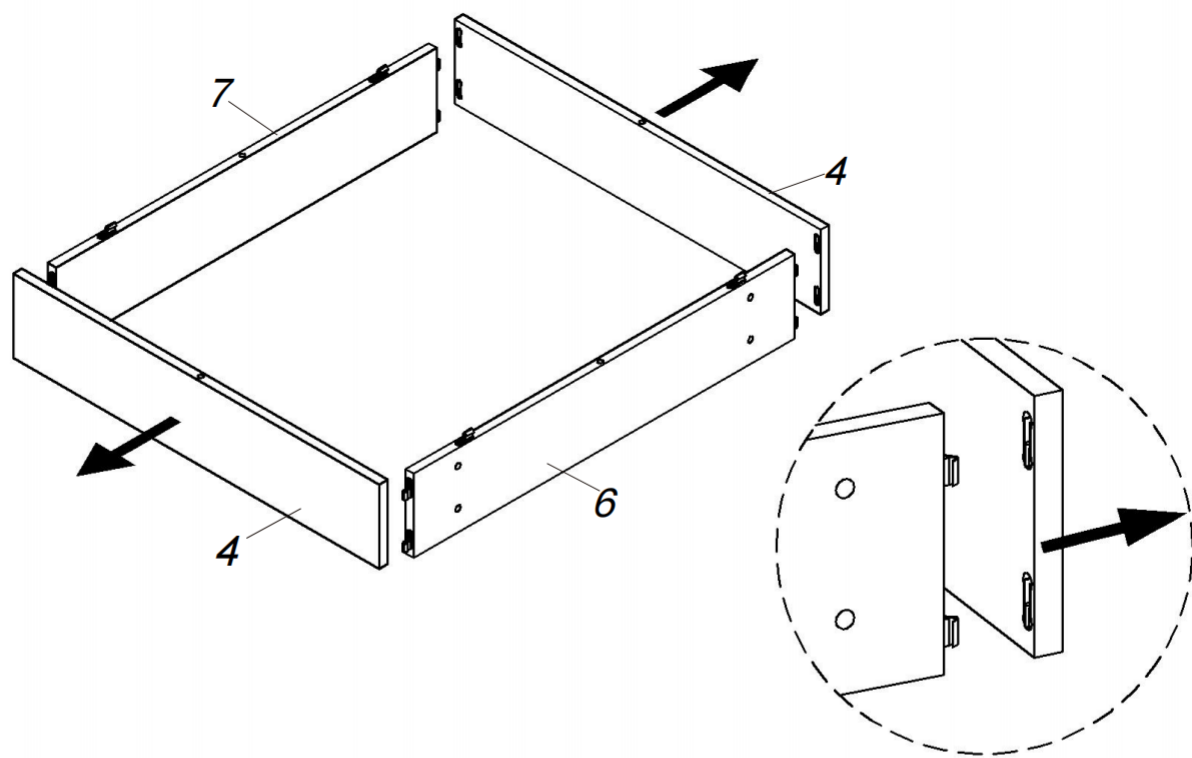

Care instructions

Your Castlery piece is built to last. Treat it with love and respect—it will reward you for years to come.

Upholstered Bed Care

1. Always move the bed by lifting it at the base, do not drag.
2. Avoid prolonged exposure to direct sunlight and keep furniture away from any heating source to prevent fading or discoloration.
3. Vacuum the surface regularly to remove any dust particles.
4. Blot spills immediately and gently with a clean microfiber cloth. Do not rub.
5. Professional cleaning is advised for tough stains.
6. Avoid abrasive cleaners and placing rough or sharp objects on the surface.