


Miyo 3-Drawer Storage Bed Frame

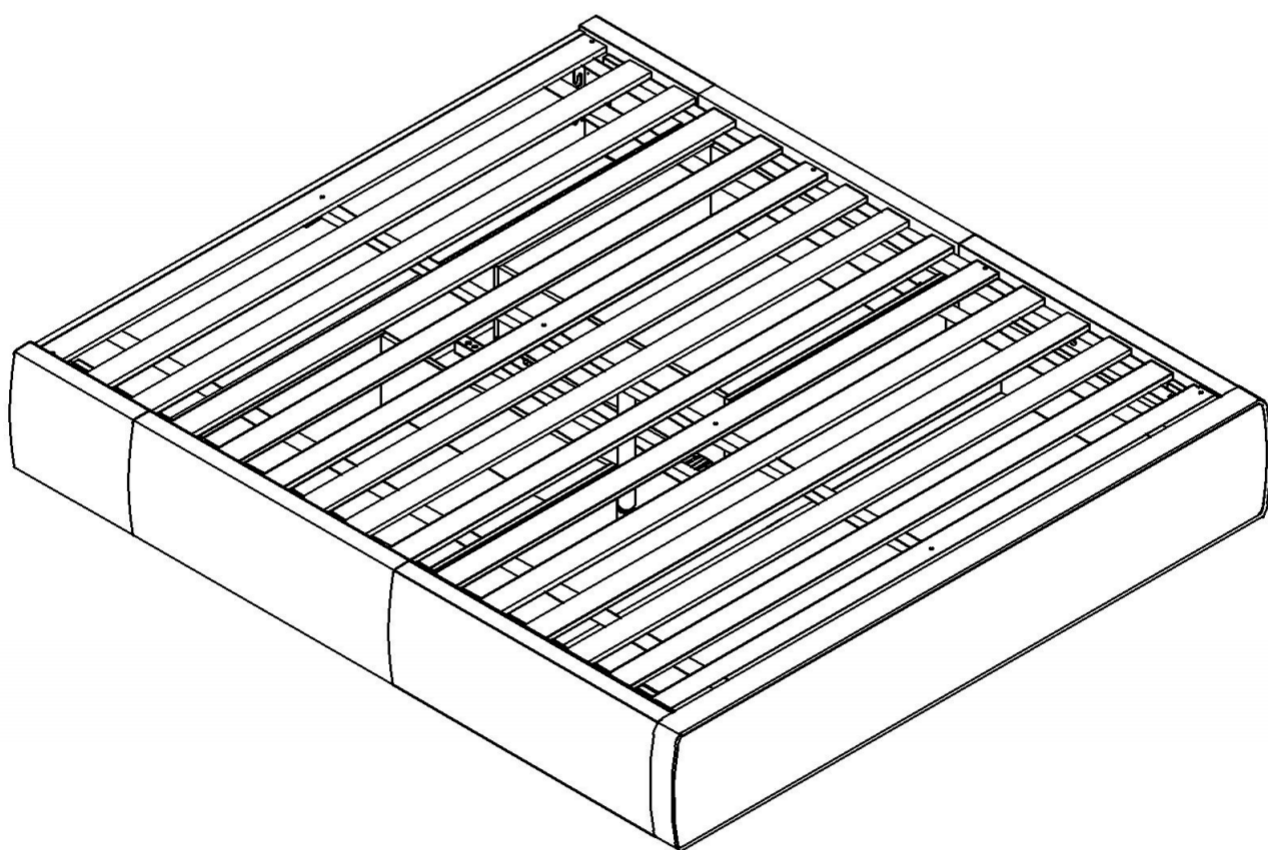

Hello there.

We're thrilled this Castlery piece has made it home.

We obsess over every joint, stitch, and finish because we design for real life—the spills, the lounging, the hosting, and the years that follow. So having a place in your home means a lot.


You're about to set it up and we've kept the steps simple. When you're done, share a photo or leave a review with **#AtHomeWithCastlery**. We love seeing our pieces in your homes.

Thanks again for choosing Castlery. Let's get building.


Contact us.

If you run into any issues or need a quick answer, we're here to help. Reach us anytime at www.castlery.com/contact-us


Before you start...

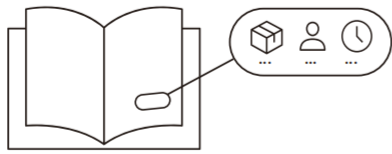


Confirm you have all cartons, review the assembly steps, set aside time, and get others to assist if needed.

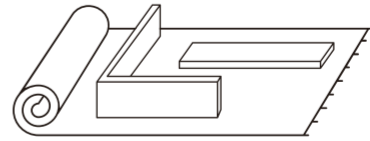


Ensure enough space for assembly. We recommend protecting your floor with a mat or cardboard to avoid scratches during the assembly process.

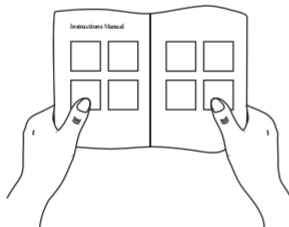


Read instructions carefully, and check that no parts are missing.

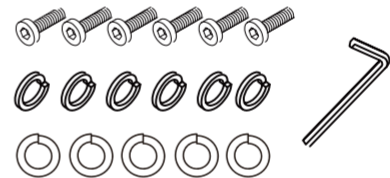


Lay out all hardware on a soft surface so you can easily identify them.

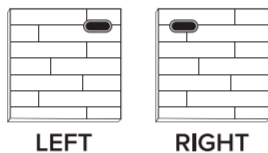

Carefully identify all components to differentiate which pieces are left and right.

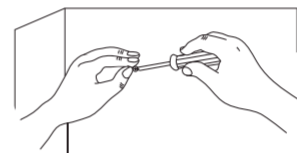

Follow the instructions closely.
Don't skip ahead!

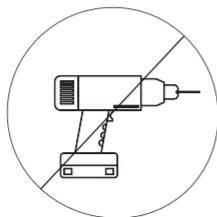


DO NOT over-tighten screws or use a drill.



Need a hand? Contact us:
www.castlery.com/contact-us

Overview

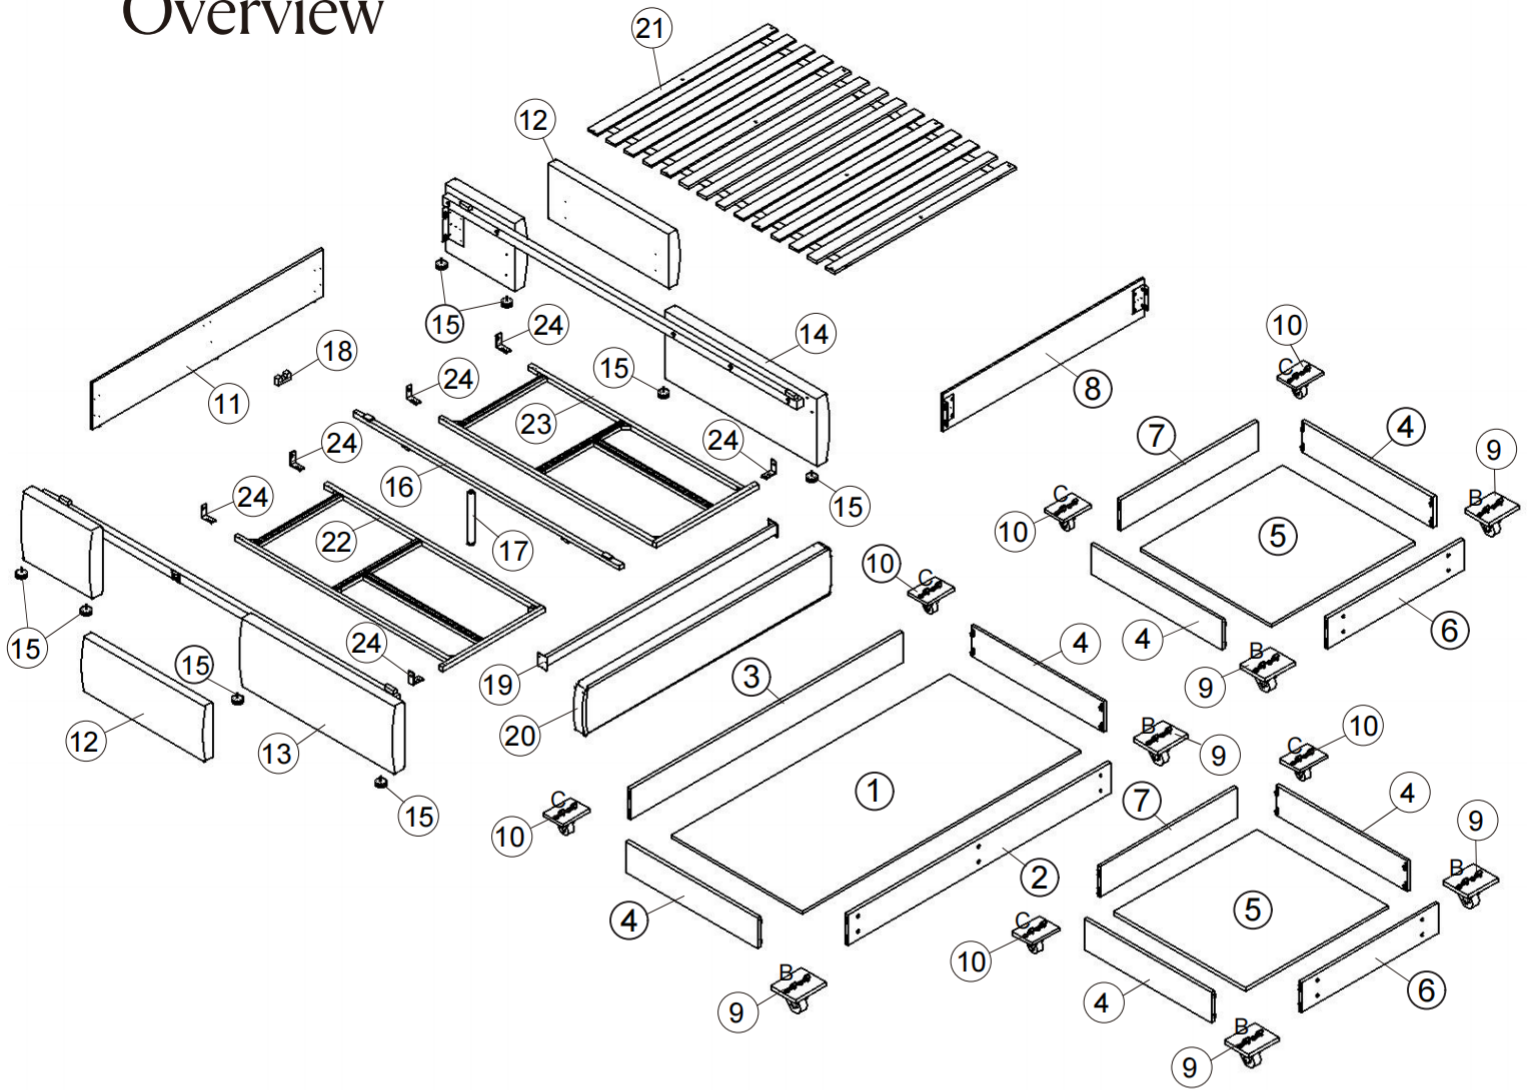

x2



x2



60 mins



IMPORTANT: 2 persons needed for assembly.

This will help to minimize potential damage to the product or injury to persons during assembly.



There are inner box(es) that include components required to complete this assembly.



Please do not completely tighten all the hardware, until each assembly step is complete.




Before discarding the packaging, please use the checklist to ensure that you have all the parts required to assemble your product. Please kindly note if applicable please keep the original package when you want to return the product later.



If parts are missing or damaged, we will gladly ship your replacements parts free of charge. Please contact us via www.castlery.com/contact-us. Illustrations in this guide are for reference only and may be slightly different from the actual object.

Overview

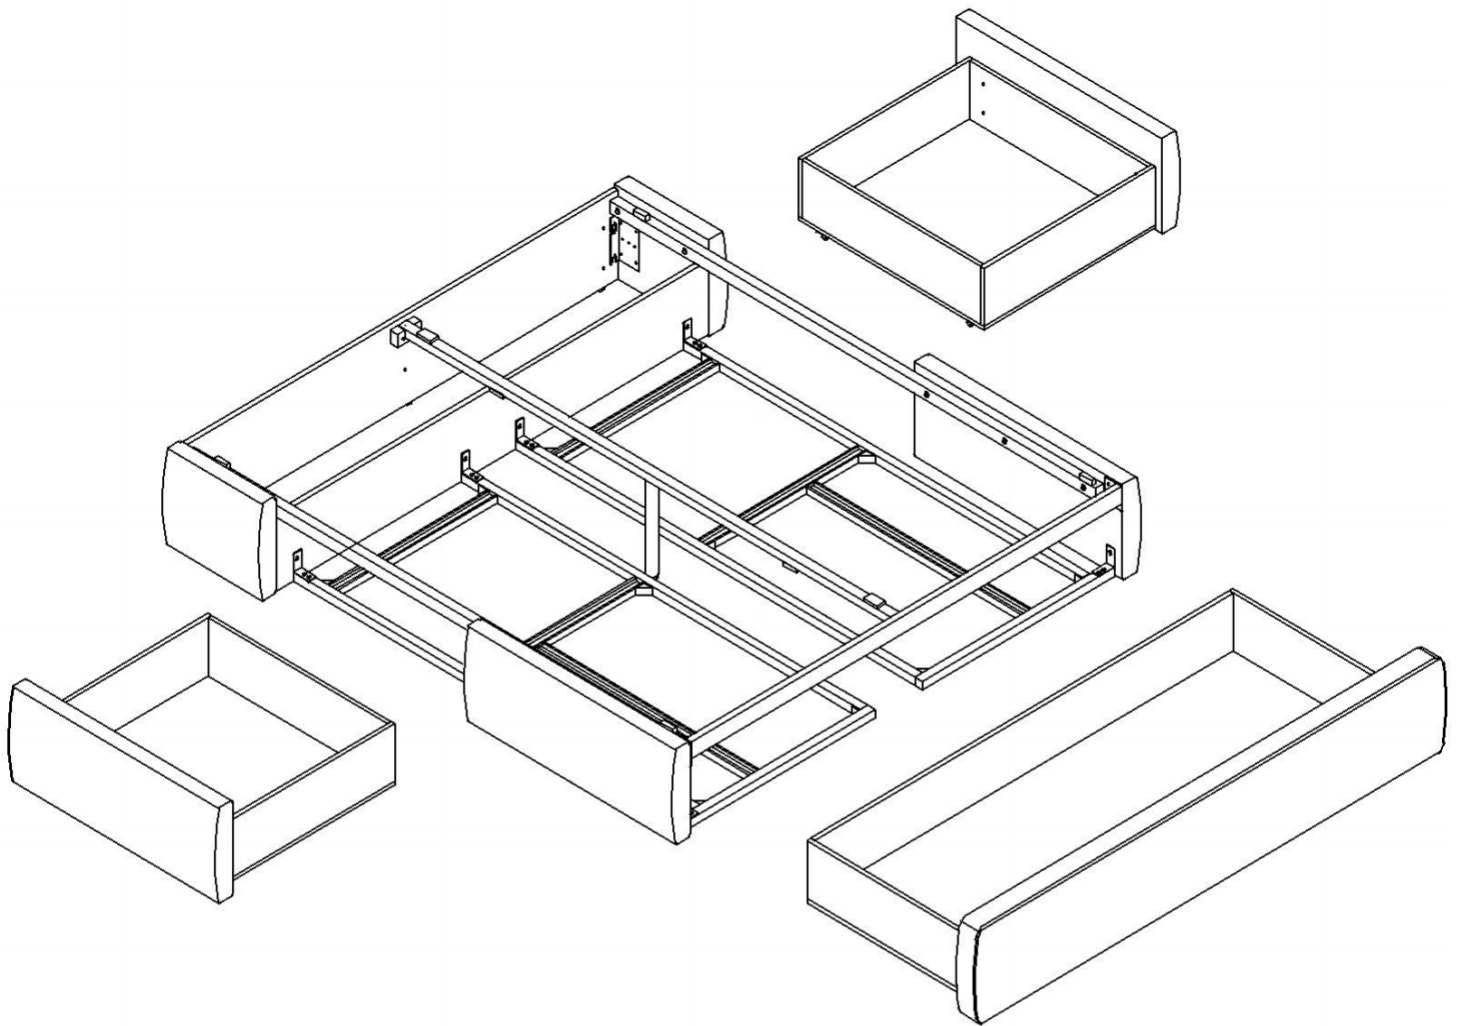

x2



x2



60 mins



IMPORTANT: 2 persons needed for assembly.

This will help to minimize potential damage to the product or injury to persons during assembly.



There are inner box(es) that include components required to complete this assembly.



Please do not completely tighten all the hardware, until each assembly step is complete.




Before discarding the packaging, please use the checklist to ensure that you have all the parts required to assemble your product. Please kindly note if applicable please keep the original package when you want to return the product later.





If parts are missing or damaged, we will gladly ship your replacements parts free of charge. Please contact us via www.castlery.com/contact-us. Illustrations in this guide are for reference only and may be slightly different from the actual object.


Parts

BOX 2 OF 1

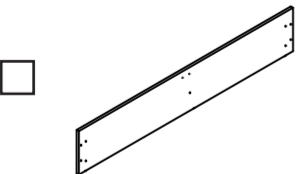
- 

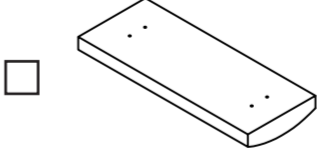
⑪ CONNECTOR
x1
- 

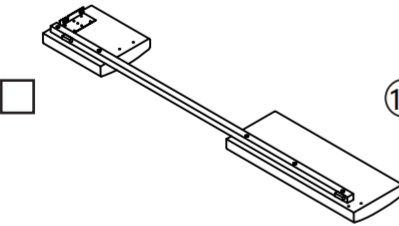
⑫ DRAWER PANEL
x2
- 

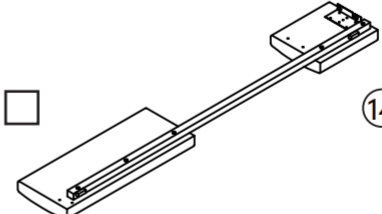⑬ SIDE RAIL L
x1
- 


⑭ SIDE RAIL R
x1
- 

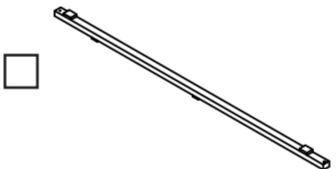
⑮ LEGS
x8
- 

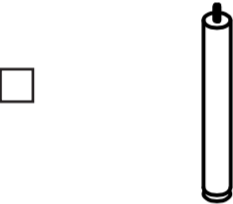
⑯ SUPPORT BAR
x1
- 

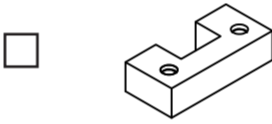
⑰ SUPPORT LEG
x1
- 

⑱ U-SHAPED BRACKET
x1
- 

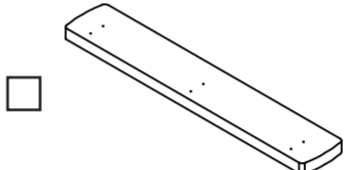⑲ METAL CONNECTOR
x1
- 

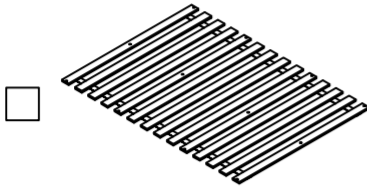⑳ FOOTBOARD
x1
- 

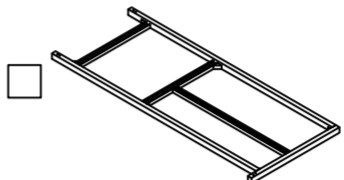㉑ SLAT
x1
- 

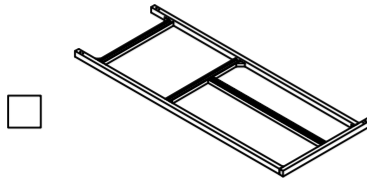
㉒ LEFT SLIDE RAIL
x1
- 

㉓ RIGHT SLIDE RAIL
x1
- 

㉔ L-SHAPED METAL PLATE
x6

Parts

BOX 2 OF 2

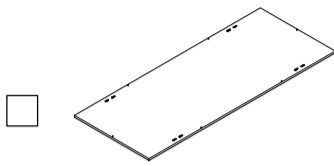

①

LARGE DRAWER
BOTTOM

x1



②

LARGE DRAWER
FRONT

x1



③

LARGE DRAWER
BACK


x1



④

DRAWER SIDE

x6



⑤

SMALL DRAWER
BOTTOM

x2



⑥

SMALL DRAWER
FRONT


x2



⑦

SMALL DRAWER
BACK


x2

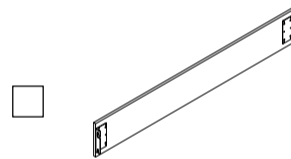

⑧

CONNECTION
PANEL


x1

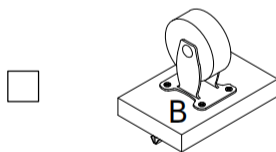

⑨

LARGE WHEEL

x6

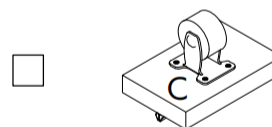






⑩

SMALL WHEEL


x6

Hardware


BOX 2 OF 1

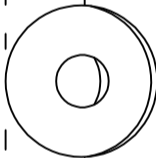					1"2"3"4"																
					mm102030405060708090100110120																
Ref	Name	Dimension	Qty	Spare Qty																	
D	Medium Bolt	M8 x 45mm	2	1																	
E	Medium Bolt	M8 x 40mm	15	1																	
F	Short Bolt	M8 x 25mm	26	1																	
G	Spring Washer	M8 x 13mm	44	1																	
H	Flat Washer	M8 x 19mm	44	1																	
I	Screw	M5 x 25mm	12	1																	
J	Screw	M5 x 45mm	1	1																	
K	Short Bolt	M8 x 16mm	4	1																	
L	Allen Key	5x25x65mm	1	N/A																	


BOX 2 OF 2

					1" 2" 3" 4"																	
					mm 10 20 30 40 50 60 70 80 90 100 110 120																	
Ref	Name	Dimension	Qty	Spare Qty																		
A	Thumb Screw	M6 x 25mm	14	N/A																		


Step 1

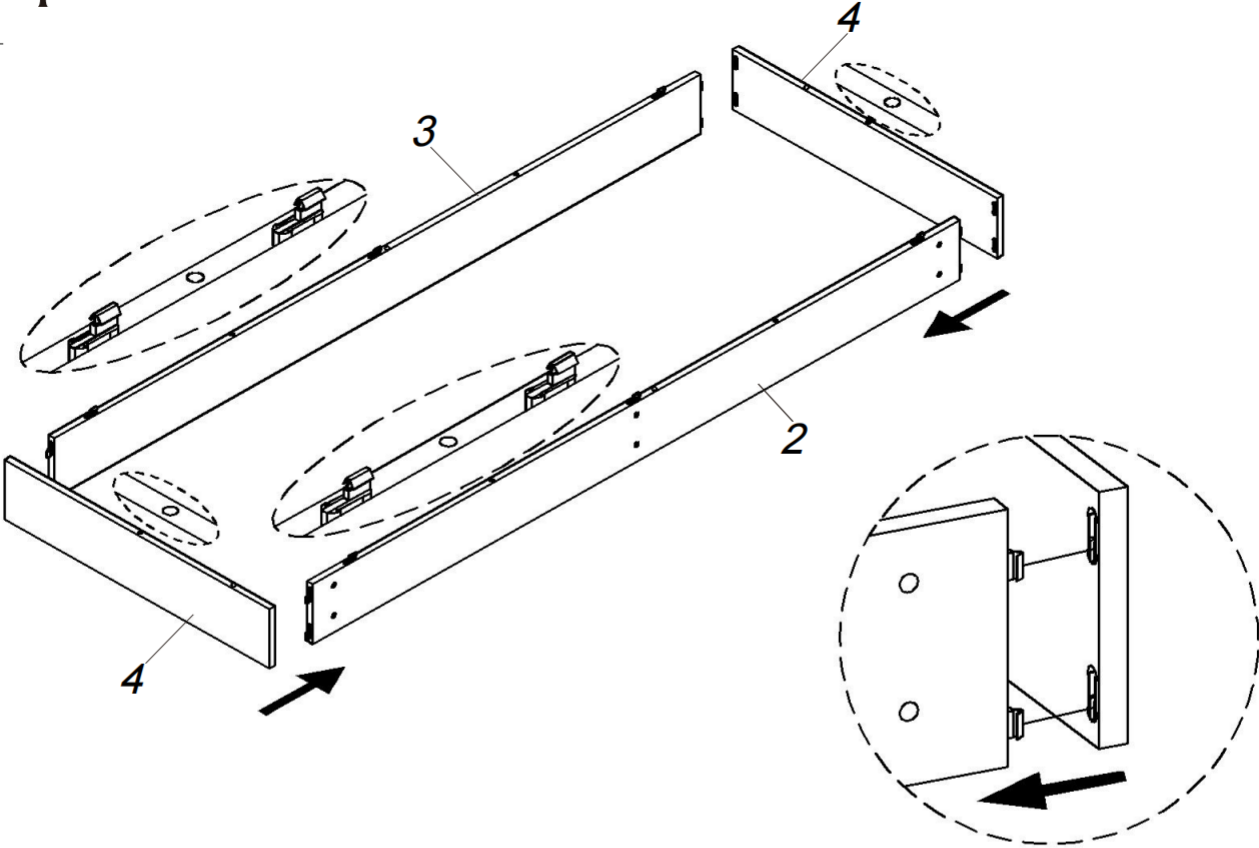


Step 2

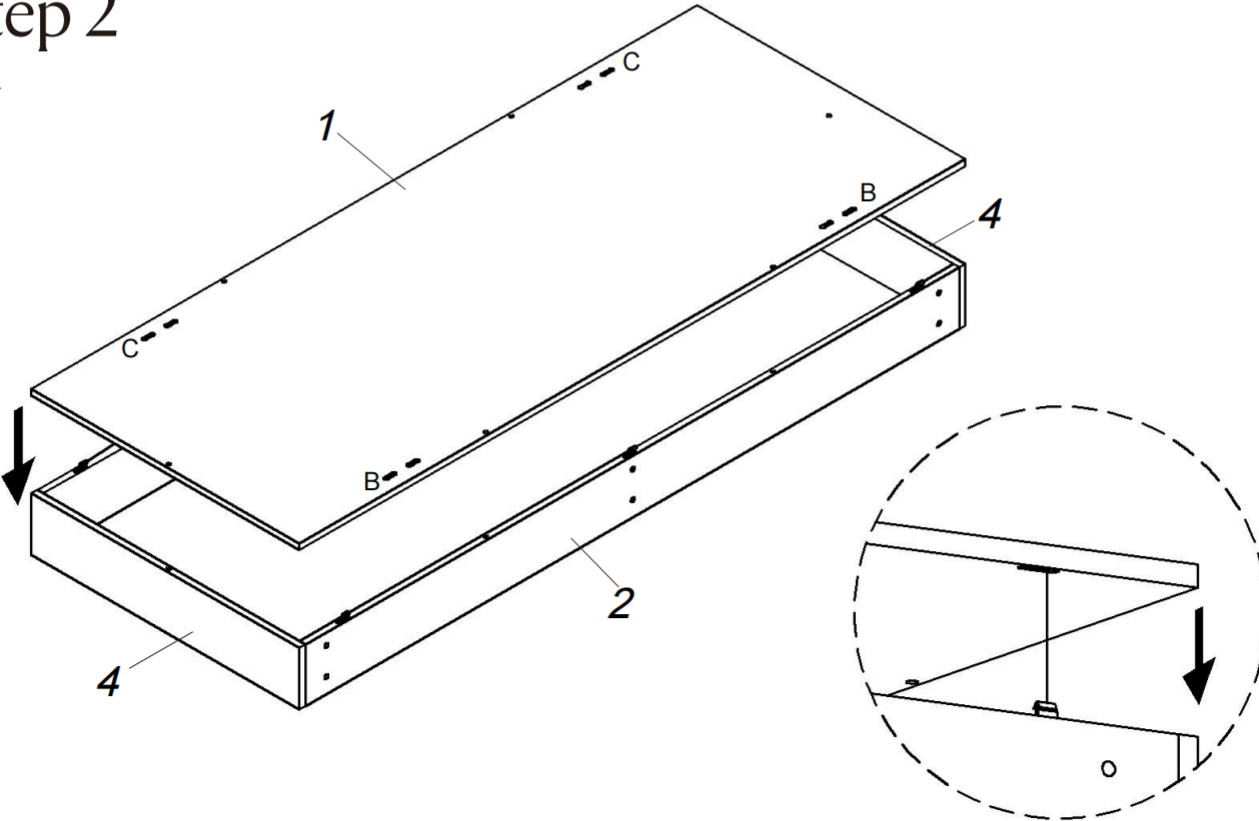

Step 3

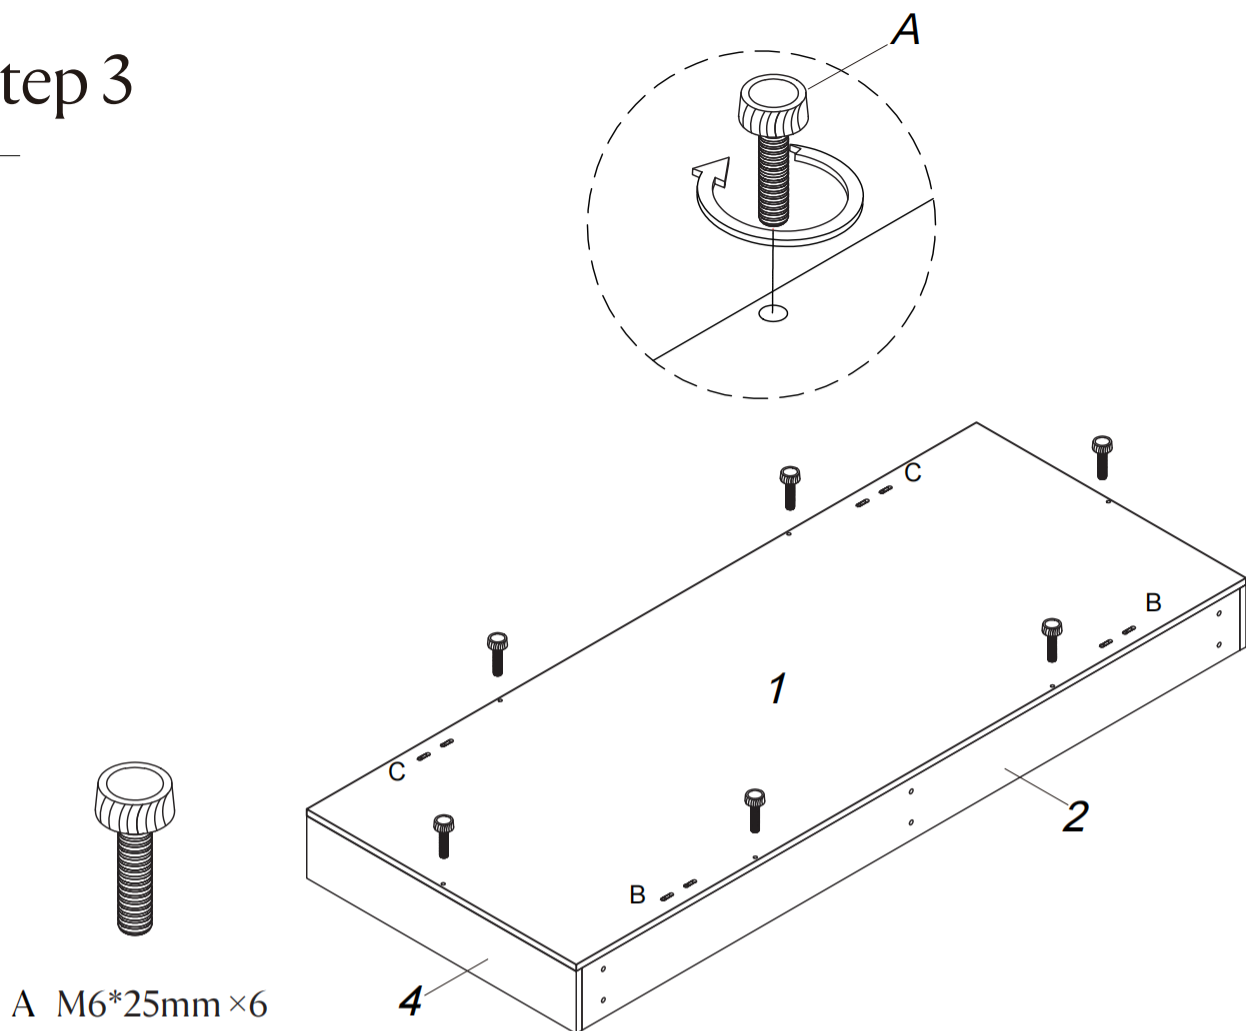


Step 4

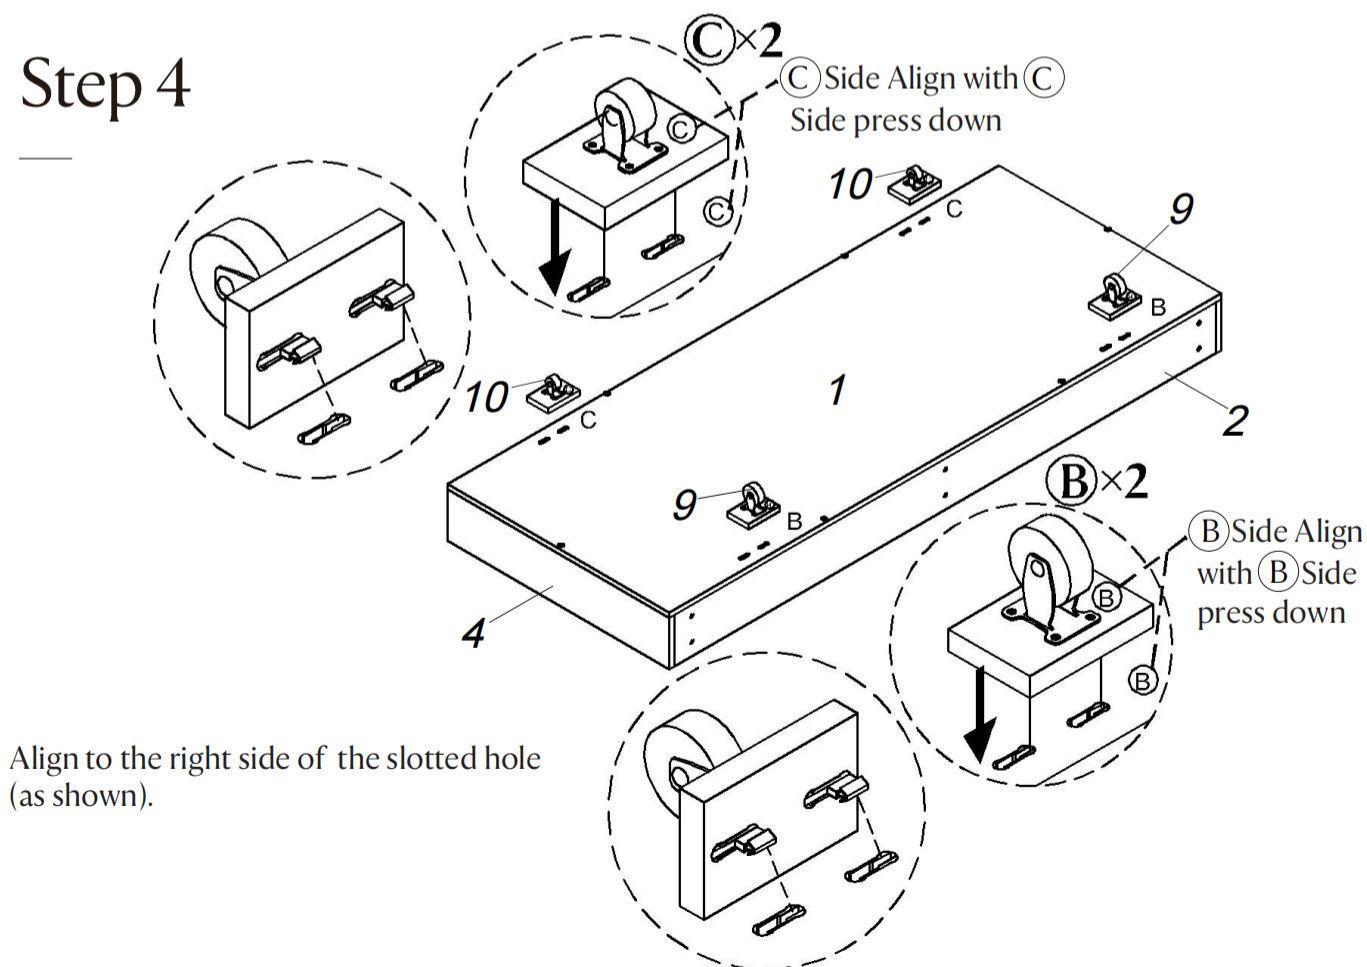


Align to the right side of the slotted hole (as shown).

Step 5

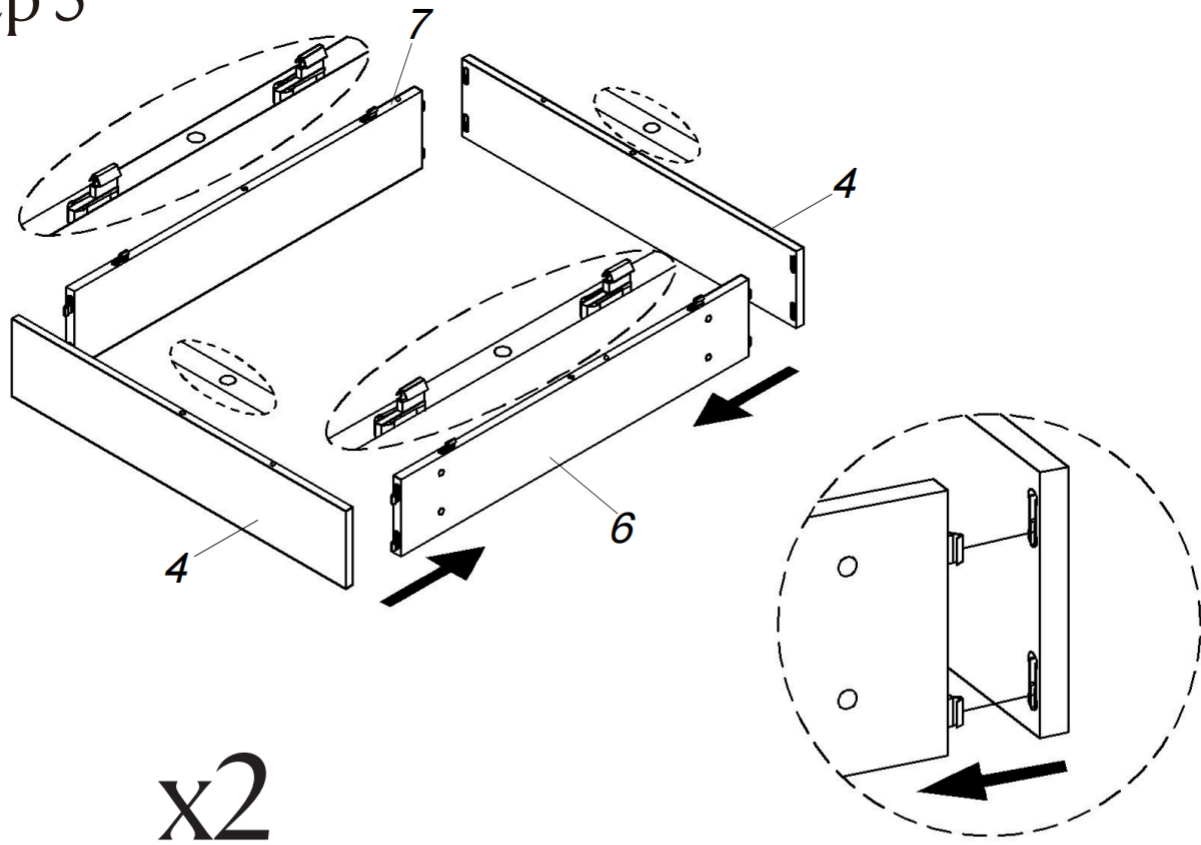


Assemble the two small drawers using the same method.

Step 6

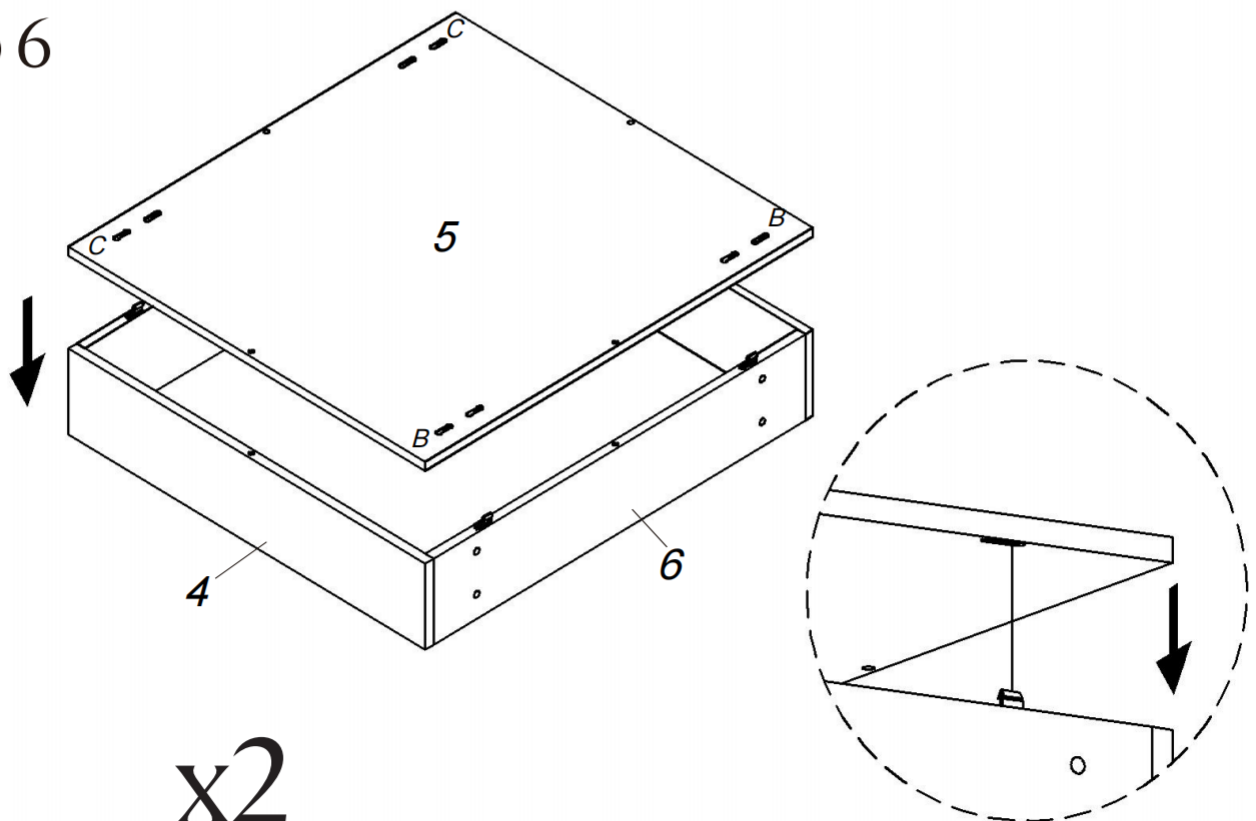

Assemble the two small drawers using the same method.


Step 7

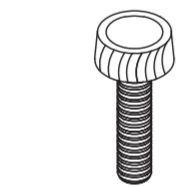

A M6*25mm ×4×2

x2

Assemble the two small drawers using the same method.

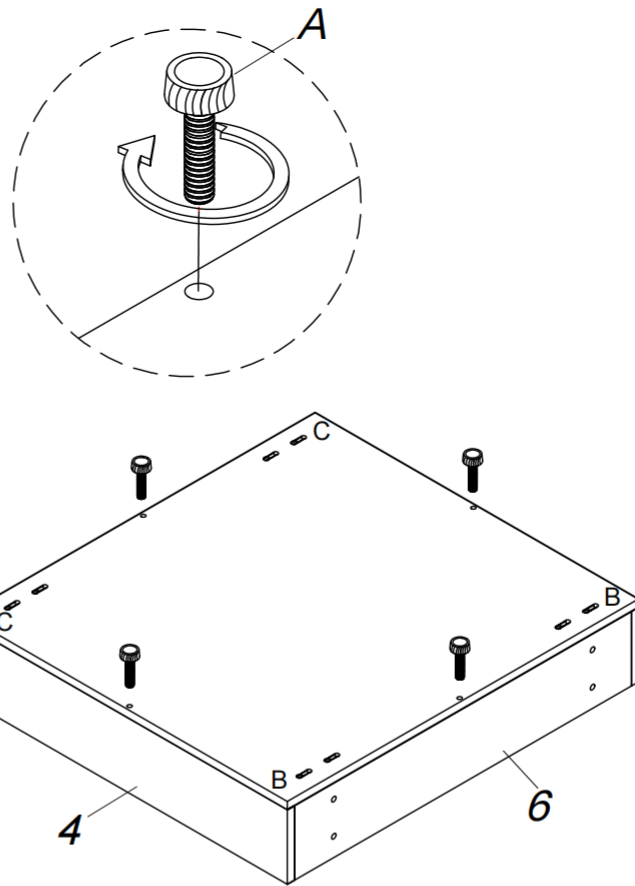


Step 8


Align to the right side of the slotted hole (as shown).

x2


Assemble the two small drawers using the same method.

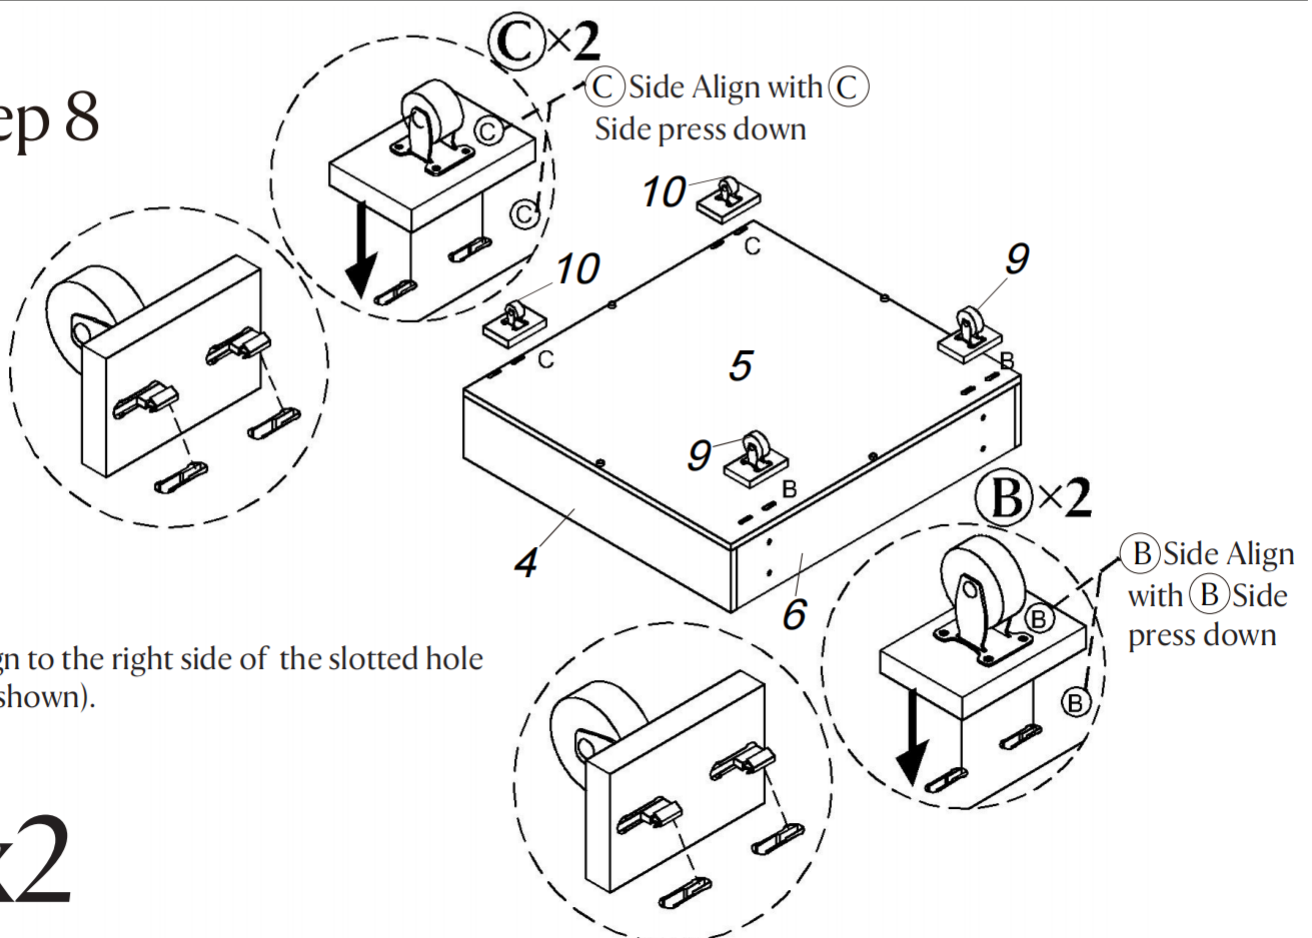


Step 9

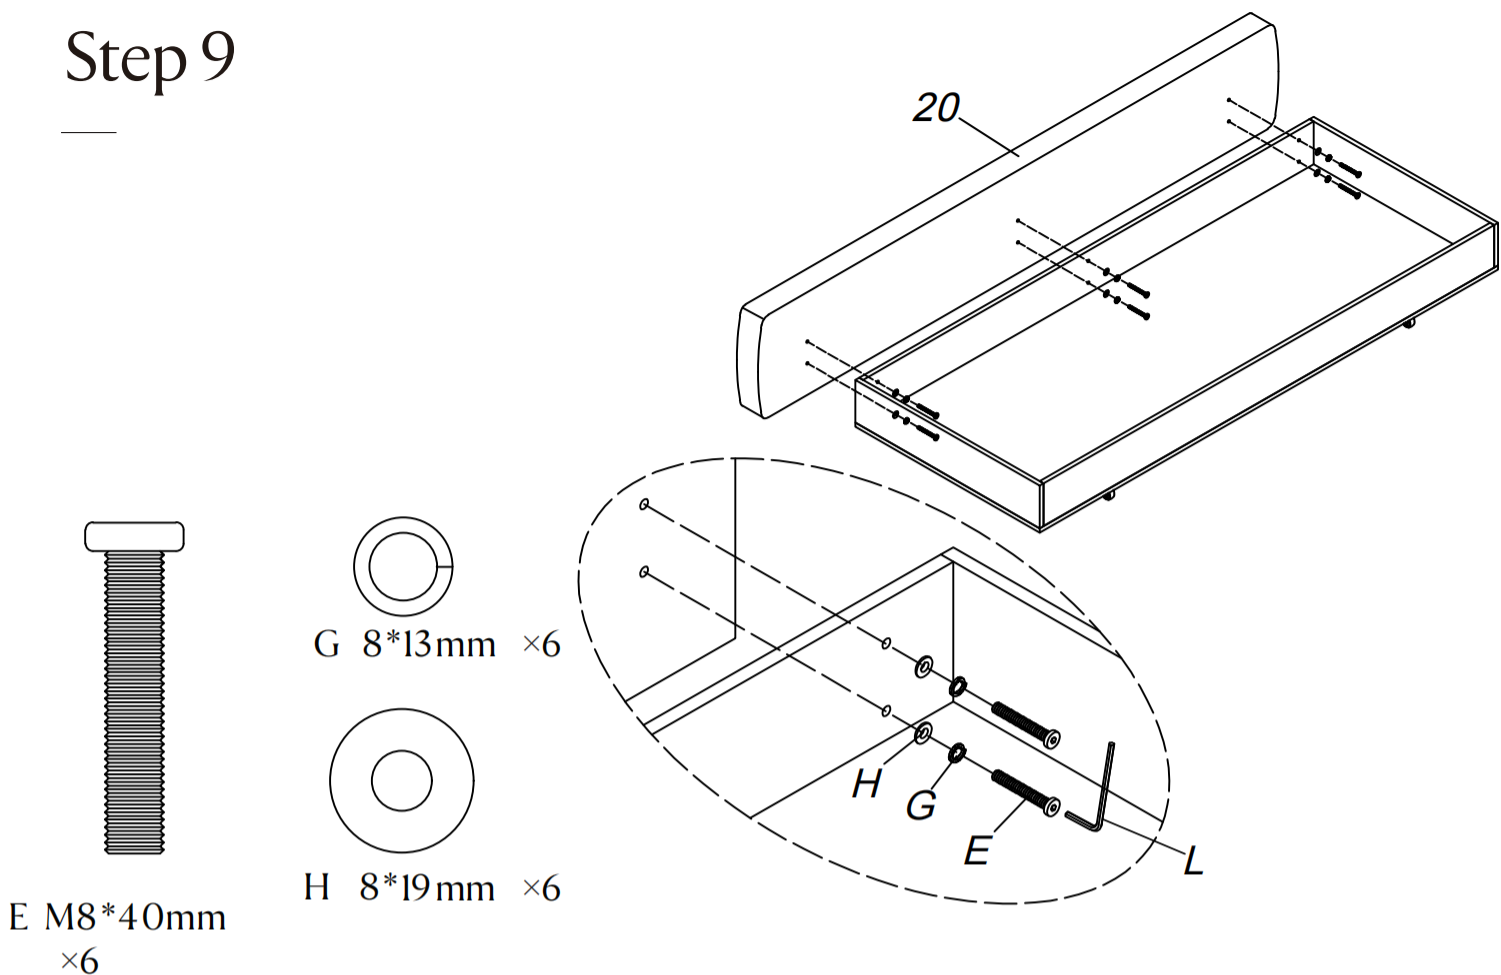


Step 10

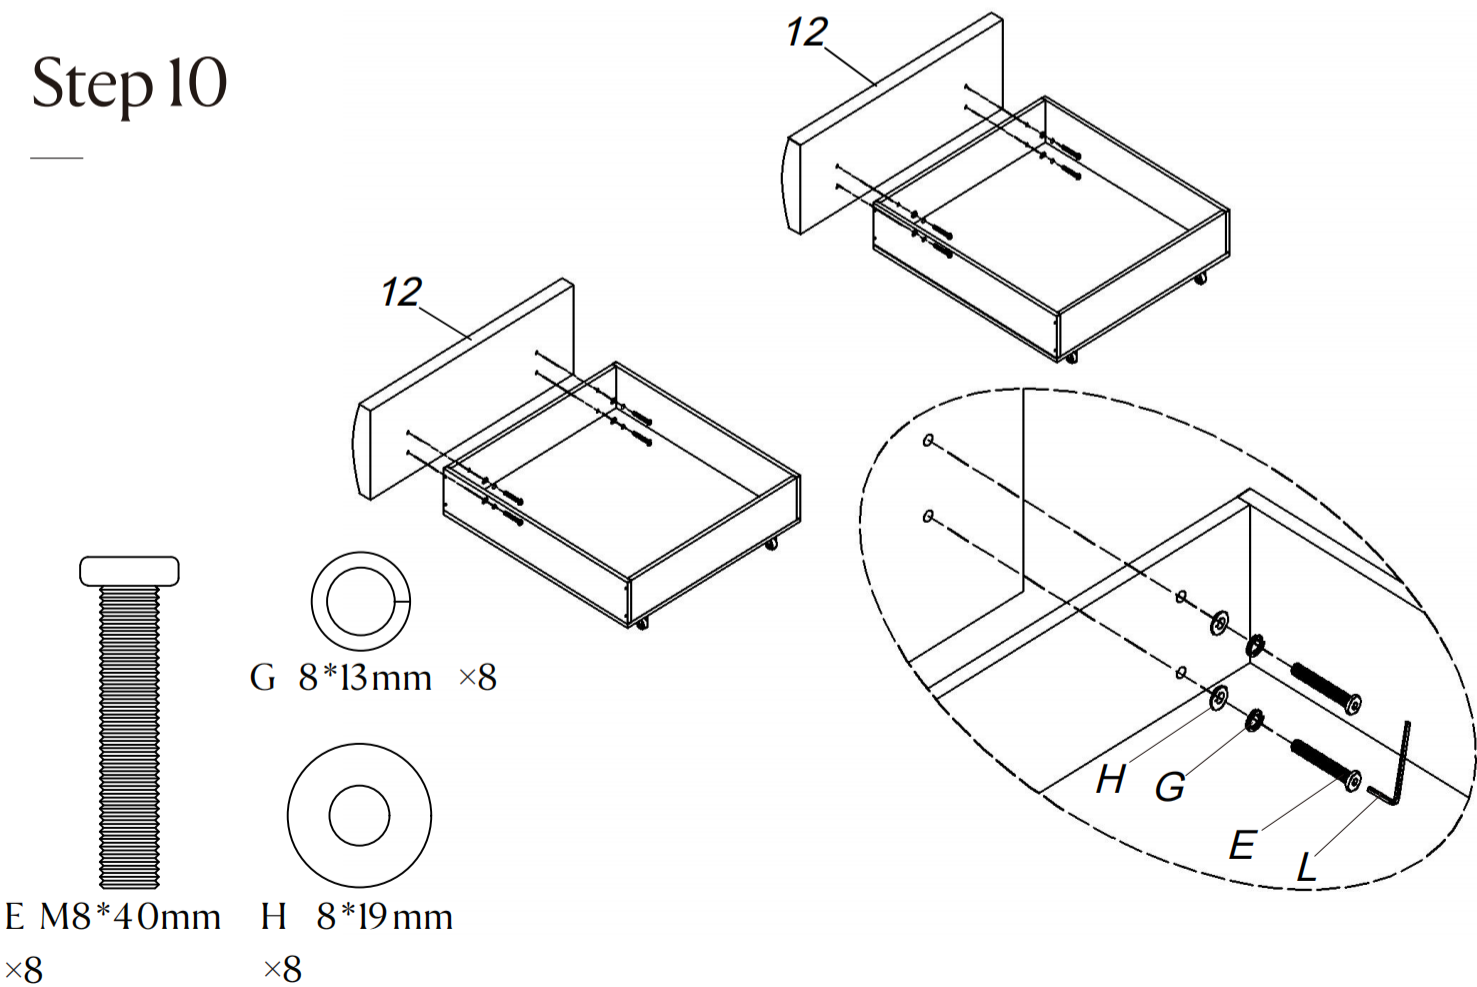


Step 11

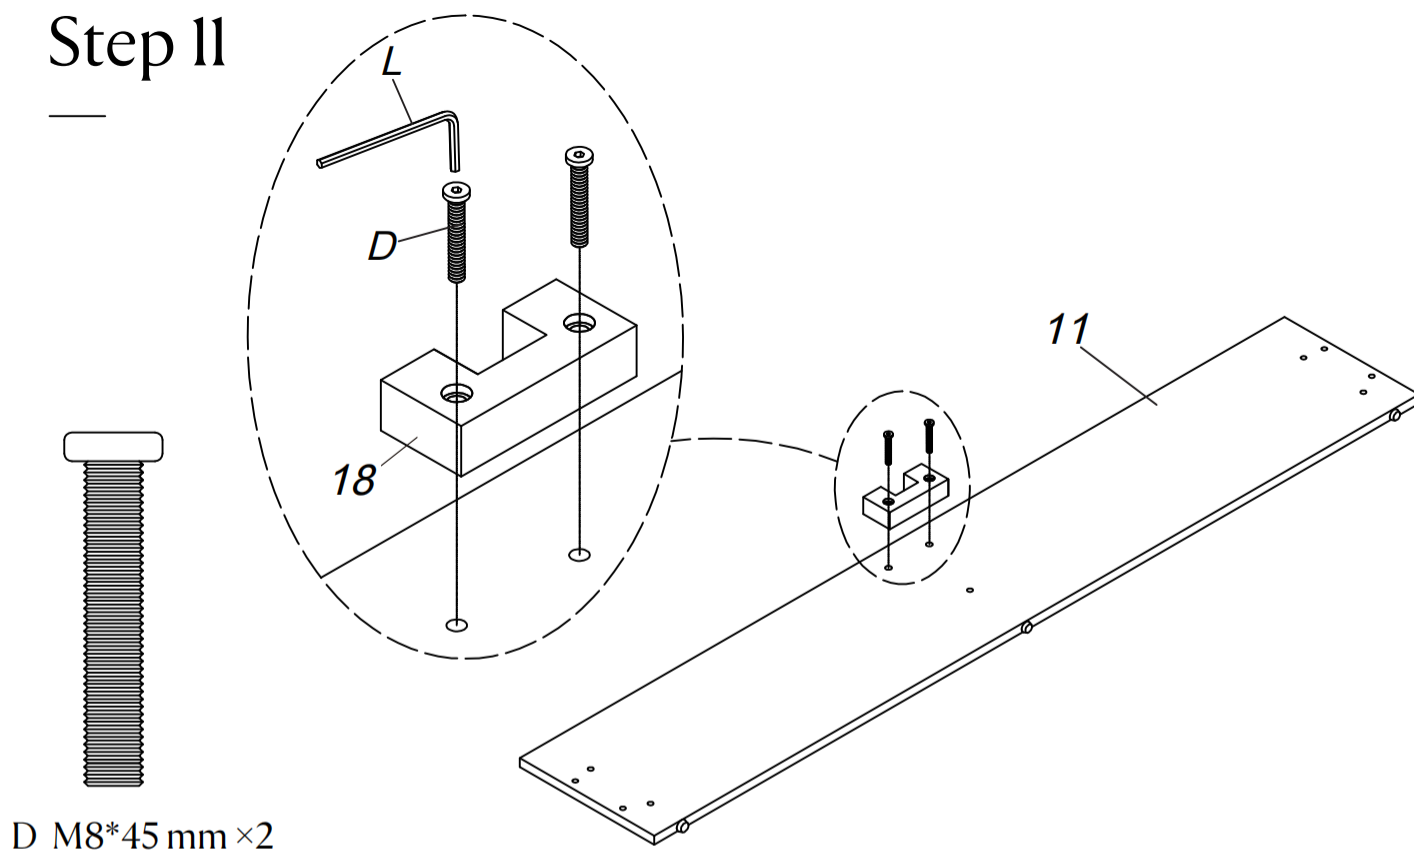


Step 12

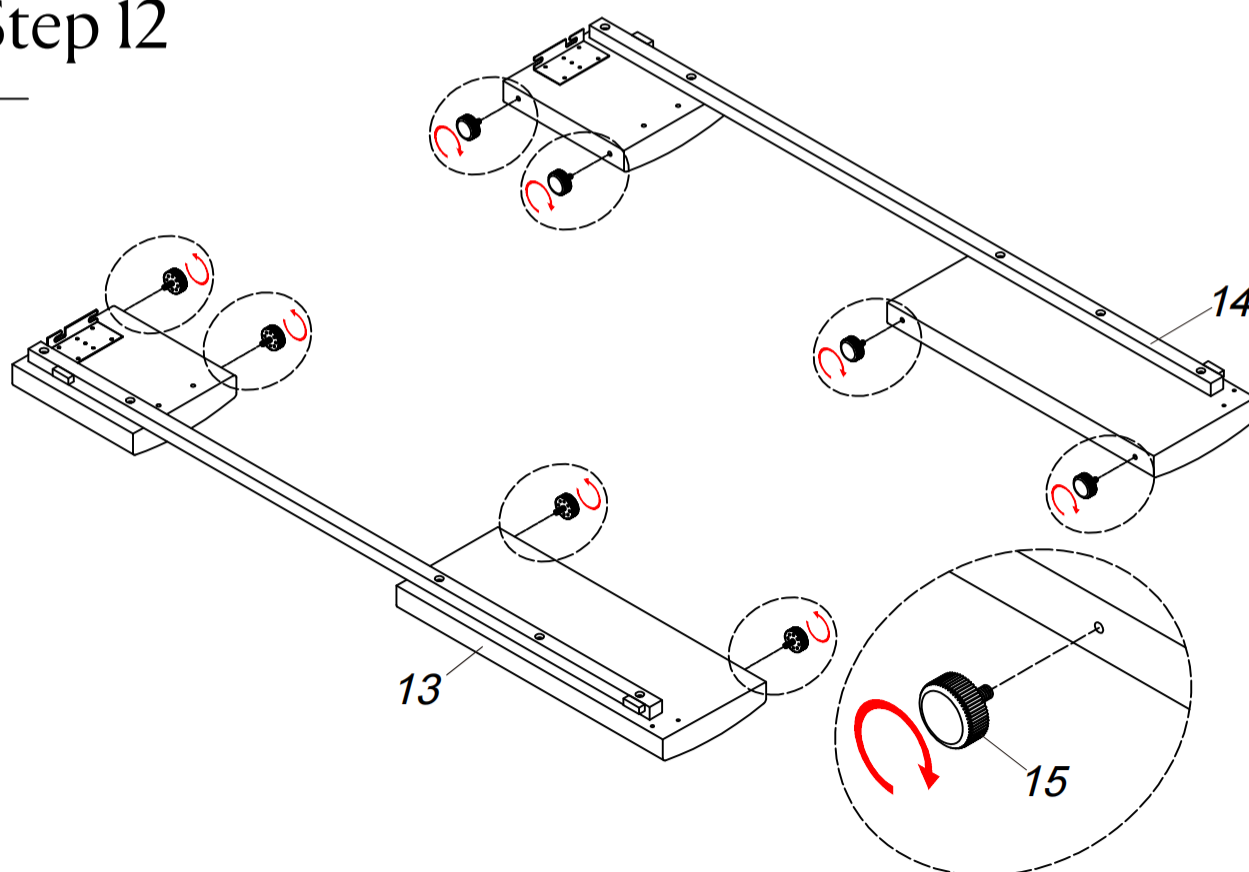


Step 13

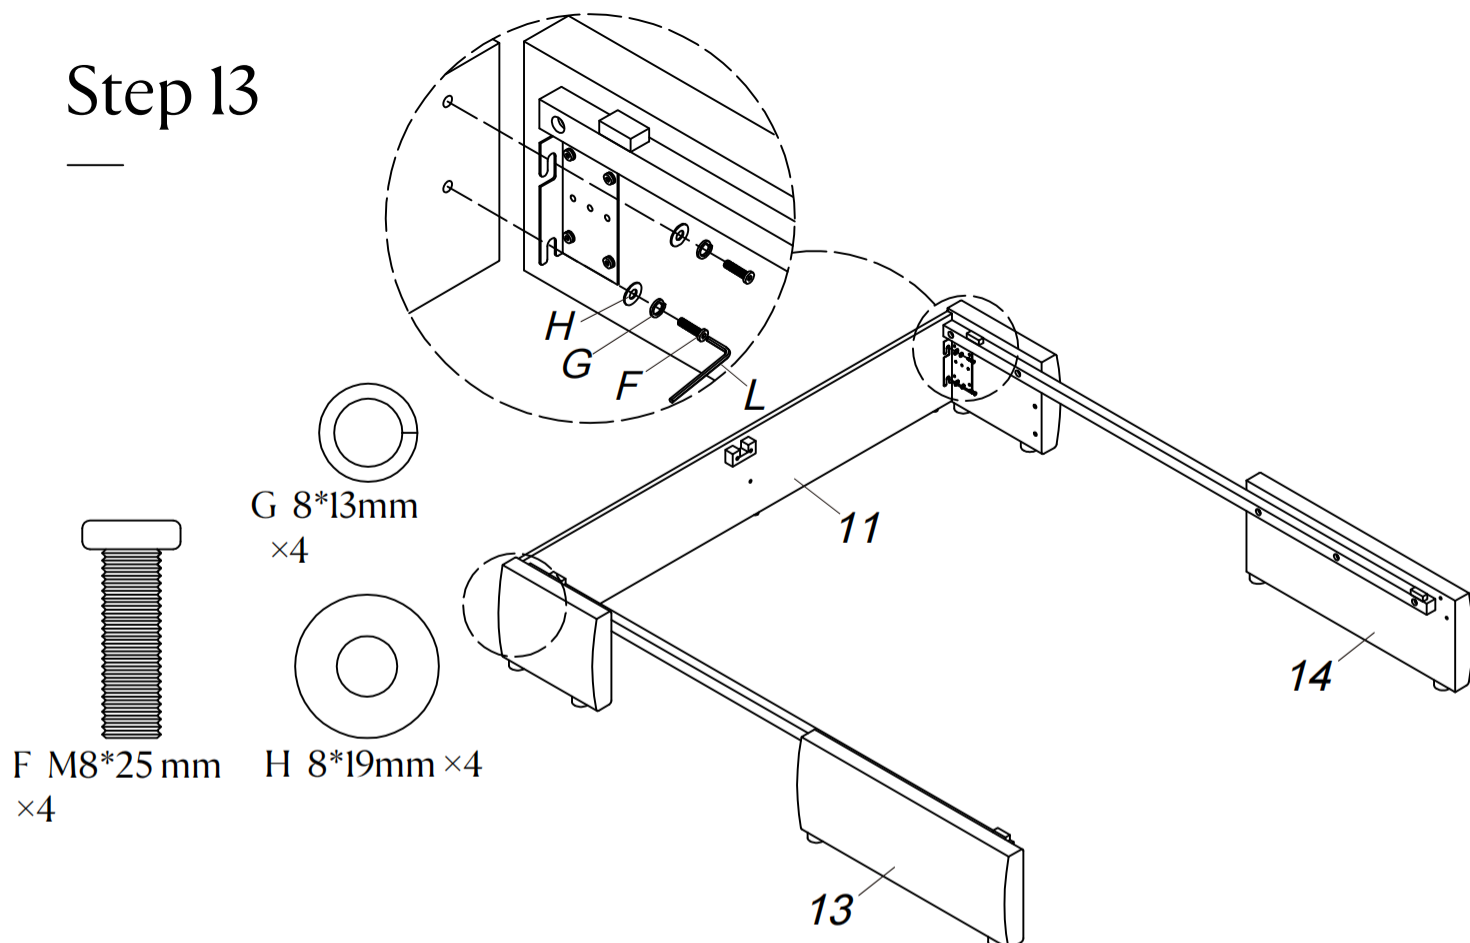


Step 14

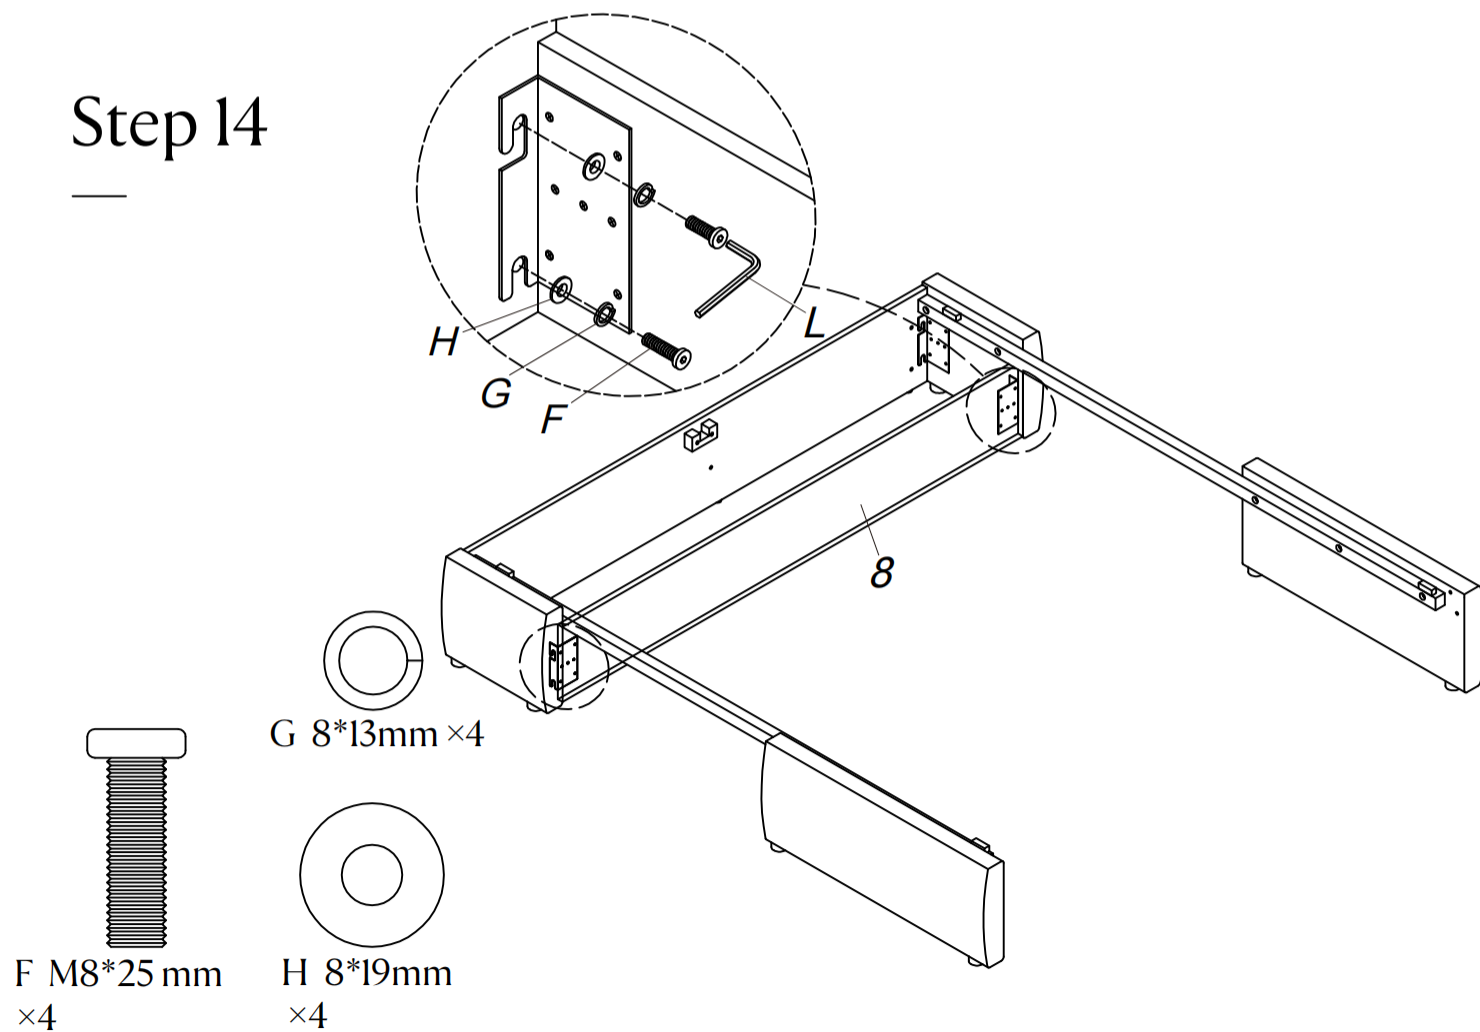

Step 15

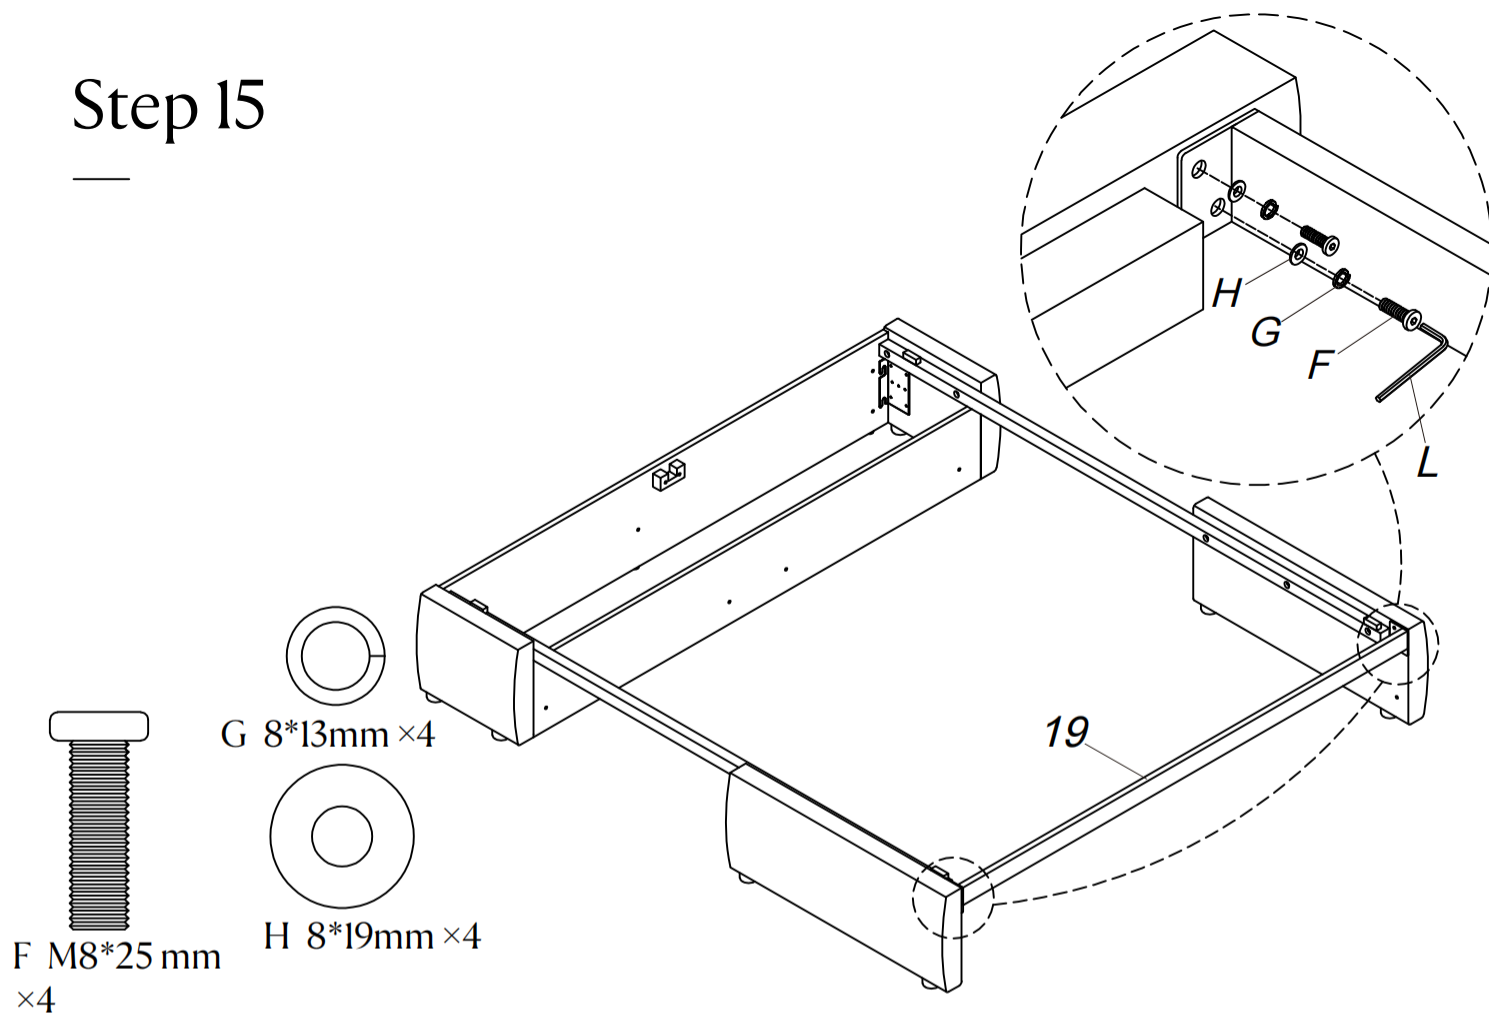

Step 16

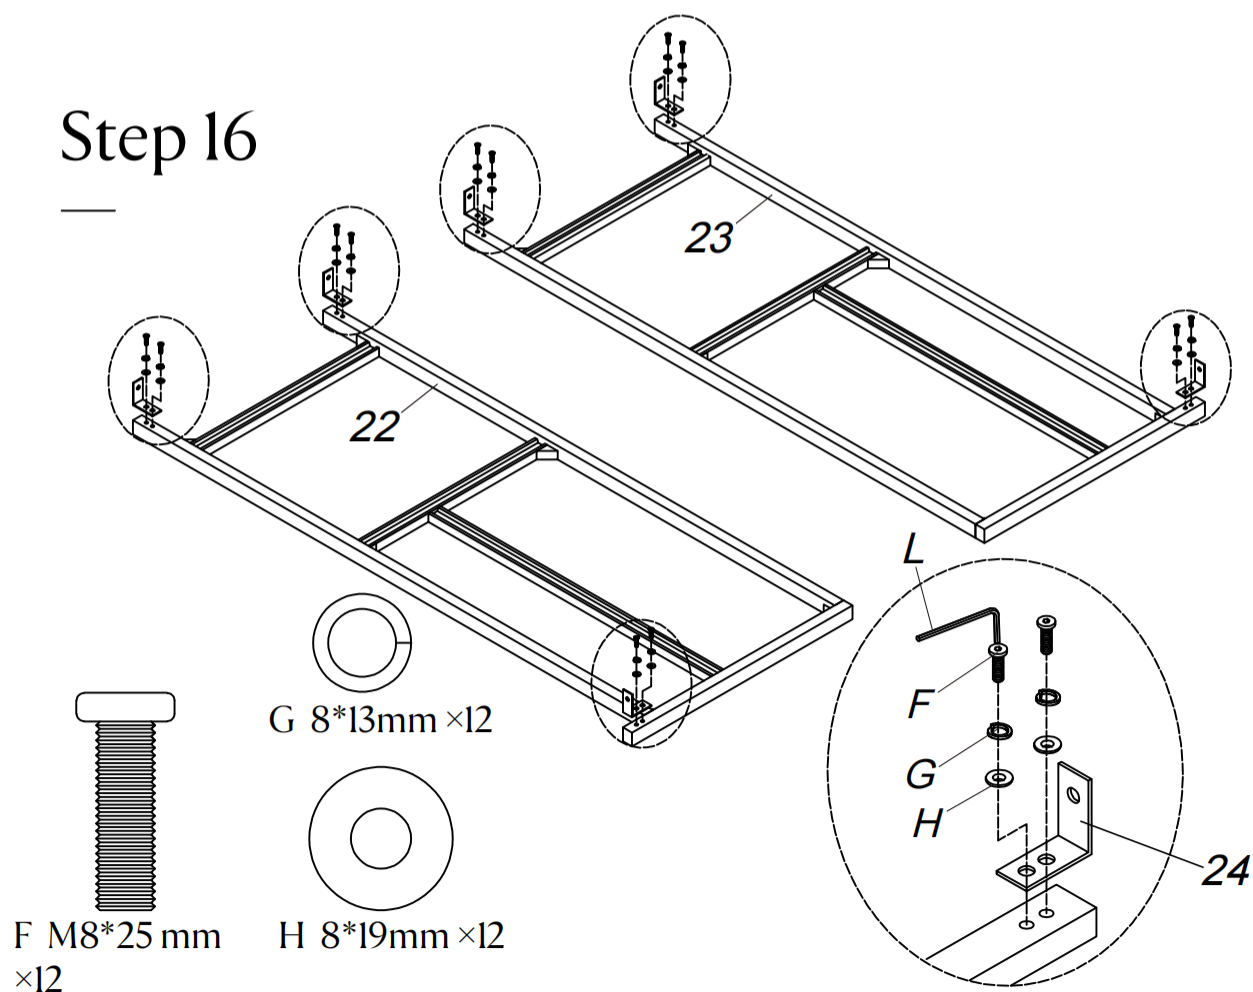

Step 17

K M8*16 mm
×4


G 8*13mm ×4

H 8*19mm ×4

F M8*25 mm
×2


G 8*13mm ×2

H 8*19mm ×2

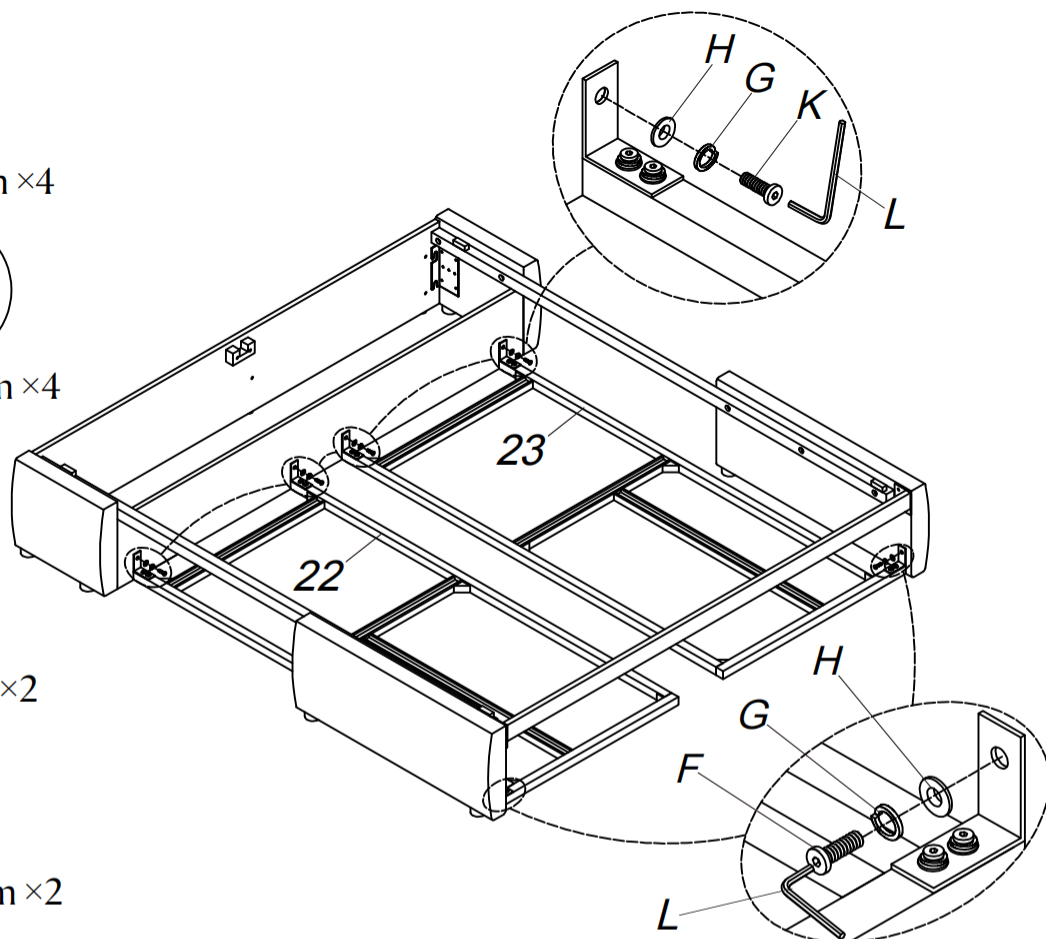

Step 18

Attach the Headboard (Optional)

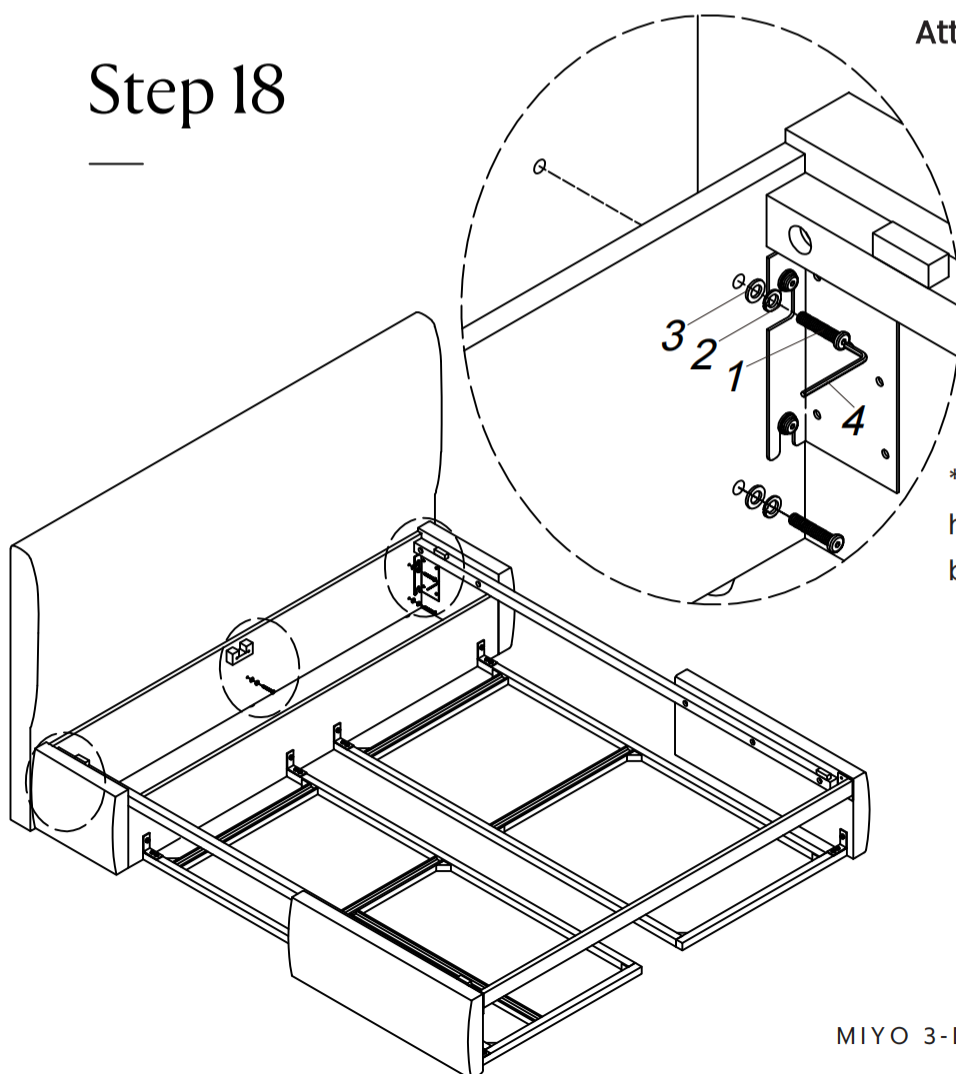


*If you have purchased the matching headboard, assemble and attach it to the bed frame now.


Hardware Note:

All necessary hardware for the headboard is included in its own package.


Step 19

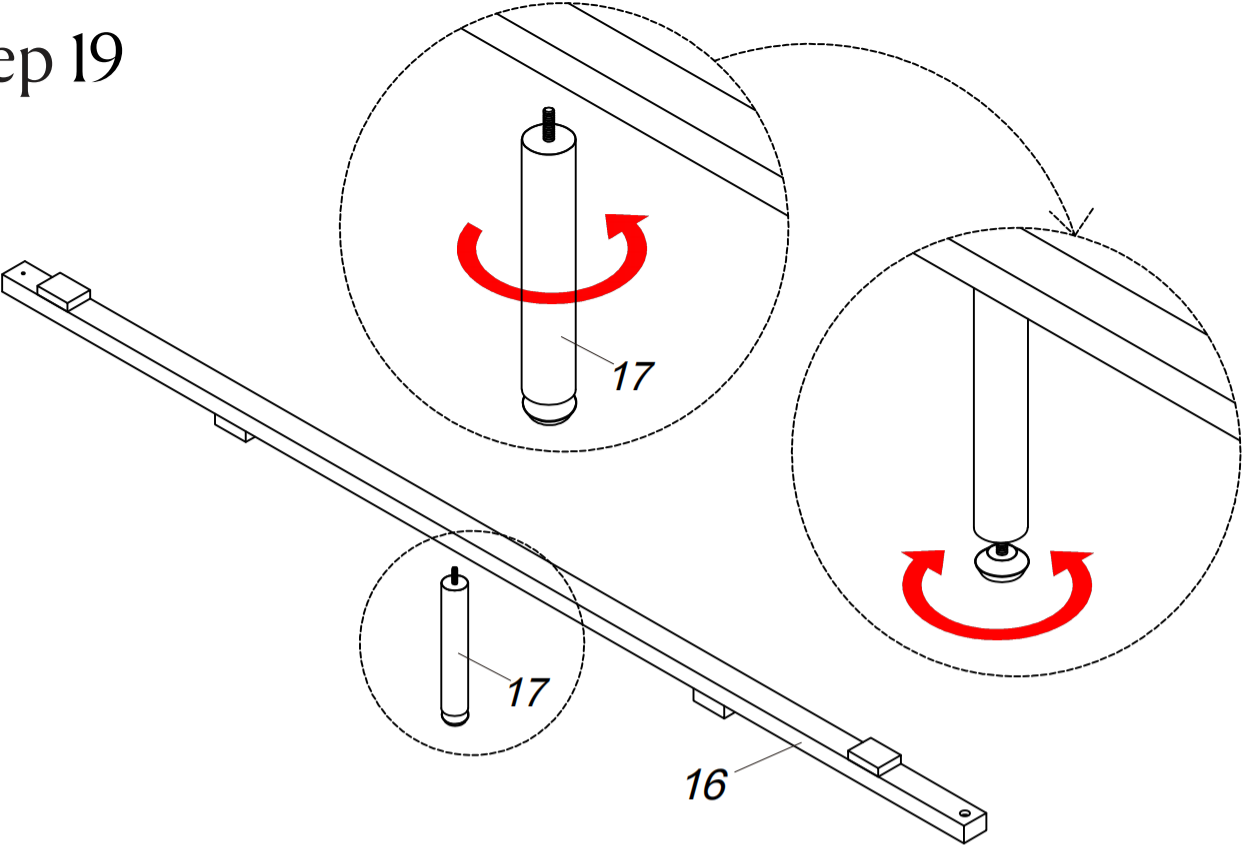


Step 20

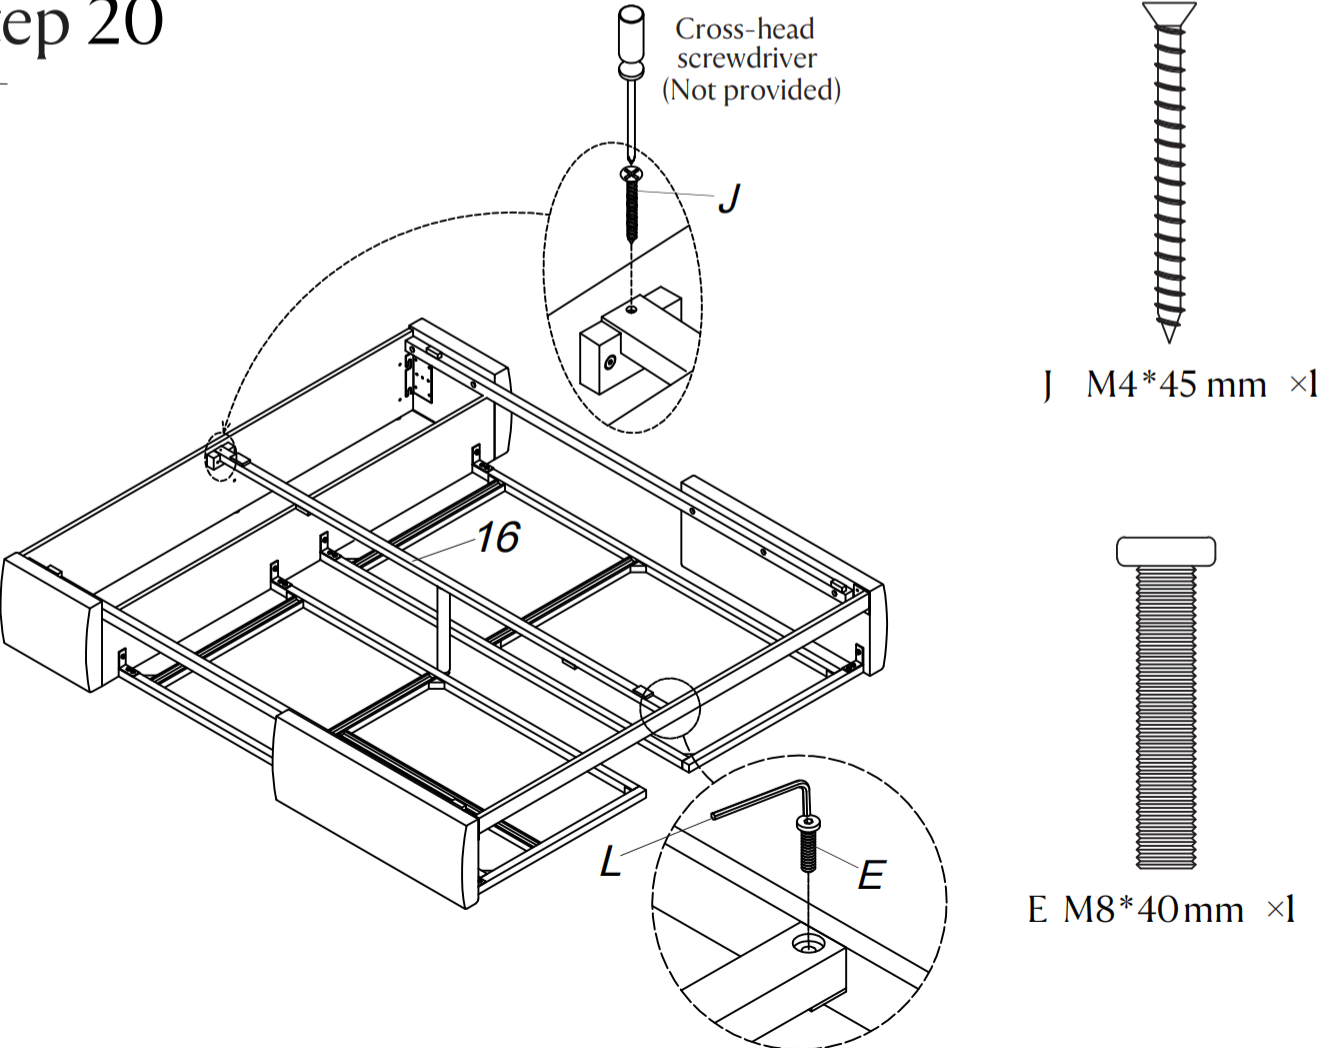


Step 21

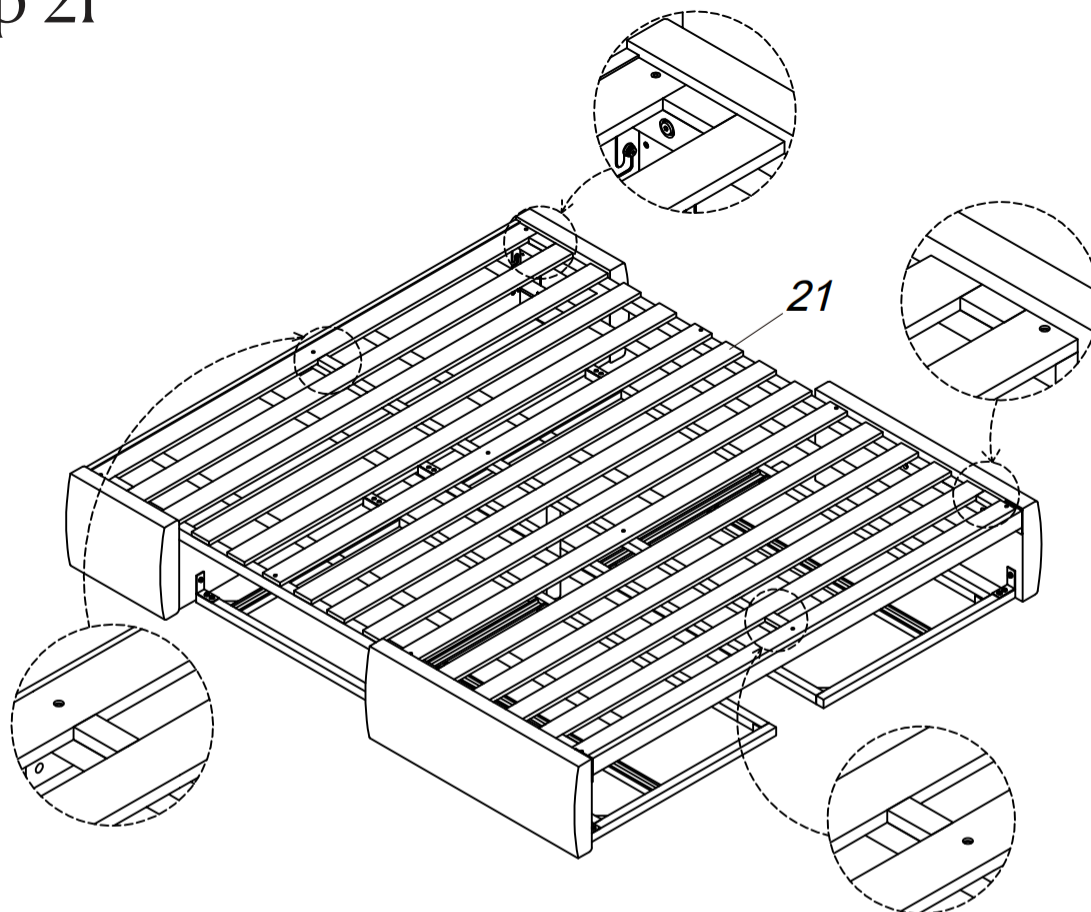

Step 22

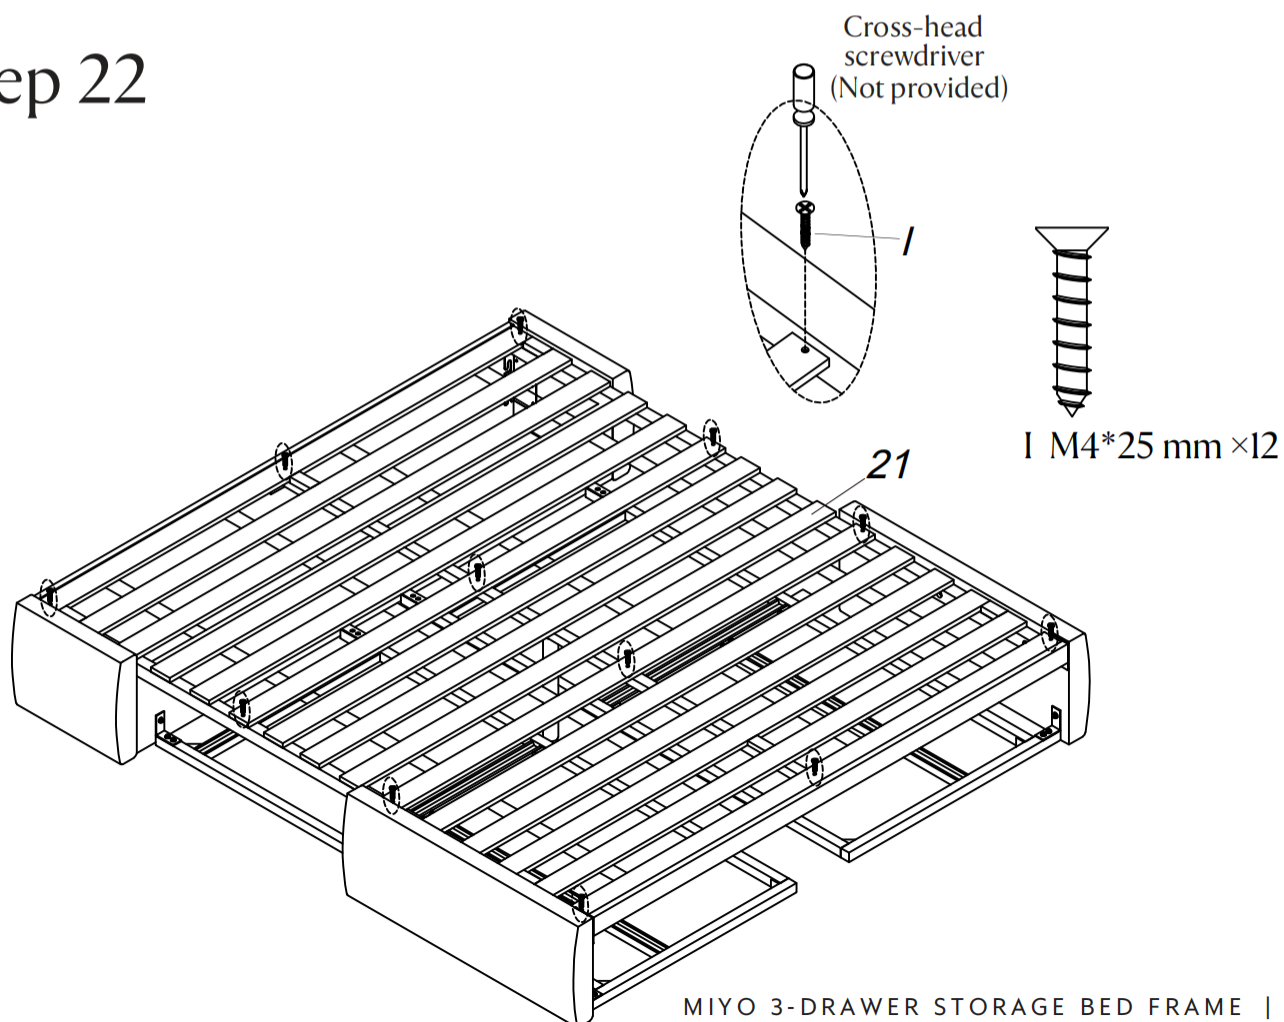

Step 23

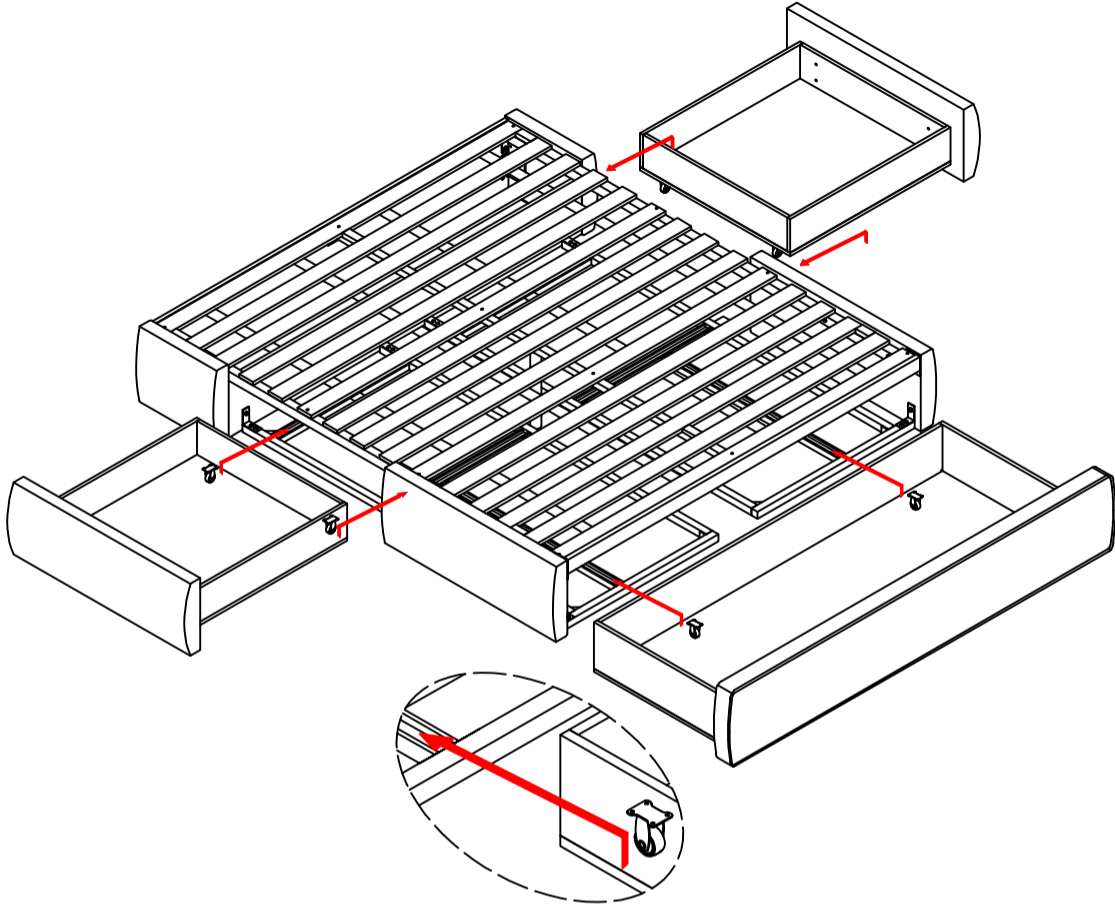


Finished!

Nice work. Just one last stretch.

Please remember to check:

- 01 To ensure bolts are tightened.
- 02 Do not miss the bolts installation.
- 03 To check if the drawers work well.

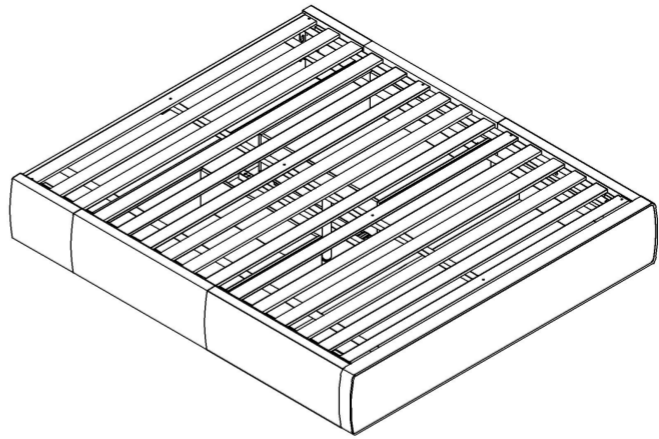

Always lift your Castlery product when moving it to your preferred location. Levelers (if any) may slant if you drag your product.

Finally, dust the product with a clean cloth (if needed).


You're all set! Enjoy your new living space, thanks to the addition of your Castlery product.

Note: Your actual product may have minor size differences due to manual measurements.


DRAWER DISASSEMBLY INSTRUCTIONS

Step 1


If the drawer needs to be reinstalled, follow these steps to disassemble and reassemble it.

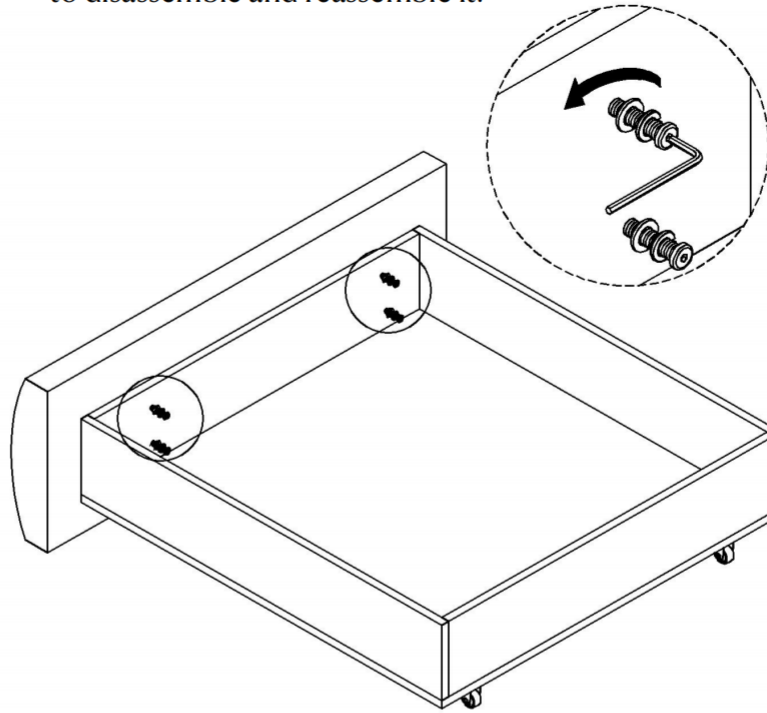


Step 2

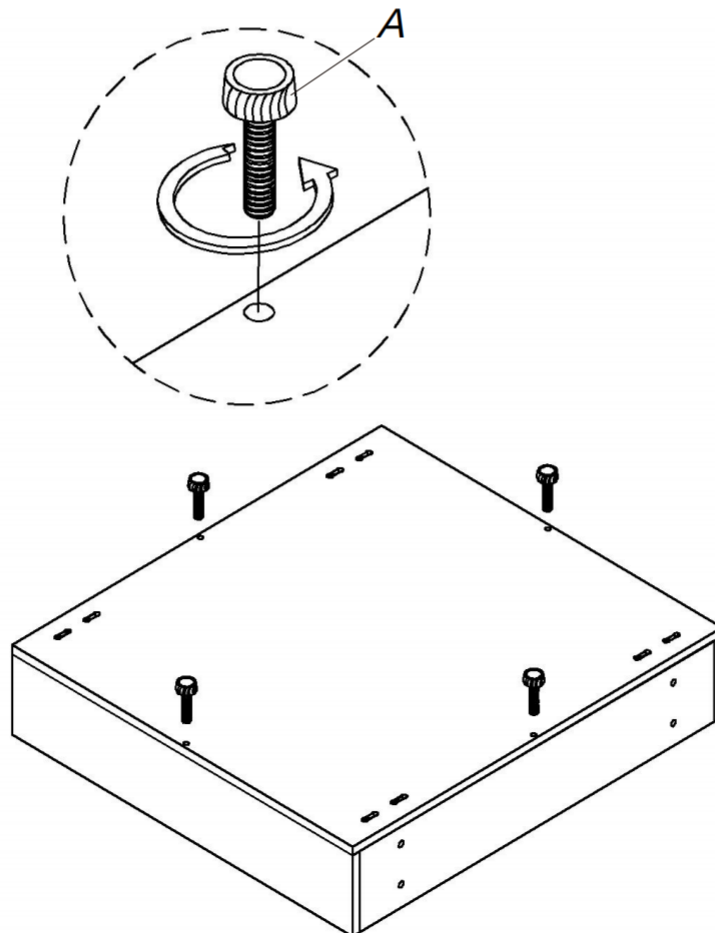


Step 3

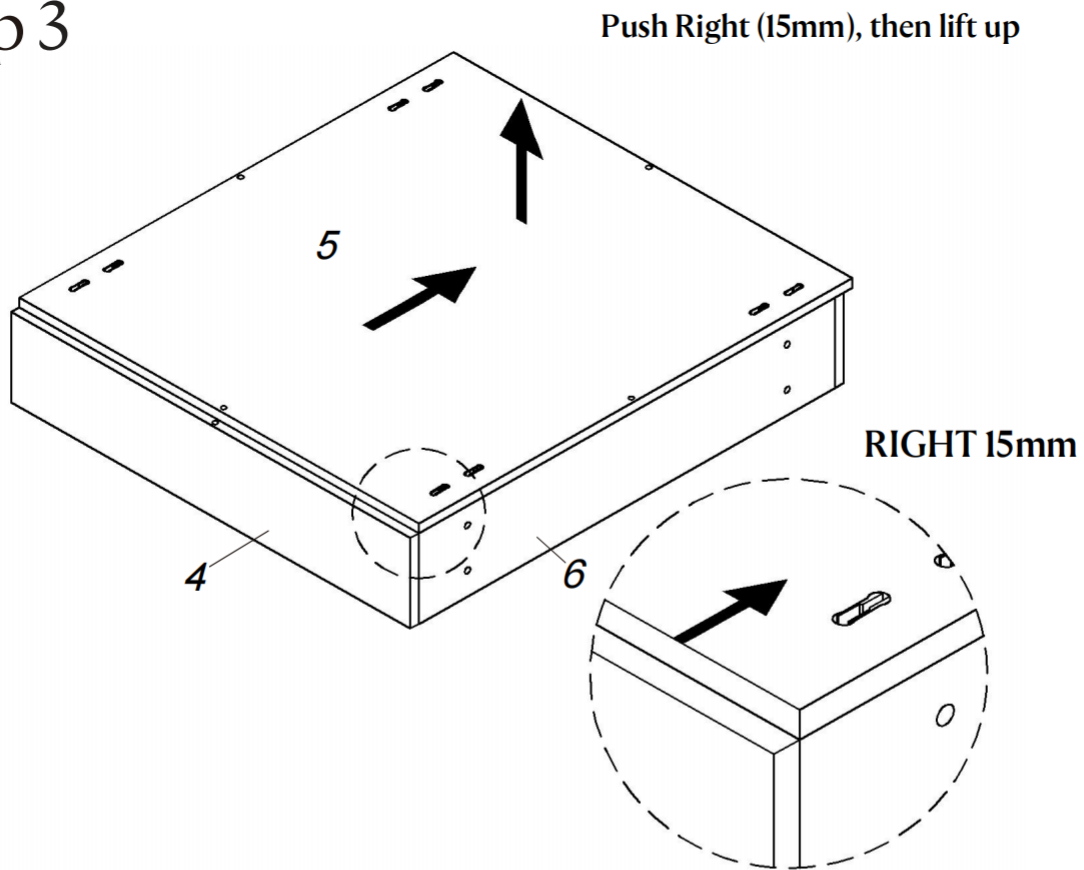

Step 4

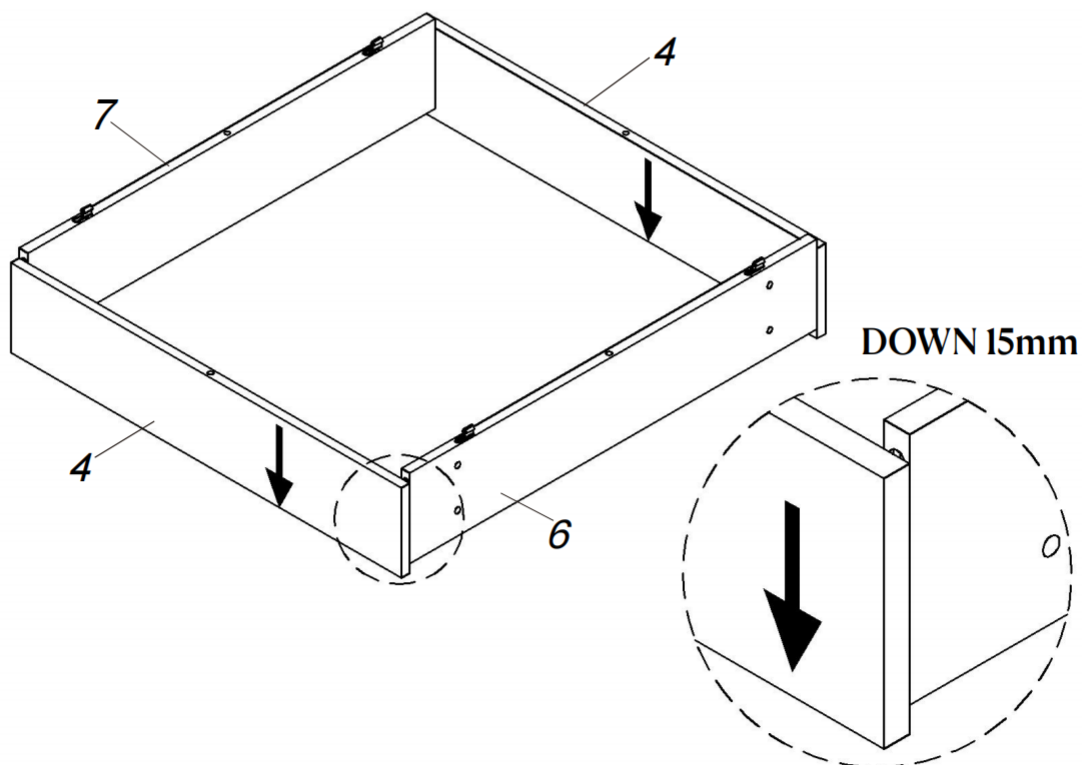

Step 5

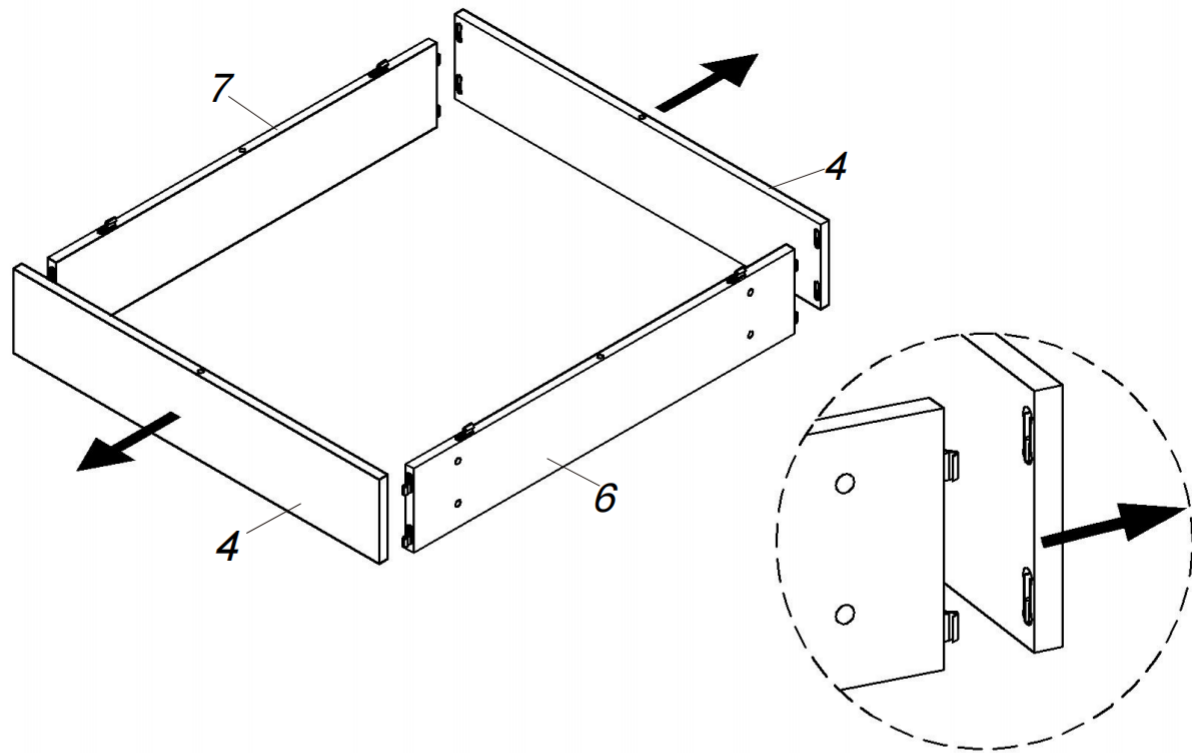

Care instructions

Your Castlery piece is built to last. Treat it with love and respect—it will reward you for years to come.

Upholstered Bed Care

1. Always move the bed by lifting it at the base, do not drag.
2. Avoid prolonged exposure to direct sunlight and keep furniture away from any heating source to prevent fading or discoloration.
3. Vacuum the surface regularly to remove any dust particles.
4. Blot spills immediately and gently with a clean microfiber cloth. Do not rub.
5. Professional cleaning is advised for tough stains.
6. Avoid abrasive cleaners and placing rough or sharp objects on the surface.