


Quick Base Canopy Connector

Hybrid 2+ Tall

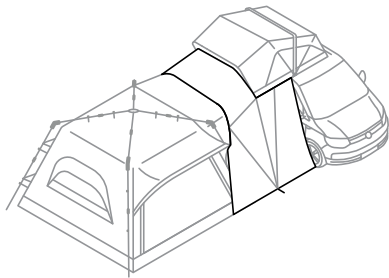

12 + 1x

T-Pegs



2x

Pole Thick




1x

Pole Thin

A


Canopy

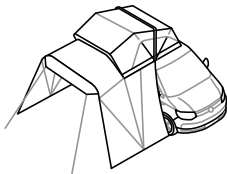

A | 3-14

B

Canopy + Quick Base

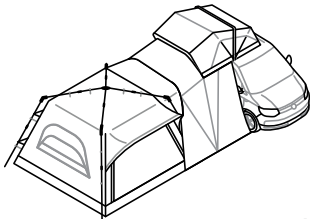


B | 15-24

1

Instructions

A


Canopy

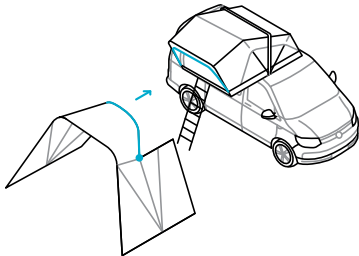



1



2


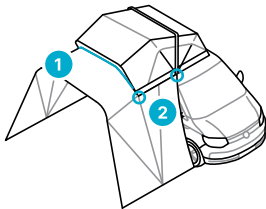



3 Add 2x Pole Thick

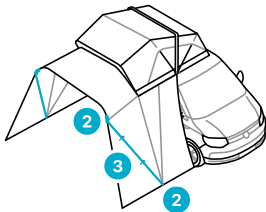

4



Add 1x Pole Thin

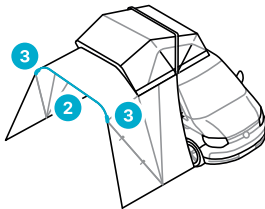

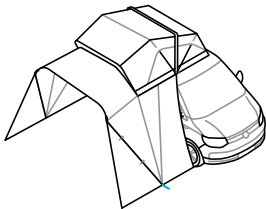



6

Adjust height

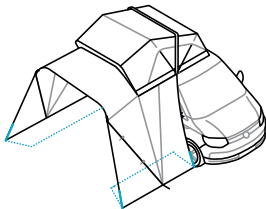


7


Adjust height

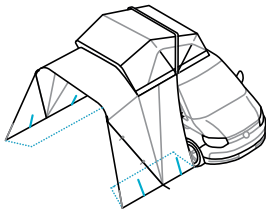


8 Spread the canopy forward

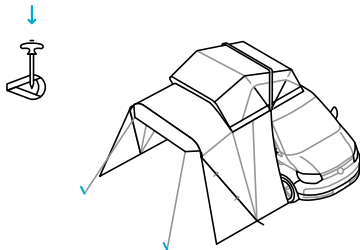



1 Deconstruction

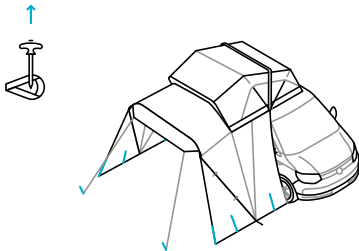

Remove

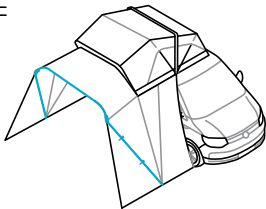

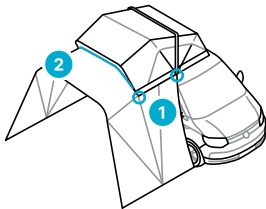

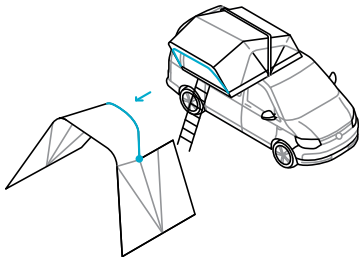


1

Instructions

B


Canopy + Quick Base

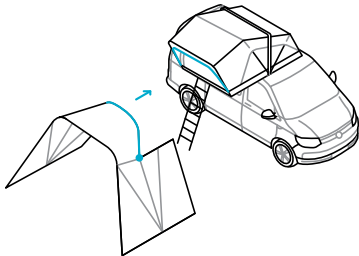


1




2

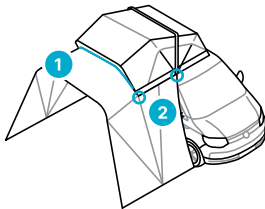



3 Add 1x Quick Base

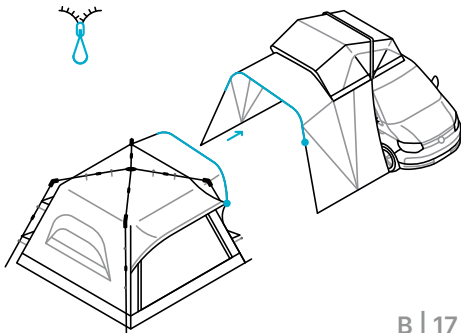

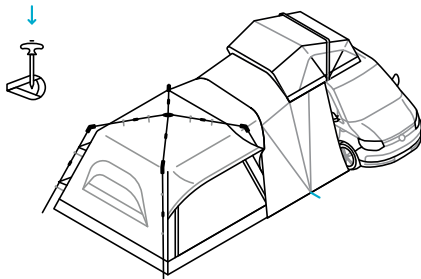



5

Adjust height

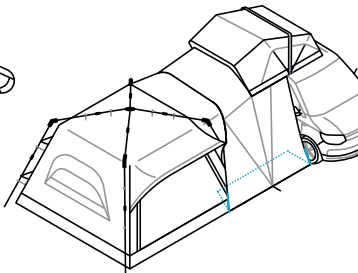



6

Adjust height

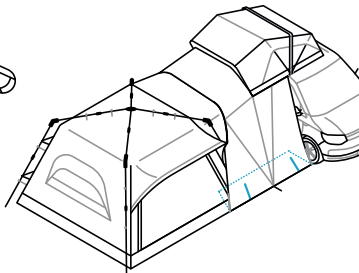

1 Deconstruction

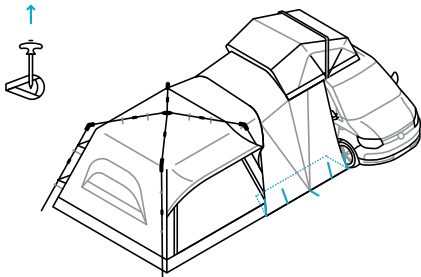

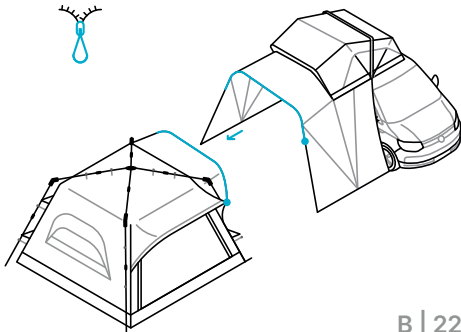

1



2

