


Quick Base Canopy Connector Compact 3 Tall

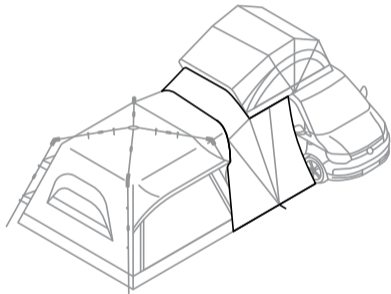

12 + 1x

T-Pegs



2x

Pole Thick




1x

Pole Thin

A


Canopy

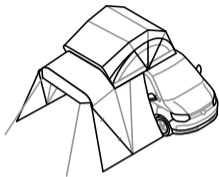

A | 3-14

B

Canopy + Quick Base

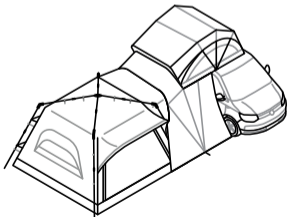


B | 15-24


1

Instructions



A

Canopy

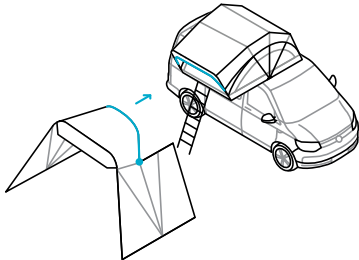


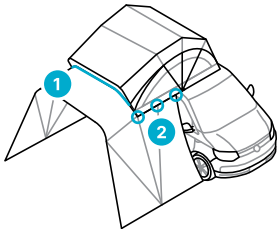


3 Add 2x Pole Thick

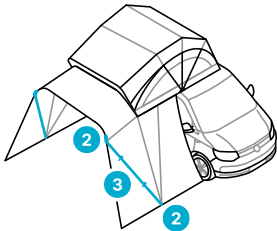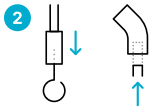


4

Add 1x Pole Thin

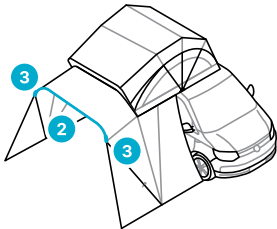



5

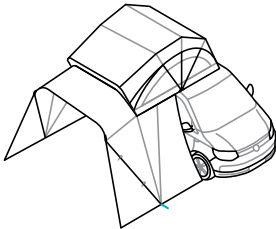

A | 7



6

Adjust height

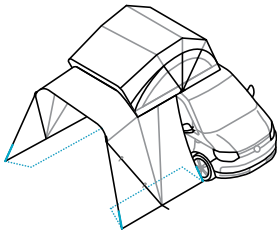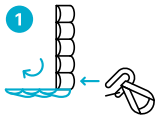


7

Adjust height

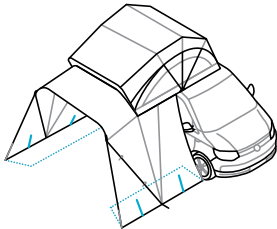


8

Spread the canopy forward

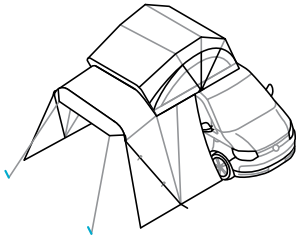



A | 10


1 Deconstruction

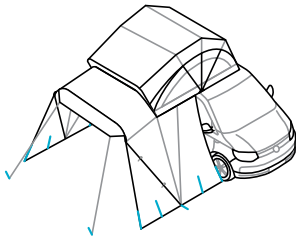

Remove

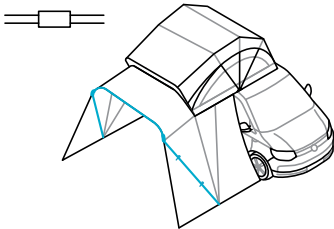

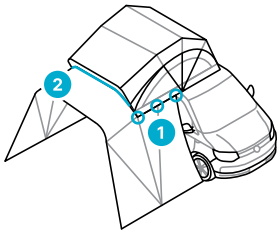

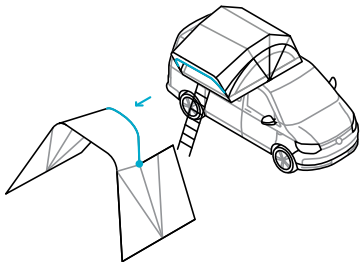



1

Instructions


B

Canopy + Quick Base

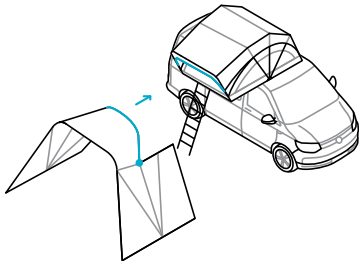


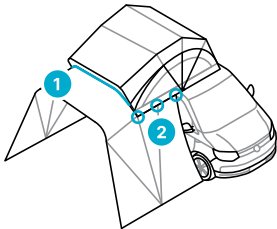

3 Add 1x Quick Base

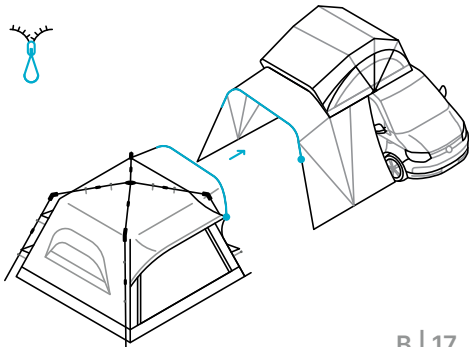



4

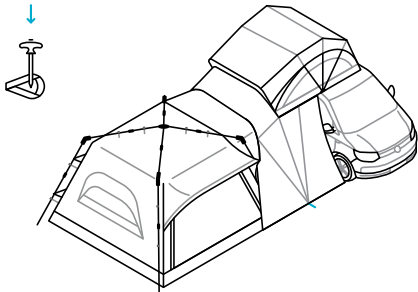

B | 18



5

Adjust height

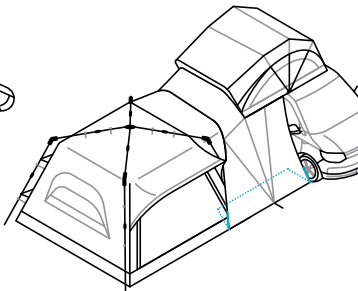


6


Adjust height

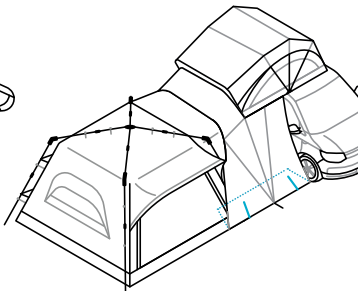

1 Deconstruction

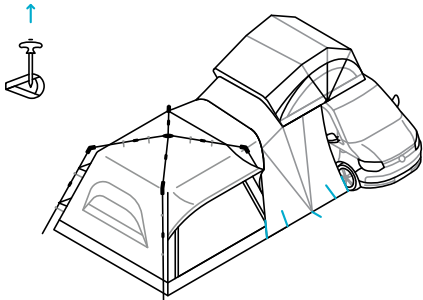

2

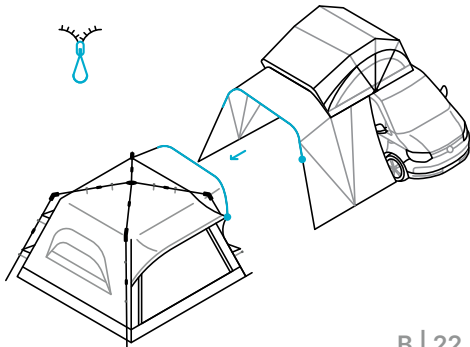

B | 22

