


# Quick Base Canopy Connector Family 4 Tall

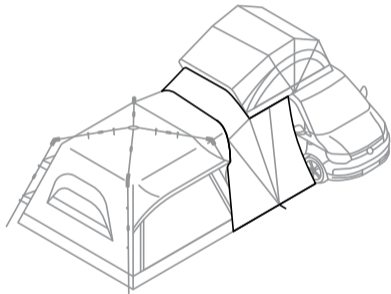

**12 + 1x**

**T-Pegs**



**2x**

**Pole Thick**




**2x**

**Pole Thin**

**A**


# Canopy

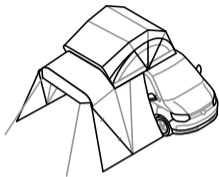

A | 3-14

**B**

# Canopy + Quick Base

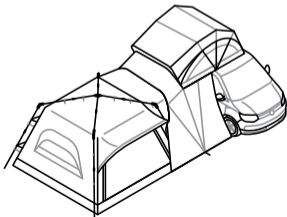


B | 15-24


1

# Instructions



A

## Canopy

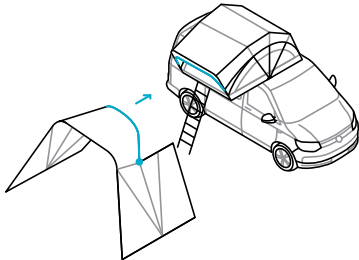


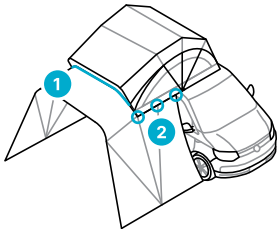


### 3 Add 2x Pole Thick

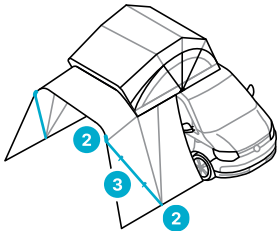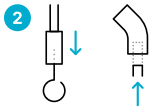


**4**

# Add 1x Pole Thin

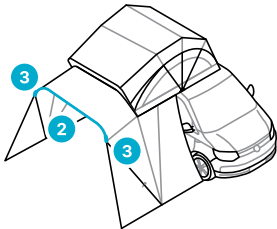


5

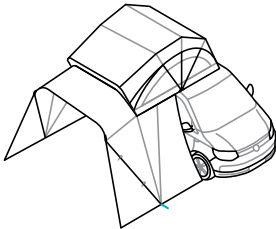


A | 7


# 1 Deconstruction

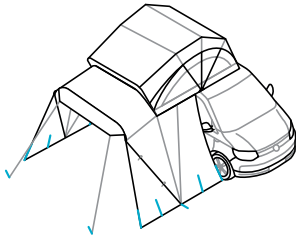



Remove

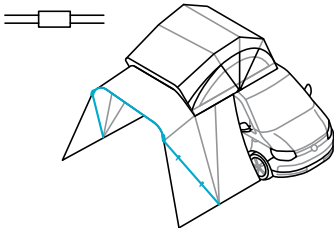

## 8 Spread the canopy forward

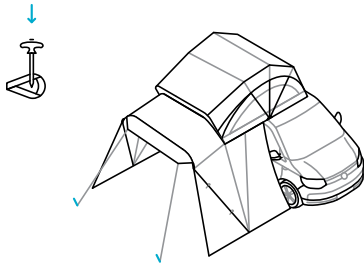

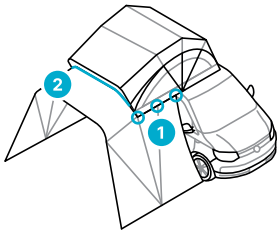

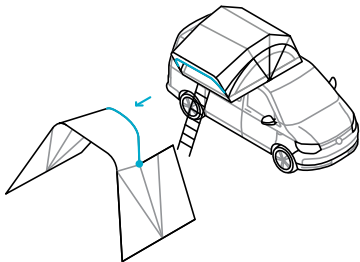



1

# Instructions


B

## Canopy + Quick Base

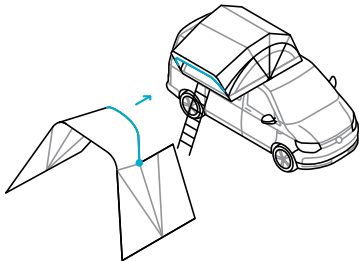


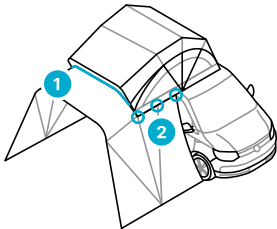

### 3 Add 1x Quick Base


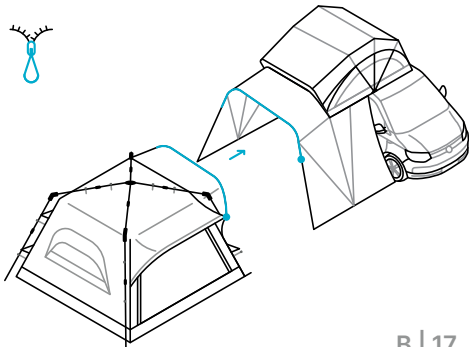


4

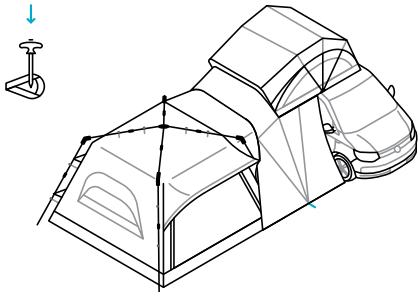



5


## Adjust height

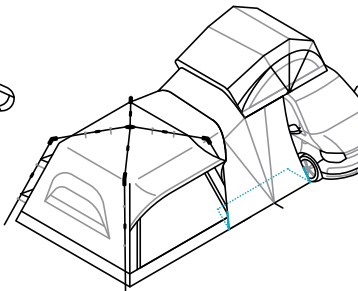


# 1 Deconstruction

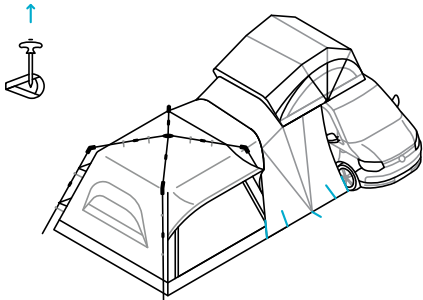


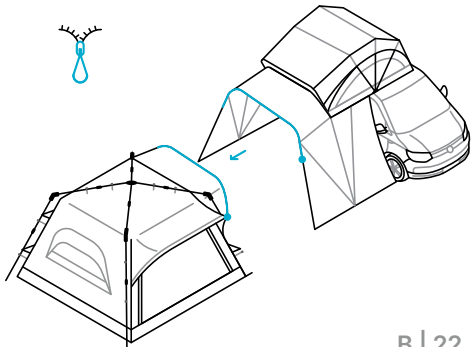


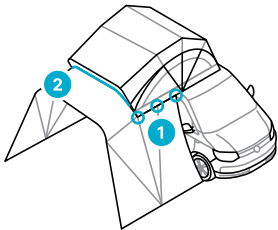

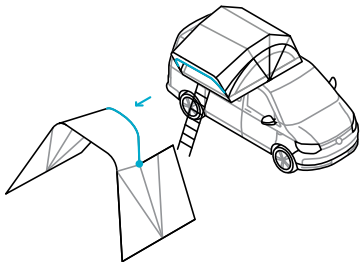



6

## Adjust height

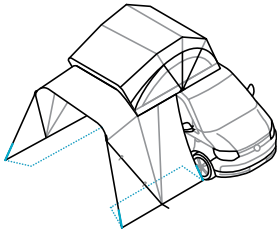

7

## Adjust height

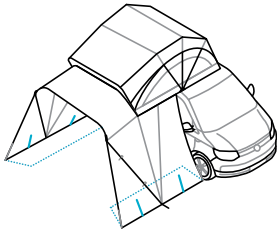

6

## Adjust height

