


# Quick Base Canopy Connector Hybrid 2 Low

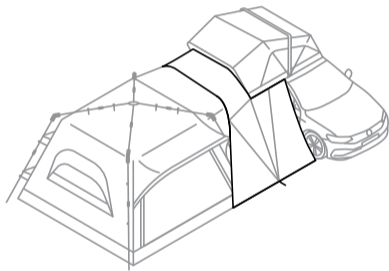

**12 + 1x**

**T-Pegs**



**2x**

**Pole Thick**




**1x**

**Pole Thin**

**A**


# Canopy

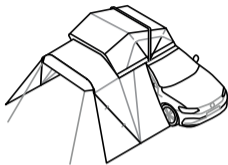

A | 3-14

**B**

# Canopy + Quick Base

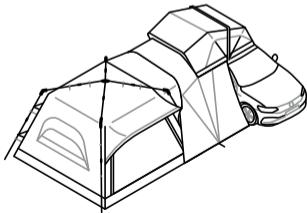


B | 15-24



1

# Instructions



A

## Canopy

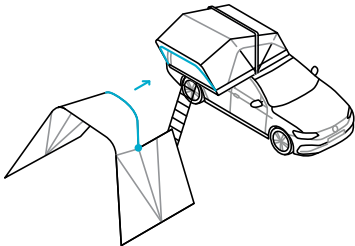

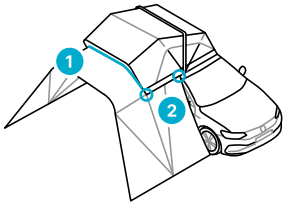
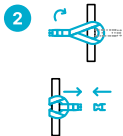


### 3 Add 2x Pole Thick

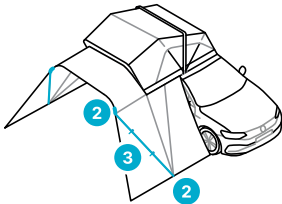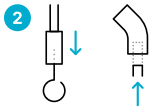


**4**

# Add 1x Pole Thin

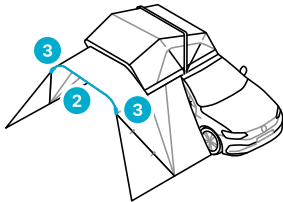



5

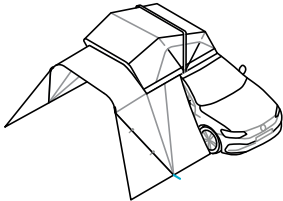

A | 7



**6**

# Adjust height

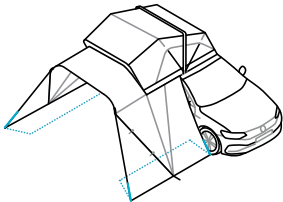


7


# Adjust height

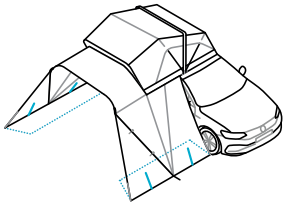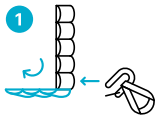


## 8 Spread the canopy forward

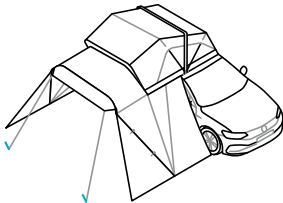



# 1 Deconstruction

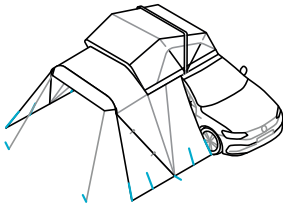

Remove

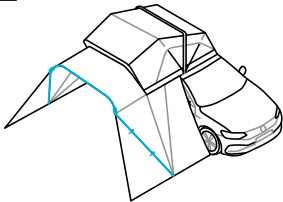

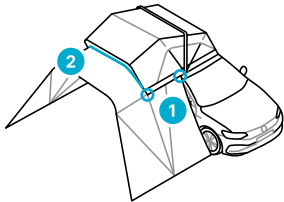

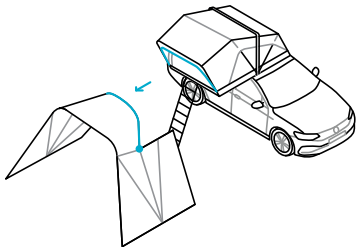




1

# Instructions


B

## Canopy + Quick Base

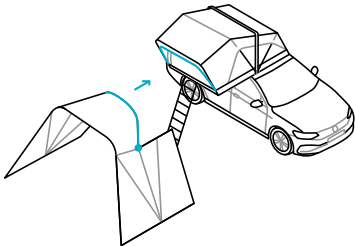


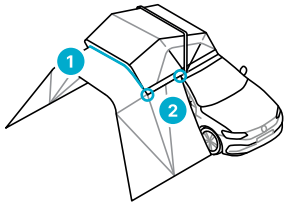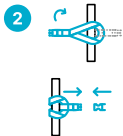

### 3 Add 1x Quick Base

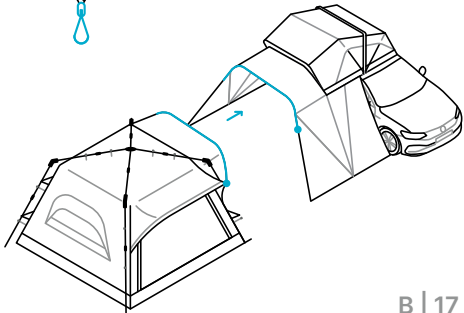



4

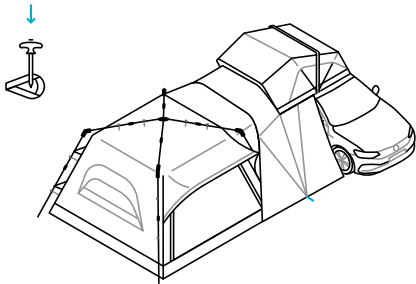

B | 18



**5**

# Adjust height

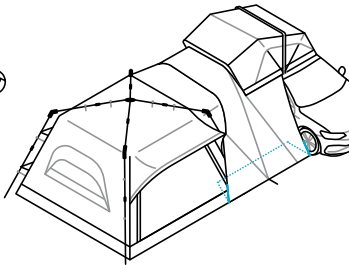


6


## Adjust height

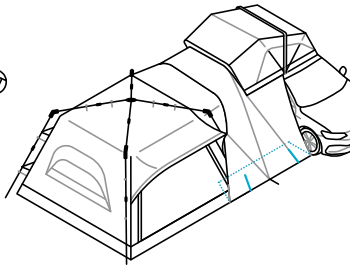

# 1 Deconstruction

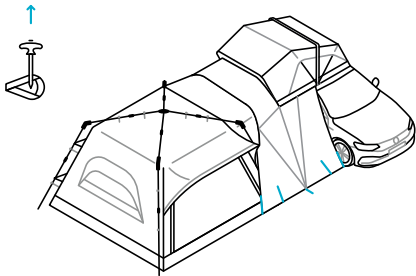

2

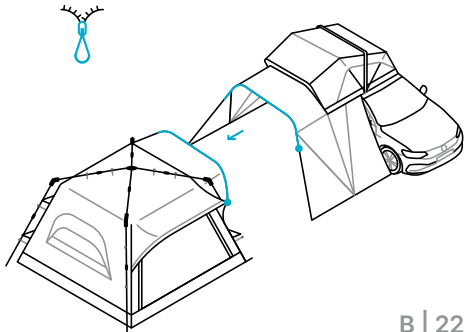

B | 22

