


Quick Base Canopy Connector Hybrid 3+ Low

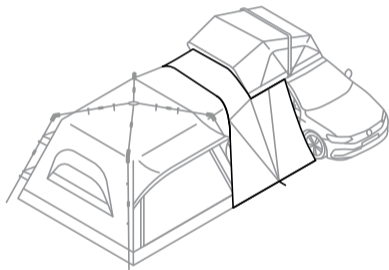

12 + 1x
T-Pegs




2x
Pole Thick



1x
Pole Thin

A


Canopy

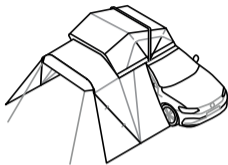

A | 3-14

B

Canopy + Quick Base

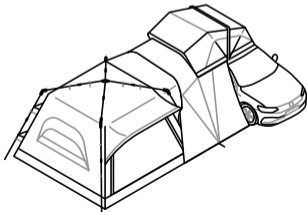


B | 15-24



1

Instructions



A

Canopy

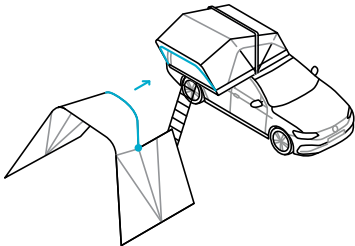

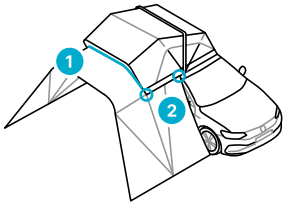
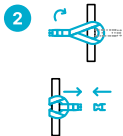


3 Add 2x Pole Thick

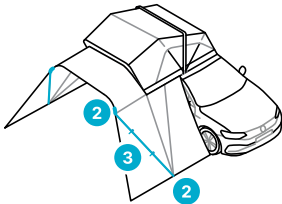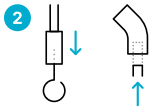


4

Add 1x Pole Thin

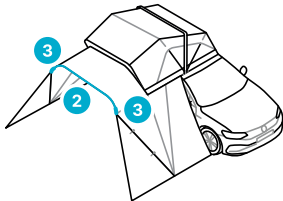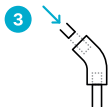



5

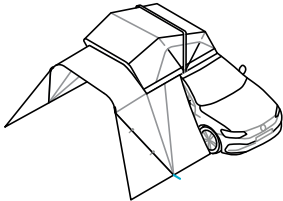

A | 7



6

Adjust height

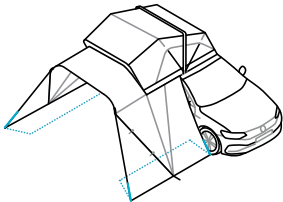


7


Adjust height

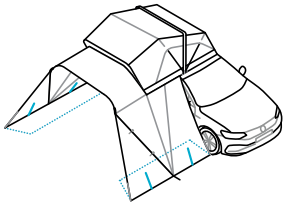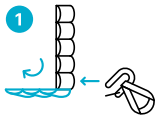


8 Spread the canopy forward

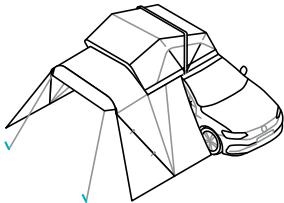



1 Deconstruction

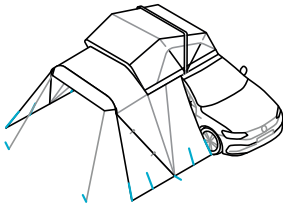

Remove

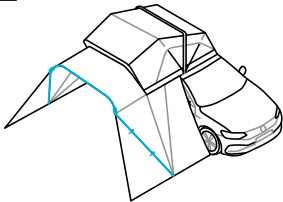

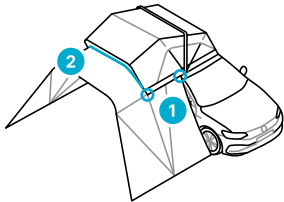

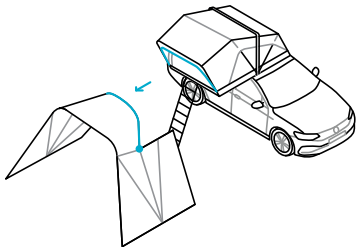




1

Instructions


B

Canopy + Quick Base

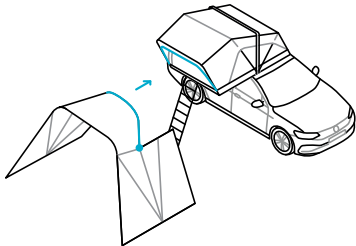


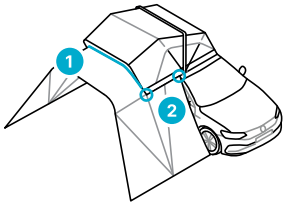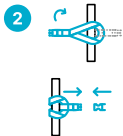

3 Add 1x Quick Base

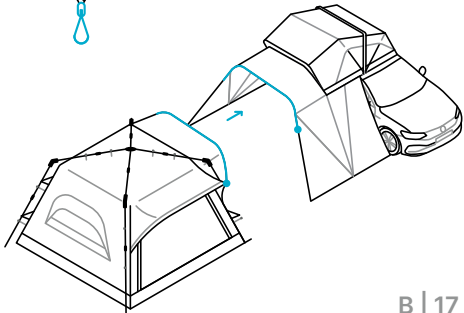



4

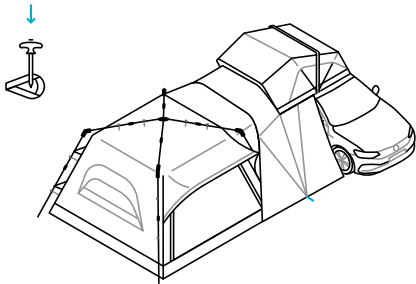

B | 18



5

Adjust height

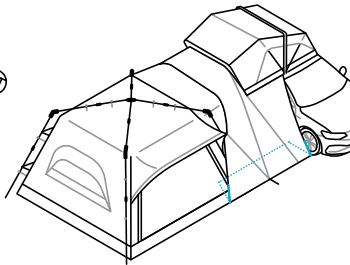


6


Adjust height

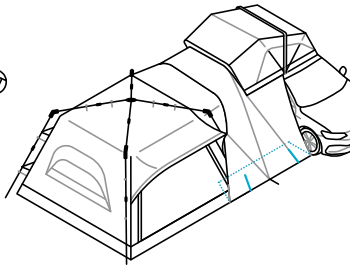

1 Deconstruction

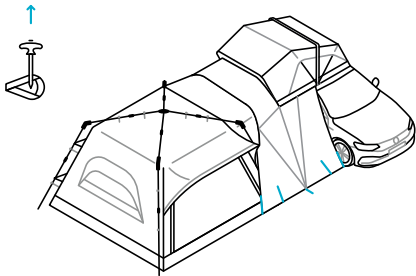

2

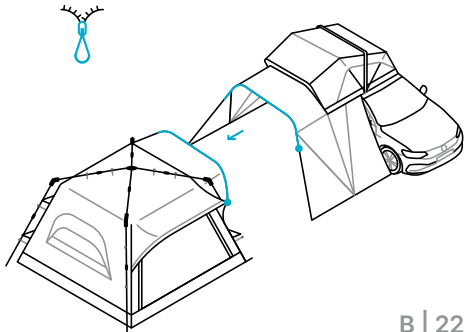

B | 22

