


Quick Base Canopy Connector

Hybrid 3+ Tall

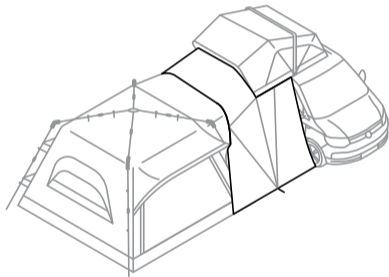

12 + 1x

T-Pegs



2x

Pole Thick




1x

Pole Thin

A


Canopy

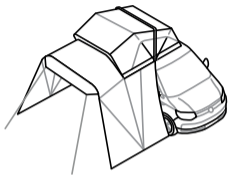

A | 3-14

B

Canopy + Quick Base

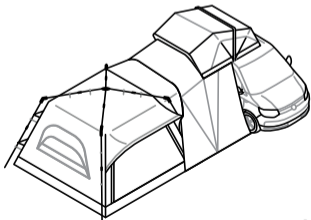


B | 15-24


1

Instructions



A

Canopy

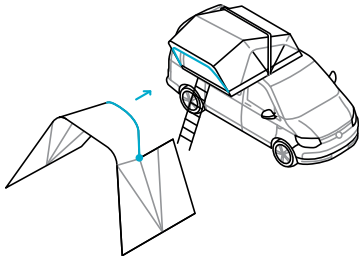


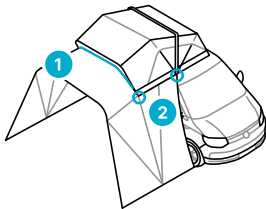


3 Add 2x Pole Thick

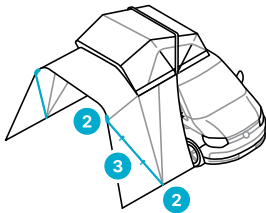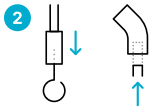


4

Add 1x Pole Thin

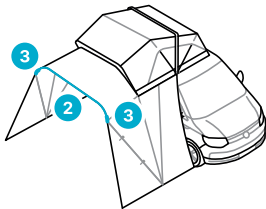



5

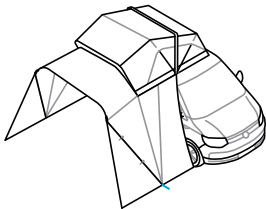

A | 7



6

Adjust height

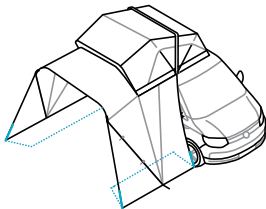


7


Adjust height

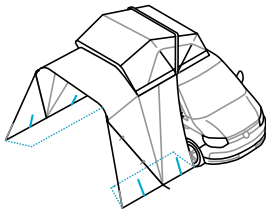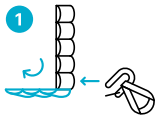

8 Spread the canopy forward

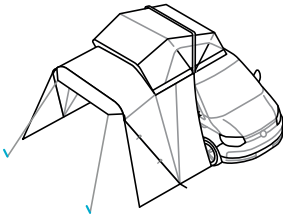


1 Deconstruction

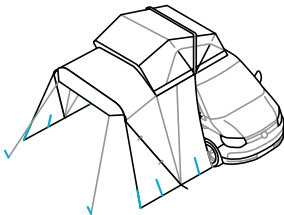



2

Remove

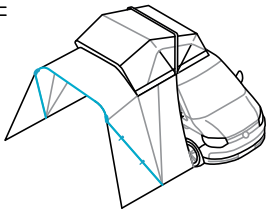

A | 12

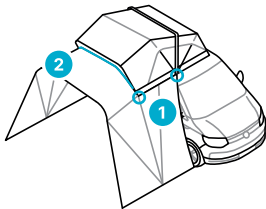

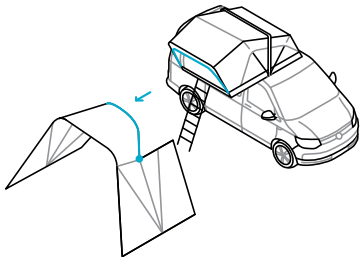



1

Instructions


B

Canopy + Quick Base

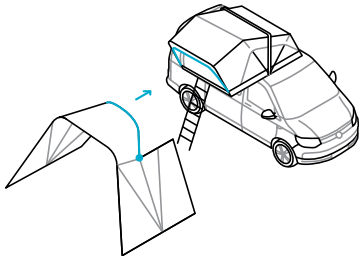


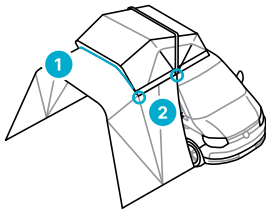

3 Add 1x Quick Base

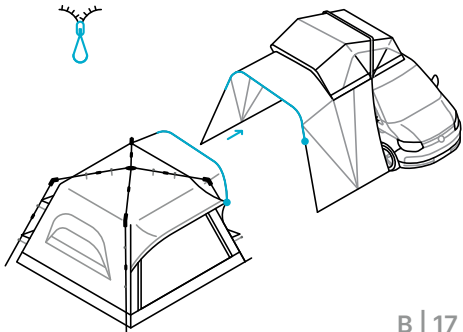



4

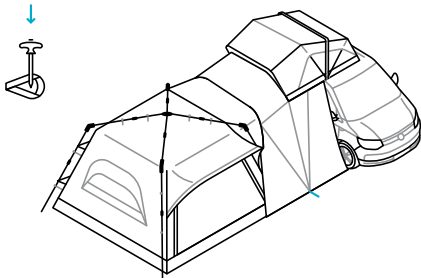

B | 18



5

Adjust height

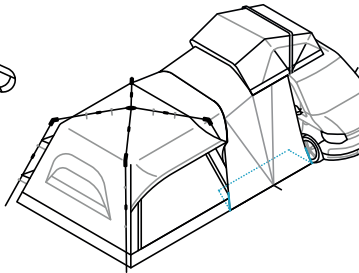


6


Adjust height

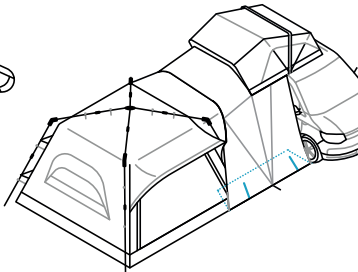

1 Deconstruction

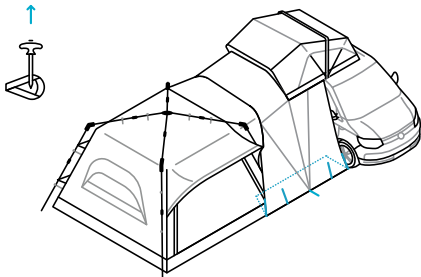

2

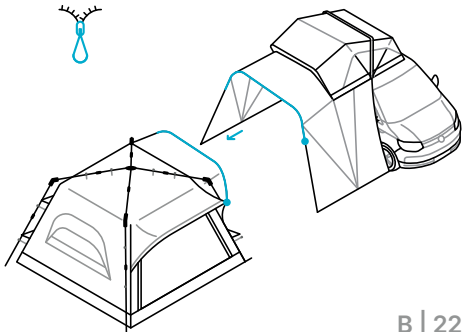

B | 22

1



2

