


Cone Pure 8

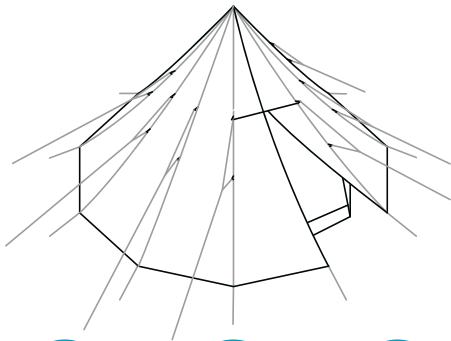

30 + 1
T-Pegs



1x Alu Pole



1x Dirtbag


1

Instructions

1





2


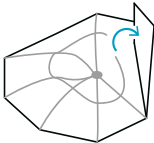


2 Floor Pegs




10x

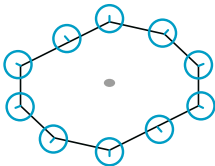

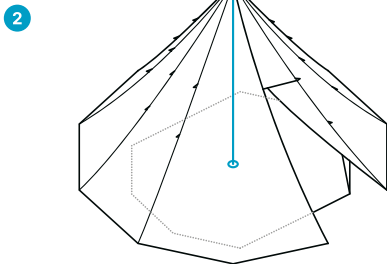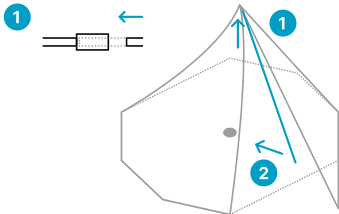


4

Outer Pegs

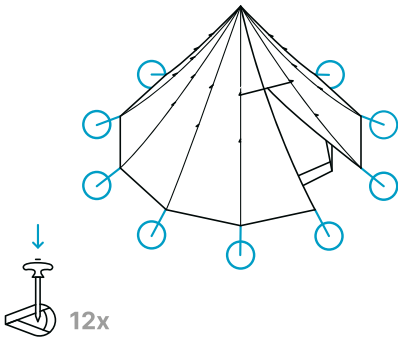

5


Tent Cords

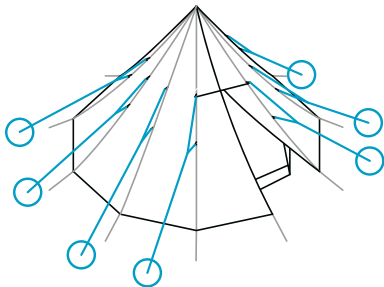

8x




A

Additional Equipment

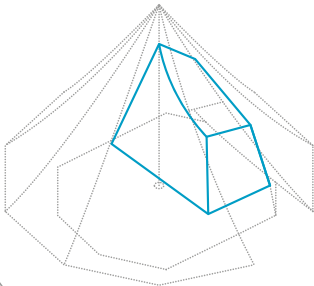


Sleeping Cabin


1 Deconstruction

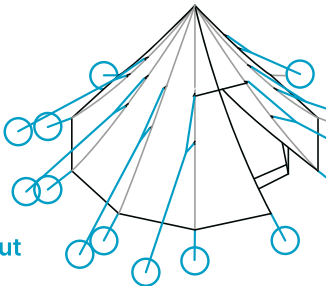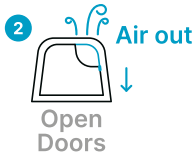

2 Remove Center Pole

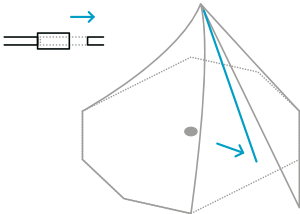


3 Remove Floor Pegs

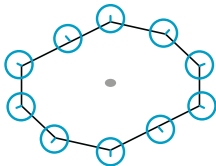


10x

1

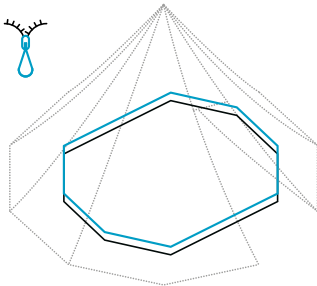

1

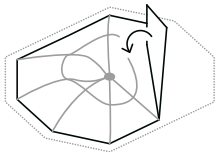


2

Air out




Roll Up



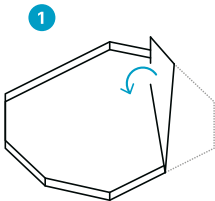

Dirtbag



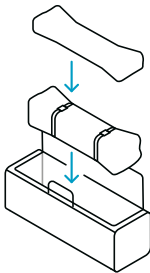

Dirtbag

Tent