

American Standard

Installation Instructions


**COMMERCIAL SHOWER
SYSTEM KITS: 1.5 gpm & 2.5 gpm**

**1662SG.214
1662SG.224**

Thank you for selecting American-Standard...the benchmark of fine quality for over 100 years.


To ensure that your installation proceeds smoothly--please read these instructions carefully before you begin.

Installation must conform to all local building codes.

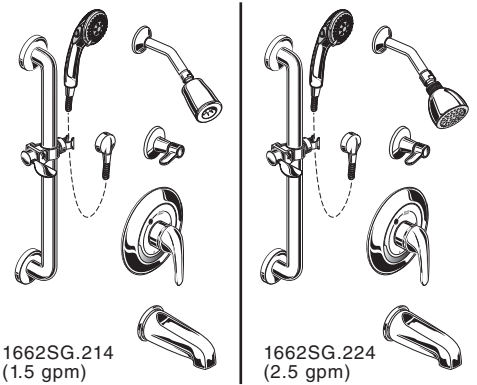


Certified to comply with ANSI A112.18.1
M965669 Rev. 1.3 (1/17)

Recommended Tools & Materials

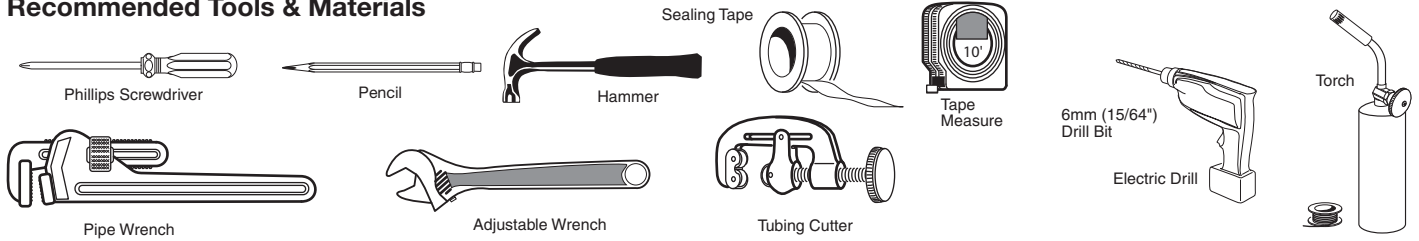

ROUGHING-IN DIMENSIONS

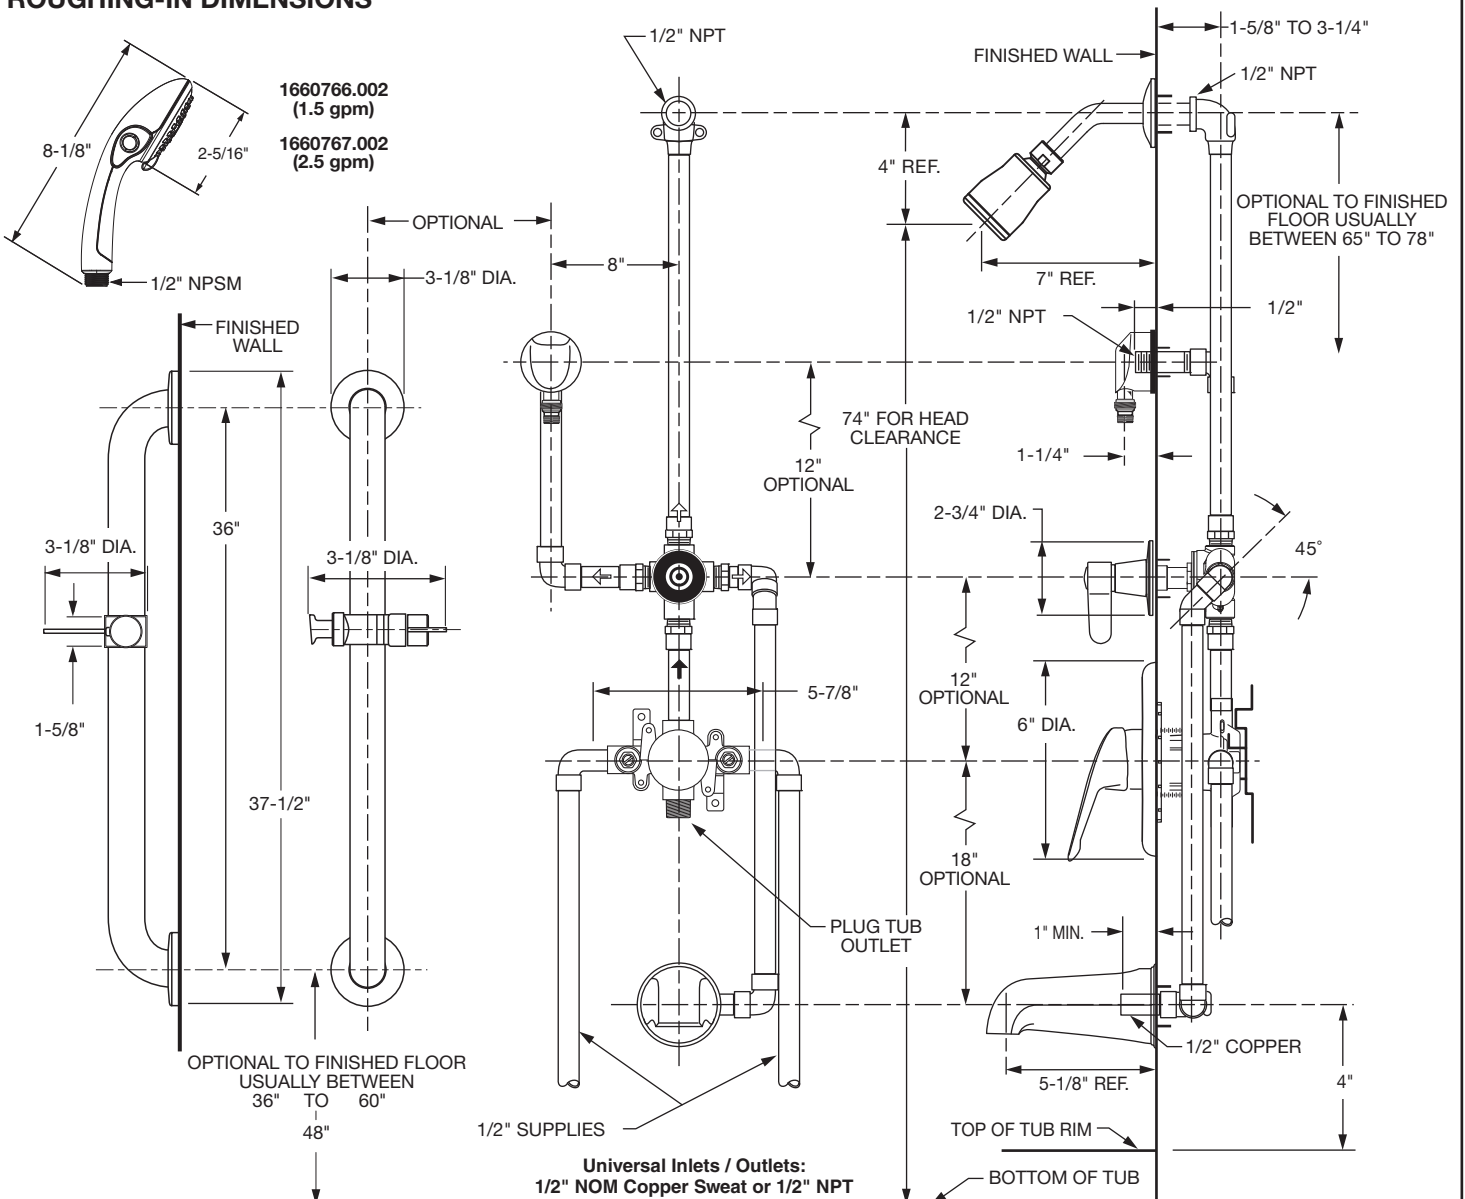

1

INSTALL THE R121SS VALVE BODY

NOTE


REFER TO INSTALLATION INSTRUCTIONS (M965661) SUPPLIED WITH VALVE BODY FOR COMPLETE INSTALLATION AND REPAIR PART INFORMATION.

IMPORTANT

When soldering, remove **PLASTER GUARD**, **CARTRIDGES** and **CHECK STOPS** (IF PRESENT). When finished soldering, flush valve body, replace cartridges, check stops (if present) and plaster guard to continue installation. Use thread sealant or Teflon tape on threaded connections.

- See Roughing-in diagram before starting.
- Connections are:
 - 1/2" NOM Copper Sweat or 1/2" NPT inlets
 - 1/2" NOM Copper Sweat or 1/2" NPT tub and shower outlets

R121SS

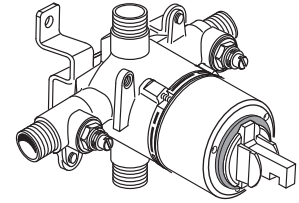

1/2" SWEAT PLUG



2

INSTALL THE R433 THREE-WAY DIVERTER

NOTE

REFER TO INSTALLATION INSTRUCTIONS (M965673) SUPPLIED WITH DIVERTER FOR COMPLETE INSTALLATION AND REPAIR PART INFORMATION.

IMPORTANT


The reverse side of the body is marked with arrows.

CAUTION: Do not solder near the VALVE. Damage to the SEAL may occur. Do not seal any outlets. The DIVERTER cannot be used as a stop valve. Use thread sealant or sealing tape on threaded connections.

- See Roughing-in diagram before starting. The port with the BATH TUB picture is the high flow.
- The DIVERTER can be installed with the inlet rotated in any position.
- All connections are 1/2" NPT.
- For proper positioning the finished wall must be within the side of PLASTER GUARD.
- Connect the R433 THREE-WAY DIVERTER to the R120SS VALVE BODY.



THREE-WAY DIVERTER

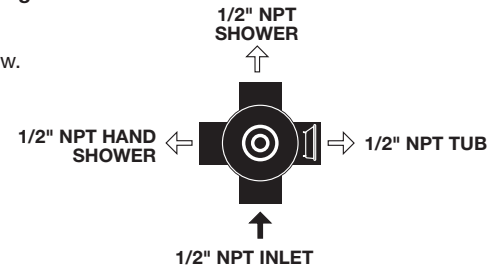

3

MAKE ALL CONCEALED PIPING CONNECTIONS

- See Roughing-in diagram before starting.
- Make Hot and Cold supply connections to the VALVE BODY. Inlet and outlet connections to the valve body are 1/2" copper sweat.
- Make Tub Filler connection from DIVERTER. (Use the port with the BATH TUB picture). DIVERTER IS 1/2" NPT. TUB SPOUT connection is 1/2" copper for SLIP-ON SPOUT.
- Make the connections for the SHOWER and HAND SHOWER. The SHOWER and HAND SHOWER connections are 1/2" NPT.
- For support, use PIPE BRACES secured to wooden braces. Cap off SHOWER, HAND SHOWER and TUB SPOUT FILLER PIPE. With the R120SS VALVE turned off, turn on water supplies. Check for leaks.
- Finish all wall construction.


4

INSTALL VALVE TRIM

NOTE


REFER TO INSTALLATION INSTRUCTIONS (M968763) SUPPLIED WITH VALVE TRIM KIT FOR COMPLETE INSTALLATION AND REPAIR PART INFORMATION.

- When finished tiling the wall, remove PLASTER GUARD.
- Remove cap from tub supply and plug from shower pipe.

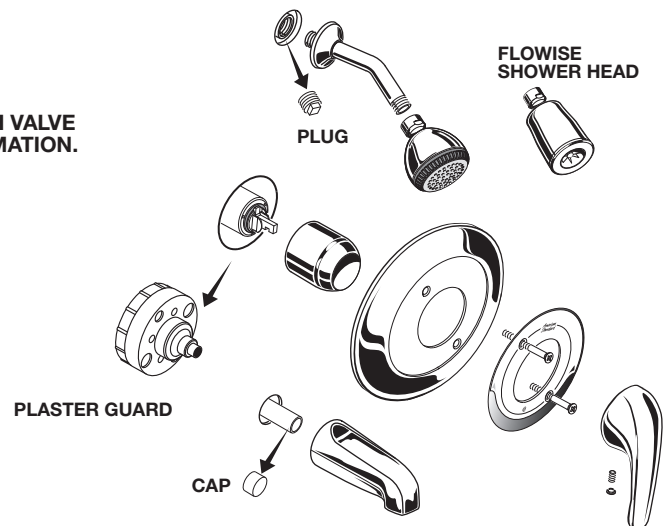

5 INSTALL DIVERTER TRIM AND HANDLE

- When finished tiling the wall, remove PLASTER GUARD.
- Place ESCUTCHEON (1) onto ESCUTCHEON HOLDER (2).
- Thread ESCUTCHEON HOLDER (2) onto DIVERTER VALVE (3). Tighten until ESCUTCHEON (1) is snug against finished wall.
- Install HANDLE SKIRT (4) onto VALVE STEM (5).
- Push DECORATIVE RING (6) onto LEVER HANDLE (7).
- Align LEVER HANDLE (7) and push onto HANDLE SKIRT (4). Install HANDLE SCREW (8) and tighten.
- Push INDEX CAP (9) into LEVER HANDLE (7).

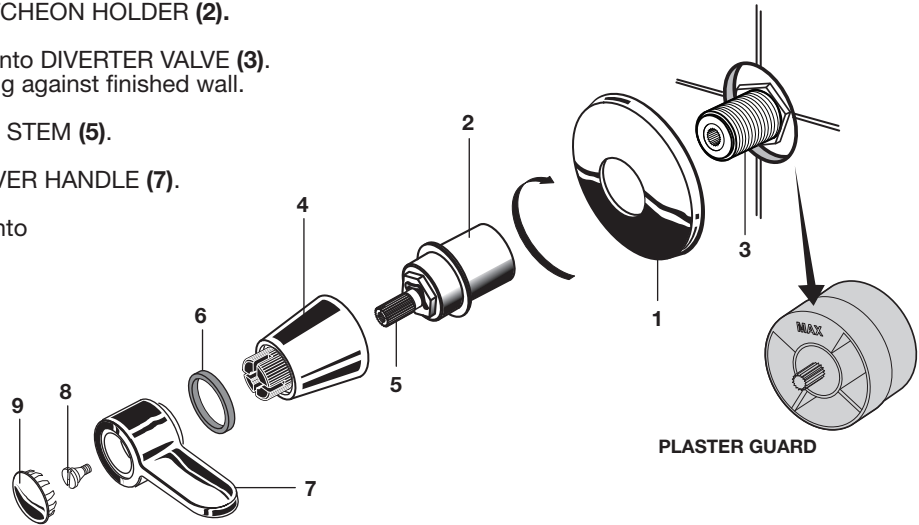


6 INSTALL WALL SUPPLY

- Supply to WALL SUPPLY is 1/2" NPT. See rough-in above for detailed information.
- Apply sealant or sealing tape to threads of 1/2" NPT supply nipple.




7 INSTALL HOSE AND HAND SHOWER TEST SHOWER SYSTEM

- Install SEAL (1) into COUPLING NUT (2). Connect COUPLING NUT (2) to WALL SUPPLY NIPPLE (3) and tighten.
- INSTALL second SEAL (4) into SPRAY HOSE END (5) and connect HAND SHOWER (6) to SPRAY HOSE END (5). Hand tighten.
- Turn on water supplies and check all functions of the SHOWER SYSTEM KIT. Check for any leaks.

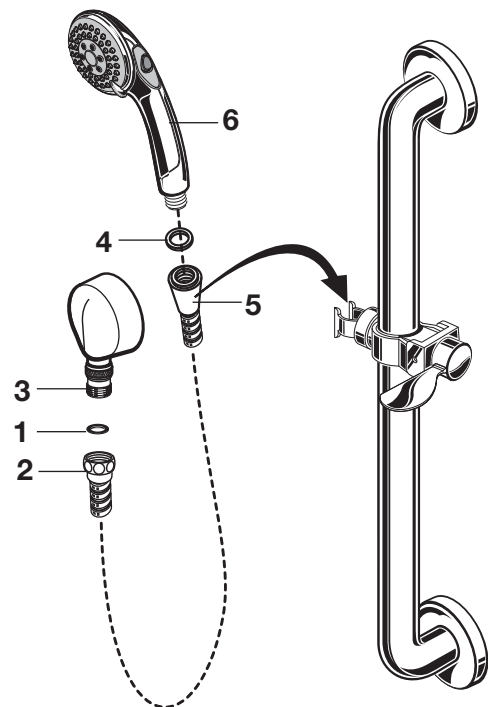

- The SLIDE BAR (1) works best when secured to the wall studs or cross brace using WOOD SCREWS. If mounting into the studs is not possible, use appropriate wall fasteners provided to secure the installation.
- Mark a vertical **center line** in the location you wish to install the SLIDE BAR (1). **NOTE: The height from the finished floor is optional. See rough-in drawing for suggested dimensions.**
- Determine desired height from the finished floor to the lower support and mark a horizontal center line. Slide the two WALL ESCUTCHEONS (5) away from the MOUNTING FLANGES (3). Position the SLIDE BAR (1) as shown in **Fig. A** and mark the location of the six mounting holes to be drilled. **Fig. A.** Using a #10 masonry drill, drill six mounting holes 1-1/4" max. deep. **Fig. B.**
- Install the six ANCHORS (2) provided into the mounting holes. Use a hammer to lightly tap ANCHORS (2) into place. Make sure they are installed flush against the finished wall. **Fig. B.**
- Align and place the SLIDE BAR MOUNTING FLANGES (3) over the installed ANCHORS (2). Secure the SLIDE BAR (1) to the wall with the SCREWS (4) provided. **Fig. B.**
- Push WALL ESCUTCHEONS (5) against finished wall. Rotate WALL ESCUTCHEONS (5) clockwise to lock into position. **Fig. C.**
- Make sure larger diameter side of SPRAY HOLDER (6) is facing upward. If not rotate SPRAY HOLDER (6) 180 degrees. Rotate the LEVER HANDLE (7) to the unlocked position. Push the SPRAY HOLDER (6) side onto the SLIDE BAR (1). Push the LEVER HANDLE SIDE (7) over the SPRAY HOLDER ARMS (8) until the two snap together.
- Check operation of SLIDE BAR (1) by rotating HOLDER LEVER (7) and moving HAND SHOWER HOLDER (9) up and down. Rotate LEVER HANDLE (7) back to lock HAND SHOWER HOLDER (6). **Fig. B.**

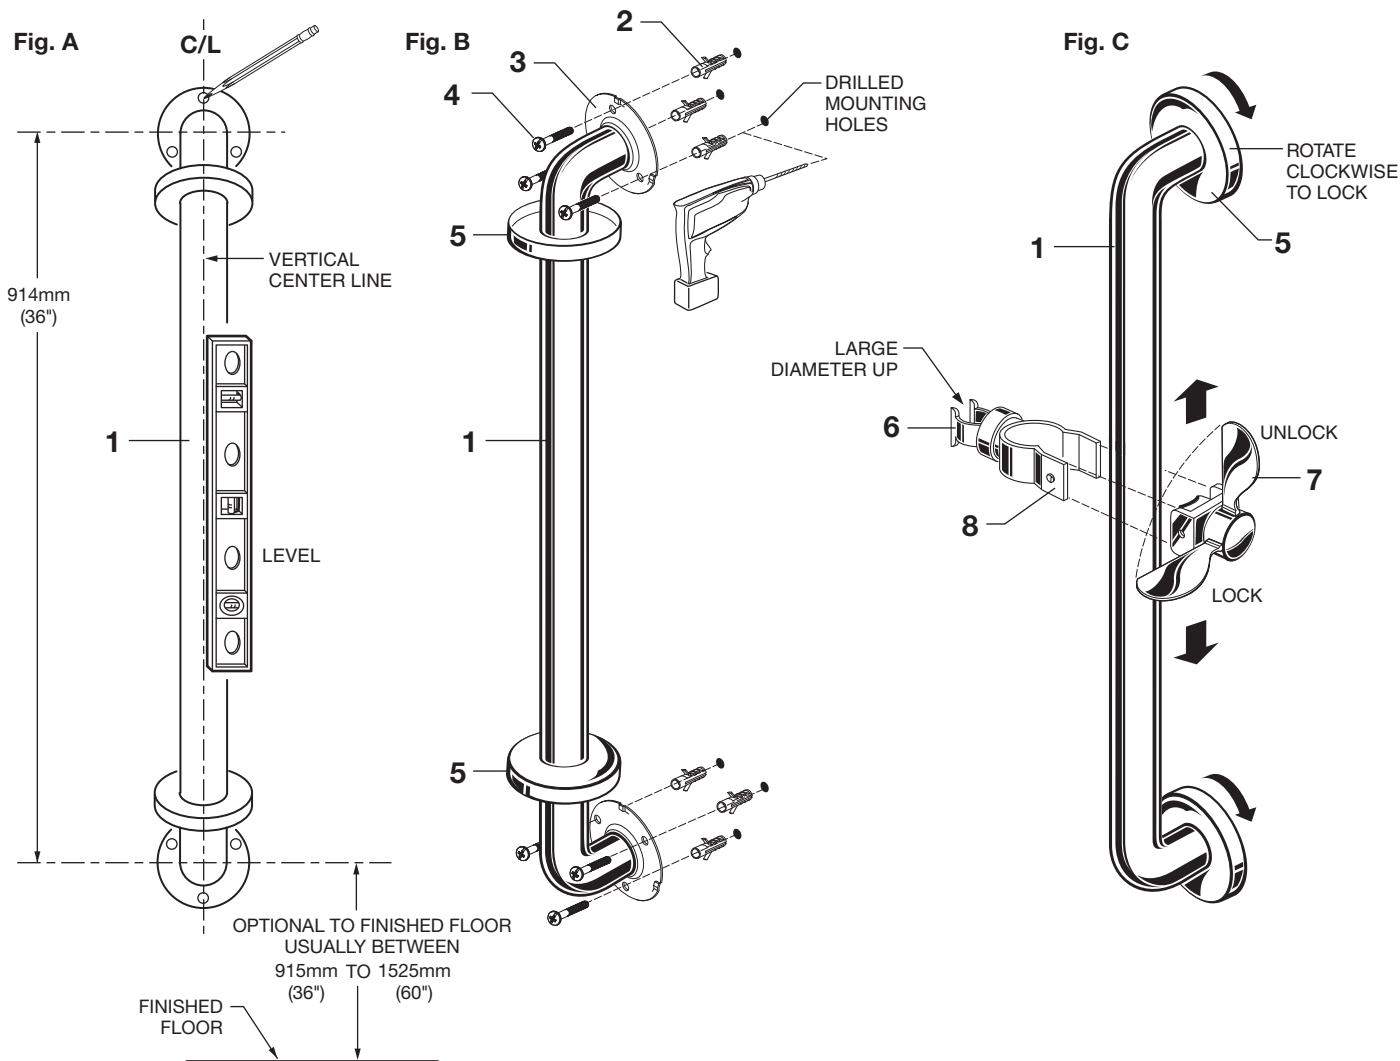

CARE INSTRUCTIONS:

DO: SIMPLY RINSE THE PRODUCT CLEAN WITH CLEAR WATER. DRY WITH A SOFT COTTON FLANNEL CLOTH.


DO NOT: DO NOT CLEAN THE PRODUCT WITH SOAPS, ACID, POLISH, ABRASIVES, HARSH CLEANERS, OR A CLOTH WITH A COARSE SURFACE.

American Standard

PRESSURE BALANCE TEMPERATURE/VOLUME CONTROL VALVE

MODEL NUMBER

R121SS

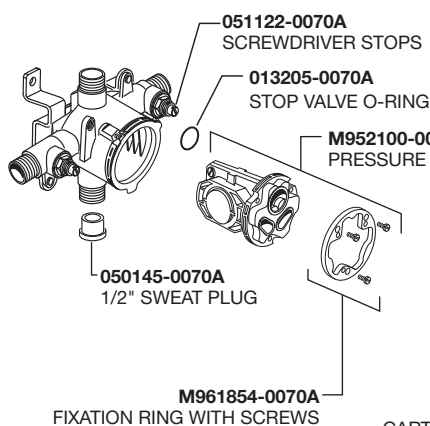

1660710.002
FloWise™
SHOWER HEAD
(1.5 gpm)

023560-0020A
SHOWER ARM
AND FLANGE

M953530-0020A
SHOWER HEAD
(2.5 gpm)

M961856-0020A
ESCUTCHEON AND SCREWS

078016-0020A
ESCUTCHEON SCREWS

M907050-0020A
ESCUTCHEON CAP SET

8888.056-0020A
SPOUT (Slip-on)

M909606-0020A
DECAL

030126-0070A
HANDLE SCREW KIT

M961636-0020A
LEVER HANDLE KIT

Appropriate finish code

CHROME 002

COLONY SOFT SHOWER TRIM

MODEL NUMBER

T675.501

TUB SPOUT


MODEL NUMBER

8888.056

3-WAY DIVERTER VALVE

MODEL NUMBER

R433

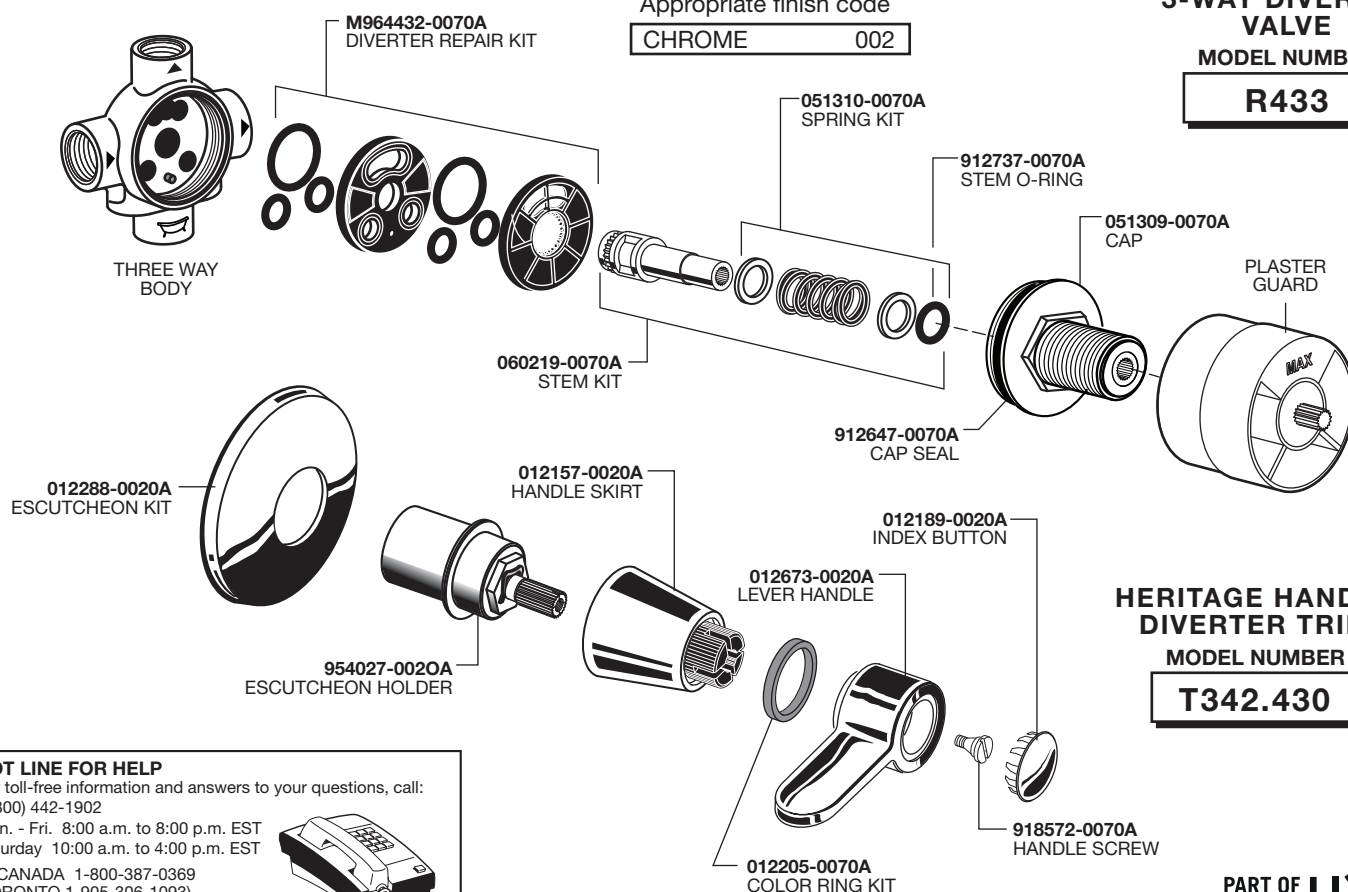

HERITAGE HANDLE DIVERTER TRIM

MODEL NUMBER

T342.430

HOT LINE FOR HELP

For toll-free information and answers to your questions, call:

1 (800) 442-1902

Mon. - Fri. 8:00 a.m. to 8:00 p.m. EST

Saturday 10:00 a.m. to 4:00 p.m. EST

IN CANADA 1-800-387-0369

(TORONTO 1-905-306-1093)

Weekdays 8:00 a.m. to 7:00 p.m. EST

IN MEXICO 01-800-839-1200



PART OF **LIXIL**

M965669 Rev. 1.3 (1/17)

American Standard

3-FUNCTION HAND SHOWER

1660766.002
(1.5 gpm)

1660767.002
(2.5 gpm)




WALL SUPPLY

8888.037.002


8888037.002
WALL SUPPLY




M962520-0020A
CHECK VALVE



030782-0020A
HOSE KIT



M9641800020A
SPRAY HOLDER
ASSEMBLY

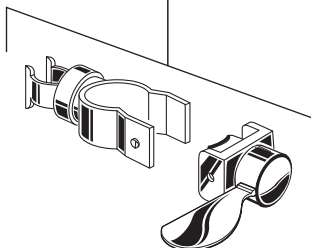


METAL HOSE



8888.035.002

36" SLIDE BAR

1660.236.002

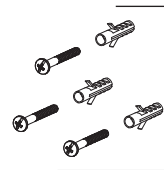

M964179-0070A
MOUNTING KIT

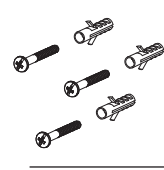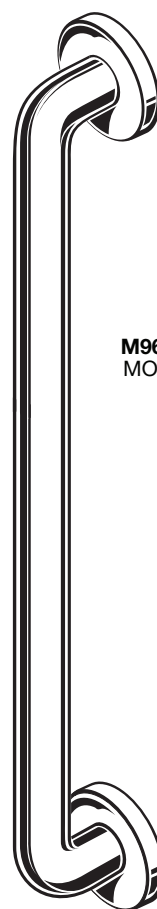

Appropriate finish code

CHROME 002

HOT LINE FOR HELP

For toll-free information and answers to your questions, call:

1 (800) 442-1902

Mon. - Fri. 8:00 a.m. to 8:00 p.m. EST

Saturday 10:00 a.m. to 4:00 p.m. EST

IN CANADA 1-800-387-0369

(TORONTO 1-905-306-1093)

Weekdays 8:00 a.m. to 7:00 p.m. EST

IN MEXICO 01-800-839-1200



PART OF LIXIL

M965669 Rev. 1.3 (1/17)