# **Slow Close Toilet Seats**

**Elongated Models: 5004A, 5006A, 5011A** 

**Round Front Model: 5004B** 



Ш

S


Ш

 $\alpha$ 

 $\alpha$ 

0

S

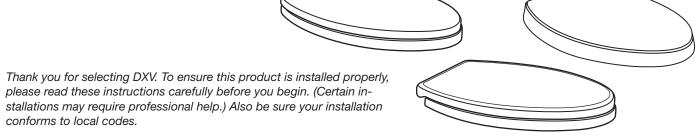


## **RECOMMENDED TOOLS AND MATERIALS**

Most of the procedures require the use of common tools and materials, which are available from hardware and plumbing supply stores. It is essential that the tools and materials be on hand before work is begun.


2




Phillips Screwdriver

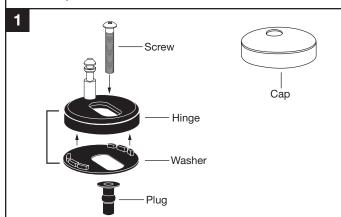


Grommet



For ease of installation of black rubber grommets, insert steel bolt (capture a few threads), and wet the lower area with some water (soapy water works best).

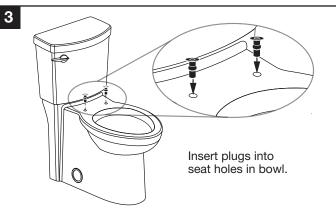

4

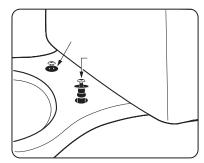

**NOTE:** FLANGE MUST REMAIN ABOVE THE SURFACE. DO NOT ALLOW GROMMET TO FALL THROUGH!

### In the United States:

DXV

One Centennial Avenue Piscataway, New Jersey 08855 Attention: Director of Customer Care

For residents of the United States, warranty information may also be obtained by calling the following toll free number: (800) 227-2734 www.DXV.com

### In Canada:

DXV 5900 Avebury Road Mississauga, Ontario L5R 3M3

Toll Free: 1-800-387-0369 Local: 905-306-1093 Fax: 1-800-395-1498 www.DXV.ca

### In Mexico:

DXV Via M

Via Morelos 330 Col. Santa Clara Coatitla Ecatepec, Estado de México 55540

Toll Free: 01-800-8391200 www.DXV.mx

