



TransTech IV Adapters

PART NO. 200-3100A STANDARD ADAPTERS (INCLUDED)

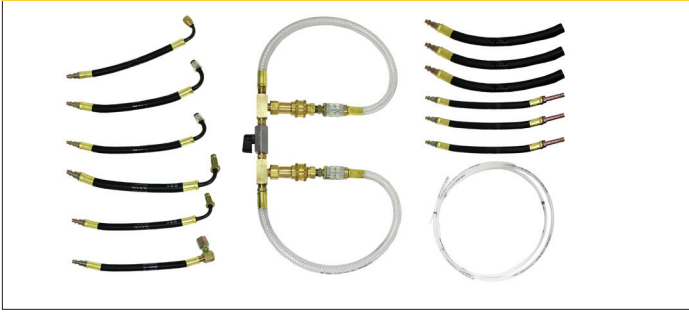

PART NO. 200-3101A DELUXE ADAPTERS (INCLUDED)

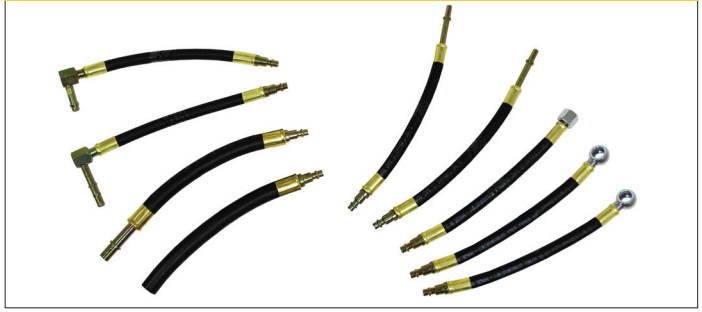

PART NO.	QTY	DESCRIPTION
060-1000	1	1/4" Male Bump Tube - Most Asian Vehicles
060-1100	1	5/16" Male Bump Tube - Most Asian Vehicles
060-1200	1	3/8" Male Bump Tube - Most Asian Vehicles
060-1300	1	1/4" Open End Hose - Most Asian Vehicles
060-1400	1	5/16" Open End Hose - Most Asian Vehicles
060-1500	1	3/8" Open End Hose - Most Asian Vehicles
060-1700	1	5/16" Flare, 7/16" - 24 - Domestic Vehicles
060-1800	1	3/8" Flare, 5/8" - 20 - Domestic Vehicles
060-3800	1	#5 SAE Flare - European Vehicles
062-0100	1	5/16" Male Flare-Deep Ford Vehicles
062-0120	1	3/8" Male Flare-Deep - Ford Vehicles
062-1034	1	3/8" Female Flare-Deep - Ford Vehicles
200-8099	1	Direction Flow Adapter
200-3102	1	Dipstick Tube Adapter Kit - Set Of 2

PART NO.	QTY	DESCRIPTION
060-4200	1	5/16" Male Tube With Locking Quick Connect
060-4300	1	3/8" Male Tube With Locking Quick Connect
061-1550	1	1/2" Open End Hose
062-2040	1	1/2" Male Tube With Locking Quick Connect
062-2066	1	3/8" Male Tube With Locking Quick Connect
060-2402	2	14mm x 1.5 Banjo
060-2600	1	16mm x 1.5 Bubble Flare European Vehicles
062-4401	1	3/8" Double Bump - Ford