

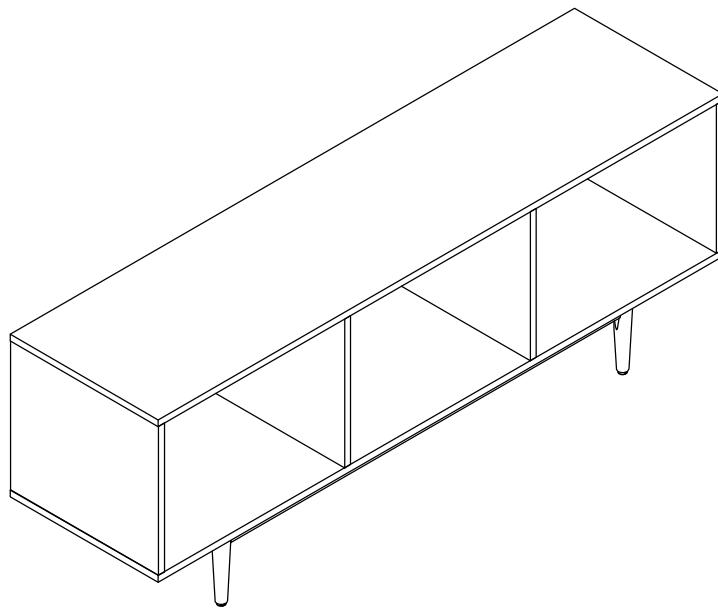
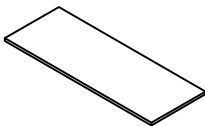


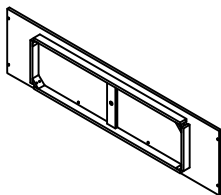







Large Record Storage Console Cabinet
CF1115



PARTS LIST


A2		B2		C2		D2		E2	
Top Panel 1 PC		Left Panel 1 PC		Right Panel 1 PC		Bottom Panel 1 PC		Partition Panel 2 PCS	
F2		G2		H2		I			
Back Panel 3 PCS		Leg 4 PCS		Center Leg 1 PC		Cover 3 PCS			

HARDWARE LIST

#1  1/4"*45mm Bolt 8 PCS (Extra 1)	#2  1/4"*10mm Spring Washer 8 PCS (Extra 1)	#3  1/4"*13mm Flat Washer 8 PCS (Extra 1)	#4  7*38mm Screw 8 PCS (Extra 1)	#5  Cam Bolt 8 PCS (Extra 1)
#6  Cam Lock 8 PCS (Extra 1)	#7  8*30mm Wood Dowel 16 PCS (Extra 1)	#8  Back Bracket 4 PCS (Extra 1)	#9  3*15mm Short Screw 4 PCS (Extra 1)	#10  Binding Post 3 SETS (Extra 1)
#11  Cam Sticker 8 PCS (Extra 1)	#12  M2 Small Allen Wrench 1 PC	#13  M4 Allen Wrench 1 PC		

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver

Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.


Step 1. Attach legs (part G2) to bottom panel (part D2) using bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #13). Screw in center leg (part H2) into designated hole as shown.

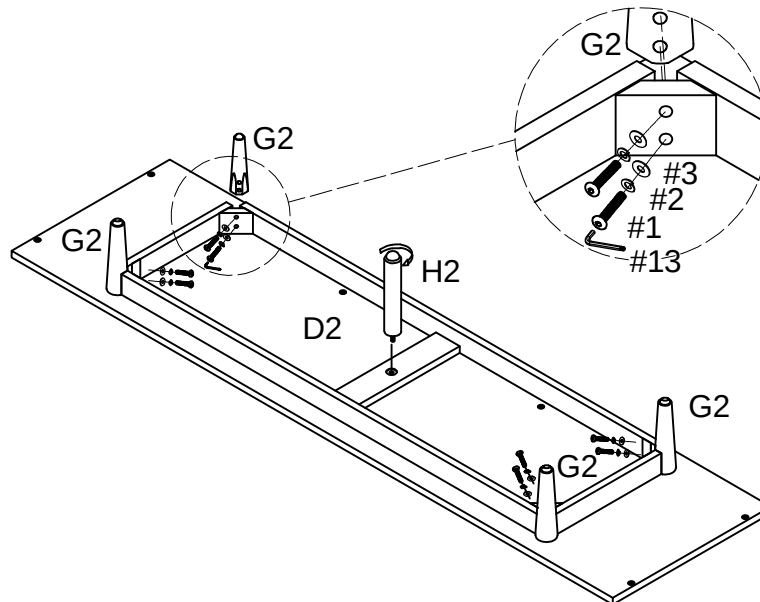

#1		x 8
#2		x 8
#3		x 8
#13		x 1

Step 2. Screw cam bolts (part #5) into top panel (part A2) using phillips head screwdriver.



Note: Do not overtighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

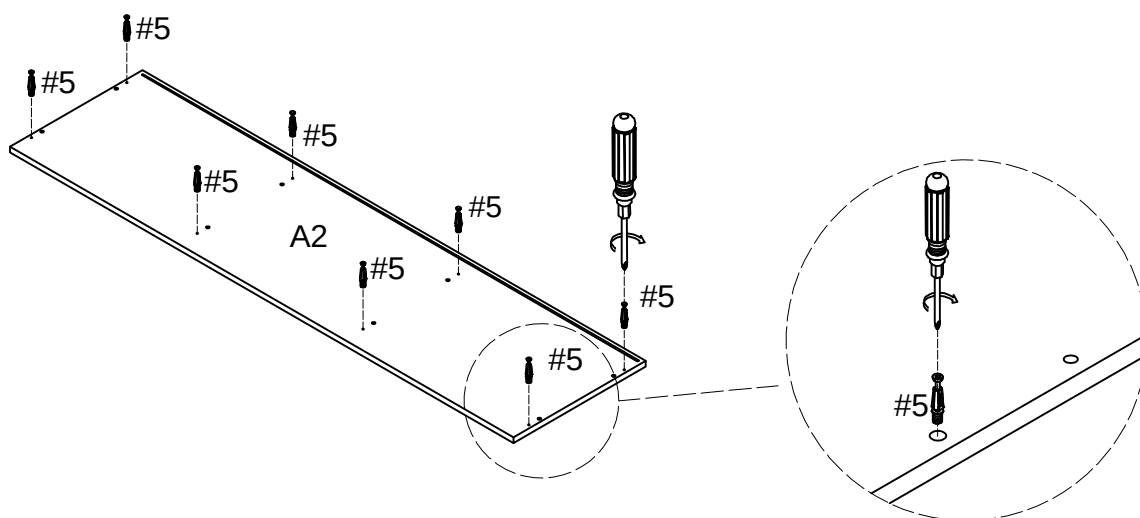

#5		x 8
----	---	-----

Step 3. Attach panels (parts B2, C2 & E2) to top panel (part A2) using cam locks (part #6), wood dowels (part #7) and phillips head screwdriver.


Note: Cam locks must rotate a full 180°. See pictured insert.

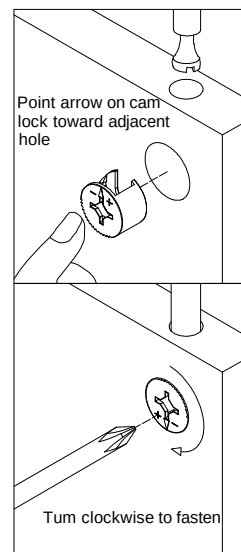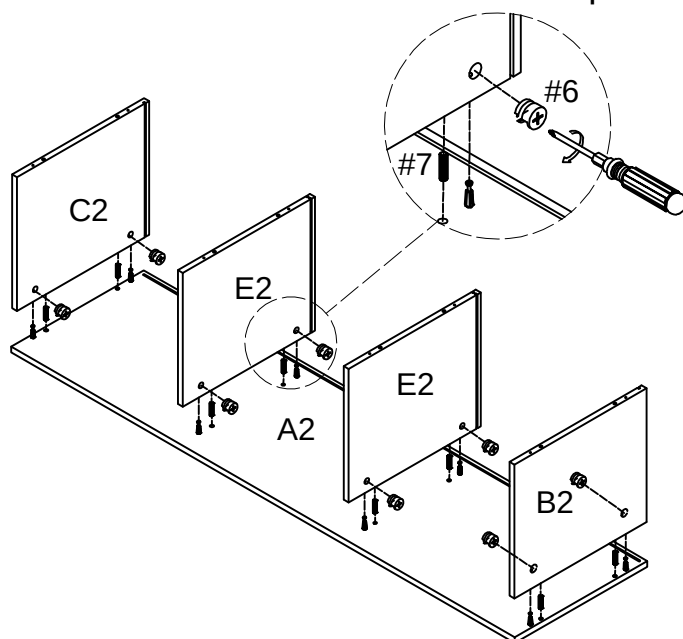

#6  x 8

#7  x 8


Step 4. Attach covers (part I) to back panels (part F2) using binding posts (part #10) and small allen wrench (part #12).

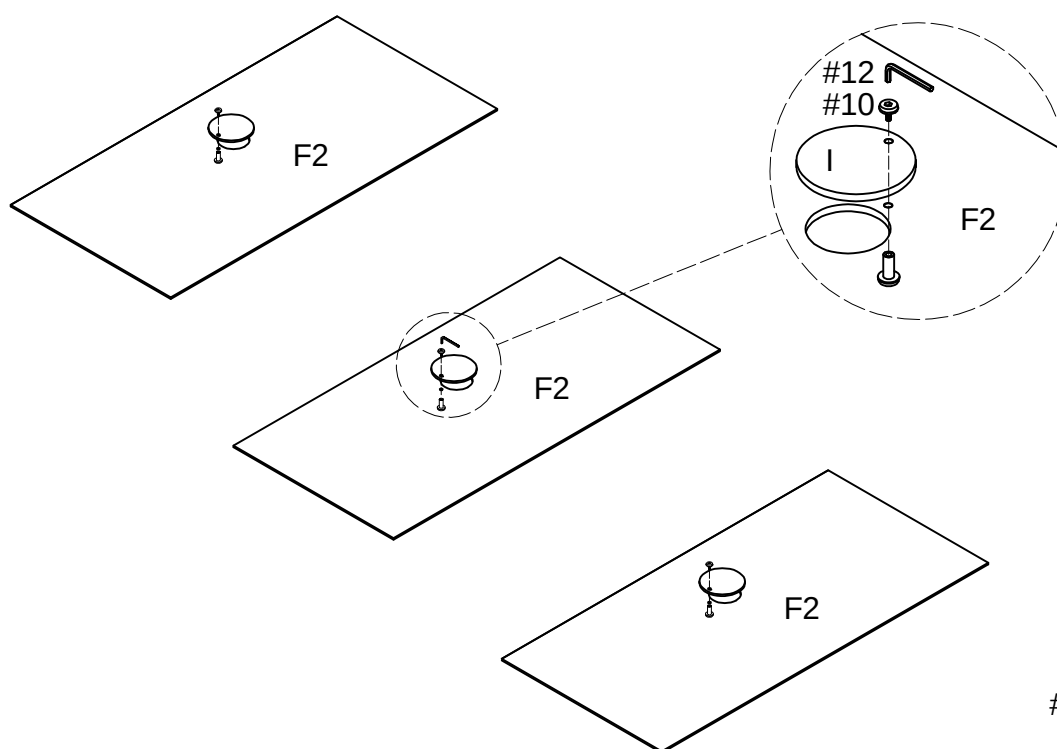


#10  x 3

#12  x 1


Step 5. Insert back panels (part F2) to assembled unit (parts A2, B2, C2 & E2).

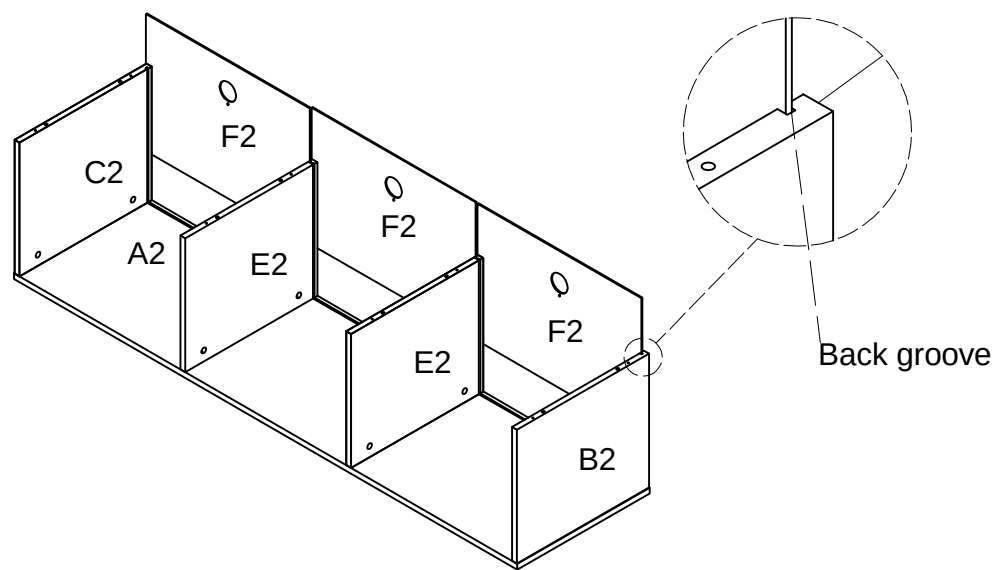

Step 6. Attach bottom panel (part D2) to assembled unit (parts B2, C2, E2 & F2) using screws (part #4), wood dowels (part #7) and allen wrench (part #13).

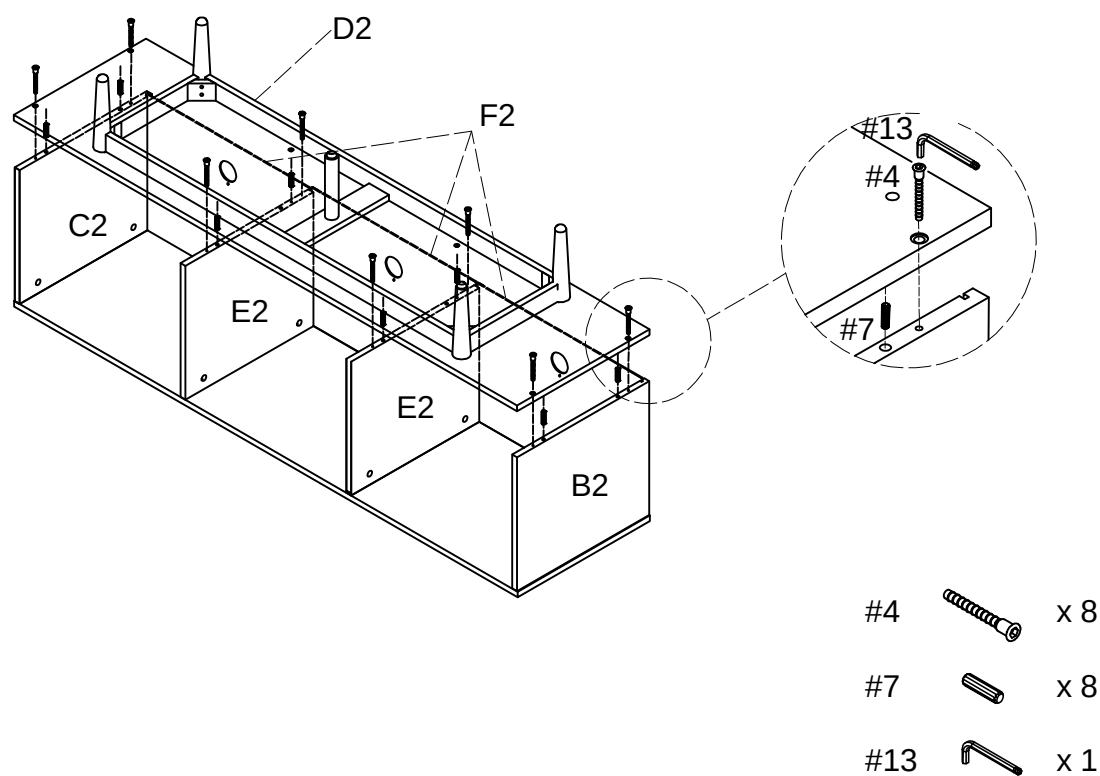

Step 7. Carefully turn unit upright. Secure back brackets (part #8) at the corner of back panels (part F2) using short screws (part #9) and phillips head screwdriver.

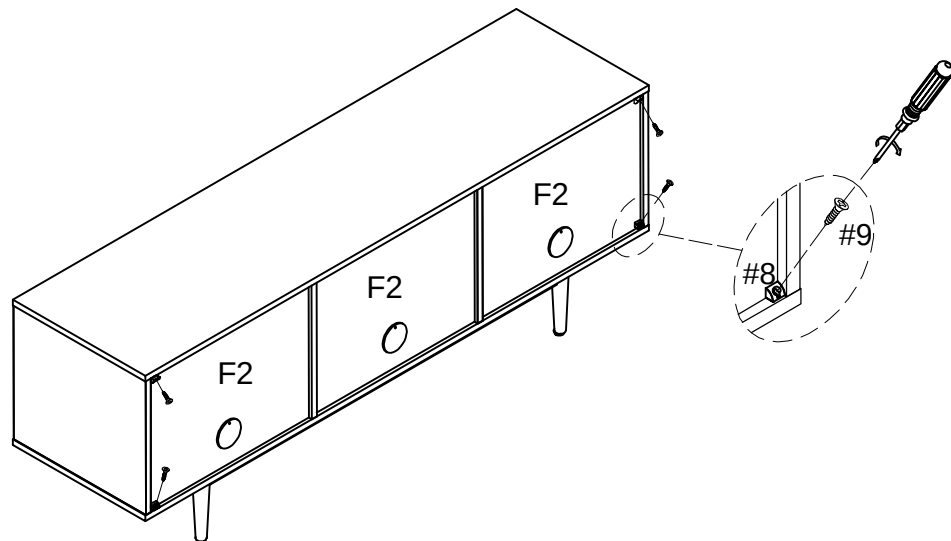


#8  x 4

#9  x 4

Step 8. Using cam stickers (part #11) cover all cam locks (part #6).

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

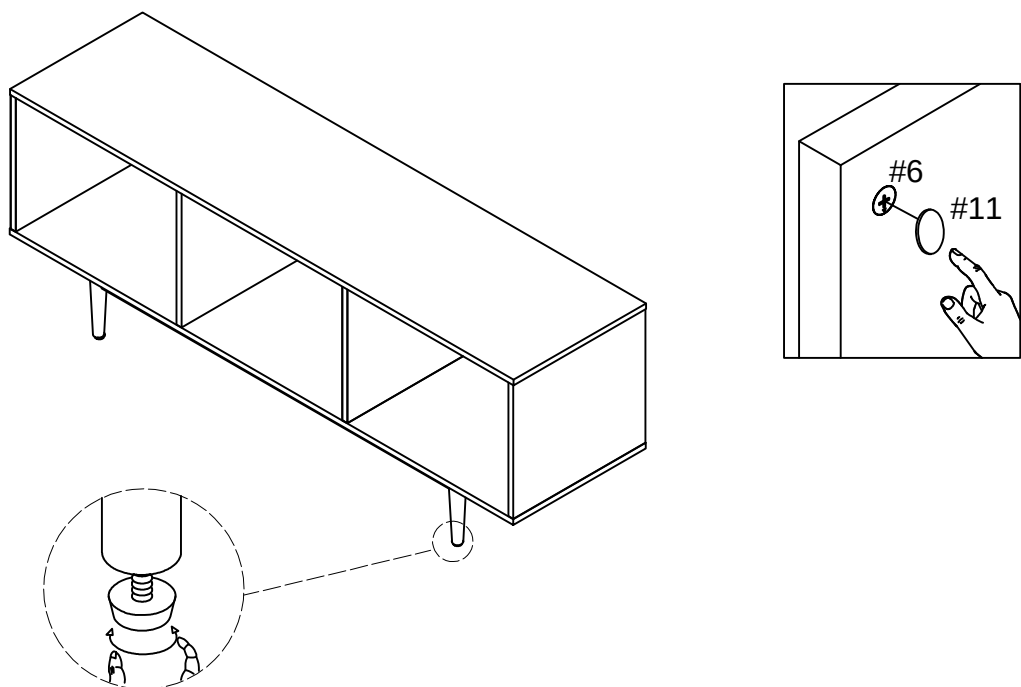

#11  x 8