
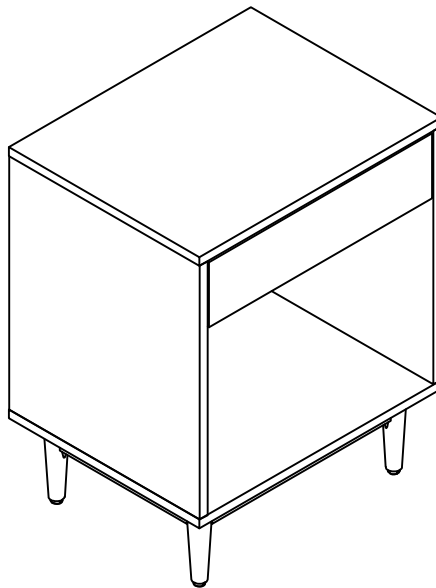




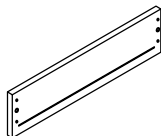


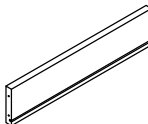


CROSLEY
FURNITURE






Record Storage Side Table
CF1117

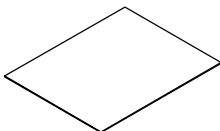

PARTS LIST


A2		B2		C2		D2		E2	
Top Panel 1 PC		Left Panel 1 PC		Right Panel 1 PC		Bottom Panel 1 PC		Back Panel 1 PC	
F2		G2		H2		I2		J2	
Leg 4 PCS		Drawer Front Panel 1 PC		Drawer Left Panel 1 PC		Drawer Right Panel 1 PC		Drawer Back Panel 1 PC	
K2									
Drawer Bottom Panel 1 PC									

HARDWARE LIST

#1  1/4"*45mm Bolt 8 PCS (Extra 1)	#2  1/4"*10mm Spring Washer 8 PCS (Extra 1)	#3  1/4"*13mm Flat Washer 8 PCS (Extra 1)	#4  7*38mm Screw 4 PCS (Extra 1)	#5  Cam Bolt 8 PCS (Extra 1)
#6  Cam Lock 8 PCS (Extra 1)	#7  8*30mm Wood Dowel 12 PCS (Extra 1)	#8  Back Bracket 4 PCS (Extra 1)	#9  3*15mm Short Screw 4 PCS (Extra 1)	#10  Cam Sticker 8 PCS (Extra 1)
#11  4*32mm Long Screw 4 PCS (Extra 1)	#12  M4 Allen Wrench 1 PC			

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver



Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Attach legs (part F2) to bottom panel (part D2) using bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #12).

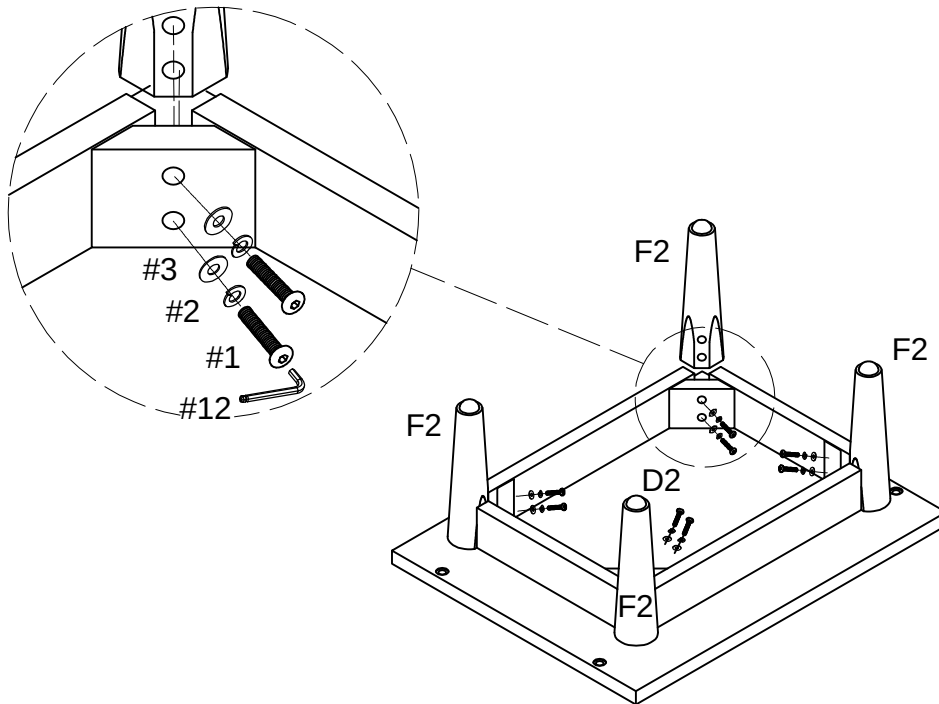

#1		x 8
#2		x 8
#3		x 8
#12		x 1


Step 2. Screw cam bolts (part #5) into drawer front panel (part G2) using phillips head screwdriver. Attach drawer left panel (part H2) and drawer right panel (part I2) into drawer back panel (part J2) using wood dowels (part #7), long screws (part #11) and phillips head screwdriver. Slide drawer bottom panel (part K2) into grooves of assembled unit (parts H2, I2 & J2). Attach drawer front panel (part G2) to assembled unit (parts H2, I2, J2 & K2) using cam locks (part #6), wood dowels (part #7) and phillips head screwdriver. Note: Cam locks must rotate a full 180°. See pictured insert.

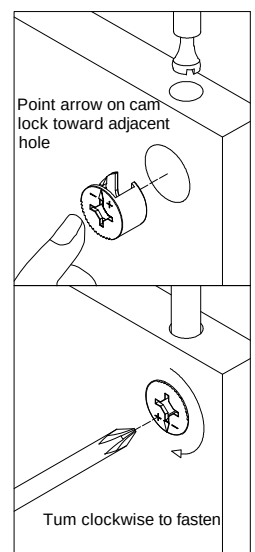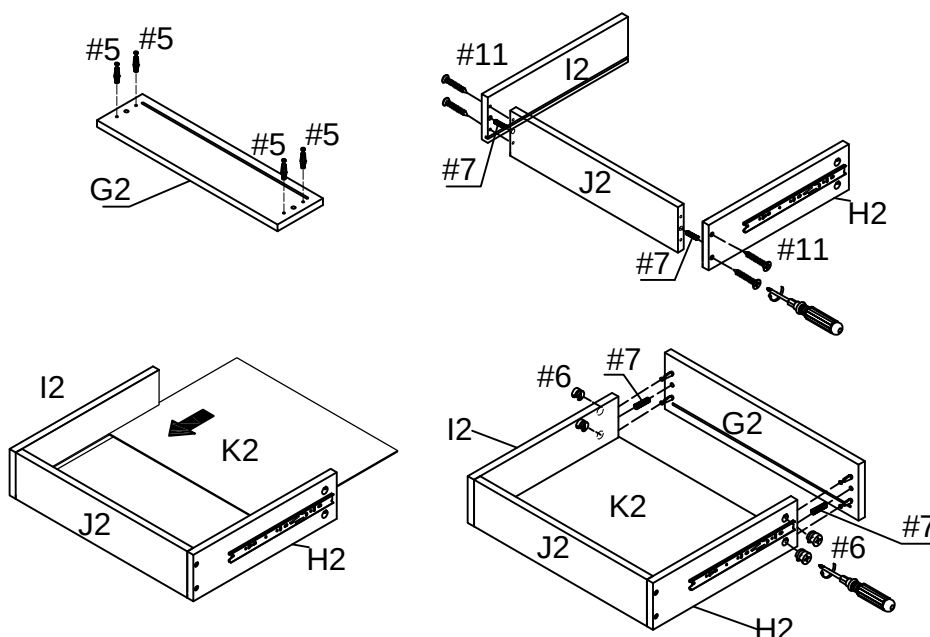

#5		x 4
#6		x 4
#7		x 4
#11		x 4

Step 3. Screw cam bolts (part #5) into top panel (part A2) using phillips head screwdriver.



Note: Do not overtighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

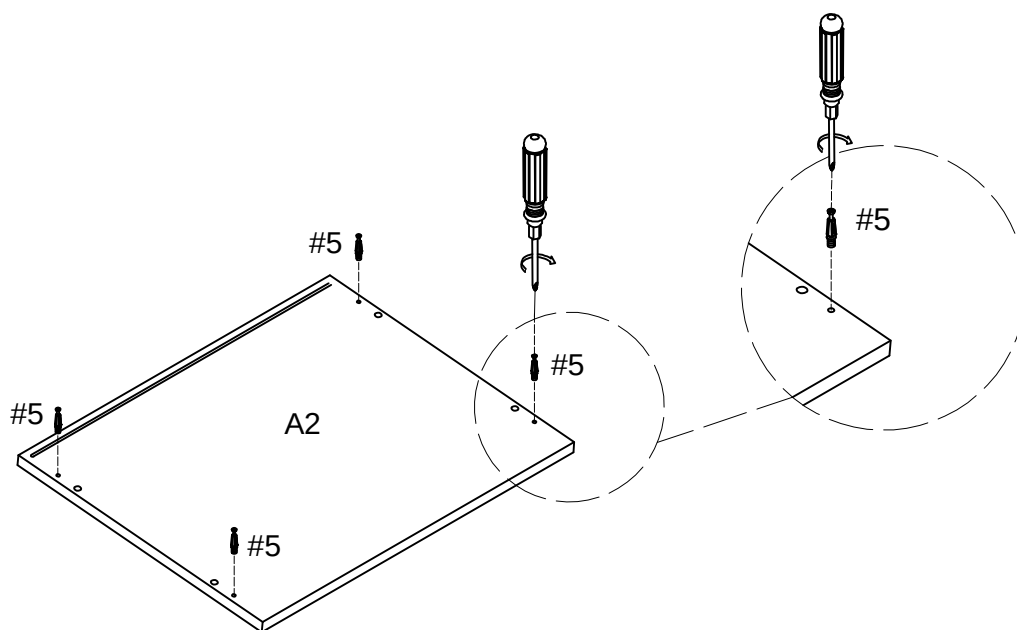

#5  x 4


Step 4. Attach panels (parts B2 & C2) to top panel (part A2) using cam locks (part #6), wood dowels (part #7) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

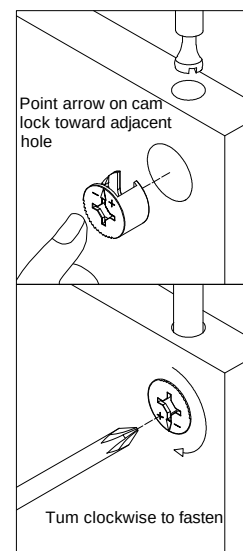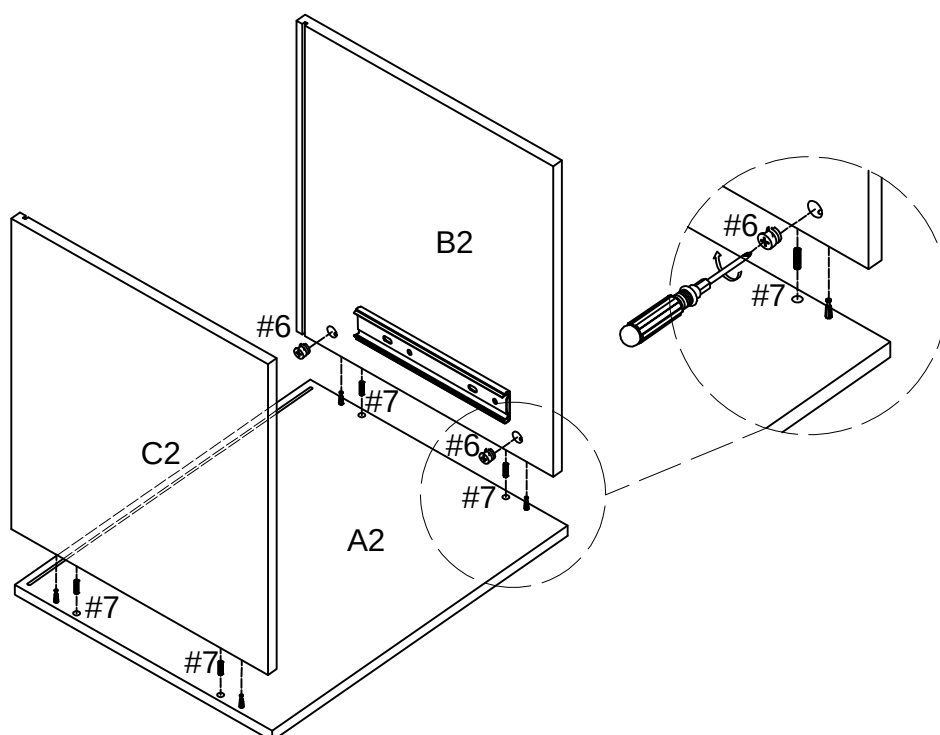


#6  x 4
#7  x 4

Step 5. Insert back panel (part E2) to assembled unit (parts A2, B2 & C2).

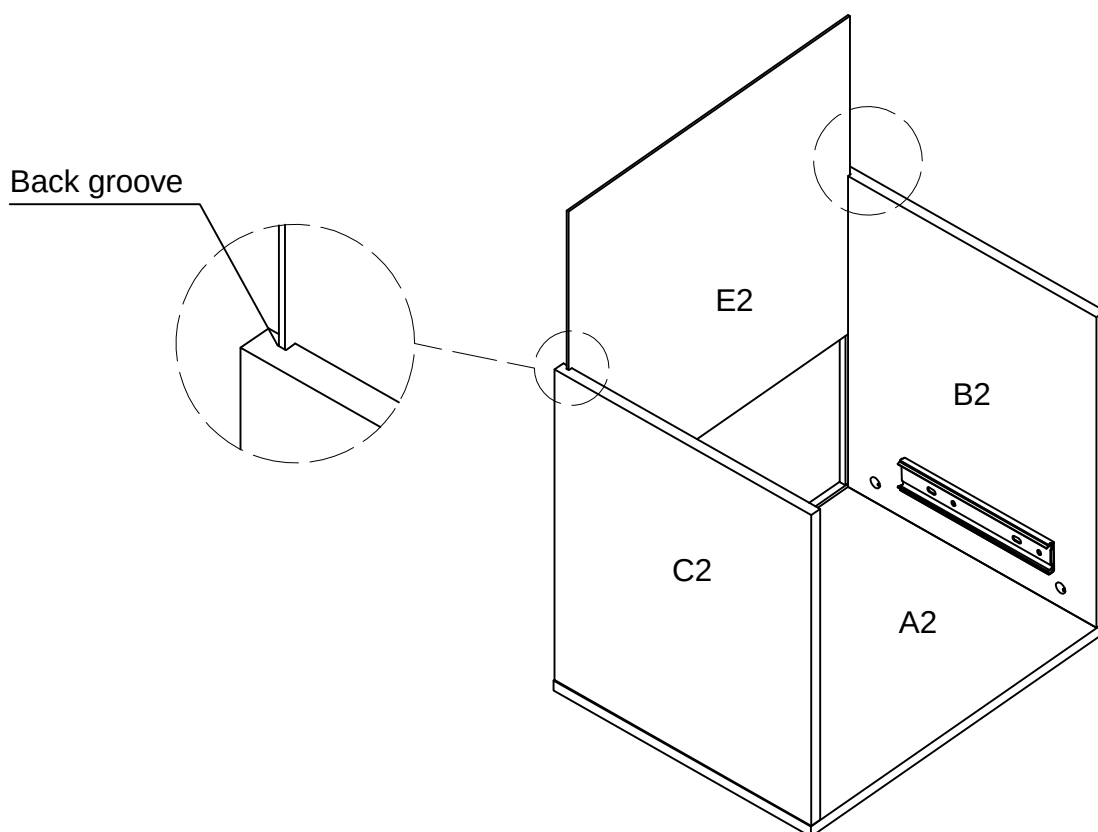


Step 6. Attach bottom panel (part D2) to assembled unit (parts B2, C2 & E2) using screws (part #4), wood dowels (part #7) and allen wrench (part #12).

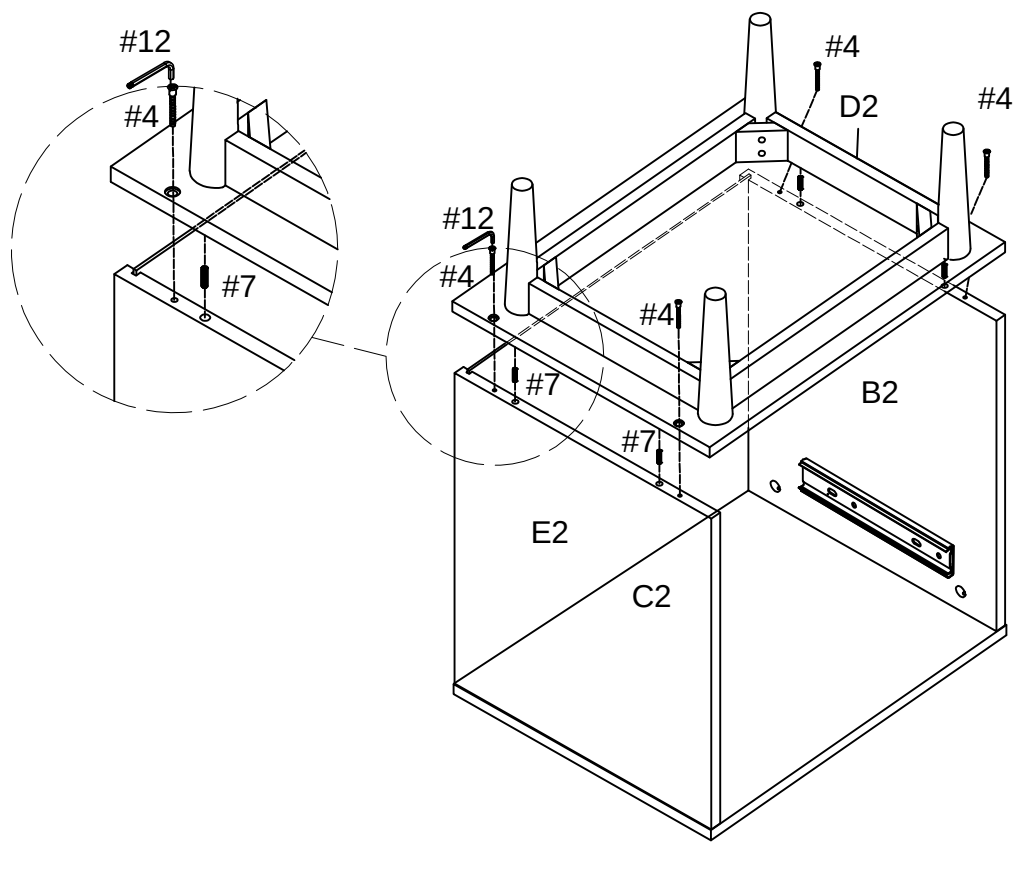


#4		x 4
#7		x 4
#12		x 1

Step 7. Slide assembled drawer into place.

Note: To release trigger disconnect levers push one side up and the other down.

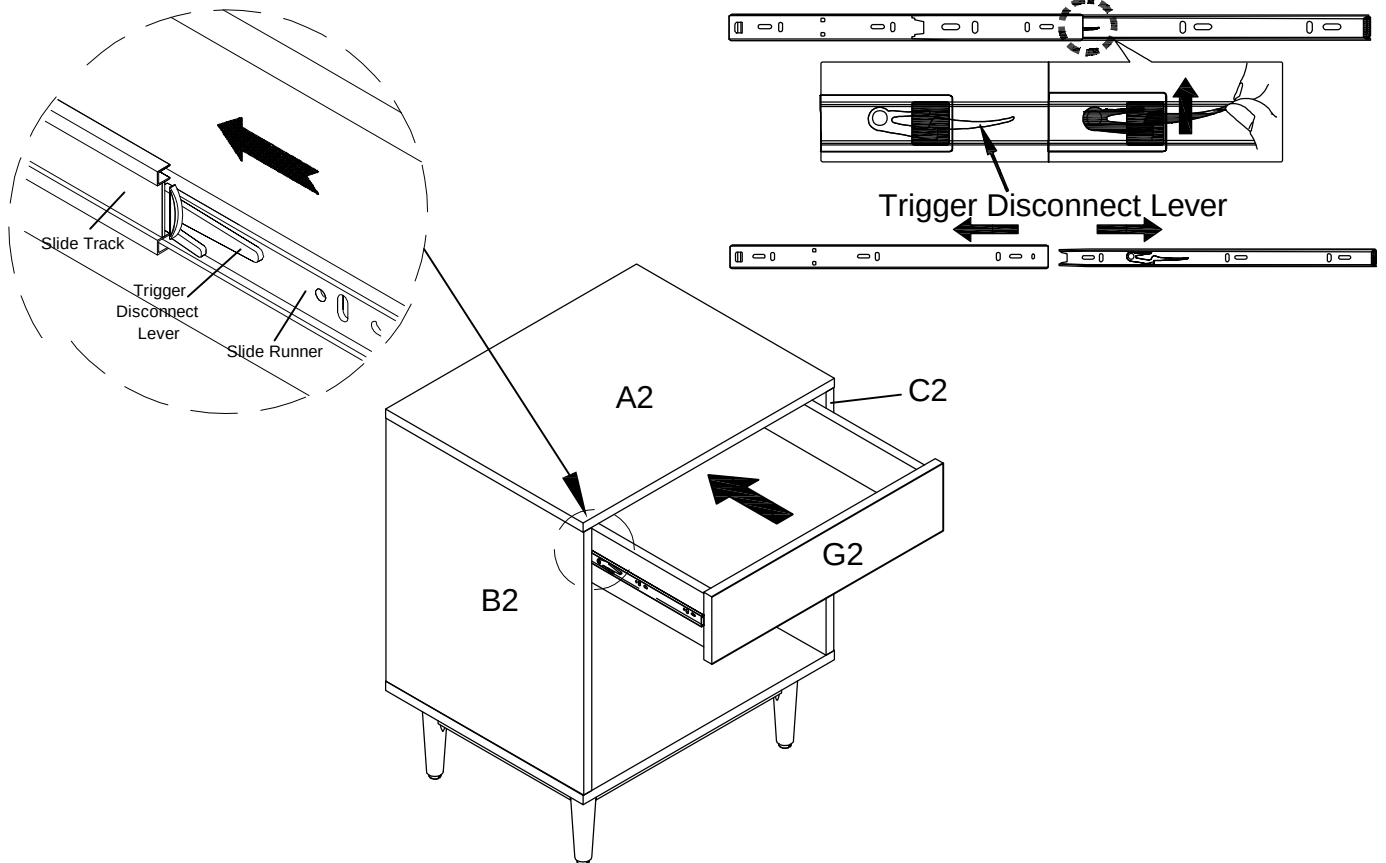

Step 8. Secure back brackets (part #8) at the corner of back panel (part E2) using short screws (part #9) and phillips head screwdriver.

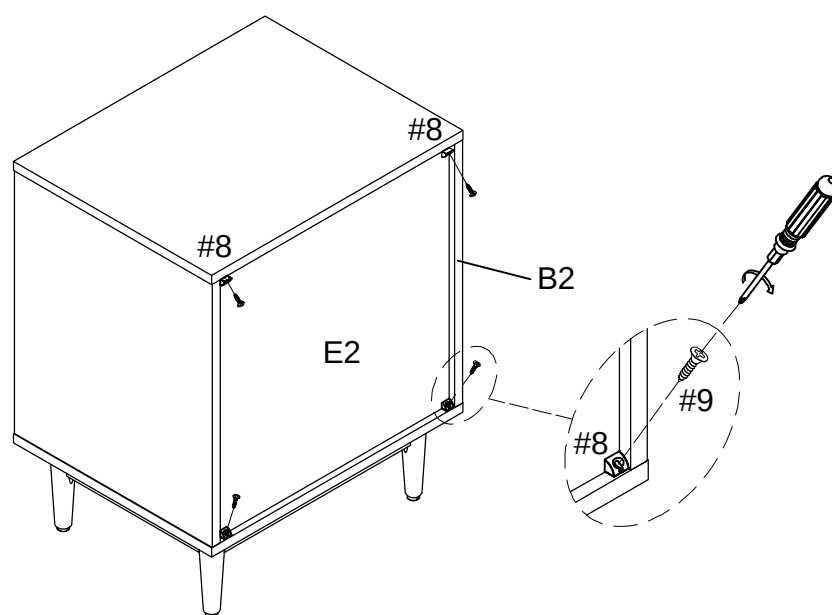

- | | | |
|----|---|-----|
| #8 |  | x 4 |
| #9 |  | x 4 |

Step 9. Using cam stickers (part #10) cover all cam locks (part #6).

NOTE: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

