
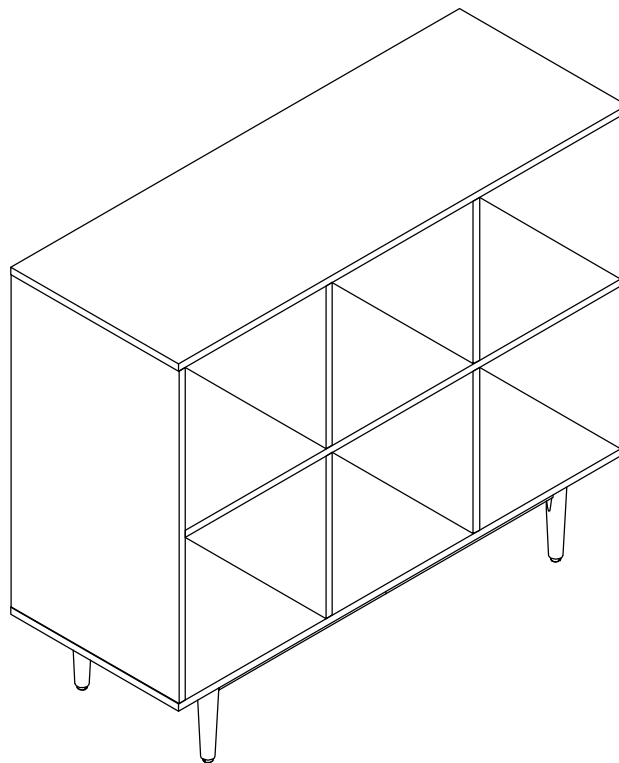
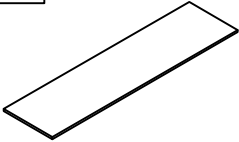
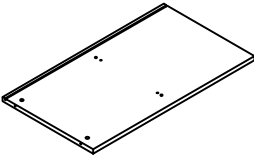
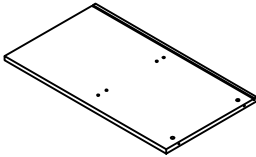
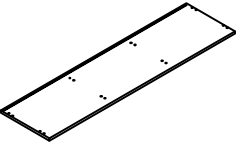
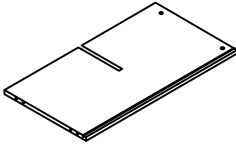
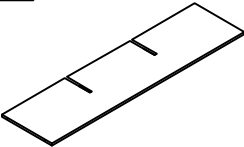


CROSLEY
FURNITURE





6 Cube Record Storage Cube Bookcase
CF1121

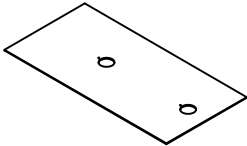

PARTS LIST


A2 	B2 	C2 	D2 	E2 
Top Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Bottom Panel 1 PC	Partition Panel 2 PCS
F2 	G2 	H2 	I2 	
Fixed Shelf Panel 1 PC	Back Panel 3 PCS	Leg 4 PCS	Cover 6 PCS	

HARDWARE LIST

#1  1/4"*45mm	#2  1/4"*10mm	#3  1/4"*13mm	#4  7*38mm	#5  12 PCS (Extra 1)
Bolt 8 PCS (Extra 1)	Spring Washer 8 PCS (Extra 1)	Flat Washer 8 PCS (Extra 1)	Screw 8 PCS (Extra 1)	Cam Bolt 12 PCS (Extra 1)
#6  12 PCS (Extra 1)	#7  8*30mm	#8  12 PCS (Extra 1)	#9  3*15mm	#10  6 SETS (Extra 1)
Cam Lock 12 PCS (Extra 1)	Wood Dowel 20 PCS (Extra 1)	Back Bracket 12 PCS (Extra 1)	Short Screw 12 PCS (Extra 1)	Binding Post 6 SETS (Extra 1)
#11  12 PCS (Extra 1)	#12  M2	#13  M4	#14  1 SET	
Cam Sticker 12 PCS (Extra 1)	Small Allen Wrench 1 PC	Allen Wrench 1 PC	Safety Strap Kit 1 SET	

ADDITIONAL TOOLS (Not Provided)


Note: It is not recommended to use power tools during assembly.



Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Attach legs (part H2) to bottom panel (part D2) using bolts (part #1), spring washers (part #2), flat washers (part #3) and allen wrench (part #13).

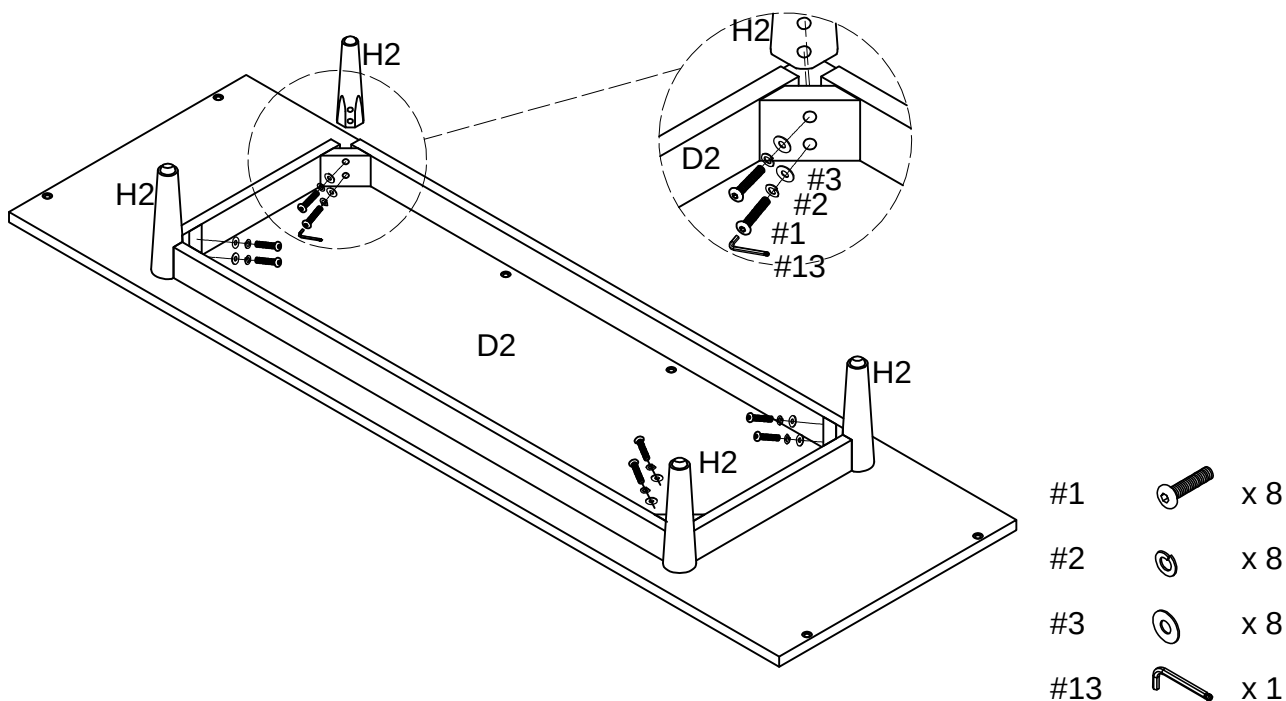


Step 2. Insert cam bolts (part #5) into panels (parts A2, B2 & C2) using phillips head screwdriver.

Note: Do not over tighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

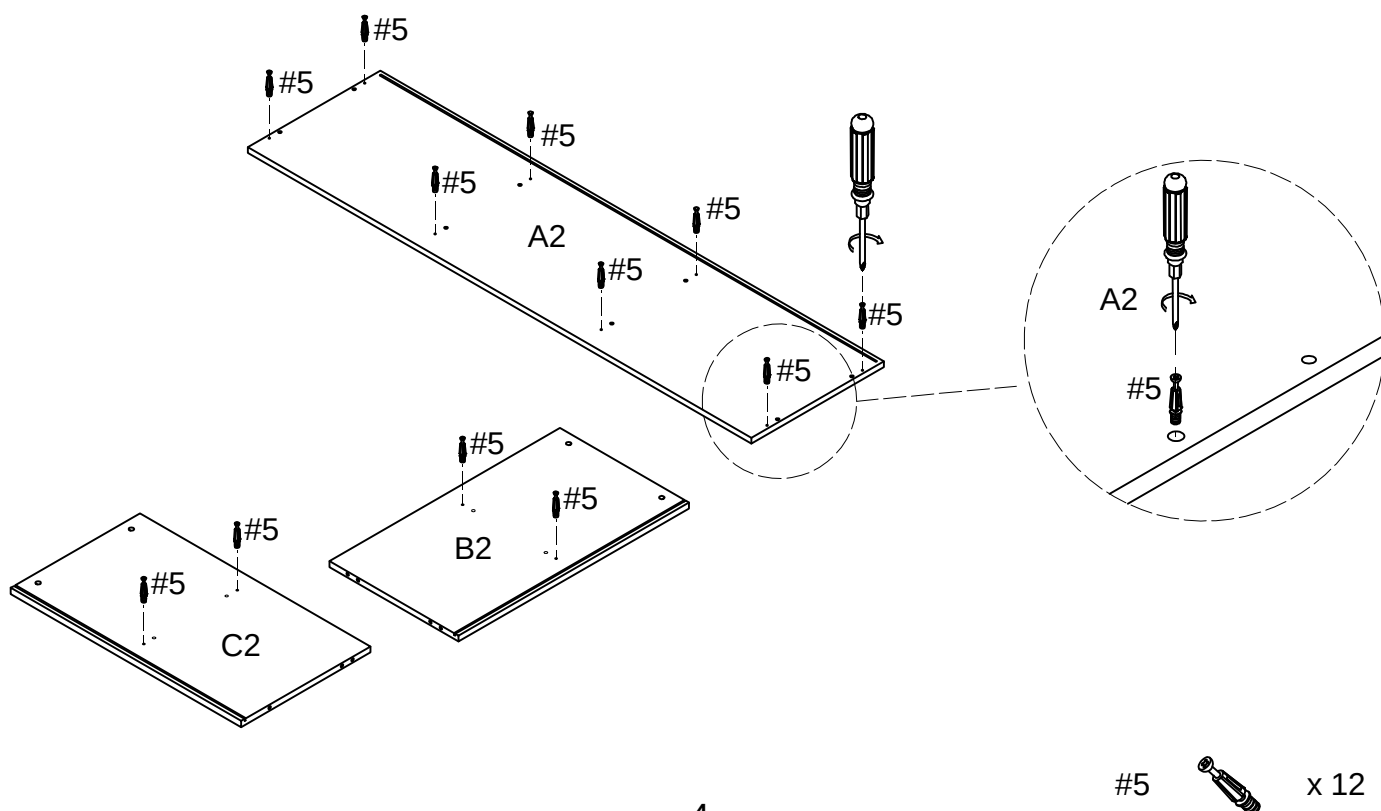


Step 3. Attach covers (part I2) to back panels (parts G2) using binding posts (part #10) and small allen wrench (part #12).

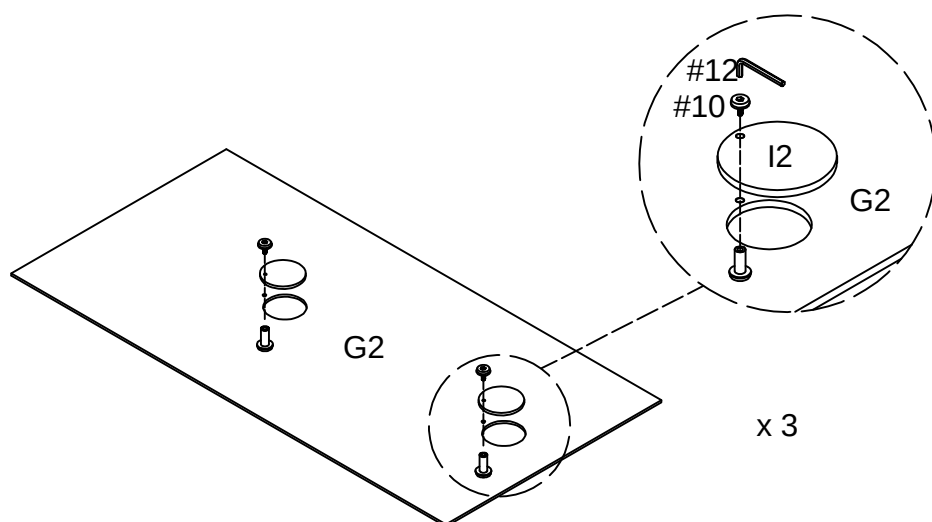



#10  x 6
#12  x 1

Step 4. Insert partition panels (part E2) to fixed shelf panel (part F2).

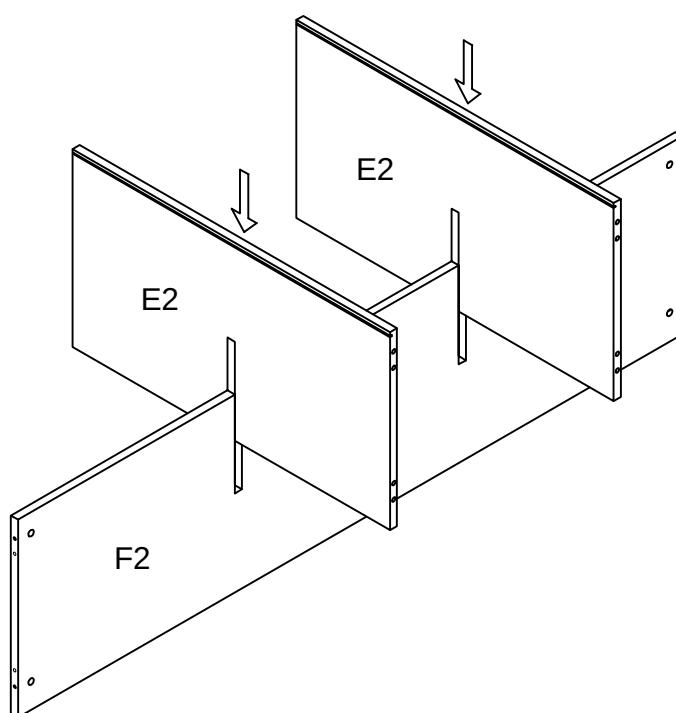

Step 5. Attach left panel (part B2) and right panel (part C2) to fixed shelf panel (part F2) using cam locks (part #6), wood dowels (part #7) and phillips head screwdriver.



Note: Cam locks must rotate a full 180°. See pictured insert.

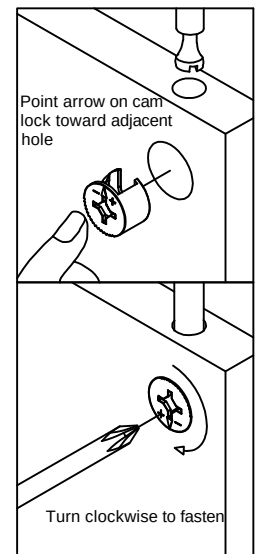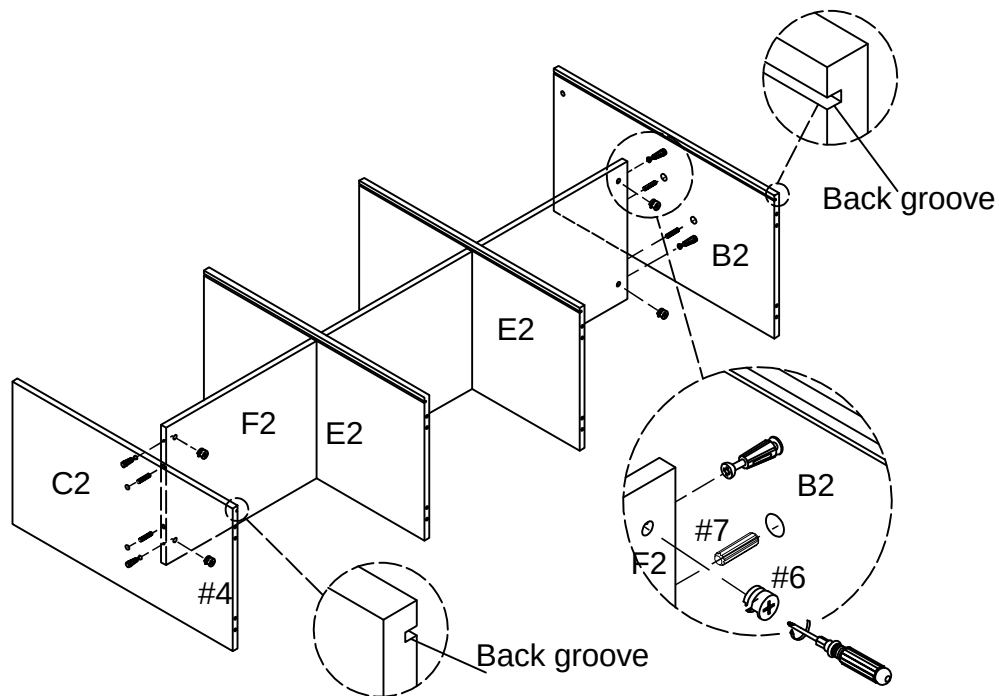

#6		x 4
#7		x 4


Step 6. Attach top panel (part A2) to assembled unit (parts B2, C2 & E2) using cam locks (part #6), wood dowels (part #7) and phillips head screwdriver.

Note: Cam locks must rotate a full 180°. See pictured insert.

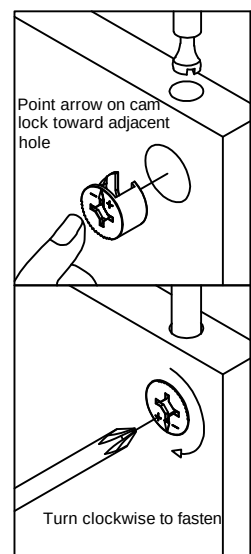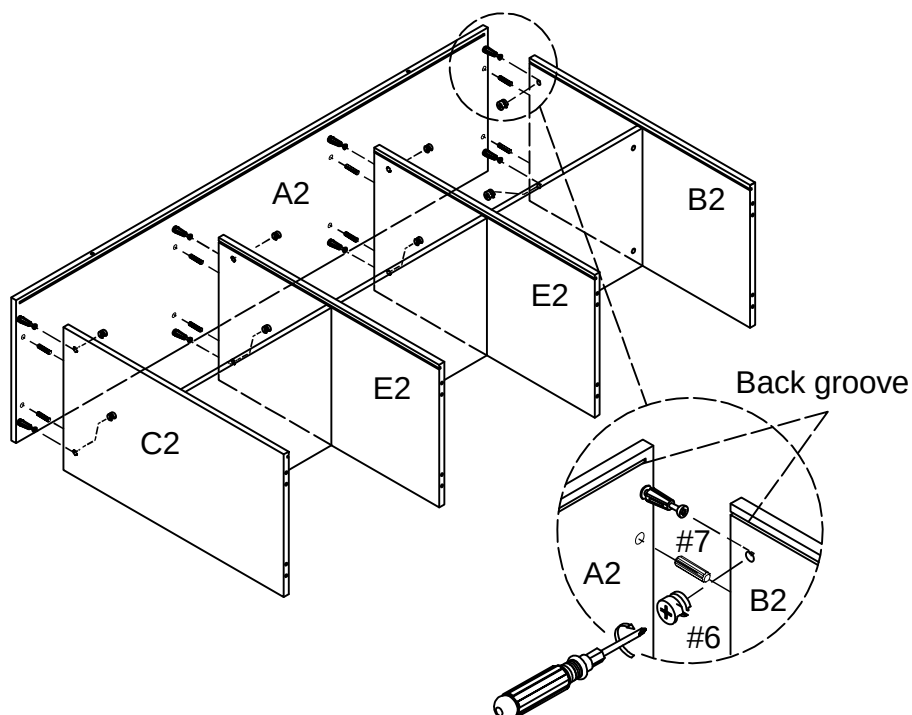


#6		x 8
#7		x 8


Step 7. Insert back panels (part G2) to assembled unit (parts A2, B2, C2 & E2).

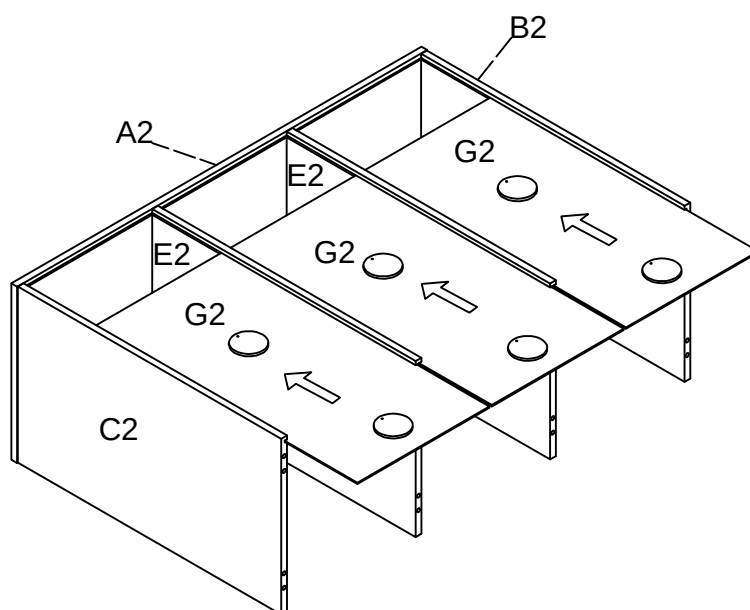

Step 8. Attach bottom panel (part D2) to assembled unit (parts B2, C2, E2 & G2) using screws (part #4), wood dowels (part #7) and allen wrench (part #13).

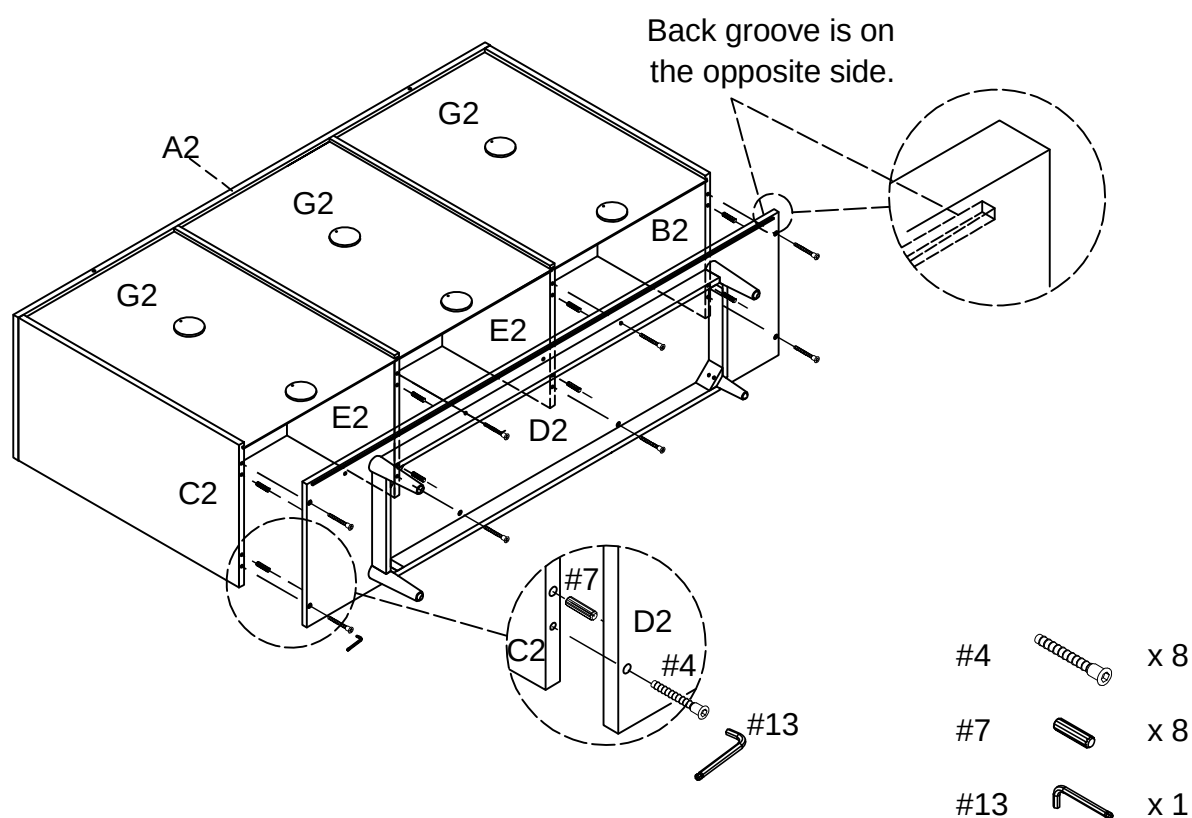

Step 9. Carefully turn unit upright. Secure back brackets (part #8) to the corner of back panels (part G2) using short screws (parts #9) and phillips head screwdriver.

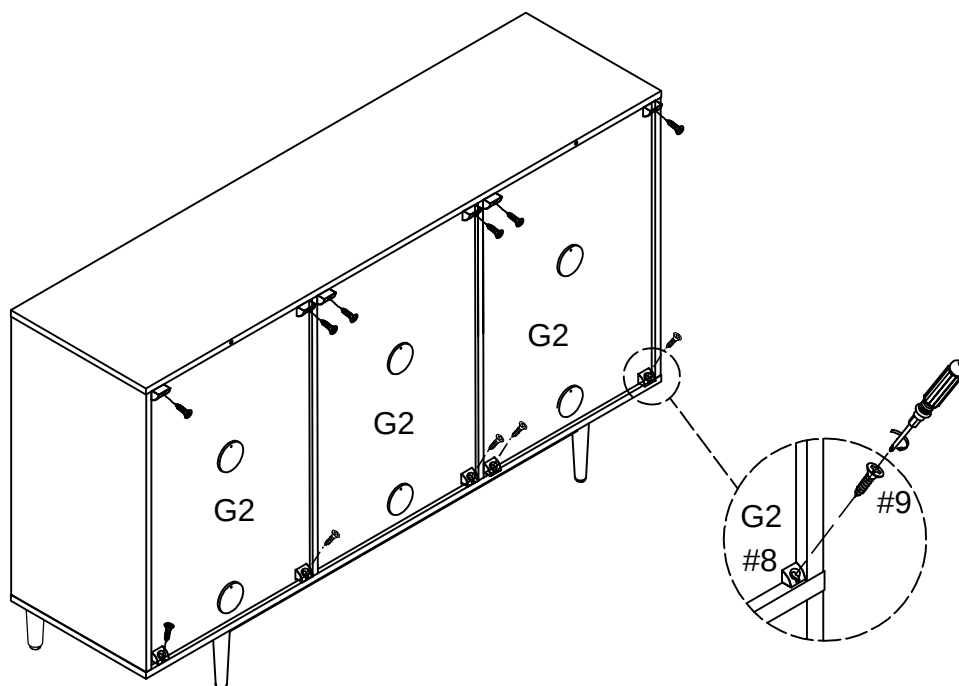



#8  x 12

#9  x 12


Step 10. Using cam stickers (part #11) cover all cam locks (part #6).

Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.

Important: Safety strap kit (part #14) must be installed to prevent tipping damage and/or injury.

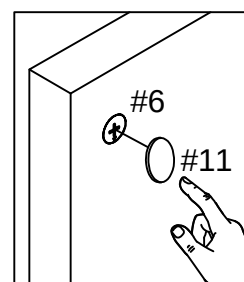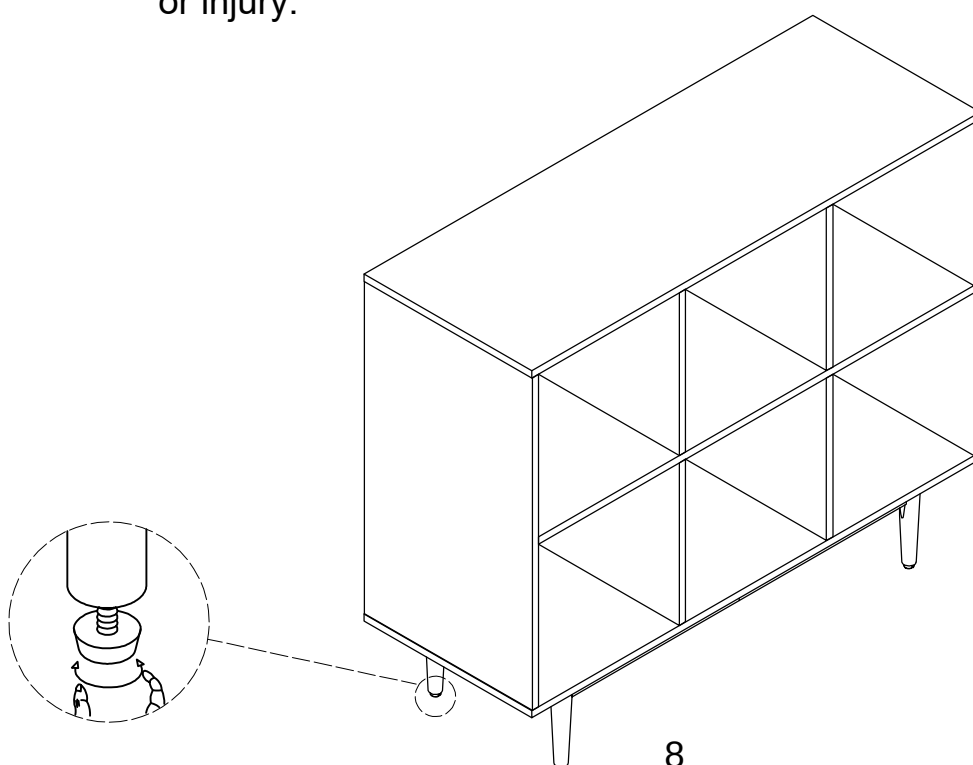

#11  x 12

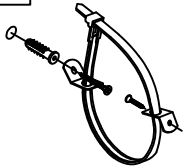
#14	A	B	C	D	E
			 8*3*15mm	 8*4*35mm	
Safety Strap Kit 1 SET	Wall Anchor 1 PC	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC

SAFETY WALL STRAP INSTALLATION

Note: It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (C) and safety wall strap (E) through bracket (B) and attach to top panel (part A2) using phillips head screwdriver.
2. Drill a 11/32" hole where you want to secure the unit. The drilled hole will be at the same height as the hole in top panel (part A2) where bracket (B) is attached. Tap wall anchor (A) into the hole.
3. Insert long screw (D) and safety wall strap (E) through bracket (B) into wall anchor (A) using phillips head screwdriver.

Note: This item is not intended for clothing storage use.

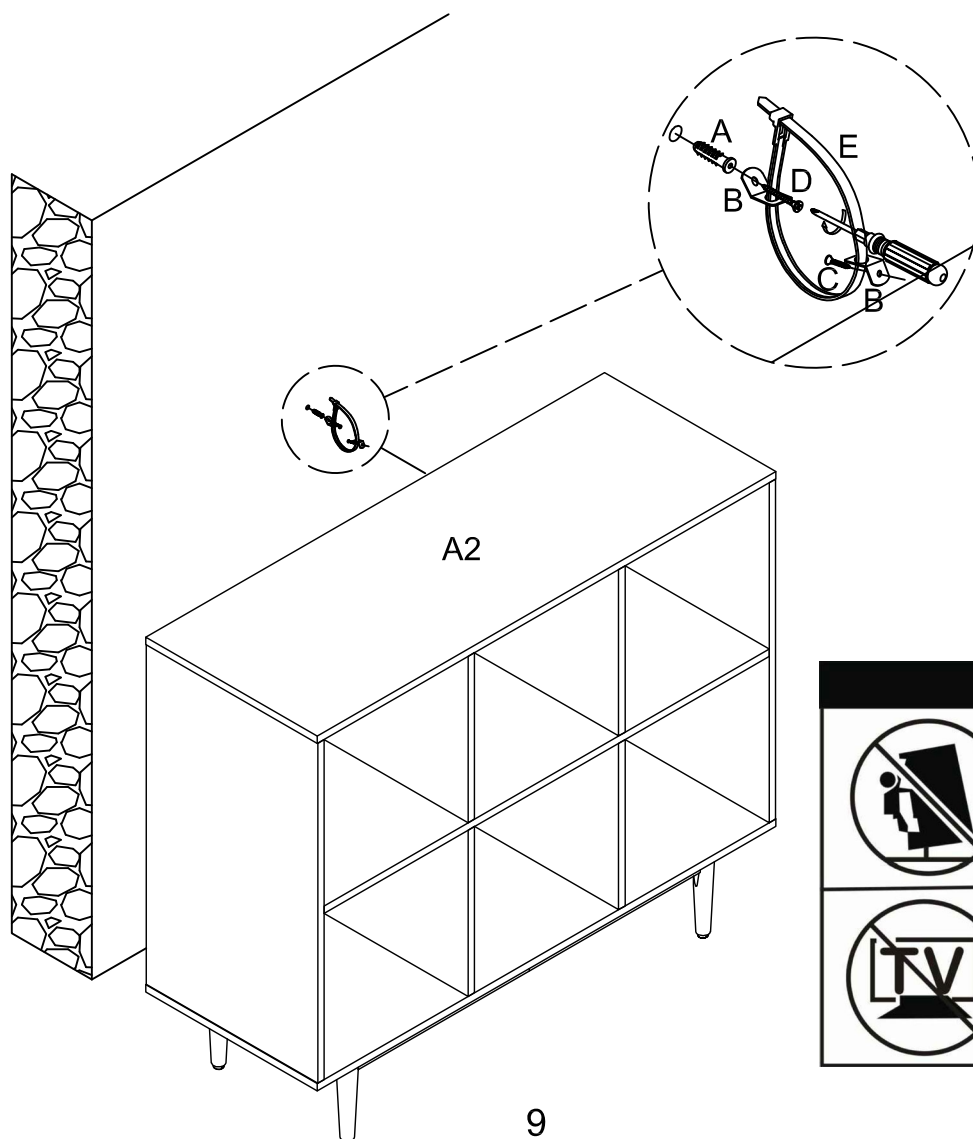

⚠ WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.



This is a permanent label.
Do not remove!